

**SICOM3024GS (V2.0) Series Industrial
Ethernet Switches Hardware Installation Manual**

Publication Date: Dec. 2021

Version: V1.0

KYLAND

SICOM3024GS (V2.0) Series

Industrial Ethernet Switches Hardware Installation Manual

Disclaimer: Kyland Technology Co., Ltd. tries to keep the content of this manual as accurate and as updated as possible. This document is not guaranteed to be error-free, and we reserve the right to amend it without notice to users.

All rights reserved. No part of this documentation may be excerpted, reproduced, translated, annotated or duplicated, in any form or by any means without the prior written permission of KYLAND Corporation.

Copyright © 2021 Kyland Technology Co., Ltd.

Notice for Safety Operation

The product performs reliably as long as it is used according to the guidance. Artificial damage or destruction of the device should be avoided. Before using the device, read this manual carefully for personal and equipment safety. Please keep the manual for further reference. Kyland is not liable to any personal or equipment damage caused by violation of this notice.

- Do not place the device near water sources or damp areas. Keep the ambient relative humidity within the range from 5% to 95% (non-condensing).
- Do not place the device in an environment with high magnetic field, strong shock, or high temperature. Keep the working and storage temperatures within the allowed range.
- Install and place the device securely and firmly.
- Please keep the device clean; if necessary, wipe it with a soft cotton cloth.
- Do not place any irrelevant materials on the device or cables. Ensure adequate heat dissipation and tidy cable layout without knots.
- Wear antistatic gloves or take other protective measures when operating the device.
- Avoid any exposed metal wires because they may be oxidized or electrified.
- Install the device in accordance with related national and local regulations.
- Before power-on, make sure the power supply is within the allowed range of the device. High voltage may damage the device.
- Power connectors and other connectors should be firmly interconnected.
- Do not plug in or out the power supply with wet hands. When the device is powered on, do not touch the device or any parts with wet hands.
- Before operating a device connected to a power cable, remove all jewelry (such as rings, bracelets, watches, and necklaces) or any other metal objects, because they may cause electric shock or burns.
- Do not operate the device or connect or disconnect cables during an electrical storm.
- Use compatible connectors and cables. If you are not sure, contact our sales or technical support personnel for confirmation.

- Do not disassemble the device by yourself. When an anomaly occurs, contact our sales or technical support personnel.
- If any part is lost, contact our sales or technical support personnel to purchase the substitute. Do not purchase parts from other channels.
- Dispose of the device in accordance with relevant national provisions, preventing environmental pollution.

In the following cases, please immediately shut down your power supply and contact your Kyland representative:

- Water gets into the equipment.
- Equipment damage or shell damage.
- Equipment operation or performance has abnormally changed.
- The equipment emits odor, smoke or abnormal noise.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Contents

1 Product Overview	4
2 Structure and Interface	6
2.1 Front Panel	6
Rear Panel	7
3 Mounting	8
3.1 Dimension Drawing	8
3.2 Mounting Modes and Steps	9
4 Connection	12
4.1 10/100/1000Base-T(X) Ethernet Port	12
4.1.1 Functions	12
4.1.2 Pin Definitions and Wiring Sequence	12
4.2 1000Base-X, 10/100/1000Base-T(X) SFP slot	14
4.2.1 Gigabit SFP Optical Module	14
4.2.2 Gigabit SFP Electrical Module	16
4.3 10GBase-X SFP+ port	16
4.4 Console Port	17
4.5 Grounding	18
4.6 Power Terminal Block	18
4.7 Alarm Terminal Block	19
5 LEDs	20
6 Switch Access	24
6.1 Access through Console Port	24
6.2 Access through Telnet	26
6.3 Access through Web	26
7 Basic Features and Specifications	28

1 Product Overview

The SICOM3024GS (V2.0) series is designed and developed for the needs of high-power PoE switches in video surveillance, security and other systems. It is a network-managed rack switch suitable for extreme industrial environments. It has high bandwidth, multiple ports, POE+ designs, and features such as high-performance video transmission capabilities. It can be widely used in petrochemical industry, rail transit industry, automation, electric power and other industries.

SICOM3024GS(V2.0) series switches support 19 inch 1U rack mounting by front/rear panel. This serie of switches supports front panel and rear panel. The specific configuration is as follows.

Table 1 SICOM3024GS-L2G Models

Model	SICOM3024GS-L2G
Code definition	Code option
Ports	4X24GP、4GX24GP、4X8GX16GP、4X12GX12GP、12GX16GP、16GX12GP
	<p>Note:</p> <p>4X24GP : 4*10G Base-X , 10/100/1000Base-T(X) SFP+ slots , 24*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4GX24GP : 4*1000Base-X , 10/100/1000Base-T(X) SFP slots , 24*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4X8GX16GP: 4*10G Base-X, 8*1000Base-X, 10/100/1000Base-T(X) SFP slots, 16*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4X12GX12GP: 4*10G Base-X, 12*1000Base-X, 10/100/1000Base-T(X) SFP slots, 12*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>12GX16GP : 12*1000Base-X , 10/100/1000Base-T(X) SFP slots , 16*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>16GX12GP : 16*10G Base-X , 10/100/1000Base-T(X) SFP+ slots , 12*10/100/1000Base-T(X) RJ45 PoE ports</p>
PS1: power input 1	H3 (220AC)
PS2: power input 2	H3 (220AC)

Table 2 SICOM3024GS-L3G Models

Model	SICOM3024GS-L3G
Code definition	Code option
Ports	4X24GP、4GX24GP、4X8GX16GP、4X12GX12GP、12GX16GP、16GX12GP
	<p>Note:</p> <p>4X24GP : 4*10G Base-X , 10/100/1000Base-T(X) SFP+ slots , 24*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4GX24GP : 4*1000Base-X , 10/100/1000Base-T(X) SFP slots , 24*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4X8GX16GP: 4*10G Base-X, 8*1000Base-X, 10/100/1000Base-T(X) SFP slots, 16*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>4X12GX12GP: 4*10G Base-X, 12*1000Base-X, 10/100/1000Base-T(X) SFP slots, 12*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>12GX16GP : 12*1000Base-X , 10/100/1000Base-T(X) SFP slots , 16*10/100/1000Base-T(X) RJ45 PoE ports</p> <p>16GX12GP : 16*10G Base-X , 10/100/1000Base-T(X) SFP+ slots , 12*10/100/1000Base-T(X) RJ45 PoE ports</p>
PS1: power input 1	H3 (220AC)
PS2: power input 2	H3 (220AC)



Note:

We reserve the right to amend the product information listed in this table without notice. To obtain the latest information, you can contact our sales or technical support personnel.

2 Structure and Interface



Caution:

It is recommended to purchase the port dustproof shield (optional) to keep ports clean and ensure switch performance.

2.1 Front Panel

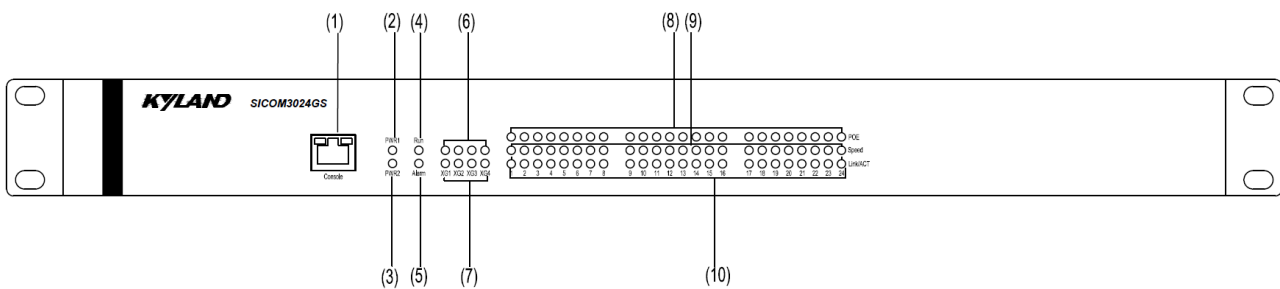


Figure 1 Front Panel

No.	Identifier	Description
(1)	Console	Console
(2)	PWR1	PWR 1 LED
(3)	PWR2	PWR2 LED
(4)	Run	Running LED
(5)	Alarm	Alarm LED
(6)	(XGX1- XGX4)Speed	10 Gigabit SFP + / Gigabit SFP Ethernet Port speed LED
(7)	(XGX1- XGX4)Link/ACT	10 Gigabit SFP + / Gigabit SFP port connection status LED
(8)	(1-24)PoE	10/100/1000Base-T(X) Ethernet Port POE LED
(9)	(1-24)Speed	100/1000M SFP Ethernet Port speed LED
(10)	(1-24)Link/ACT	10/100/1000Base-T(X) Ethernet port connection status LED

2.2 Rear Panel

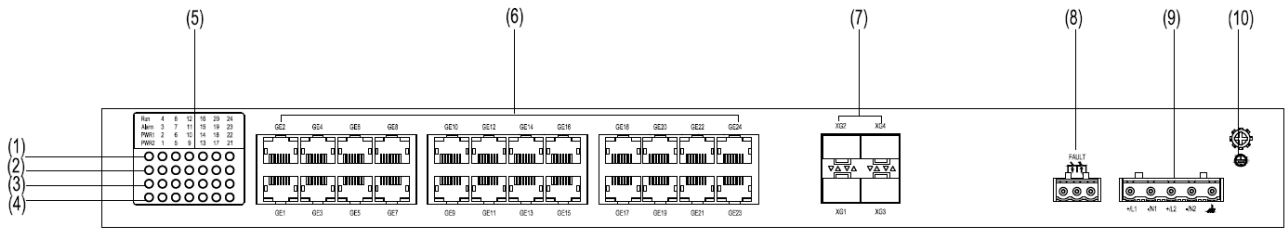


Figure 2 Rear Panel

Table 3 Description of Rear Panel

No.	Description
(1)	Running LED
(2)	Alarm LED
(3)	PWR1 LED
(4)	PWR2 LED
(5)	10/100Base-T(X) Ethernet Port POE LED
(6)	10/100/1000Base-T(X) Ethernet Port POE LED
(7)	10GBase-X SFP+ port
(8)	Alarm terminal block
(9)	Power terminal block
(10)	Grounding screw

3 Mounting

3.1 Dimension Drawing

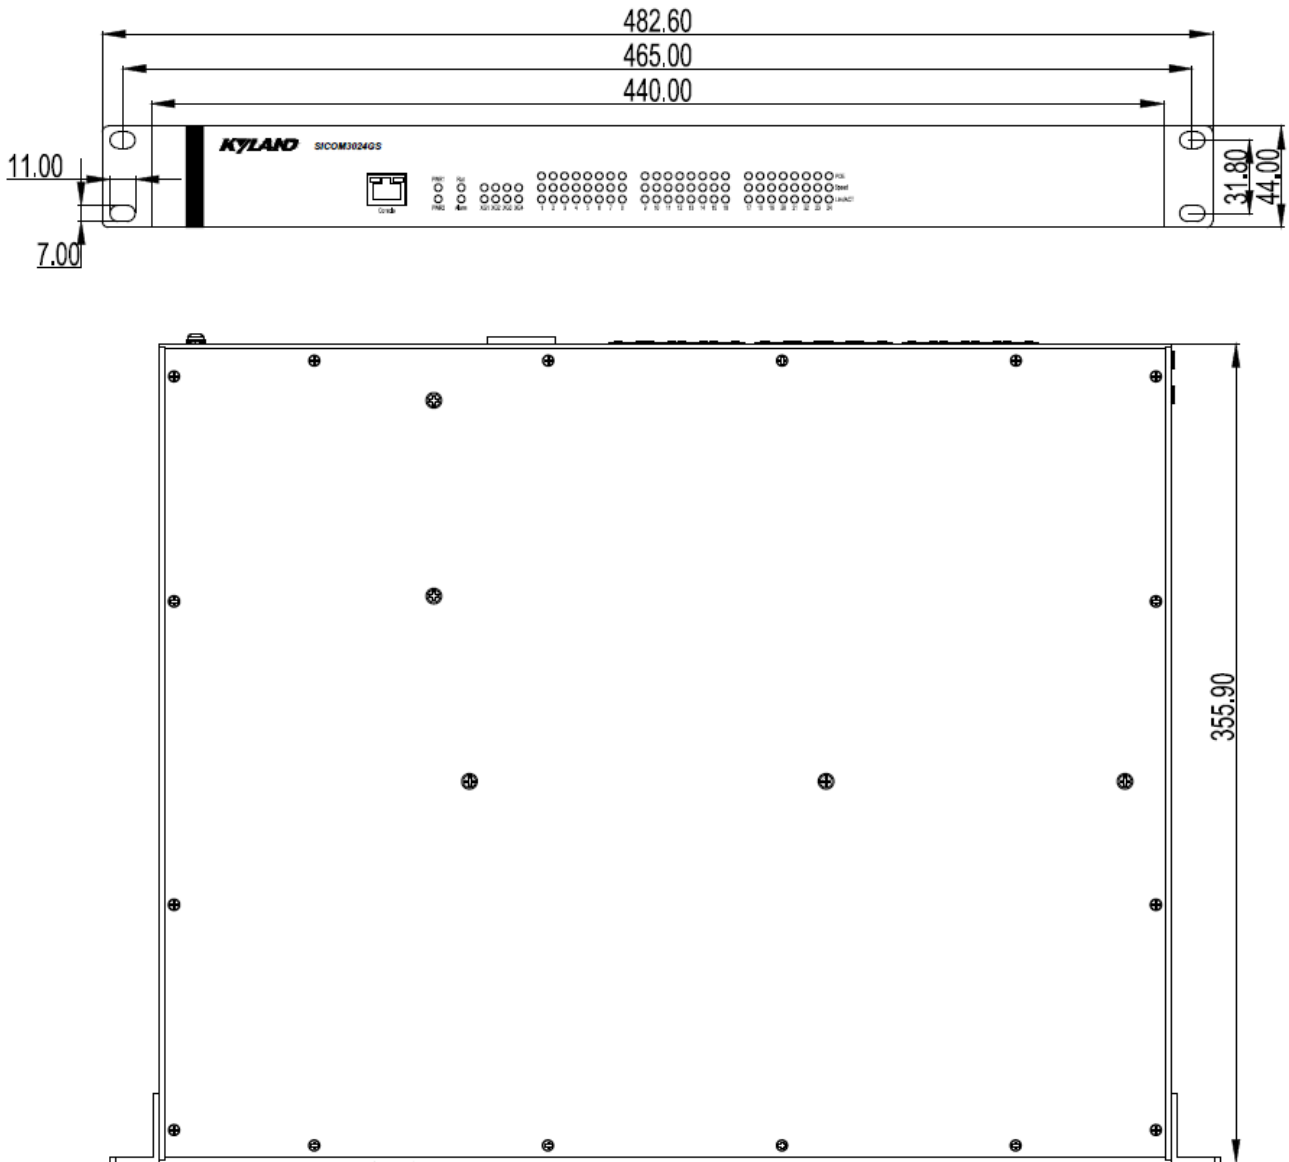


Figure 3 Dimensions for DIN-Rail Mounting (unit: mm)



Caution:

- As part of the heat dissipation system, the switch housing becomes hot during operation. Please use caution when coming in contact and avoid covering the switch housing when the switch is running.

- The figures in this manual are only for reference.

3.2 Mounting Modes and Steps

The series switches support rack mounting by front/rear panel. The following uses mounting by front panel as an example to describe mounting steps. The steps for mounting by rear panel are similar to those for mounting by front panel. Before installation, make sure that the following requirements are met.

- 1) Environment: temperature (-40°C to 60°C), ambient relative humidity (5% to 95%, non-condensing)
- 2) Power requirement: The power input is within the voltage range of the switch.
- 3) Grounding resistance: <math><5\Omega</math>
- 4) No direct sunlight, distant from heat source and areas with strong electromagnetic interference.
- 5) Devices are to be installed in an authority certified enclosure and accessible only by the use of a tool.
- 6) Devices should be installed and accessed by service personnel or users who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken.

- Installing Mounting Brackets

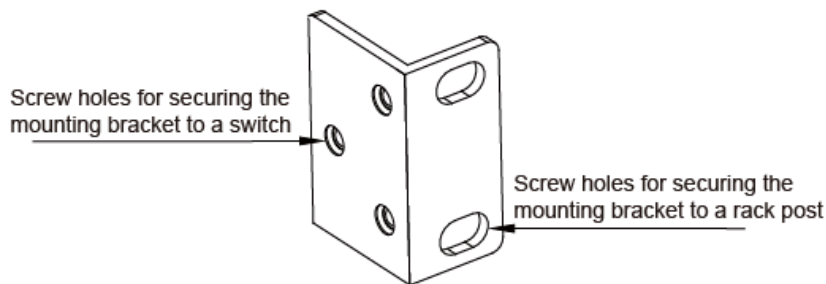


Figure 1 Mounting Bracket

You can select the screw holes for front or rear panel mounting to install the mounting brackets. If you select front panel mounting, If there are screws inserted in the screw holes, remove the screws and keep them for future use.

As shown in the following figure, use three screws to secure two mounting brackets to the

switch respectively.

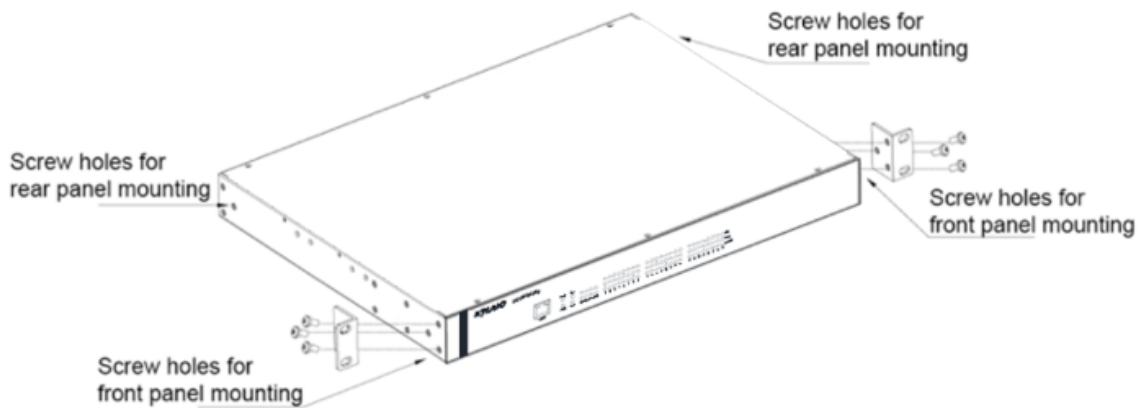


Figure 2 Installing Mounting Brackets

● Mounting

Step 1: Select the mounting position for the device and guarantee adequate space and heat dissipation for it (dimensions: 440mm×44mm×321.9mm).

Step 2: Move the switch in direction 1 until the screw holes for securing the mounting brackets to rack posts are in alignment with the corresponding holes in the rack posts. Then use four screws and supporting captive nuts to secure the mounting brackets to the rack posts.

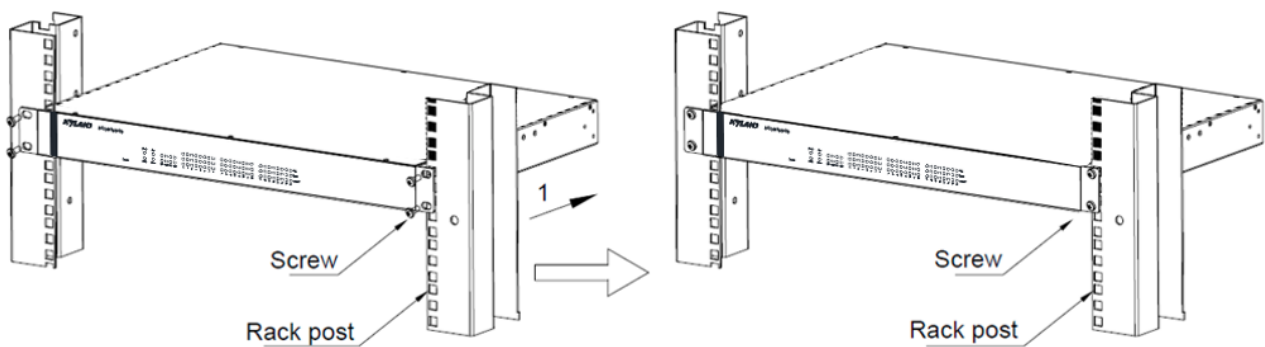


Figure 3 Mounting by Front Panel

● Dismounting

Step 1: Remove the four screws and supporting captive nuts securing the mounting brackets to the rack posts.

Step 2: Remove the switch from the rack posts. Then unscrew the mounting brackets to

complete dismounting.

4 Connection

4.1 10/100/1000Base-T(X) Ethernet Port

4.1.1 Functions

- Data Transmission

10/100/1000Base-T(X) Ethernet port is equipped with M12 connector, which is dustproof, waterproof, and anti-vibration. The port is self-adaptive. It can automatically configure itself to work in 10 M/100M/1000M state, full or half duplex mode. The port can also adapt to MDI or MDI-X connection automatically. You can connect the port to a terminal or network device with a straight-through or cross-over cable.

- POE

Serving as the Power Sourcing Equipment (PSE), the switches can provide power supply for PDs through 10/100/1000Base-T(X) Ethernet ports. The 10/100/1000Base-T(X) Ethernet ports support IEEE802.3at (compatible with IEEE802.3af) POE output. Each POE port can provide a maximum of 30 W feed and the entire PSE is capable of providing a maximum of 240 W feed (External power supply is needed).

1. POE Definition

POE indicates that the device can provide power supply for PDs through Ethernet ports. The device supports a maximum distance of 100m for power supply.

2. POE Power Supply

The device supports data wires to provide power supply for PDs.

4.1.2 Pin Definitions and Wiring Sequence

- Pin Definition

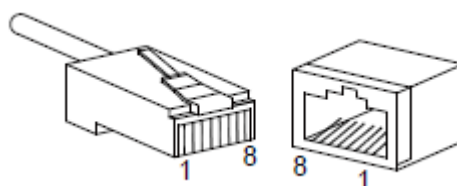



Figure 4 RJ45 Port

Table 4 Pin Definitions of 10/100/1000Base-T(X) RJ45 Port

Pin	MDI-X	MDI	POE Power Supply
1	Transmit/Receive Data (TRD1+)	Transmit/Receive Data (TRD0+)	V+
2	Transmit/Receive Data (TRD1-)	Transmit/Receive Data (TRD0-)	V-
3	Transmit/Receive Data (TRD0+)	Transmit/Receive Data (TRD1+)	V+
4	Transmit/Receive Data (TRD3+)	Transmit/Receive Data (TRD2+)	V-
5	Transmit/Receive Data (TRD3-)	Transmit/Receive Data (TRD2-)	--
6	Transmit/Receive Data (TRD0-)	Transmit/Receive Data (TRD1-)	--
7	Transmit/Receive Data (TRD2+)	Transmit/Receive Data (TRD3+)	--
8	Transmit/Receive Data (TRD2-)	Transmit/Receive Data (TRD3-)	--
 Note: "+" and "-" indicate level polarities.			

● Wiring Sequence

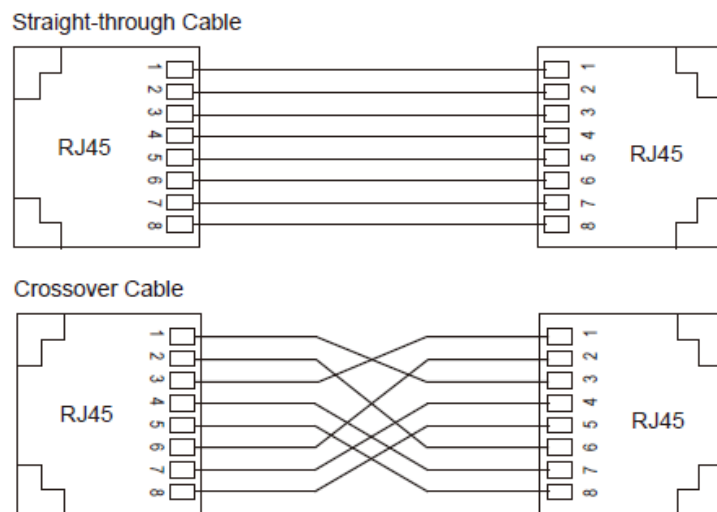


Figure 5 Connection Using Straight-through/Cross-over Cable



Note:

The color of the cable for RJ45 connector meets the 568B standard: 1-orange and white, 2-orange, 3-green and white, 4-blue, 5-blue and white, 6-green, 7-brown and white, and 8-brown.

4.2 1000Base-X, 10/100/1000Base-T(X) SFP slot

1000Base-X, 10/100/1000Base-T(X) SFP slot (gigabit SFP slot) requires an SFP optical/electrical module to enable data transmission. The following table lists the gigabit SFP optical/electrical modules (optional) supported by the series switches.

Table 5 Gigabit SFP Optical/Electrical Modules

Model	Port	MM/SM	Connector	Central Wavelength	Transmission Distance
IGSFP-M-SX-LC-850-0.55	1000Base-X port	MM	LC	850nm	0.55km
IGSFP-S-LX-LC-1310-10	1000Base-X port	SM	LC	1310nm	10km
IGSFP-S-LH-LC-1310-40	1000Base-X port	SM	LC	1310nm	40km
IGSFP-S-ZX-LC-1550-80	1000Base-X port	SM	LC	1550nm	80km
IG-FSFP-M-LX-LC-1310-2	100Base-FX port	MM	LC	1310nm	2km
IG-FSFP-S-LX-LC-1310-10	100Base-FX port	SM	LC	1310nm	10km
IGSFP-10/100/1000BASE-T-RJ45	10/100/1000Base-T(X) port (self-adaptive)	--	RJ45	--	--

4.2.1 Gigabit SFP Optical Module

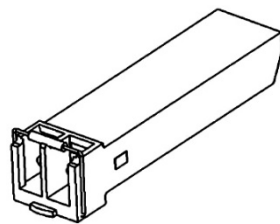


Figure 6 Gigabit SFP Optical Module

An SFP optical module is equipped with LC connector, and each port consists of a TX (transmit) port and an RX (receive) port. To enable communication between Device A and Device B, connect the TX port of Device A to the RX port of Device B, and the RX port of Device A to the TX port of Device B, as shown in the following figure.

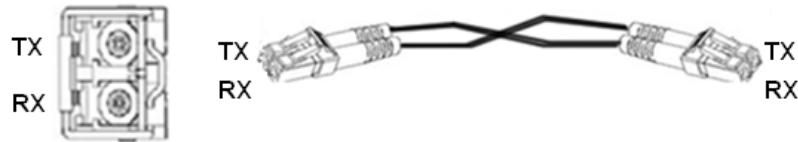


Figure 7 Fiber Connection of an SFP Optical Module

- How to Connect the SFP Optical Module

Insert the SFP optical module into the SFP slot in the switch, and then insert the fibers into the TX port and RX port of the SFP module.

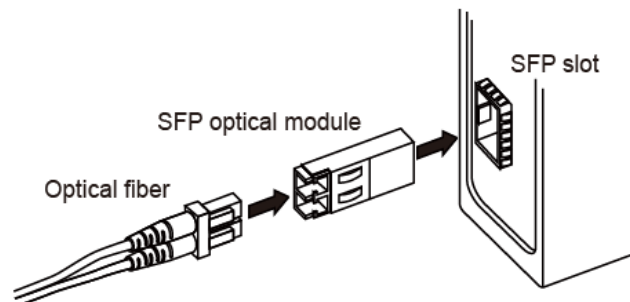


Figure 8 Connecting the SFP Optical Module

Identify the RX port and TX port of an SFP optical module:

1. Insert the two connectors in one end of two fibers into the SFP module, and those in the other end into the peer module.
2. View the corresponding connection status LED:

If the LED is on, the connection is correct. If the LED is off, the link is not connected. This may be caused by incorrect connection of the TX and RX ports. In this case, swap the two connectors at one end of the fibers.



Caution:

- The device uses laser to transmit signals in fibers. The laser meets the requirements of level 1 laser products. Routine operation is not harmful to your eyes, but do not look directly at the fiber port when the device is powered on.
 - If the defined transmission distance of an SFP module is longer than 60km, do not use a short fiber (<20km) for connection. If such a short fiber is used, the module will be burned.
-

4.2.2 Gigabit SFP Electrical Module

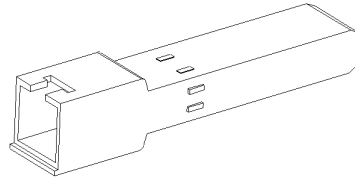


Figure 9 Gigabit SFP Electrical Module

- How to Connect the SFP Electrical Module

Insert the SFP electrical module into the SFP slot in the switch, and then insert the RJ45 connector of the twisted pair into the SFP module.

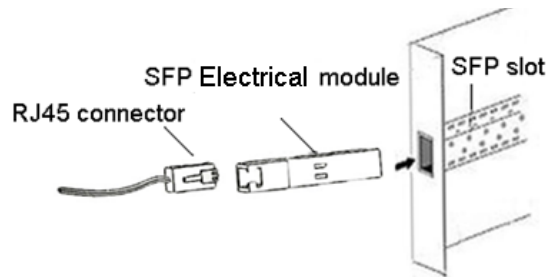


Figure 10 Connecting the SFP Electrical Module

4.3 10GBase-X SFP+ port

10GBase-X SFP+ slot (10GBase-X SFP+ slot) requires an SFP+ optical module to enable data transmission. The following table lists the 10GBase-X SFP+ optical modules (optional) supported by the series switches.

Table 6 SFP+ optical module

Model	Port	MM/SM	Connector	Central Wavelength	Transmission Distance
ATR-S0701DT	10GBase-X	SM	LC	1310nm	10km




Note:

The appearance, wiring and using methods of the 10GBase-X SFP+ port are same as the gigabit SFP slot, user can refer to 4.3

4.4 Console Port

Connect the 9-pin serial port of a PC to the console port of the switch with a DB9-RJ45 console cable. You can configure, maintain, and manage the switch by running Hyper Terminal in the Windows OS of a computer.

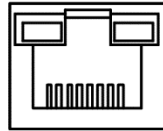

Console

Figure 11 Console Port

- DB9-RJ45 Console Cable

One end of a DB9-RJ45 console cable is the DB9 connector to be inserted into the 9-pin serial port of a PC, and the other end is crimped RJ45 connector to be inserted into the console port of the switch.

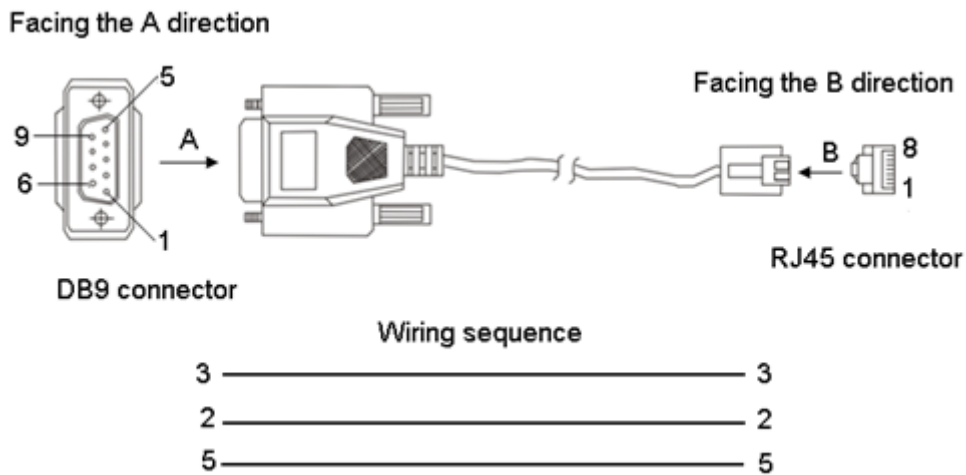


Figure 12 Wiring Sequence of DB9-RJ45 Console Cable

Table 7 Pin Definitions of DB9 Port (9-Pin Serial Port) and RJ45 Port (Console Port)

DB9 Port (9-Pin Serial Port)		RJ45 Port (Console Port)	
Pin	Signal	Pin	Signal
2	RXD (Receive data)	2	TXD (Transmit data)
3	TXD (Transmit data)	3	RXD (Receive data)
5	GND (Grounding)	5	GND (Grounding)

4.5 Grounding

Grounding protects the device from lightning and interference. Therefore, you must ground the device properly. You need to ground the device before it is powered on and disconnect the grounding cable after the device is powered off.

There is a grounding screw(see figure 2) on the Front panel of the device. The screw is for chassis grounding. After crimping one end of the grounding cable to a cold pressed terminal, secure the end to the grounding screw and firmly connect the other end to ground.



Note:

Cross-sectional area of the chassis grounding cable $>2.5\text{mm}^2$; Grounding resistance $<5\Omega$

4.6 Power Terminal Block

There is a power terminal block on the Front panel of the switch. You need to connect the power cable to the terminal block to provide power for the switch.

The device supports single (PWR1) and redundant (PWR1 and PWR2) power supply with a 5-pin 7.62mm-spacing plug-in terminal block. When the redundant power supply is used and one power supply is faulty, the switch can continue operating properly, thereby improving network reliability.



Note:

$0.75\text{mm}^2 < \text{Cross-sectional area of the power cable} < 2.5\text{mm}^2$; Grounding resistance: $<5\Omega$

- 5-Pin 7.62mm-Spacing Plug-in Terminal Block

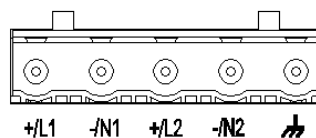



Figure 13 5-Pin 7.62mm-Spacing Plug-in Terminal Block (socket)

Table 8 Pin Definitions of 5-Pin 7.62mm-Spacing Plug-in Terminal Block

No.	Signal	DC Definition	AC Definition
-----	--------	---------------	---------------

KYLAND Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

1	+/L	PWR1: +	PWR1: L
2	-/N	PWR1: -	PWR1: N
3	+/L	PWR2: +	PWR2: L
4	-/N	PWR2: -	PWR2: N
3		PGND	PGND



Caution:

For single power supply, only pins 1, 2, and 3 (PWR1) of the terminal block can be connected. Do not use pins 4 and 5.

- wiring and mounting

Step 1: Ground the switch properly according to section 4.5.

Step 2: Remove the power terminal block from the switch.

Step 3: Insert the power cable into the power terminal block according to Table 8 to fix the power cable.

Step 4: Insert the terminal with the connected cable into the terminal block on the device.

Step 5: Connect one end of the power cable to an external power supply system (with the allowed power range). If the power LED on the front panel of the switch turns on, the power supply is connected properly.



Caution:

Before connecting the device to power supply, make sure that the power input meets the power requirement. If connected to an incorrect power input, the device may be damaged.



Warning:

- Do not touch any exposed conducting wire, terminal, or component with a voltage warning sign, because it may cause personal injury.
- Do not remove any part or plug in or out any connector when the device is powered on.

4.7 Alarm Terminal Block

The alarm terminal block is used for alarm output. When the switch works properly, the normally-open contacts of the alarm relay are closed and the normally-closed contacts are open. When an alarm occurs, the normally-open contacts are open and the normally-closed

contacts are closed. The alarm is outputted through a 3-pin 5.08mm spacing terminal block, as shown in Figure 14.

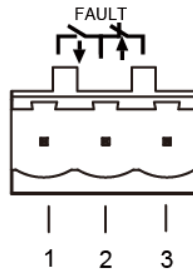


Figure 14 Alarm Terminal Block

Electrical parameters of the relay:

Max Switch Voltage: 250VAC/220VDC

Max Switch Current: 2A

Max Switch Power: 60W

Maximum dielectric voltage withstand: 2KV



Note:

Pin 1 and pin 2 are normally-open contacts; pin 2 and pin 3 are normally-closed contacts. When the switch works properly, pin 1 and pin 2 are closed, pin 2 and pin 3 are open; when an alarm occurs, pin 1 and pin 2 are open; pin 2 and pin 3 are closed.

5 LEDs

Table 9 Front Panel LEDs


LED	State	Description
Power 1 LED-PWR1	On	The power 1 is connected and operates properly.
	Off	The power 1 is not connected or operates abnormally.
Power 2 LED-PWR2	On	The power 2 is connected and operates properly.
	Off	The power 2 is not connected or operates abnormally.
Running LED-Run	Blinking	The CPU operates properly.

KYLAND Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

		On	The CPU is starting up.
		Off	The CPU does not start up.
Alarm LED-Alarm		On	An alarm occurs.
		Off	No alarm occurs.
10 Gigabit SFP + / Gigabit SFP Ethernet Port speed LED -Speed (XGX1-XGX4)	10 Gigabit SFP+ optical module	On	10G working state (1000Base-TX)
		Off	1000M working state (100Base-FX) or no connection
	Gigabit SFP optical module	On	1000M working state (1000Base-TX)
		Off	100M working state (100Base-FX) or no connection
	Gigabit SFP electrical module	On	1000M working state (1000Base-TX)
		Off	10/100M working state (10/100Base-T(X)) or no connection
100/1000Base-X SFP Port speed LED -Speed (1-24)		On	1000M working state (1000Base-TX)
		Off	10/100M working state (10/100Base-T(X)) or no connection
10 Gigabit SFP + / Gigabit SFP port connection status LED-Link/ACT -Link/ACT (XGX1-XGX4)		On	Effective port connection
		Blinking	Ongoing network activities
		Off	No effective port connection
1000Base-T(X), 10/100/1000Base-T(X) SFP slot connection status LED -Link/ACT (1-24)		On	Effective port connection
		Blinking	Ongoing network activities
		Off	No effective port connection
POE LED		On	System has PoE output
		Off	The system has no PoE output


Table 1 Rear Panel LEDs

LED	State	Description
-----	-------	-------------

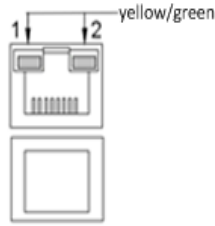

LED 1 indicate the status of the lower slot, while LED 2 indicate the status of the upper slot.

10/100/1000Base-T(X) Ethernet port	Yellow on	Effective port connection and 1000M working state (1000Base-TX)
	Green on	Effective port connection and 10/100M working state (10/100Base-T(X))
	Yellow blinking	1000M working state(1000Base-TX) and Ongoing network activities
	Green blinking	10/100M working state (10/100Base-T(X)) and Ongoing network activities
	off	No effective port connection

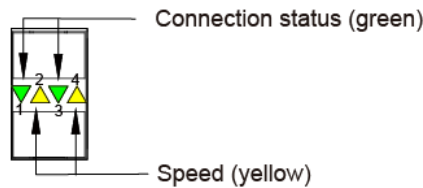

LED 1 and LED 2 indicate the status of the lower gigabit SFP slot, while LED 3 and LED 4 indicate the status of the upper gigabit SFP slot.

10 Gigabit SFP + / Gigabit SFP Ethernet Port speed LED	10 Gigabit SFP+ optical module	On	10G working state (1000Base-TX)
		Off	1000M working state (100Base-FX) or no connection
	Gigabit SFP optical module	On	1000M working state (1000Base-TX)
		Off	100M working state (100Base-FX) or no connection
	Gigabit SFP electrical module	On	1000M working state (1000Base-TX)
		Off	10/100M working state (10/100Base-T(X)) or no connection
10 Gigabit SFP + / Gigabit SFP		On	Effective port connection

KYLAND Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

port connection status LED	Blinking	Ongoing network activities
	Off	No effective port connection
POE LED	On	System has PoE output
	Off	The system has no PoE output

6 Switch Access

You can access the switch in any of the following ways:

6.1 Access through Console Port

Step 1: Connect the console port of the switch to the 9-pin serial port of a PC with the delivered DB9-RJ45 console cable.

Step 2: Open the Hyper Terminal in the Windows OS. On the desktop, click Start → All Programs → Accessories → Communications → Hyper Terminal.

Step 3: Create a connection "Switch", as shown in Figure 15.



Figure 15 Creating a Connection

Step 4: Connect the communication port in use, as shown in Figure 16.



Figure 16 Selecting the Communication Port in Use



Note:

To confirm the communication port in use, right-click [My Computer] and click [Property]→[Hardware]→[Device Manager]→[Port] to view the communication port.

Step 5: Set port parameters (Bits per second: 115200, Data bits: 8, Parity: None, Stop bits: 1, and Flow control: None), as shown in Figure 17.



Figure 17 Setting Port Parameters

Step 6: Click OK to enter the switch CLI. Then you can run the following commands to perform operations.

Table 10 CLI Commands

View	Command	Description
User view	SWITCH>enable	Enter the management view.
Management view	SWITCH#show interface	Query the IP address of the switch.
Management view	SWITCH#show version	Query the version of the switch.
Management view	SWITCH#reboot	Restart the switch.
Management view	SWITCH#load default	Restore the factory default settings
Management view	SWITCH#config terminal	Enter the configuration view.

6.2 Access through Telnet

Step 1: Connect the network port of a PC to the Ethernet port of the switch with a network cable.

Step 2: Enter "telnet IP-address" in the Run dialog box, as shown in Figure 18. The default IP address of a Kyland switch is 192.168.0.2.

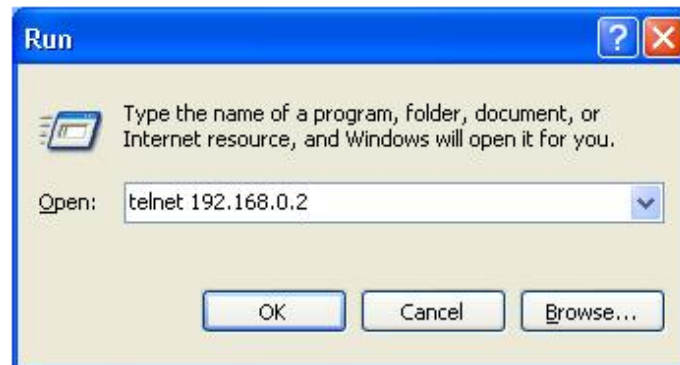


Figure 18 Access through Telnet

Step 3: Click OK. The Telnet CLI is displayed. Then you can enter commands (as shown in Table 10) to perform operations.

6.3 Access through Web

Step 1: Connect the network port of a PC to the Ethernet port of the switch with a network

KYLAND Error! Use the Home tab to apply 标题 1 to the text that you want to appear here.

cable.

Step 2: Enter the IP address of the switch in the address box of the browser. The user login interface is displayed. You can log in to the Web UI by default user name "admin" and password "123".



Note:

- IE8.0 or a later version is recommended.。
 - For details about how to access the switch and other operation, refer to the Web operation manual in the delivered CD.
-

7 Basic Features and Specifications

Power Requirements

Power Identifier	Rated Voltage Range	Maximum Voltage Range
H3 (220AC)	220VAC	85-264VAC
Terminal block	5-pin 7.62 mm-spacing plug-in terminal block	

Rated Power Consumption

Rated Power Consumption	NO PoE: 60W; POE: 300W;
-------------------------	----------------------------

Physical Characteristics

Housing	Metal, fanless
Installation	19-inch 1U rack mounting
Dimensions(W×H×D)	440mm×44mm×355.9mm (Including the power supply protruding from the casing surface)
Weight:	6.76Kg

Environmental Limits

Ambient temperature	-40℃ ~ +60℃
Storage temperature	-40℃ ~ +85℃
Ambient relative humidity	5% ~ 95% (non-condensing)

Warranty

Warranty	Five years
----------	------------

KYLAND

FAX: +86-10-88796678

Website: <http://www.kyland.com>

Email: support@kyland.com

For more information about KYLAND
products, please visit our website:

<http://www.kyland.com>