



IES6316-8GT8GS-2P48

Managed Industrial Ethernet Switch

Quick Installation Guide

【Package Checklist】

Please check the integrity of package and accessories while first using the switch.

1. Industrial Ethernet switch
2. DIN-Rail mounting attachment
3. Certification
4. Warranty card


If any of these items are damaged or lost, please contact our company or dealers, we will solve it ASAP.

【Product Overview】


This product is Gigabit managed DIN-Rail industrial Ethernet switch with high performance and cost-effectiveness. The model is IES6316-8GT8GS-2P48-N (8 Gigabit SFP slots + 8 Gigabit copper ports).

【Panel Design】

➤ Top view, bottom view and rear view

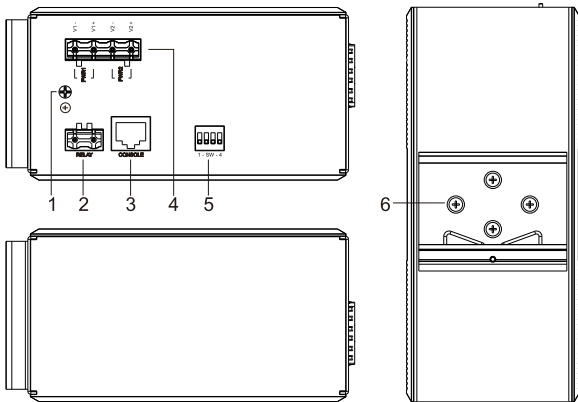


➤ Front View

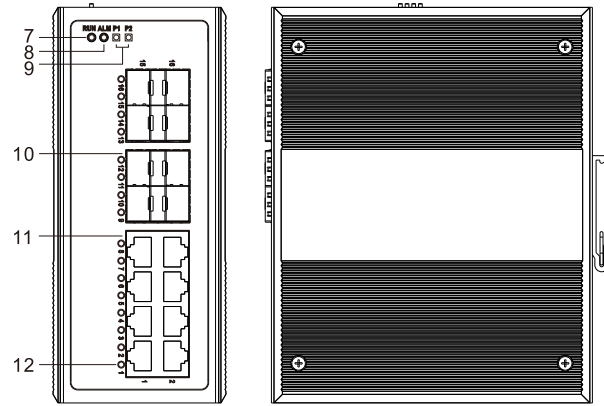

1. Grounding screw
2. Relay alarm output terminal block
3. Console port
4. Terminal block for power input
5. DIP switch
6. DIN-Rail mounting kit
7. Device running indicator RUN
8. Relay alarm indicator ALM
9. Power input status indicator P1/P2
10. 1000Base-X SFP Gigabit Ethernet SFP slot
11. 10/100/1000Base-T(X) Gigabit Ethernet Interface
12. Ethernet port link indicator

【Mounting Dimension】

Unit: mm

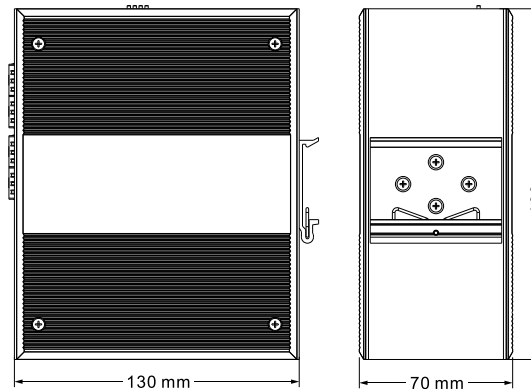


Notice Before Mounting:

- Don't place or install the device in area near water or moist, keep the relative humidity of the device surrounding between 5%~95% without condensation.
- Before power on, first confirm the supported power supply specification to avoid over-voltage damaging the device.
- The device surface temperature is high after running; please don't directly contact to avoid scalding.

【DIN-Rail Mounting】

The product adopts 35mm standard DIN-Rail mounting which is suitable for most industrial scenes, mounting steps as follows:

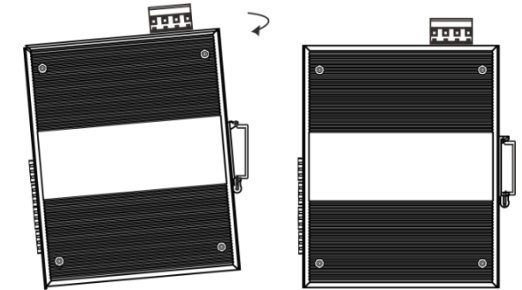

- Step 1 Check if the DIN-Rail mounting kit is installed firmly.
- Step 2 Insert the bottom of DIN-Rail mounting kit (one side with spring support) into DIN-Rail, and then insert the top into DIN-Rail.
Tips:
Insert a little to the bottom, lift upward and then insert to the top.
- Step 3 Check and confirm the product is firmly installed on DIN-Rail, then mounting ends.

【Disassembling DIN-Rail】


- Step 1 Power off the device.
- Step 2 After lifting the device upward slightly, first shift out the top of DIN-Rail mounting kit, and then shift out the bottom of DIN-Rail, disassembling ends.



Notice before power on:

- Power ON operation: First insert the power supply terminal block into the device power supply interface, then plug the power supply plug contact and power on.
- Power OFF operation: First, remove the power plug, then remove the wiring section of terminal block. Please pay attention to the above operation sequence.


【Power Supply Connection】

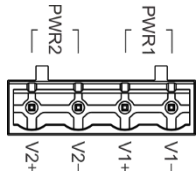

The device provides 4 pins power supply input terminal blocks and supports two independent DC power supply systems, PWR1 and PWR2, which supports nonpolarity and anti-reverse connection function, that the device can work normally after reverse connection.

Voltage range: 12~48VDC.

 【Relay Connection】




Relay terminals are a set of normally open contacts of the device alarm relay. They are open circuit in the state of normal non alarm, closed when any alarm information occurs. For example, they are closed when powered off, and send out alarm. The product supports 1 relay alarm information output that can output DC power supply alarm information or network abnormality alarm. It can be connected to alarm light or alarm buzzer or other switching value collecting devices, which can timely inform operators when the alarm occurs.

【Console Port Connection】

The device provides 1 program debugging port based on RS-232 serial port which can conduct device CLI command management after connecting to PC. The interface adopts RJ45 port, the RJ45 pin definition as follows:

Pin No.	2	3	5
Definition	TXD	RXD	GND

 【DIP Switch Settings】



The device provides 4 pins DIP switch for function setting, in which “ON” is the enabled end. The definitions of DIP switch are as follows:

PIN	Definition	Operation
1	Reboot	Set the switch to ON, then set it to OFF after 1-2 seconds, the system will reboot automatically.
2	Restore Factory Settings	Set the switch to ON, then set it to OFF after 5 seconds, the system will automatically restore the factory settings.
3-4	Reserved	—

【Checking LED Indicator】

The device provides LED indicators to monitor its operating status, which has simplified the overall troubleshooting process. The function of each LED is described in the table below:


LED	Indicate	Description
P1	ON	Power P1 is connected and running normally
	OFF	Power P1 is disconnected or running abnormally
P2	ON	Power P2 is connected and running normally
	OFF	Power P2 is disconnected or running abnormally
ALM	ON	Power supply or port link has alarm
	OFF	Power supply and port link have no alarm
RUN	ON	The device is powering on or the device is abnormal.
	OFF	The device is powered off or the device is abnormal.
	Blinking	Blinking 1 time per second, system is running normally
Link/Act	ON	The Ethernet interface has

(1~16)		established a valid network connection
	Blinking	The Ethernet interface is in a network activity state
	OFF	The Ethernet port has not established a valid network connection


【Logging in to WEB Interface】

This device supports WEB management and configuration. Computer can access the device via Ethernet interface. The way of logging in to device’s configuration interface via IE browser is shown as below:

 - Step 1** Configure the IP addresses of computer and the device to the same network segment, and the network between them can be mutually accessed
- Step 2** Enter device’s IP address in the address bar of the computer browser.



- Step 3** Enter device’s username and password in the login window as shown below.

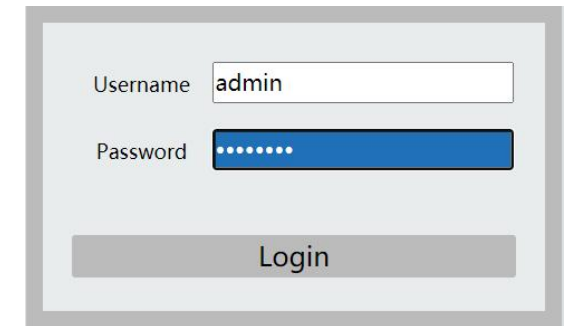

- Step 4** Click “Login” button to login to the WEB interface of the device.



Note:

- The default IP address of the device is “192.168.1.254”.
- The default user name and password of the device are

“admin”.

- If the username or password is lost, user can restore it to factory settings via device DIP switch or management software; all modified configurations will be cleared after restoring to factory settings, so please backup configuration file in advance.
- Please refer to user manual for specific configuration method of logging in to WEB interface and other configurations about network management function.

【Specification】

Panel	
Gigabit SFP	1000Base- X, SFP slot
Gigabit copper port	10/100/1000Base-T(X) self-adapting RJ45 port, half/full duplex self-adaption or forced working mode, support MDI/MDI-X self-adaption
Console port	CLI command management port (RS-232), RJ45
Alarm interface	2-pin 7.62mm pitch terminal block, support 1 relay alarm output
Indicator	Power supply indicator, run indicator, interface indicator, alarm indicator
Switch Property	
Backplane bandwidth	56G
Packet buffer size	16Mbit
MAC Address Table	12K
Power supply	
Input power supply	12~48VDC Support dual power supply redundancy and non-polarity Support built-in 4.0A overcurrent protection
Access terminal block	4-pin 7.62mm pitch terminal blocks

Power Consumption	
No-load	10.99W@24VDC
Full-load	20.69W@24VDC
Working Environment	
Working temperature	-40°C~75°C
Storage temperature	-40°C~75°C
Working humidity	5%~95% (no condensation)
Protection grade	IP40 (metal shell)

【Disposal of Waste Electrical and Electronic Equipment (WEEE 2012/19/EU)】

(Applicable in the EU-member states)



The crossed-out wheeled bin symbol on the equipment or its packaging indicates that the product, at the end of its service life, shall not be mixed with unsorted municipal waste but should be collected separately, in accordance with local laws and regulations.

A proper separate collection of

end-of-life equipment for the subsequent recycling, treatment and environmentally compatible disposal, will help prevent potential damage to the environment and human health, facilitating the reuse, recycling and/or recovery of its component materials.

Private users should contact their vendor or municipal waste management service and ask for disposal information.

Professional users should contact their suppliers and check the terms of their selling agreement.

This product must not be disposed of with other commercial waste.

Users' cooperation in the correct disposal of this product will contribute to saving valuable resources and protecting the environment.