

**NOTE**

Please refer to the AX93242 Series Product Information CD for the complete drivers and utilities.

 

**I. Checklist**

- ✓ AX93242 HD Audio Board x 1
- ✓ Quick Installation Guide x 1
- ✓ Product Information CD-ROM x 1
- ✓ HD Link Cable x 1

**Note:** Please contact your local vendors if any damaged or missing items. DO NOT apply power to the board if any damaged components.

**II. Jumper Settings**

Before applying the power to AX93242 Series, please make sure all jumper settings are defaulted as the following table:

Description	Function	Jumper Setting
Line Out / Speaker Out	Line Out(Default)	<p><b>JP1</b></p> 
	Speaker Out	<p><b>JP1</b></p> 

Please refer to the AX93242 Series Product Information CD for the complete drivers and utilities.

### III. Connectors

Function	Connector	Function	Connector
Line In	CN1	MIC In	CN2
Line Out / Speaker Out	CN3	HD Link	HDA1
CD In / Aux In	AUX1		

### IV. Board Layout

