



SYSGuard 1012


Temperature & Humidity Sensor

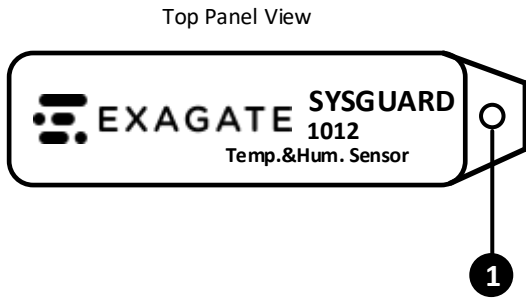

Front Panel View

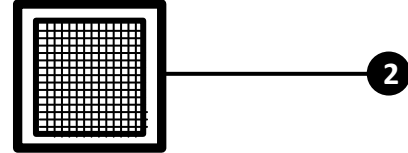

Rear Panel View

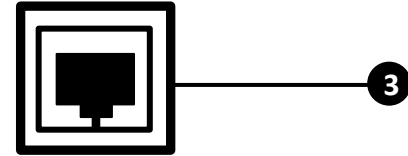

- 1 Assembly Hole
- 2 Sensing Point
- 3 Communication Port

Product Info: Measures temperature and humidity in the area.

Head Office

A: Yeşilce Mah. Doğa Sokak Kökten Plaza No:6 Kat:2 Kağıthane - İstanbul - Turkey
T: +90 212 275 73 22 F: +90 212 275 73 66
E: info@exagate.com

Support

support@exagate.com



Operational Properties

Power Supply Voltage	4,5 - 12 VDC
Power Consumption	0,005 - 0,007 A typical 0,006 A 0,0525 - 0,10 W typical 0,072 W
Operational Temperature Range	-25 +70 °C
Operational Humidity Range	0 - 85 % Rh
Storage Temperature Range	-40 +85 °C
Storage Humidity Range	0 - 90 % Rh

Physical Properties

Dimensions (H x W x D)	54,3 x 14 x 14	mm
Color	Black	
Weight	65(+/- 5%)	grams

Technical Properties

Temperature Measurement Range	-25 +70 °C
Temperature Measurement Tolerance	+/- 0,2 °C
Temperature Measurement Resolution	0,1 °C
Humidity Measurement Range	0 - 90 % Rh
Humidity Measurement Tolerance	+/-2 % Rh
Humidity Measurement Resolution	%0,5 Rh
Maximum Distance from Main Unit	3 m
External Device Input	NO
Supported Units	All Intelligent PDU

Head Office

A: Yeşilce Mah. Doğa Sokak Kökten Plaza No:6 Kat:2 Kağıthane - Istanbul - Turkey
T: +90 212 275 73 22 F: +90 212 275 73 66
E: info@exagate.com

Support

support@exagate.com



PRODUCT SKU #	BARCODE #	P/N	DESCRIPTION
SYSG1012	8697270920521	7270SE21012	Temperature & Humidity Sensor

LIMITED PRODUCT WARRANTY

All ExaGate products are covered with 2 years limited guarantee from the date of original purchase. (Warranty duration may change depending on your country) Your sales or delivery receipt, showing the date of purchase of product is your proof of purchase. ExaGate is obliged to repair or replace the defective hardware (or any part of it's) with no charge to owner.

Conditions Void of Warranty

- Damages on unit, cable or screen.
- Defections due to electrical wiring and/or city network.
- Interference to unit by non-authorized staff.
- Any problems caused by act of nature.
- Misusage of unit stated by the user manual.
- Removal or destruction of serial number, warranty labels.
- Any kind of modifications on unit.

Head Office

A: Yeşilce Mah. Doğa Sokak Kökten Plaza No:6 Kat:2 Kağıthane - İstanbul - Turkey
T: +90 212 275 73 22 F: +90 212 275 73 66
E: info@exagate.com

Support

support@exagate.com

