

SYSGuard 7031, 7035

Data Sheet and Installation Guide



Welcome to SYSGuard 7031, 7035 W-Detect Cables Data Sheet and Installation

Guide INTRODUCTION

Box Contents

- SYSGuard 7031, 7035
- Self-Adhesive Cable Mount




Before Installation!

Make sure your device is properly mounted and ready to operate safely.

Step 1

SYSGuard 7031 & SYSGuard 7035 W-Detect Cables can be connected to SYSGuard 4001, SYSGuard 7030 W-Detect Module, SYSGuard 6200 Combo Sensor. Plug the ends into the W-Detect Inputs, screw the ends enough to hold.

Cable Layout

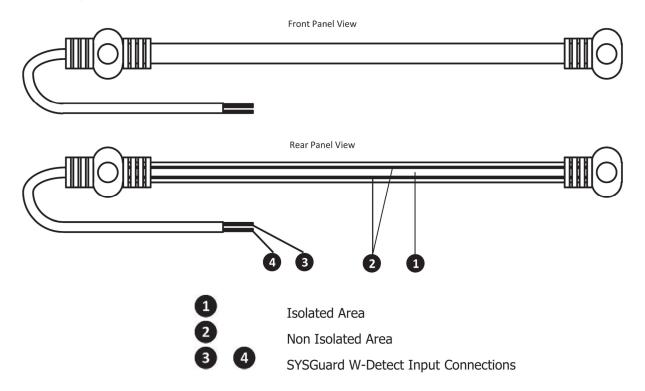





Operational Properties

Power Supply Voltage	10,5 - 14,4 VDC typical 12 VDC	
Power Consumption	0,005 - 0,010 A typical 0,009 A 0,084 - 0,14 W typical 0,10 W	
Operational Temperature Range	0 +50 °C	
Operational Humidity Range	0 - 100 % Rh	
Storage Temperature Range	-10 +75 °C	
Storage Humidity Range	0 - 100 % Rh	
al Properties		

Physica

Dimensions Length	1000 mm 39,37 inches	5000 mm 196,85 inches
Color	Black – Yellow	
Weight	100 (+/-5%) grams	450(+/-5%) grams

Extra Properties

Supported Units SYSGuard 4001, SYSGuard 7001, SYSGuard 7030


Support

support@exagate.com






Dimensions SYSGuard 7031

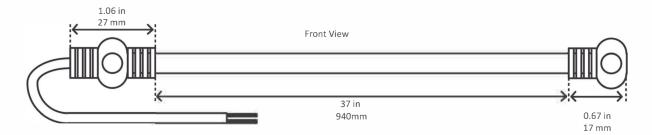

Dimensions SYSGuard 7035

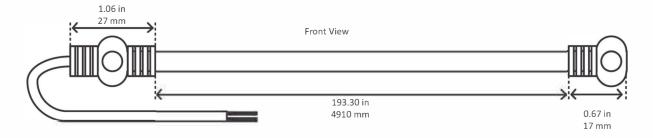

Sample Connection Diagram



SYSGuard 7030 W-Detect Sensor connected to SYSGuard 7031 or SYSGuard 7035 W-Detect Cable





LIMITED PRODUCT WARRANTY

All ExaGate products are covered with 2 years limited guarantee from the date of original purchase. (Warranty duration may change depending on your country) Your sales or delivery receipt, showing the date of purchase of product is your proof of purchase. ExaGate is obliged to repair or replace the defective hardware (or any part of it's) with no charge to owner.

Conditions Void of Warranty

- Damages on unit, cable or screen.
- Defections due to electrical wiring and/or city network.
- Interference to unit by non-authorized staff.
- Any problems caused by act of nature.
- Misusage of unit stated by the user manual.
- Removal or destruction of serial number, warranty labels.
- Any kind of modifications on unit.

Instructions in this QIG are in abstract essence.
For detailed information and instructions please visit www.exagate.com/support
or in Help Menu in SYSGuard 4001/7001 Main Unit WebPack interface.

