



UA I/O Series Quick Start

V6.0, 12/2023

Packing List

UA I/O package includes this document and the following items:

U-75xx I/O Module



MicroSD Card



Screw Driver



* This card is already in the I/O module. It is used to install the FW. **DO NOT** remove it.

DB-1820



For
U-7518ZM/S
U-7519ZM/S

DN-1822 CA-252518D-1




For
U-7518ZM/S2
U-7519ZM/S2

Technical Resources

How to search for drivers, manuals and spec information on ICP DAS website.

● For Mobile Web

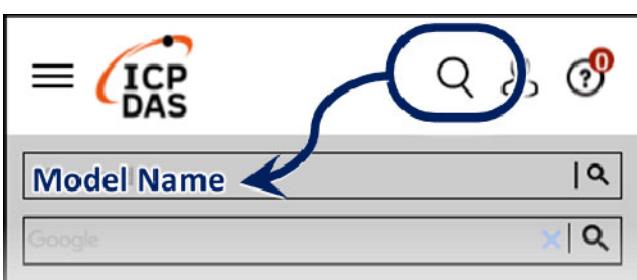

Technical Support

service@icpdas.com

<https://www.icpdas.com>

● For Desktop Web





1. Preparations for Devices

1. PC/NB: Can connect to the network and set the network
2. Ethernet Switch/Hub (Ex: NS-205A or PoE Switch NSM-208SE)
3. Power Supply: +12 ~ +48 VDC (Ex: MDR-60-24)

2. Hardware Connection

Connect the UA I/O Module with the RJ-45 Ethernet port to an Ethernet switch/hub ([Fig.2 for PoE Switch](#)) and PC. You can also directly link the U-75xx to PC with an Ethernet cable.

After power is connected, please **【wait 1 minute】** for U-75xx start-up procedure. When the "RUN" light starts operating, it represents the boot is complete. (**After a minute, the "RUN" light flashes at one-second intervals, showing that the contact of the SD card in the module is abnormal.**)

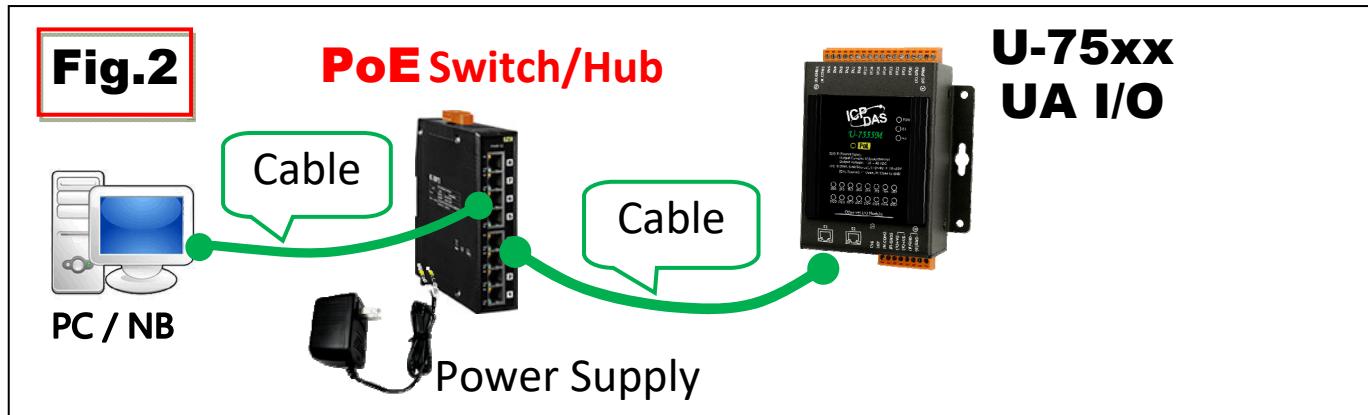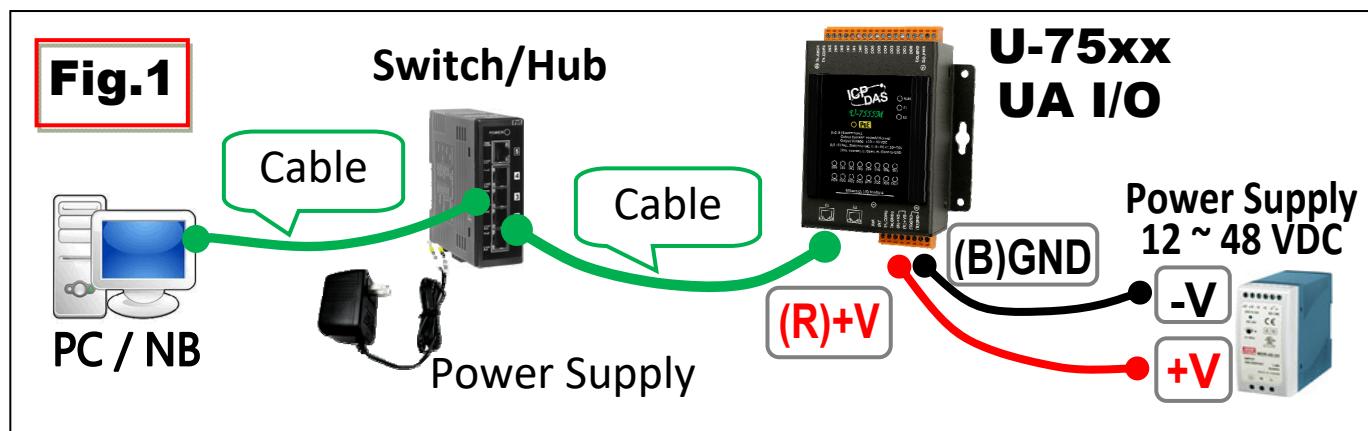

3. Network Connection

Factory Default Settings of U-75xx			
Network	IP	192.168.255.1	Assign U-75xx a new IP setting according to your case.
	Mask	255.255.0.0	
	Gateway	192.168.1.1	
Web UI Account	Username	root	After login, change the username/password at once.
	Password	root	


1. Change the PC's IP setting as following.

(Write down the **PC original** network settings before modify.)


EX:

IP	192.168.255.10
Subnet mask	255.255.0.0
Default Gateway	192.168.1.1


2. Make sure the PC and U-75xx is connecting through Ethernet. And then open a PC side browser (Ex: Chrome, IE...). Type **http://192.168.255.1** in the URL address. Use default Web UI username/password **root/root** to login.

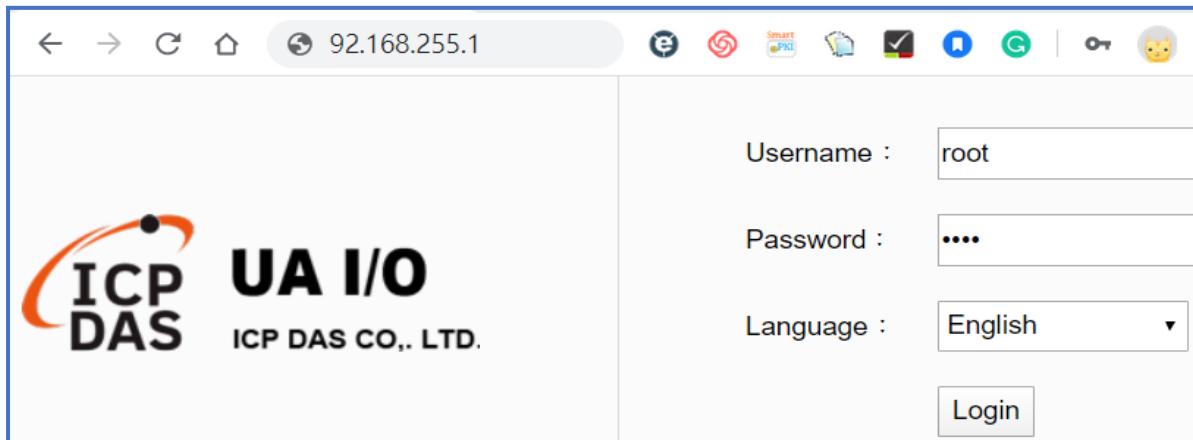

3. Change the Username/password in 【Account Setting】 of 【System Setting】 , or user cannot use any other function.

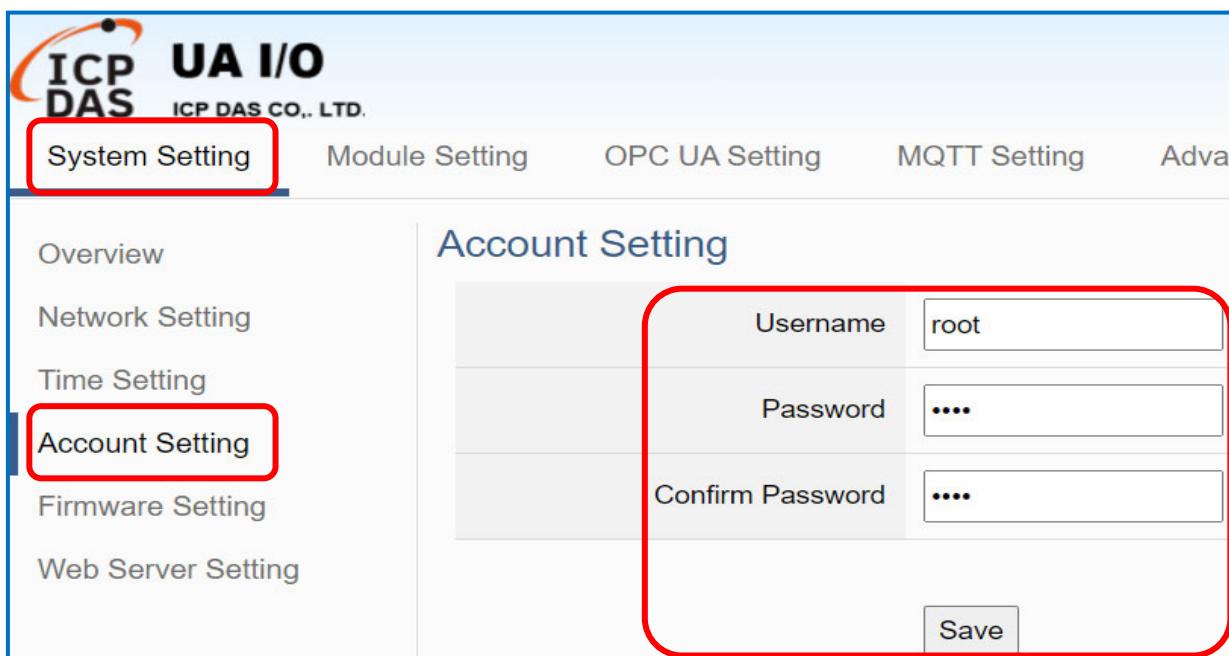

4. Click 【System Setting】 → 【Network Setting】 > 【Network Setting(LAN)】 to change the IP settings by user network.

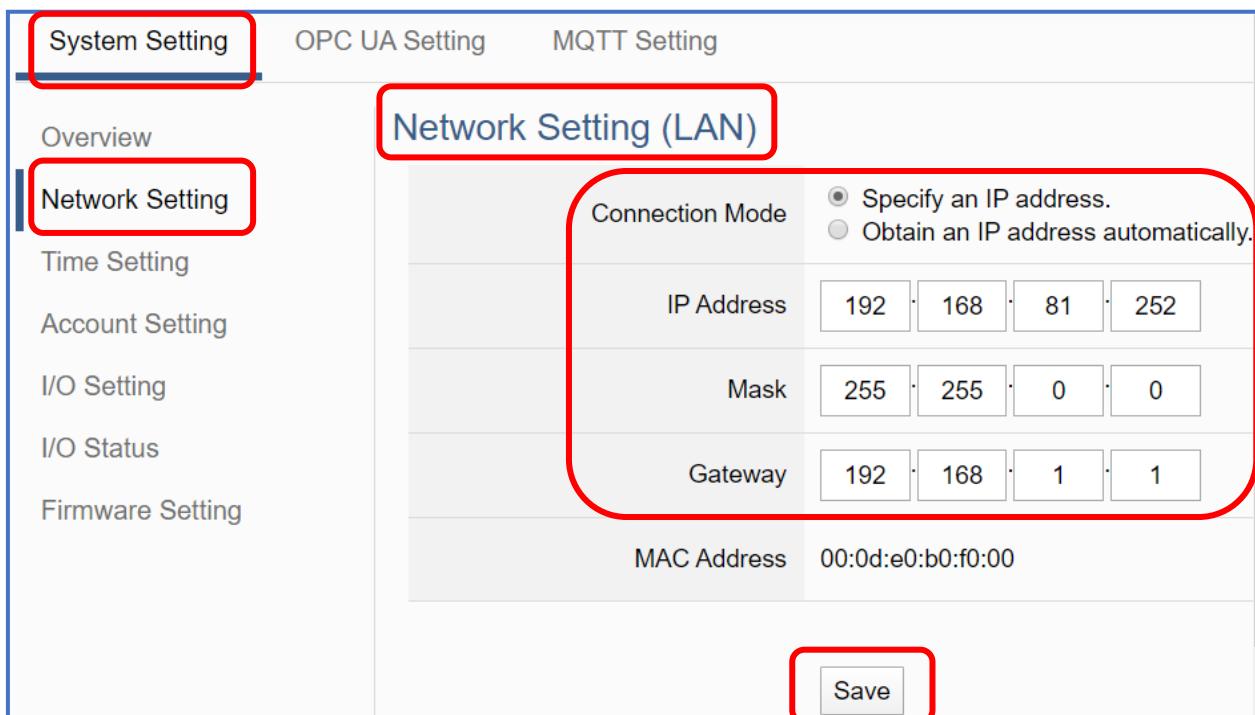


5. Save the IP settings, restore the PC original IP settings, and then type the new IP/Username/Password in the browser to login the Web UI of U-75xx to configure user's UA project.

● AI/AO Jumper Setting

To change the Selection Jumpers for Analog channels:

1. Remove the top case and upper board of the module, the selection jumpers are next to the connector.

Jumper Location Figure

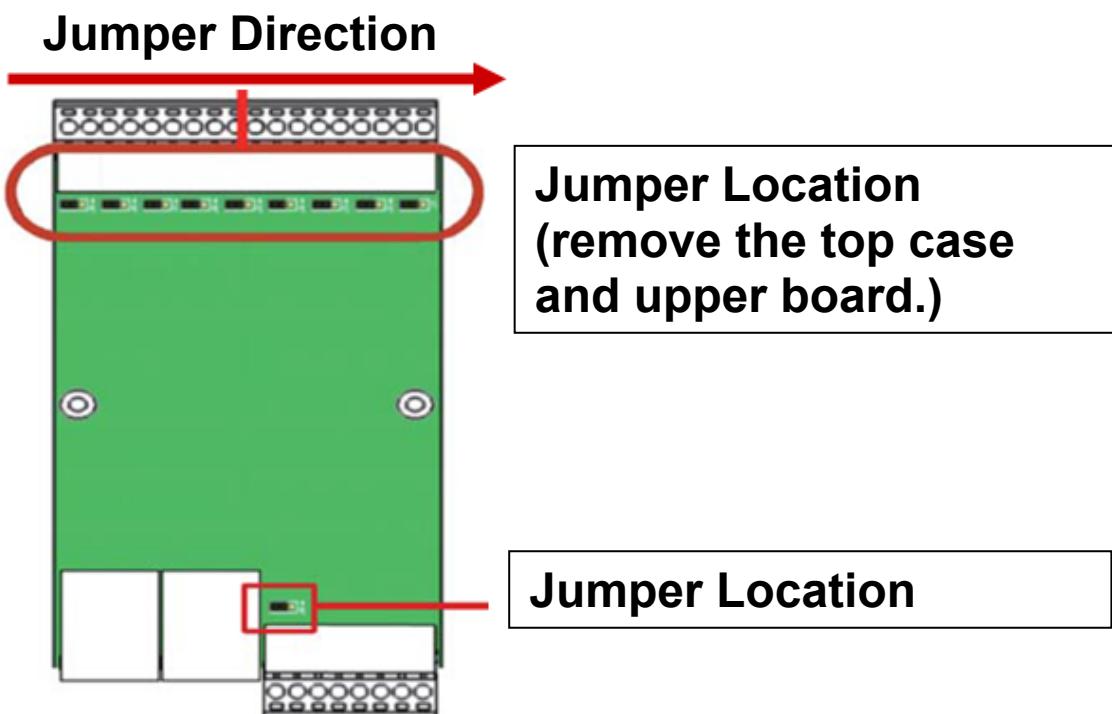


U-7502M		
Channel	Vin1±	Vin0±
Jumper	J2	J1
Channel	Vin2±	
Jumper	J3	

U-7528M		
Channel		
Jumper		
Channel	V/Iout6+	V/Iout7+
Jumper	J1	J2

U-7517M-10									
Channel	Vin8±	Vin7±	Vin6±	Vin5±	Vin4±	Vin3±	Vin2±	Vin1±	Vin0±
Jumper	J9	J8	J7	J6	J5	J4	J3	J2	J1
Channel	Vin9±								
Jumper	J10								

Jumper Location Figure

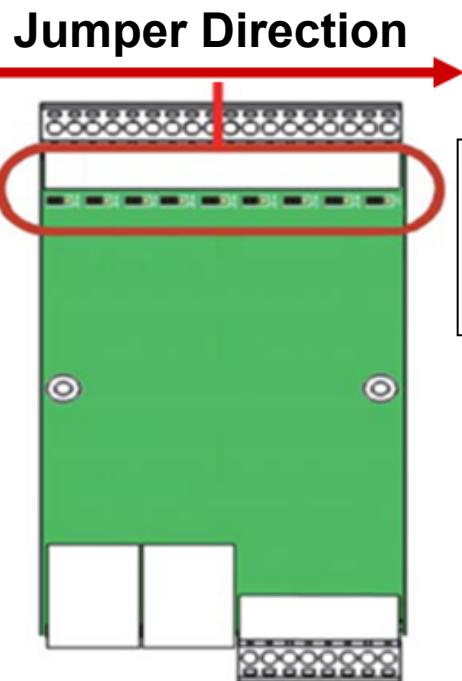

Jumper Location
(remove the top case and upper board.)

U-7504M								
Channel	Vin3	Vin2	Vin1	Vin0	Vout3	Vout2	Vout1	Vout0
Jumper	J4	J3	J2	J1	J8	J7	J6	J5

U-7524M				
Channel	Vout3+	Vout2+	Vout1+	Vout0+
Jumper	J4	J3	J2	J1

U-7526M								
Channel	Vout1	Vout0	Vin5	Vin4	Vin3	Vin2	Vin1	Vin0
Jumper	J8	J7	J6	J5	J4	J3	J2	J1

U-7517M								
Channel	Vin7±	Vin6±	Vin5±	Vin4±	Vin3±	Vin2±	Vin1±	Vin0±
Jumper	J8	J7	J6	J5	J4	J3	J2	J1

U-7519ZM										
Channel	CH0±	CH1±	CH2±	CH3±	CH4±	CH5±	CH6±	CH7±	CH8±	CH9±
Jumper	J1	J2	J3	J4	J5	J6	J7	J8	J9	J10


2. Set up the **Jumper** corresponding to the type of **Voltage / Current** and **Input / Output** for each analog channel.

Voltage Input Selection Jumper (Jumpers default: Voltage)

U-7502M, U-7504M, U-7517M, U-7517M-10, U-7526M




U-7519ZM

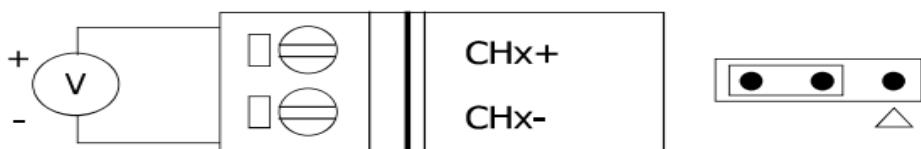

Voltage Input (Single-ended Mode) Selection Jumper

U-7517M-10

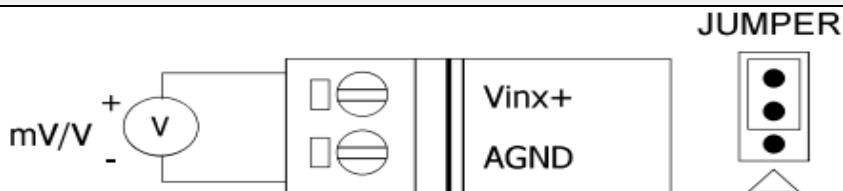


Voltage Output Selection Jumper

U-7504M, U-7524M, U-7526M



U-7528M

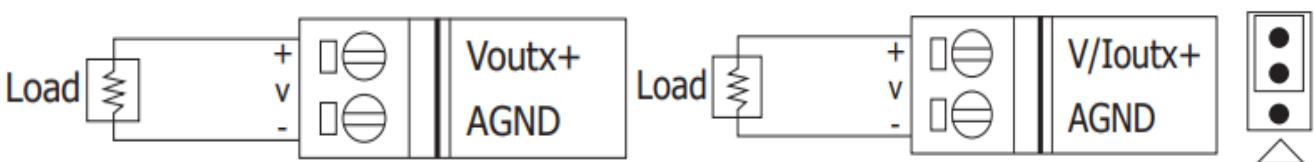


Current Input Selection Jumper

U-7502M, U-7504M, U-7517M, U-7517M-10, U-7526M




U-7519ZM

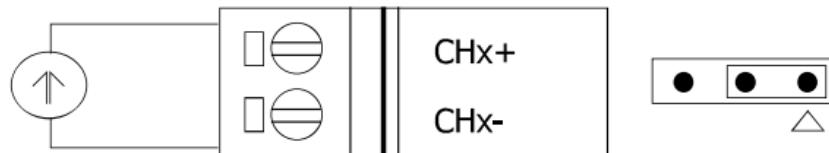


Current Output Selection Jumper

U-7504M, U-7524M, U-7526M

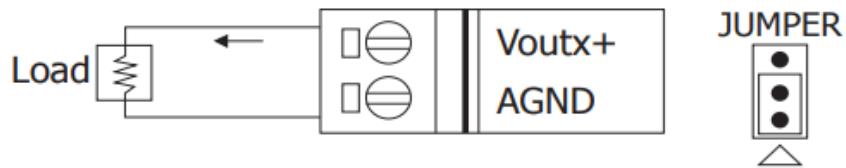

U-7528M

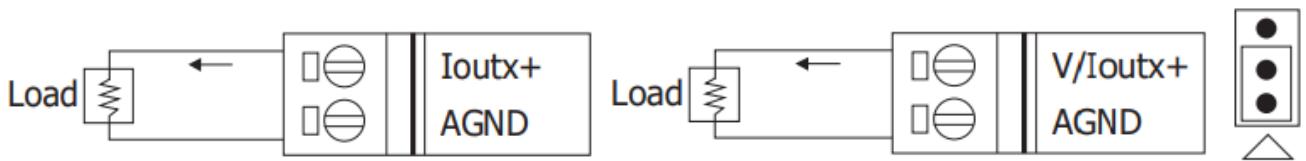

Thermocouple Input Selection Jumper

U-7519ZM

