

Packing List

In addition to this guide, the package includes the following items:



iNS-306

Technical Support


service@icpdas.com

www.icpdas.com

Resources

How to search for drivers, manuals and spec information on ICP DAS website.

- For Mobile Web

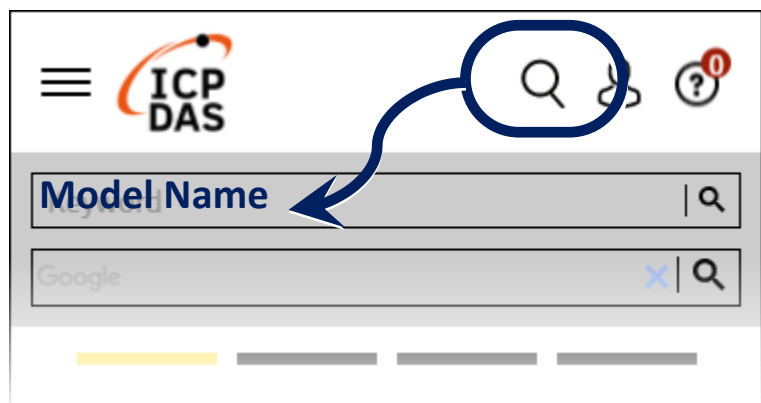

- For Desktop Web



1 Connecting the Power and Host PC


1) Make sure your PC has workable network settings.

Disable or well configure your Windows firewall and Anti-Virus firewall first, else the **Search Server** in section 3 may not work.

(Please contact with your system Administrator)

2) Connect the iNS-306 to your PC or to the same sub network of PC.

3) Supply power (+12 ~ +57 V_{DC}) to the iNS-306.

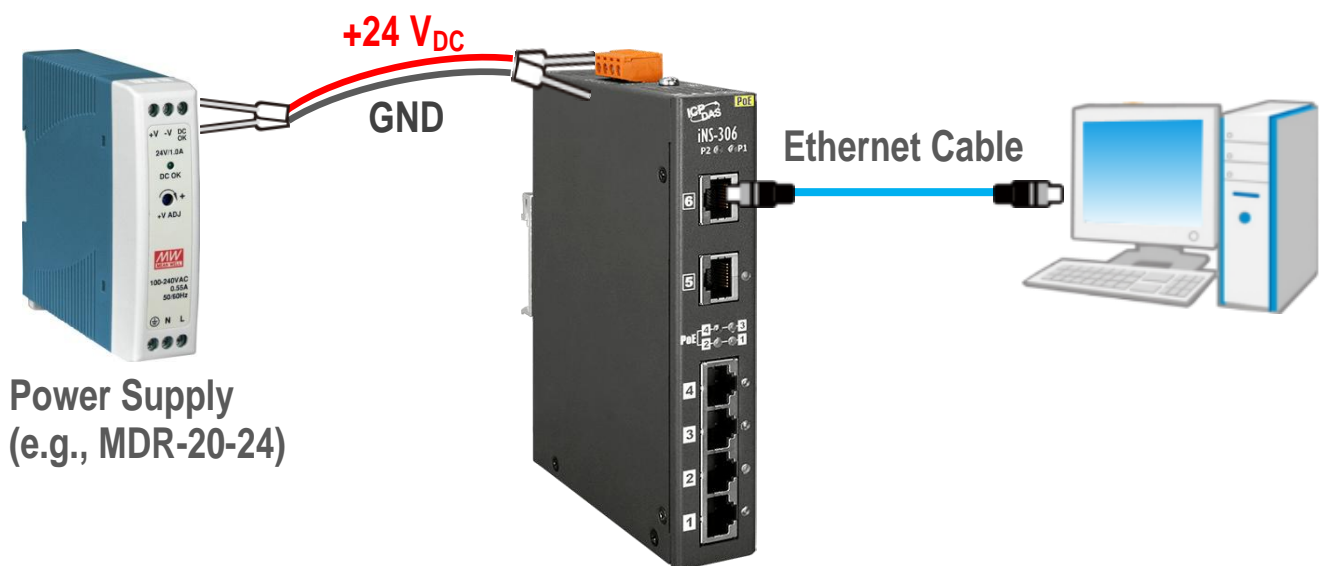

2 Installing Software on Your PC


Install eSearch Utility, which can be obtained from the web site:



https://www.icpdas.com/en/product/guide+Software+Utility_Driver+eSearch_Utility

3 Configuring Network Settings

- 1) Double-click the eSearch Utility shortcut on the desktop.
- 2) Click **Search Server** to search your iNS-306.
- 3) Double-click the name of iNS-306 to open the **Configure Server (UDP)** dialog box.

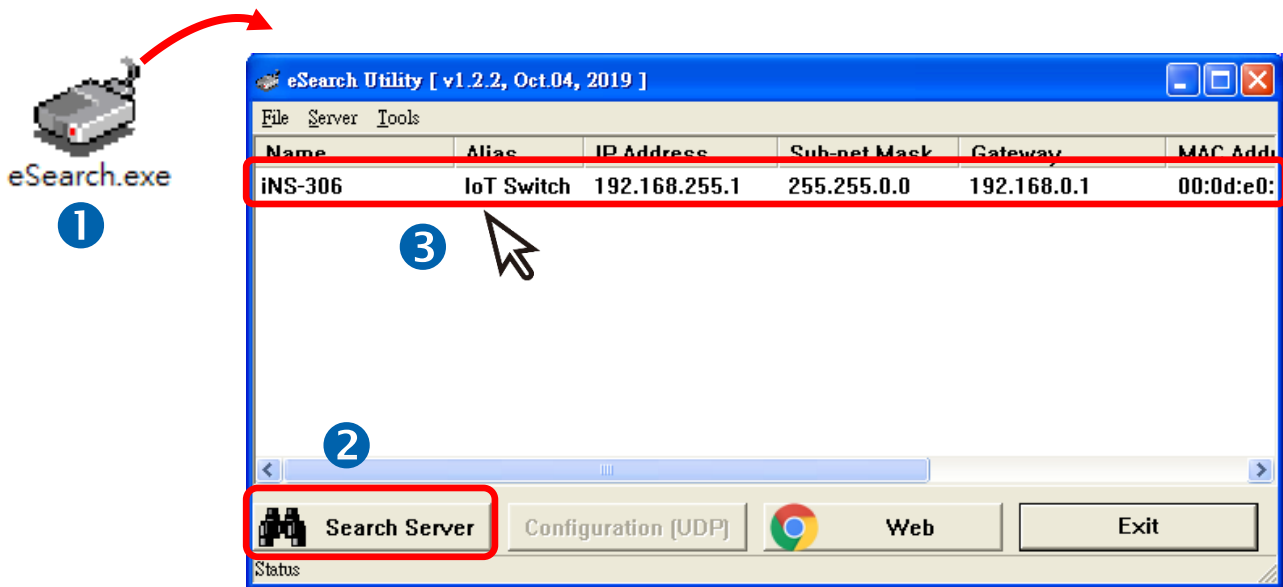


iNS-306 factory default network settings


IP Address	Subnet Mask	Gateway
192.168.255.1	255.255.0.0	192.168.0.1

- 4) Contact your network administrator to obtain a correct network configuration (such as IP/Mask/Gateway). Enter the new network settings and click **OK**.

⚠ Note: The iNS-306 will use the new settings 2 seconds later.

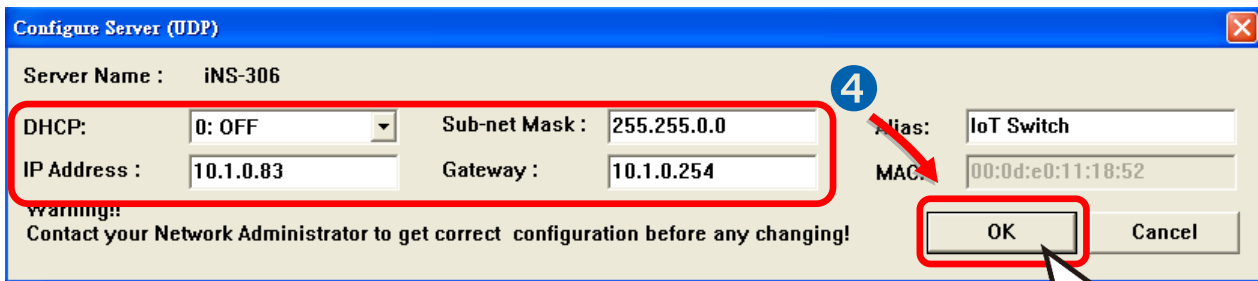

- 5) Wait 2 seconds and click **Search Server** again to ensure the iNS-306 is working well with new configuration.
- 6) Click the name of iNS-306 to select it.
- 7) Click the **Web** button to open the iNS-306 web interface.

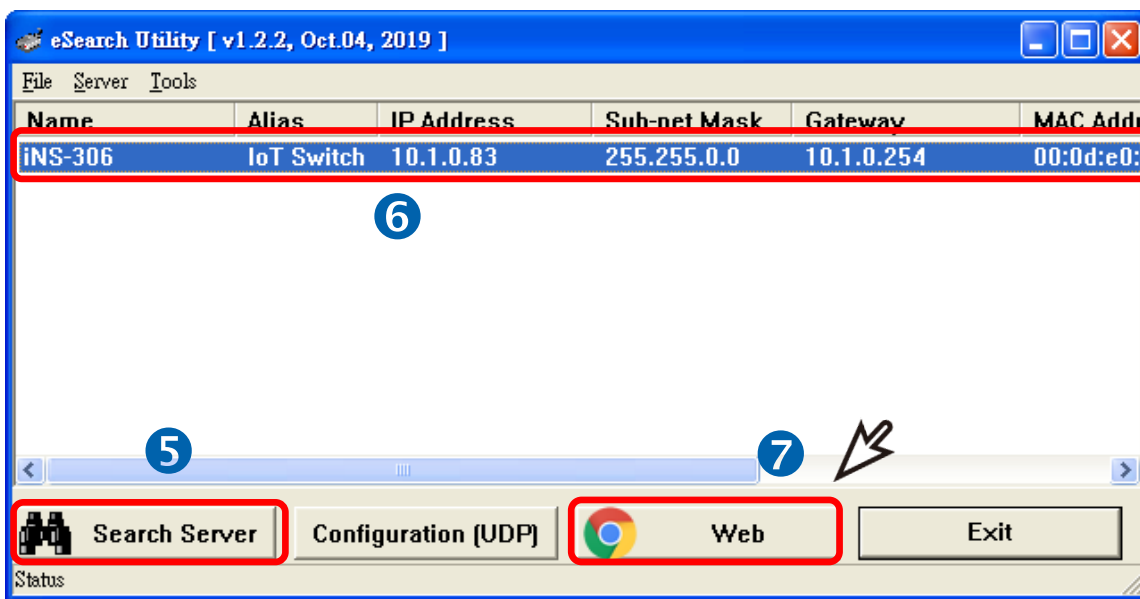

- 8) Enter password in the **Login password** input field and click **Submit** to log in to the iNS-306.

