



The wiring of CAN\_GND and FG are not necessary.  
 Please refer to user manual of I-7531 (section 3.3) for more Information.