



# PIO-D96U

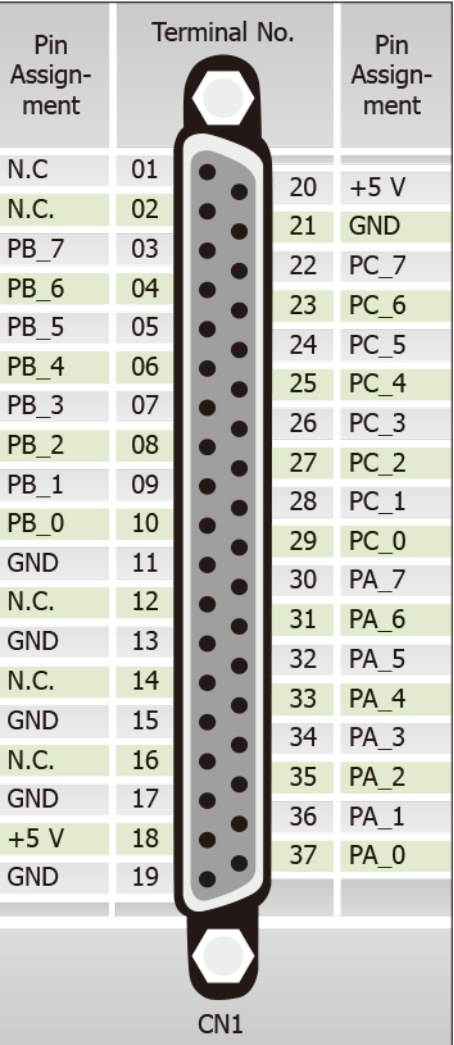

Pin Assignment	Terminal No.	Pin Assignment	Terminal No.	Pin Assignment
PC_7	01	02	GND	
PC_6	03	04	GND	
PC_5	05	06	GND	
PC_4	07	08	GND	
PC_3	09	10	GND	
PC_2	11	12	GND	
PC_1	13	14	GND	
PC_0	15	16	GND	
PB_7	17	18	GND	
PB_6	19	20	GND	
PB_5	21	22	GND	
PB_4	23	24	GND	
PB_3	25	26	GND	
PB_2	27	28	GND	
PB_1	29	30	GND	
PB_0	31	32	GND	
PA_7	33	34	GND	
PA_6	35	36	GND	
PA_5	37	38	GND	
PA_4	39	40	GND	
PA_3	41	42	GND	
PA_2	43	44	GND	
PA_1	45	46	GND	
PA_0	47	48	GND	
+5 V	49	50	GND	

CN2/CN3/CN4

# PIO-D96SU/PEX-D96S

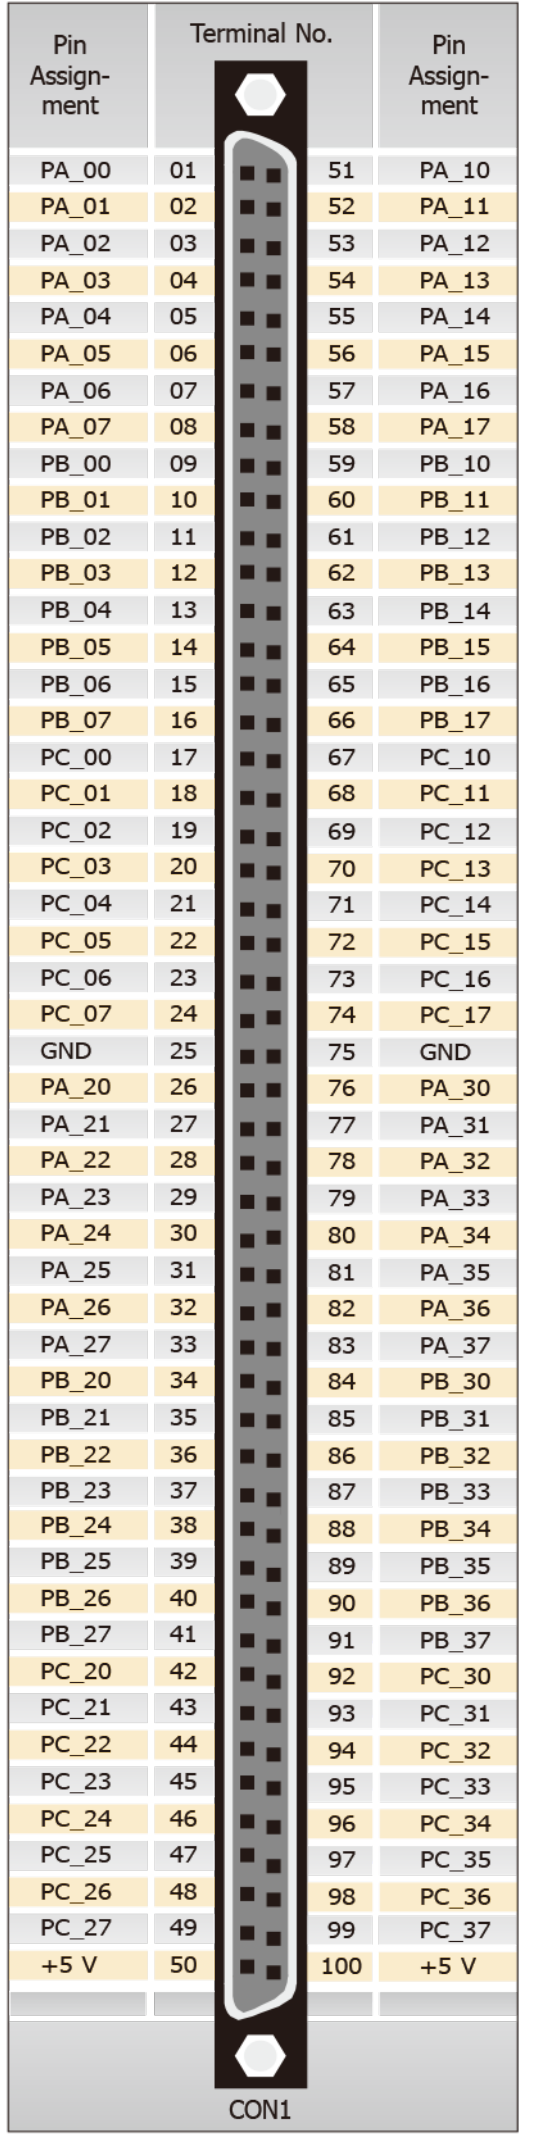

CON1