



DS-2200 Series Quick Start

V1.0, Jul. 2020

What's in the box?

The package includes the following items:



DS-2200 Series Module x 1



Quick Start x1 (This Document)

Related Information

- DS Series Product Page:

http://www.icpdas.com/en/product/guide+Industrial_Communication+Serial_Communication+Serial-to-Ethernet_Device_Server#1189

- Documentation & Firmware:

<http://www.icpdas.com/en/download/index.php?model=DS-2215i>

- NS-205/NS-205PSE Product Page (optional):

https://www.icpdas.com/en/product/guide+Industrial_Communication+Ethernet_Communication+Ethernet_Switch#792

1

Connecting the Power and Host PC



1) Make sure your PC has workable network settings.

Disable or well configure your Windows firewall and Anti-Virus firewall first, else the “**Search Servers**” on **Chapter 4** may not work. (Please contact with your system Administrator)

2) Connect both the DS-2200 and your PC to the same sub network or the same Ethernet switch.

3) Supply power (PoE or +12~+48 V_{DC}) to the DS-2000.



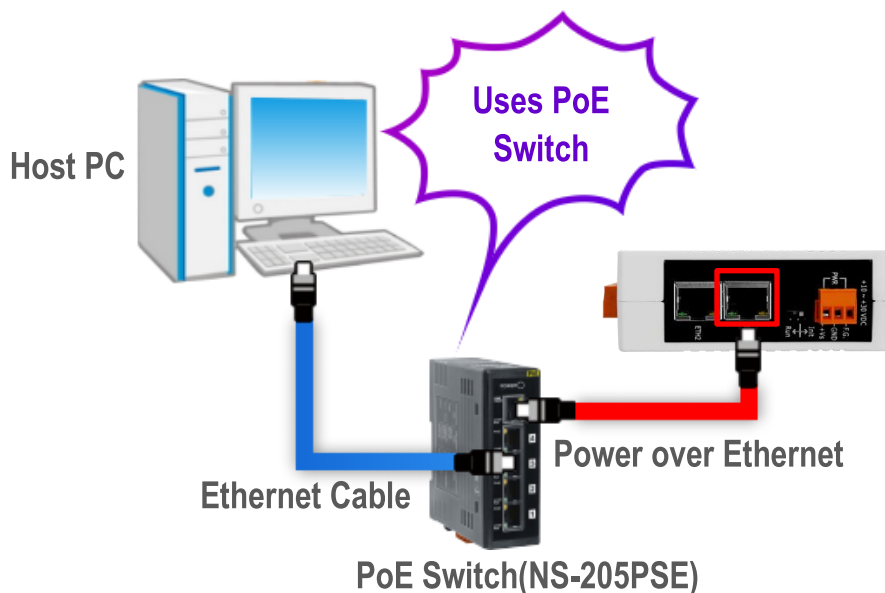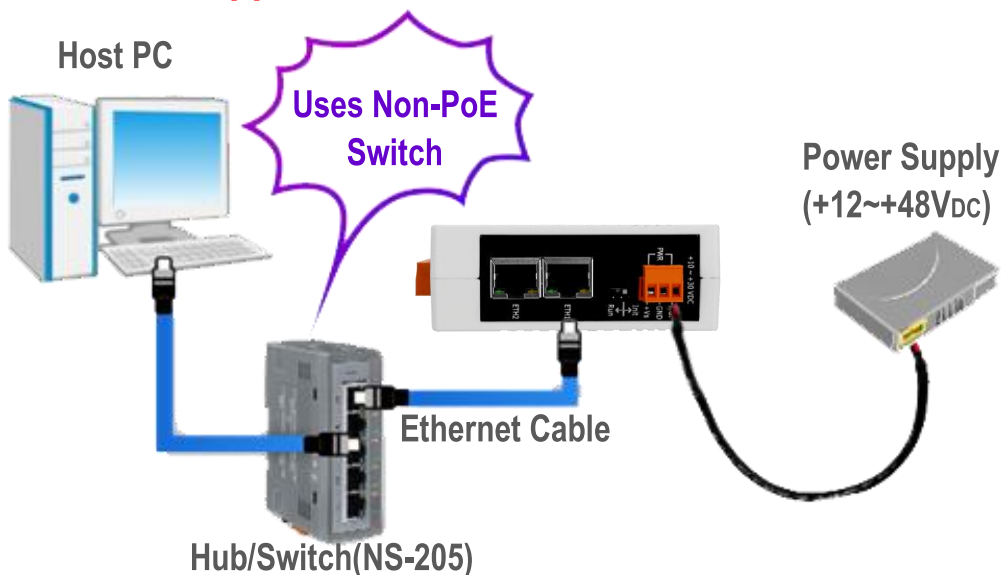




































⚠ Note : Please use the first RJ-45 jack (ETH1) to connect the PoE Switch when using the PoE to power. The second RJ-45 jack (ETH2) doesn't support the PoE function



2 Self-Test Wiring

Wiring Notes for RS-232/485/422 Interfaces:

☑: Here, the RS-232 and RS-485 wiring is used as an example.


☑ RS-232 Wiring	☐ RS-422 Wiring																																				
<table border="1"> <thead> <tr> <th data-bbox="108 622 368 689">DS-2200</th> <th data-bbox="368 622 507 689"></th> <th data-bbox="507 622 783 689">RS-232 Modbus Device</th> </tr> </thead> <tbody> <tr> <td data-bbox="108 696 368 741">RxD</td> <td data-bbox="368 696 507 741"></td> <td data-bbox="507 696 783 741">TxD</td> </tr> <tr> <td data-bbox="108 748 368 792">TxD</td> <td data-bbox="368 748 507 792"></td> <td data-bbox="507 748 783 792">RxD</td> </tr> <tr> <td data-bbox="108 799 368 844">GND</td> <td data-bbox="368 799 507 844"></td> <td data-bbox="507 799 783 844">GND</td> </tr> <tr> <td data-bbox="108 851 368 896">RTS</td> <td data-bbox="368 851 507 896"></td> <td data-bbox="507 851 783 896">CTS</td> </tr> <tr> <td data-bbox="108 902 368 947">CTS</td> <td data-bbox="368 902 507 947"></td> <td data-bbox="507 902 783 947">RTS</td> </tr> </tbody> </table>	DS-2200		RS-232 Modbus Device	RxD		TxD	TxD		RxD	GND		GND	RTS		CTS	CTS		RTS	<table border="1"> <thead> <tr> <th data-bbox="818 622 1078 689">DS-2200</th> <th data-bbox="1078 622 1217 689"></th> <th data-bbox="1217 622 1493 689">RS-422 Modbus Device</th> </tr> </thead> <tbody> <tr> <td data-bbox="818 696 1078 741">TxD+</td> <td data-bbox="1078 696 1217 741"></td> <td data-bbox="1217 696 1493 741">RxD+</td> </tr> <tr> <td data-bbox="818 748 1078 792">TxD-</td> <td data-bbox="1078 748 1217 792"></td> <td data-bbox="1217 748 1493 792">RxD-</td> </tr> <tr> <td data-bbox="818 799 1078 844">RxD+</td> <td data-bbox="1078 799 1217 844"></td> <td data-bbox="1217 799 1493 844">TxD+</td> </tr> <tr> <td data-bbox="818 851 1078 896">RxD-</td> <td data-bbox="1078 851 1217 896"></td> <td data-bbox="1217 851 1493 896">TxD-</td> </tr> <tr> <td data-bbox="818 902 1078 947">GND</td> <td data-bbox="1078 902 1217 947"></td> <td data-bbox="1217 902 1493 947">GND</td> </tr> </tbody> </table>	DS-2200		RS-422 Modbus Device	TxD+		RxD+	TxD-		RxD-	RxD+		TxD+	RxD-		TxD-	GND		GND
DS-2200		RS-232 Modbus Device																																			
RxD		TxD																																			
TxD		RxD																																			
GND		GND																																			
RTS		CTS																																			
CTS		RTS																																			
DS-2200		RS-422 Modbus Device																																			
TxD+		RxD+																																			
TxD-		RxD-																																			
RxD+		TxD+																																			
RxD-		TxD-																																			
GND		GND																																			
<table border="1"> <thead> <tr> <th data-bbox="108 1048 368 1115">DS-2200</th> <th data-bbox="368 1048 507 1115"></th> <th data-bbox="507 1048 783 1115">RS-485 Modbus Device</th> </tr> </thead> <tbody> <tr> <td data-bbox="108 1122 368 1167">Data+</td> <td data-bbox="368 1122 507 1167"></td> <td data-bbox="507 1122 783 1167">Data+</td> </tr> <tr> <td data-bbox="108 1173 368 1218">Data-</td> <td data-bbox="368 1173 507 1218"></td> <td data-bbox="507 1173 783 1218">Data-</td> </tr> <tr> <td data-bbox="108 1225 368 1270">GND</td> <td data-bbox="368 1225 507 1270"></td> <td data-bbox="507 1225 783 1270">GND</td> </tr> </tbody> </table>	DS-2200		RS-485 Modbus Device	Data+		Data+	Data-		Data-	GND		GND																									
DS-2200		RS-485 Modbus Device																																			
Data+		Data+																																			
Data-		Data-																																			
GND		GND																																			

While using RS-485 modules, you can not wire the Data+ with Data- signals for self-test. But you can test two RS-485 ports by wiring the Data1+ with Data2+ signals, and wiring the Data1- with Data2- signals. Then send data to one and receive data from another.

3

Installing Software on Your PC

Install VxComm Utility, which can be obtained from the web site:




<https://www.icpdas.com/en/download/index.php?nation=US&kind1=&model=&kw=vxcomm>

4

Configuring Network Settings


- 1) Double-click the VxComm Utility shortcut on the desktop.
- 2) Click the “**Search Servers**” to search your DS-2200.
- 3) Double-click the name of DS-2200 to open the “**Configure Server (UDP)**” dialog box.

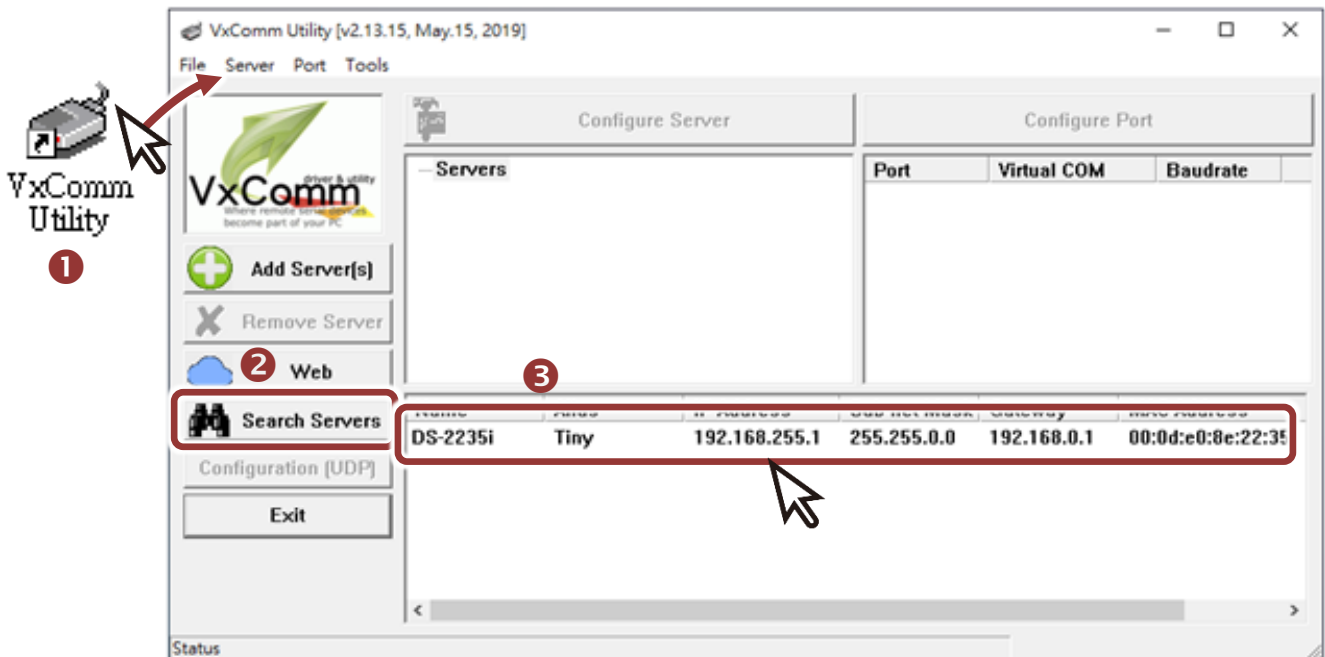

Factory Default Settings of DS-2200:


IP Address	192.168.255.1
Subnet Mask	255.255.0.0
Gateway	192.168.0.1

- 4) Contact your Network Administrator to obtain a correct network configuration (such as IP/Mask/Gateway). Enter the network settings and click “OK”. **⚠ Note: The DS-2200 will use the new settings 2 seconds later.**

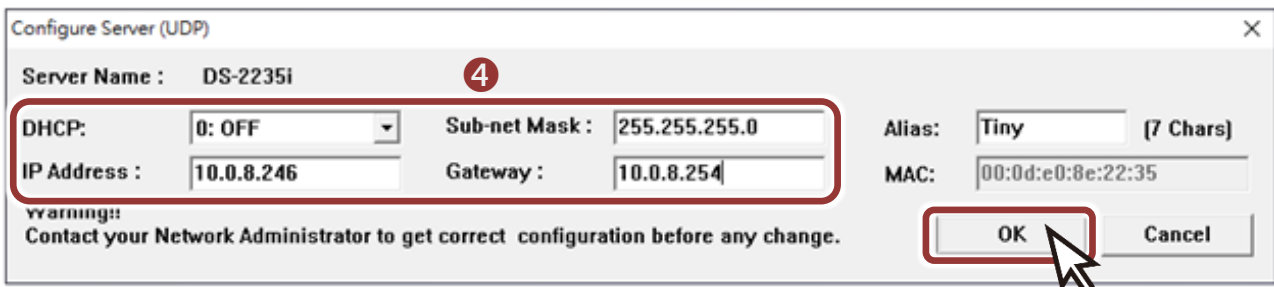


5 Configuring Virtual COM Ports

- 1) Wait 2 seconds and click “**Search Servers**” button again to ensure the DS-2200 is working well with new configuration.
- 2) Click the name of DS-2200 to select it.

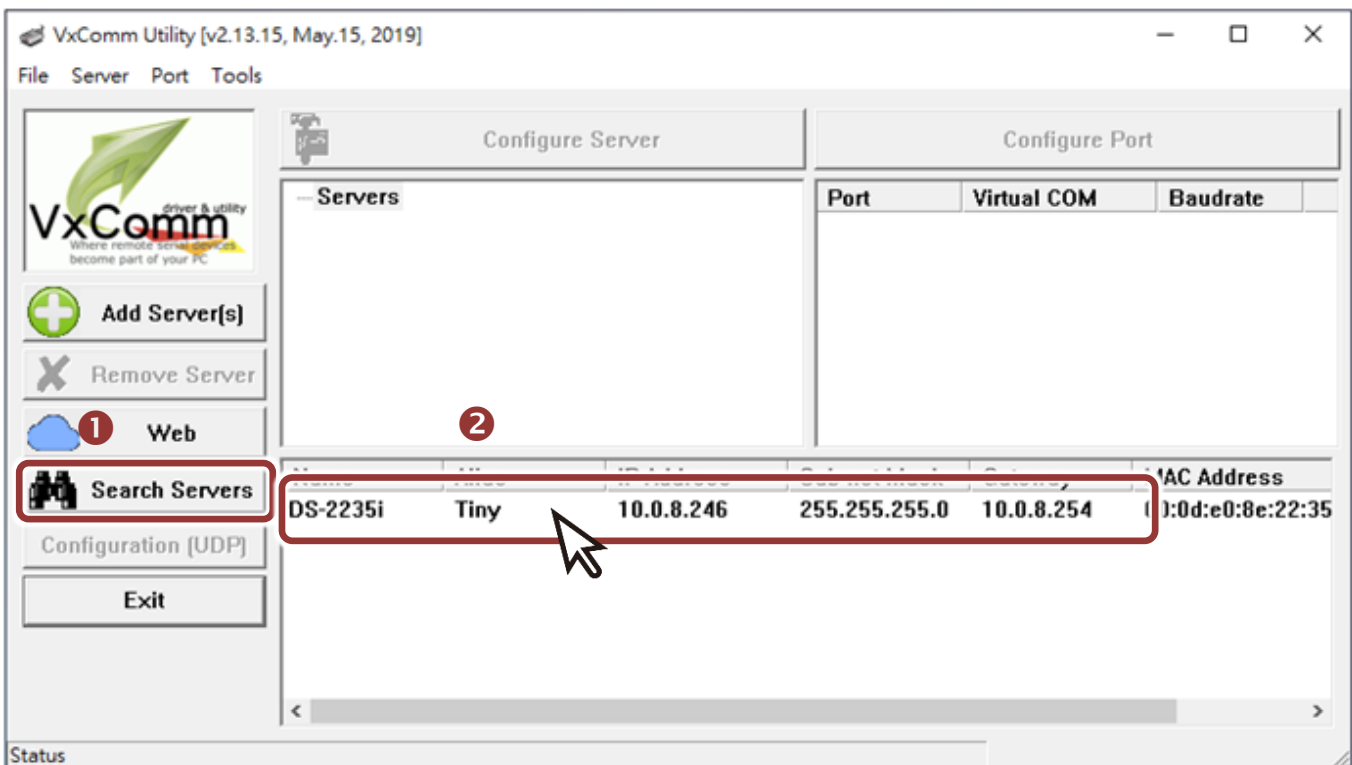


3) Click the “Add Server[S]” button.

4) Assign a COM Port number and click “OK” to save your settings.

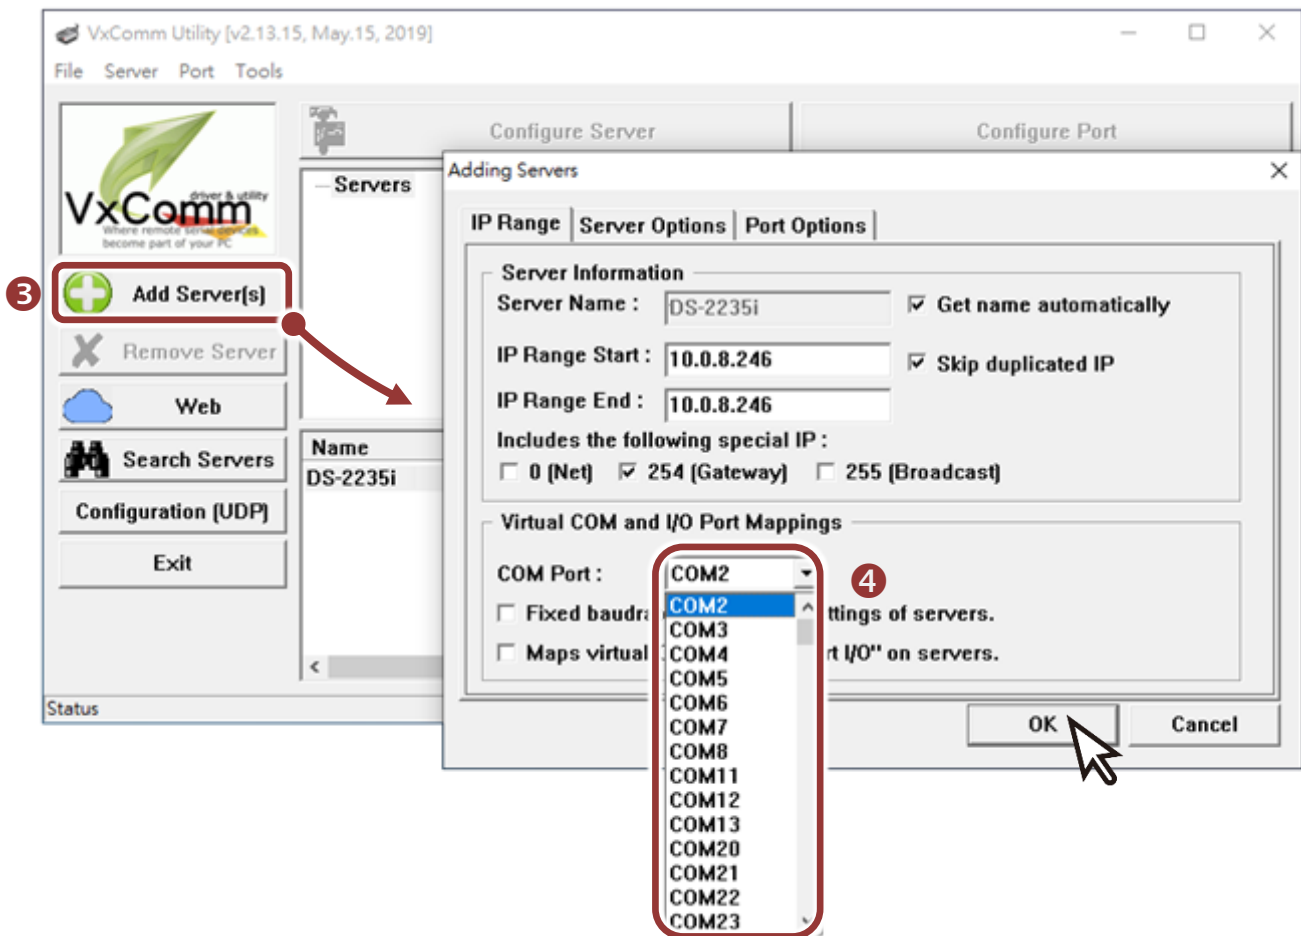


5) Click on DS-2200 name and check the virtual COM Port mappings on the PC.

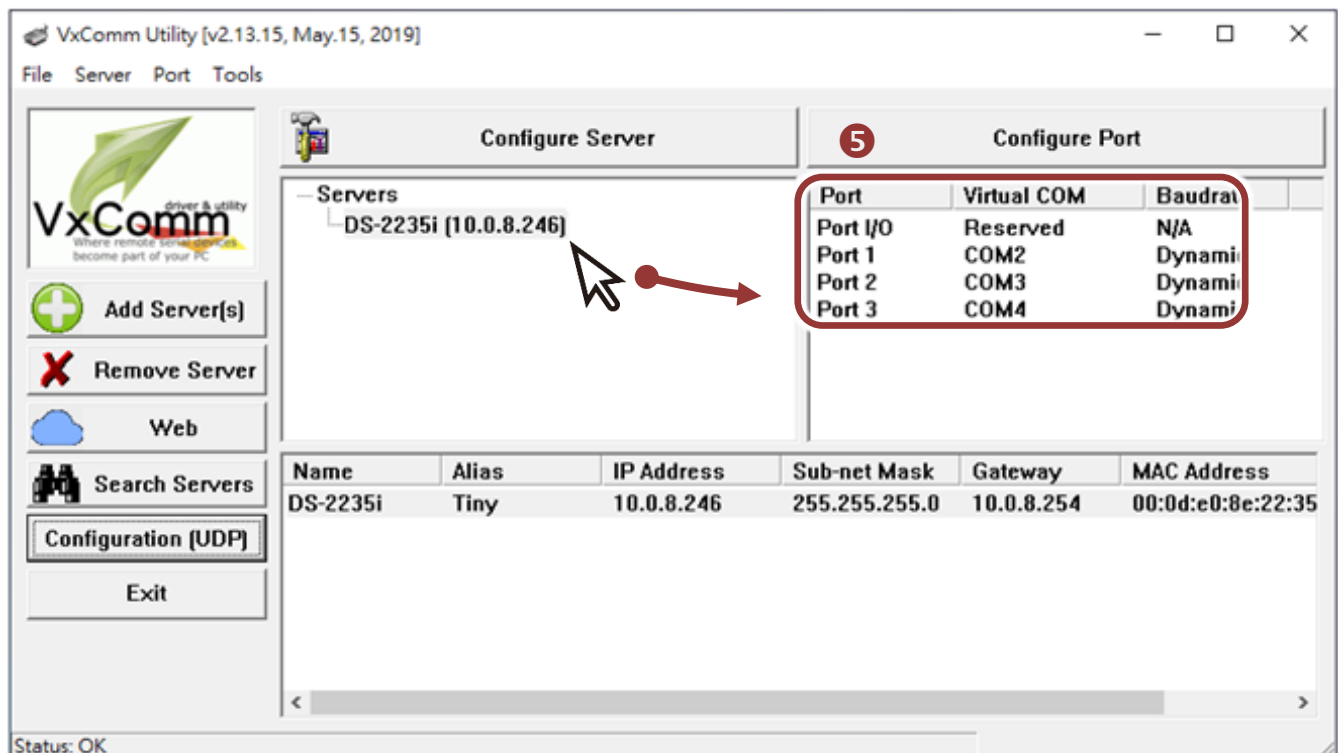

6) Click the “Restart Driver” item in the “Tools” menu to display the “VxComm Utility: Restarting Driver” dialog box.


7) Click the “Restart Driver” button.

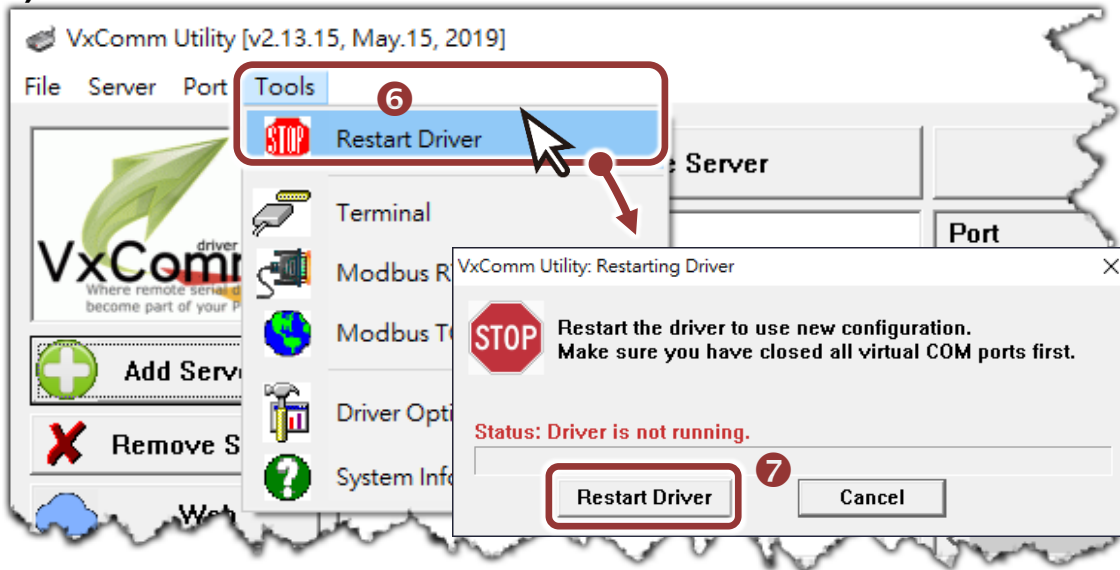


6 Self-Test

1) Right click Port1 and then choose the “Open COM Port” item.

2) Check that the configuration of the COM Port is correct and then click the “Open COM” button.

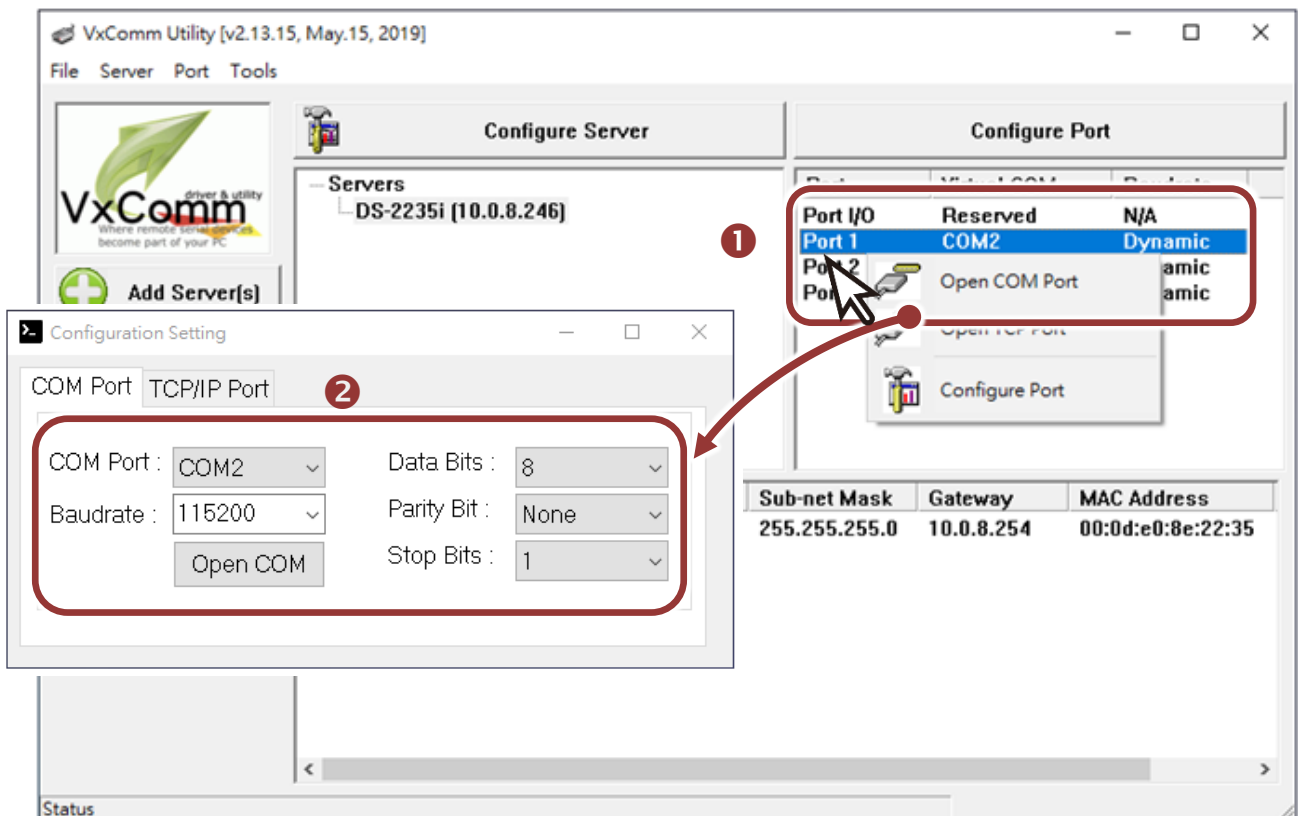

- 3) Type a string in the “**Send**” field.
- 4) Click the “**Hex/Text**” option in the “**Display**” section.
- 5) Click the “**Send**” button to send the message.
- 6) If a response is received, it will be displayed in the received field.

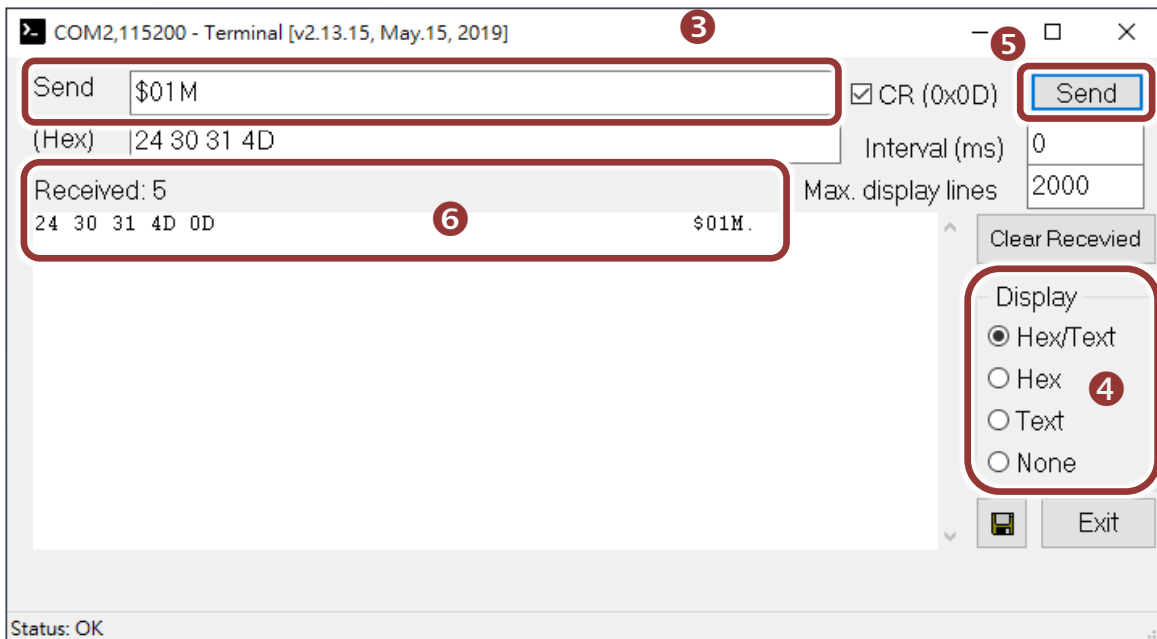

Note that if you intend to use Internet Explorer, ensure that the cache function is disabled in order to prevent browser access errors, please disable your Internet Explorer cache as follow: **(If you are not using IE browser, please skip this step.)**

Step1: Click “**Tools**” >> “**Internet Options...**” in the menu items.

Step 2: Click “**General**” tab and click the “**Settings...**” button in Temporary Internet files frame.

Step3: Click “**Every visit to the page**” and click the “**OK**” in Settings box and Internet Options box.