



ICP DAS CO., LTD.

UA Series User Manual

IIoT Communication Server



UA-5231



UA-5231M



**UA-5231M-4GE
UA-5231M-4GC
UA-5231M-3GWA**



UA-2241M

ICP DAS CO., LTD. All Rights Reserved.

www.icpdas.com

Warranty

All products manufactured by ICP DAS are under warranty regarding defective materials for a period of one year, starting from the date of delivery to the original purchaser.

Warning

ICP DAS CO., LTD. assumes no liability for damages consequent to the use of this product. ICP DAS CO., LTD. reserves the right to change this manual at any time without notice. The information furnished by ICP DAS CO., LTD. is believed to be accurate and reliable. However, no responsibility is assumed by ICP DAS CO., LTD. for its use, or for any infringements of patents or other rights of third parties resulting from its use.

Copyright and Trademark Information

© Copyright 2015 by ICP DAS CO., LTD. All rights reserved worldwide.

Trademark of Other Companies

The names used for identification only maybe registered trademarks of their respective companies.

License

The user can use, modify and backup this software on a single machine. The user may not reproduce, transfer or distribute this software, or any copy, in whole or in part.

Technical Output:

Please contact local agent or email problem-report to output@icpdas.com .

For more product information, please refer to www.icpdas.com .

Technique: Sun Chen & Tim Chen; Translation & Edition: Eva Li;
R&D Dept., ICP DAS CO., LTD.
Latest edited by: Eva Li; V4.5, 04/2019

Table of Contents

1. UA Series IIoT Communication Server	6
1.1. Introduction.....	6
1.2. Features	7
1.3. Functions	8
1.4. Specifications	10
1.5. Appearance	14
1.6. Dimensions.....	18
2. Quick Start 1: Hardware/Network Connection	20
2.1. Hardware Connection	20
2.1.1.Preparations for Devices.....	20
2.1.2.Hardware Wiring	20
2.2. Network Connection	21
2.2.1.Connection by Factory Default Settings (For New UA).....	22
2.2.2.Connection by Utility Searching	24
3. Quick Start 2: Web UI / Steps / Project Example.....	28
3.1. Web UI Environment Overview	29
3.2. Setting Steps for Project / Function / List	30
3.3. Project Setting Example.....	31
3.3.1.A Quick Setup Project Example	32
4. Function Wizard: Quick Setup	40
4.1. Module Communication Conversion	41
4.1.1.Modbus / OPC UA Conversion.....	42
4.1.2.MQTT / OPC UA Conversion	52
4.1.3.EIP / OPC UA Conversion.....	63
4.1.4.Modbus / MQTT Conversion	71
4.1.5.EIP / MQTT Conversion	83
4.1.6.Modbus / MQTT JSON Conversion	91
4.2. Module Connecting to Azure	105
4.2.1.Modbus TCP / Azure Connecting	106
4.3. Data Log	116
4.3.1.Modbus / Local Data Logger	117
4.3.2.Modbus / Remote Database	126

4.4.	PID	136
4.4.1.	PID Operation	137
4.5.	APP Message Notify	147
4.5.1.	IFTTT Condition Trigger (Line, Facebook, Twitter)	148
5.	System Setting	161
5.1.	Controller Service Setting	162
5.2.	Time Setting.....	163
5.3.	Network Setting	165
5.4.	Account Setting.....	169
5.5.	Boot.....	170
5.6.	COM Port Interface Setting.....	171
6.	Module Setting	172
6.1.	Modbus RTU (Master)	173
6.2.	Modbus TCP (Master).....	178
6.3.	Modbus ASCII (Master).....	183
6.4.	MQTT Module.....	188
6.5.	EtherNet/IP ICP DAS Module	192
7.	IoT Platform Setting.....	196
7.1.	MQTT Local Broker.....	197
7.2.	MQTT Remote Broker.....	198
7.3.	MQTT Group Connection.....	201
7.4.	MQTT Connection - Microsoft Azure Platform	205
7.5.	OPC UA Connection - Local Server	208
8.	Convert Setting	209
8.1.	OPC UA and Modbus RTU/ASCII Conversion	211
8.2.	OPC UA and Modbus TCP Conversion.....	214
8.3.	OPC UA and MQTT Conversion	217
8.4.	OPC UA and EtherNet/IP Conversion	220
8.5.	MQTT and Modbus RTU/ASCII Conversion.....	223
8.6.	MQTT and Modbus TCP Conversion	227
8.7.	MQTT and EtherNet/IP Conversion	231
8.8.	MQTT JSON and Modbus RTU/ASCII Conversion	235

8.9. MQTT JSON and Modbus TCP Conversion.....	238
9. Advanced Setting.....	241
9.1. PID Operation.....	242
9.2. IFTTT Condition Trigger.....	247
9.3. Data Logger: Local Data Logger.....	254
9.4. Data Logger: Remote Database.....	256
10. Logger Setting.....	259
10.1. Local Data Logger: RTU / TCP Module (Master).....	260
10.2. Remote Database: RTU / TCP Module (Master).....	263
11. I/O Status.....	266
12. File Setting.....	267
12.1. Project File.....	268
12.2. OPC UA Certificate.....	269
12.3. MQTT Certificate.....	270
13. Factory Setting Recovering and Middleware Updating.....	271
13.1. Recovering to Factory Setting (Rotary Switch: 8).....	271
13.2. Updating Middleware via USB (Rotary Switch: 9).....	272
14. Security Certificate: Download / Upload / Update.....	273
14.1. Download the Certificate of UA Controller.....	273
14.2. Upload/Update the Certificate to UA Controller.....	274
Appendix A. MQTT JSON Format of the UA Series.....	276
Appendix B. Technical Reference Websites.....	277
Appendix C. IFTTT Website Setting.....	278
Appendix D. Updating Middleware via MicroSD Card Manually.....	288
Appendix E. UA Series LED Indicators.....	293
Appendix F. Changing OS Password.....	296
Postscript: Document Version List.....	298


1. UA Series IIoT Communication Server

This chapter introduces UA series and its functions, software/hardware specifications.

1.1. Introduction

UA Series (UA-5200/UA-2200) is a series of **IIoT** (Industrial IoT) **Communication Server** for integrating the system and devices of IT and OT. UA features the IIoT Gateway function that allows users to access the remote I/O modules and controllers via Modbus TCP/RTU/ASCII, MQTT, and EtherNet/IP communication protocols. IIoT gateway function can also convert these I/O data to OPC UA or MQTT protocols for the needs of connecting with the MES, ERP, SCADA and Cloud services. Besides, UA features the Data Logger function that allows users to write the I/O data directly into the remote database, and save to the local file as the historical records. UA supports IoTstar Cloud management platform (Coming soon) and Cloud logic service platform "IFTTT" which can connect many web APPs that allows users to receive first-hand notification messages through the most commonly used mobile APPs when an event triggered. UA Series enhances the networking and interoperability between IT and OT. Through UA series, users can easily deploy for Industrial IoT.


- **UA Series:**

UA-5200	UA-5231	UA-5231M	UA-5231M-4GE UA-5231M-4GC UA-5231M-3GWA
			
UA-2200		UA-2241M	
			

1.2. Features

- OPC UA Server Service
- MQTT Client Service
- MQTT Broker Inside
- ARM CPU, 1.0 GHz
- 512 MB RAM and 512 MB Flash
- Linux kernel 3.2.14 OS
- Real-Time Capability
- 64-bit Hardware Serial Number for Software Protection
- Support Local Data Logger / Remote Database
- Support IFTTT Logic Control & APP Notify
- Support PID Logic Operation
- 10/100/1000 Mbit/s Ethernet Port
- 4 Serial Ports (RS-232/RS-485)
- Operating Temperature: -25 ~ +75°C

1.3. Functions

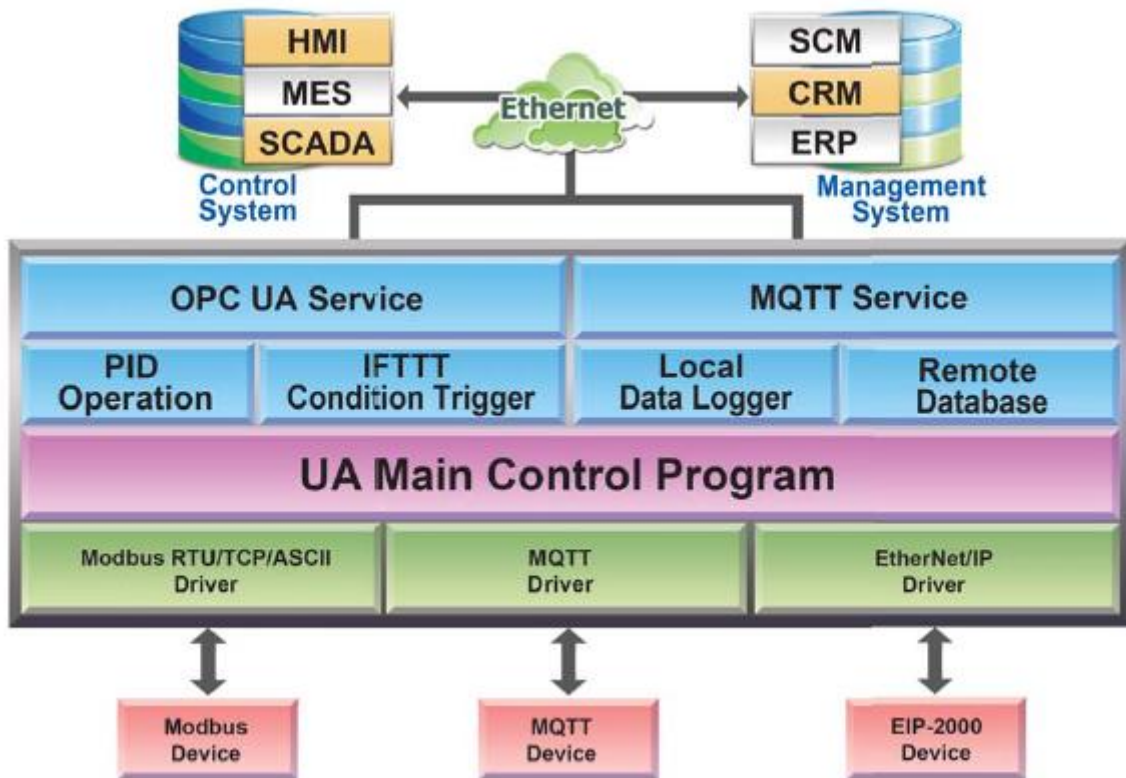

■ Built-in OPC UA Server Service

Compliance with IEC 62541 Standard. Provides functions of Active Transmission, Transmission Security Encryption (SSL/TLS), User Authentication (X.509 Certificates / Account password), Communication Error Detection and Recovery, etc. to connect SCADA or OPC UA Clients. Allowed up to 8000 OPC UA tags and up to 20 sessions for the OPC UA Client connection.

■ Built-in MQTT Broker Service

MQTT Broker inside and compliable with MQTT V.3.1.1 protocol. It provides functions of IoT Active M2M Transmission, QoS Quality Service, Retain Mechanism, Identity Verification, Encryption, Last Will, MQTT Client Drivers, etc. The Broker can connect up to 400 MQTT Clients.

■ Support IFTTT Logic Control and APP Message Notification

UA can combine the IFTTT cloud platform functions and send messages to more than 500 Web APPs (such as LINE, Facebook, Twitter, Calendar, Mail, Sina Weibo... etc.) when the special events occur. The device I/O change can be set to trigger the event of the IFTTT cloud service, and then the preset "That" Web Service (e.g. LINE) will do the action follow the IFTTT (If This, Then That) logic control, for example, the LINE will send a message to the specific user or group to handle the event immediately..

■ Support IoT Cloud Platforms Connection

UA can actively connect with the IoTstar platform for users to manage UA series via the IoTstar, or connect to Amazon AWS, Microsoft Azure or other IoT platforms to send over the I/O data.

The IoTstar Features:

- Based on Public Cloud: Microsoft Azure, IBM Bluemix, and Amazon AWS
- Based on Private Cloud: Microsoft Windows 7/8/10
- Data Analysis and Report by Public Tools
- Remote Management and Maintenance
- Remote Monitoring and Control
- Cloud Big Data

■ Provide Function Wizard Web UI for easily step-by-step setup

The Web UI of UA provides a wizard-like “Step Box” in the Function Wizard area to guide user step-by-step to complete the project or function. It provides many items for setting the Communication Conversion, Azure Connecting, Function Configuration, PID Operation, Condition Trigger the APP Message Notification, and will be more. It will help users to set projects easily and quickly.

■ Support Ethernet and Serial Communication Modules

- Under the Ethernet communication, UA supports Modbus TCP, MQTT and ICP DAS EtherNet/IP modules:
 - * Up to 100 Modbus TCP Slave module connections
 - * Up to 200 MQTT module connections
 - * Up to 50 EtherNet/IP EIP-2000 module connections
- Under the Serial communication, UA provides 3 RS-232/RS-485 Serial ports to support Modbus RTU/ASCII modules:
 - * Up to 32 Modbus RTU/ASCII Slave modules per COM
- Through the UA Web UI, users can quickly set up the modules and display the real-time status.

■ Save I/O Data Directly into Remote Database & Local Side LOG File

UA series can collect devices I/O status and then directly write into remote side SQL Database. UA series can also save the I/O data into a CSV log file on the local side. Furthermore, users can set the time interval of which CSV file to generate and divide on the local side.

1.4. Specifications

UA-5200 Series	UA-5231	UA-5231M	UA-5231M-3GWA	UA-5231M-4GE UA-5231M-4GC
System Software				
OS	Linux Kernel 3.2.14			
Embedded Service	SFTP server, Web server, SSH			
CPU Module				
CPU	ARM CPU, 1.0 GHz			
DDR3 SDRAM	512 MB			
Flash	512 MB			
FRAM	64 KB			
Expansion Flash Memory	microSD socket with one 4 GB microSD card (support up to 32 GB microSDHC card)			
RTC (Real Time Clock)	Provide second, minute, hour, date, day of week, month, year			
64-bit Hardware Serial Number	Yes, for Software Copy Protection			
Dual Watchdog Timers	Yes			
LED Indicators	PWR(Power)/RUN(Running), L1, L2	PWR/RUN, L1, L2		
		3G	4G	
Rotary Switch	Yes (0 ~ 9)			
VGA & Communication Ports				
VGA	1 (Resolution: 640×480, 800×600, 1024×768, 1280x720), reserved			
Ethernet	1 x RJ-45, 10/100/1000 Based-TX (Auto-negotiating, Auto MDI/MDI-X, LED indicators)			
USB 2.0 (host)	1			
Console Port	RS-232 (RxD, TxD and GND); Non-isolated			
ttyO2	RS-485 (Data+, Data-); Non-isolated			
ttyO4	RS-232 (RxD, TxD and GND); Non-isolated			
ttyO5	RS-485 (Data+, Data-); 2500 VDC isolated			
Mechanical				
Dimensions (W x L x H)(mm)	91 x 132 x 52	117 x 126 x 58		
Installation	DIN-Rail Mounting			
Environmental				
Operating Temperature	-25 ~ +75°C			

UA-5200 Series	UA-5231	UA-5231M	UA-5231M-3GWA	UA-5231M-4GE UA-5231M-4GC
Storage Temperature	-40 ~ +80°C			
Ambient Relative Humidity	10 ~ 90% RH (non-condensing)			
Power				
Input Range	+12 ~ +48 VDC			
Consumption	4.8 W		6.5 W	
Wireless Communication				
3G System	-	3GWA: WCDMA 850/900/1900/2100 MHz 4GE : WCDMA 850/900/2100 MHz 4GC : WCDMA 900/2100 MHz; TD-SCDMA 1900/2100 MHz; CDMA2000 (BC0) 800 MHz		
4G System	-	4GE : FDD LTE: B1/B3/B5/B7/B8/B20 MHz 4GC : FDD LTE: B1/B3/B8 MHz; TDD LTE: B38/B39/B40/B41 MHz		
4GE/4GC Frequency Band Descriptions:				
UA-5231M-4GE: Frequency Band for EMEA, Korea, Thailand, India and Taiwan				
UA-5231M-4GC: Frequency Band for China				

UA-2200 Series	UA-2241M
System Software	
OS	Linux Kernel 3.2.14
Embedded Service	SFTP server, Web server, SSH
CPU Module	
CPU	ARM CPU, 1.0 GHz
DDR3 SDRAM	512 MB
Flash	512 MB
FRAM	64 KB
Expansion Flash Memory	microSD socket with one 4 GB microSD card (support up to 32 GB microSDHC card)
RTC (Real Time Clock)	Provide second, minute, hour, date, day of week, month, year
64-bit Hardware Serial Number	Yes, for Software Copy Protection
Dual Watchdog Timers	Yes
LED Indicators	PWR(Power)/RUN(Running), L1, L2, L3


UA-2200 Series	UA-2241M
Rotary Switch	Yes (0 ~ 9)
VGA & Communication Ports	
VGA	1 (Resolution: 640×480, 800×600, 1024×768, 1280×720), reserved
Ethernet	2 x RJ-45, 10/100/1000 Based-TX (Auto-negotiating, Auto MDI/MDI-X, LED indicators)
USB 2.0 (host)	2
Console Port	RS-232 (RxD, TxD and GND); Non-isolated
ttyO2	RS-485 (Data+, Data-); Non-isolated
ttyO4	RS-232 (RxD, TxD and GND); Non-isolated
ttyO5	RS-485 (Data+, Data-); 2500 VDC isolated
Mechanical	
Dimensions (W x L x H)(mm)	33 160 x 129
Installation	DIN-Rail Mounting
Environmental	
Operating Temperature	-25 ~ +75°C
Storage Temperature	-40 ~ +80°C
Ambient Relative Humidity	10 ~ 90% RH (non-condensing)
Power	
Input Range	+12 ~ +48 VDC
Consumption	4.8 W

Software Specifications: UA Series	
OPC UA	
OPC UA Server	<ul style="list-style-type: none"> ● OPC Unified Architecture: 1.02 ● Core Server Facet ● Data Access Server Facet ● Method Server Facet ● UA-TCP UA-SC UA Binary ● User Token User Name Password & X509 Certificate ● Security Policy <ul style="list-style-type: none"> ◦None ◦Basic128Rsa15 <ul style="list-style-type: none"> • Sign • Sign & Encrypt


Software Specifications: UA Series	
	<ul style="list-style-type: none"> ◦Basic256 <ul style="list-style-type: none"> • Sign •Sign & Encrypt <p>Recommend to keep the maximum number of sessions within 20 connections.</p>
Modbus Master	
Modbus TCP	<p>To read or control the devices that support standard Modbus TCP Slave protocol.</p> <p>Recommend to keep the maximum number of devices within 100 connections.</p>
Modbus RTU/ASCII	<p>A max. of 3 ports: ttyO2, ttyO4, ttyO5 to connect other Modbus RTU Slave devices (e.g. M-7000).</p> <p>Recommend no more than 32 devices per port for better communication quality.</p>
MQTT	
MQTT Client	<p>Connect the MQTT Broker to read/control the devices supporting the MQTT protocol.</p>
MQTT Service	<p>Connect the MQTT Broker to externally read / control the devices supporting other protocols that linking with the UA series.</p>
MQTT Broker	<p>Compliance with MQTT v3.1.1 protocol. Support MQTT message distribution management.</p> <p>Recommend to keep the connection number of Client within 400.</p>
EtherNet/IP	
Scanner	<p>Support connect EIP-2000 series modules of ICP DAS.</p> <p>Recommend no more than 50 devices per UA.</p>
Data Logger	
Local Data Logger	<p>Record I/O data, and save to the local MicroSD card in CSV format.</p>
Remote Database	<p>Record I/O data, and send to the remote database of MS SQL.</p> <p>Recommend to keep only one database connected.</p>
Cloud Support	
IoTstar (coming soon)	<p>Support Cloud connection with IoTstar platform of ICP DAS</p>
IFTTT	<p>Support Logic event sending to IFTTT</p>
Virtual Device	
PID Function	<p>Combine the remote I/O devices for the PID logic control system.</p>

1.5. Appearance


UA-5231

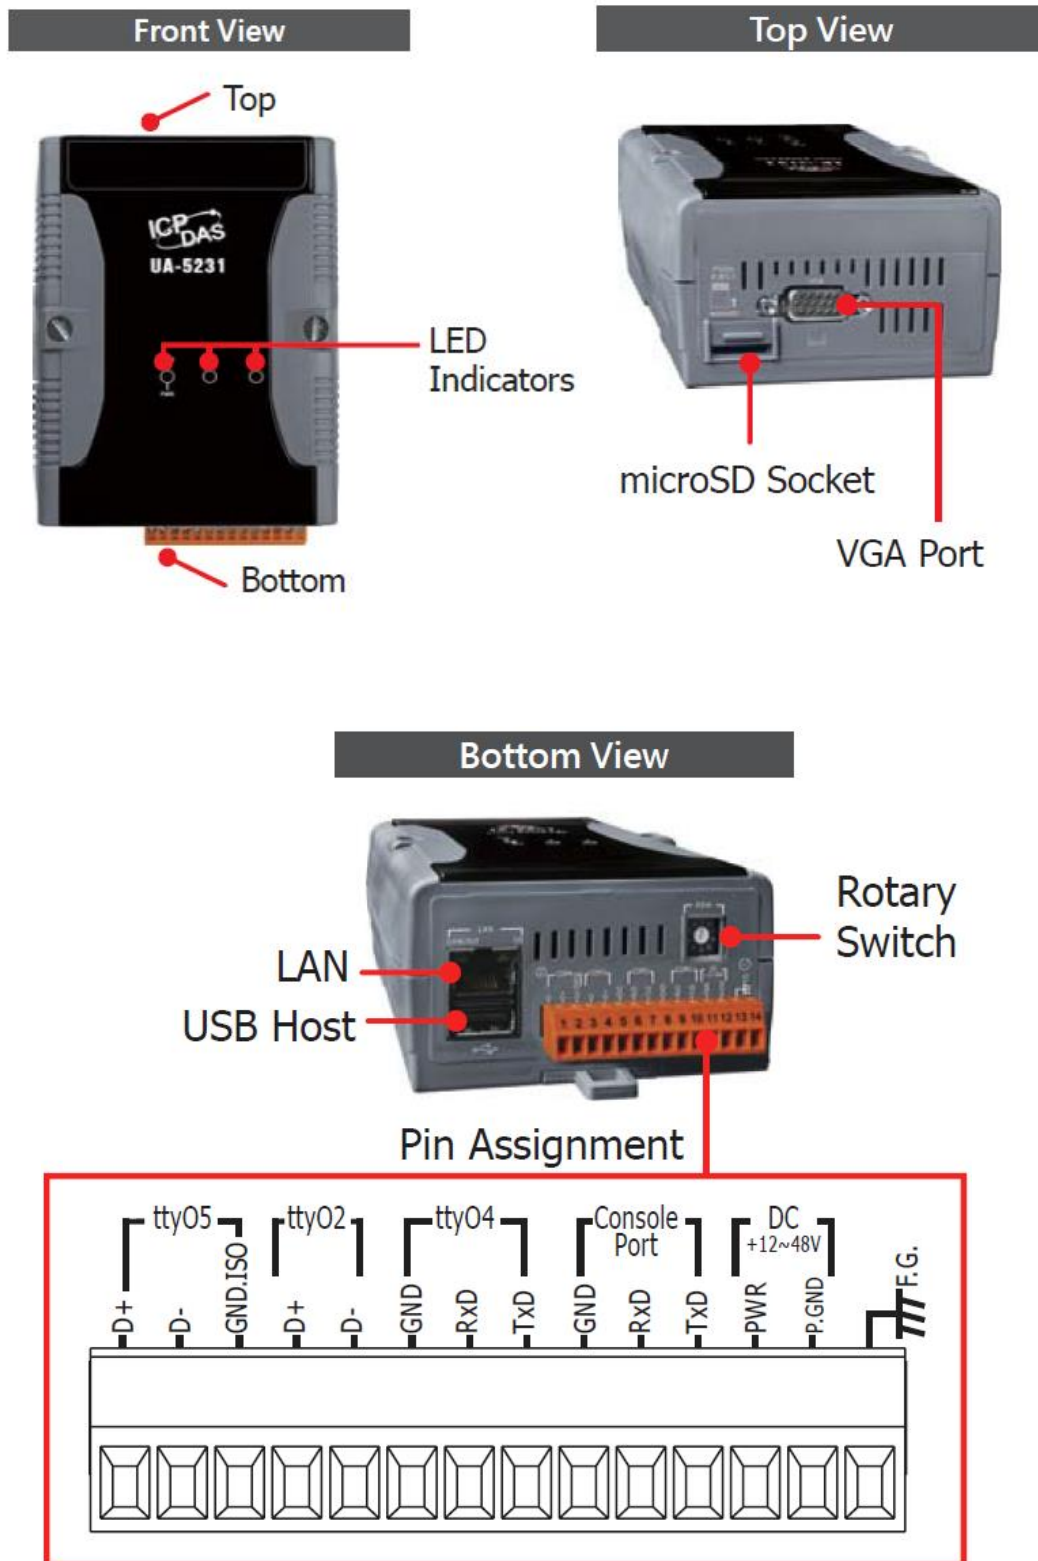



UA-5231M

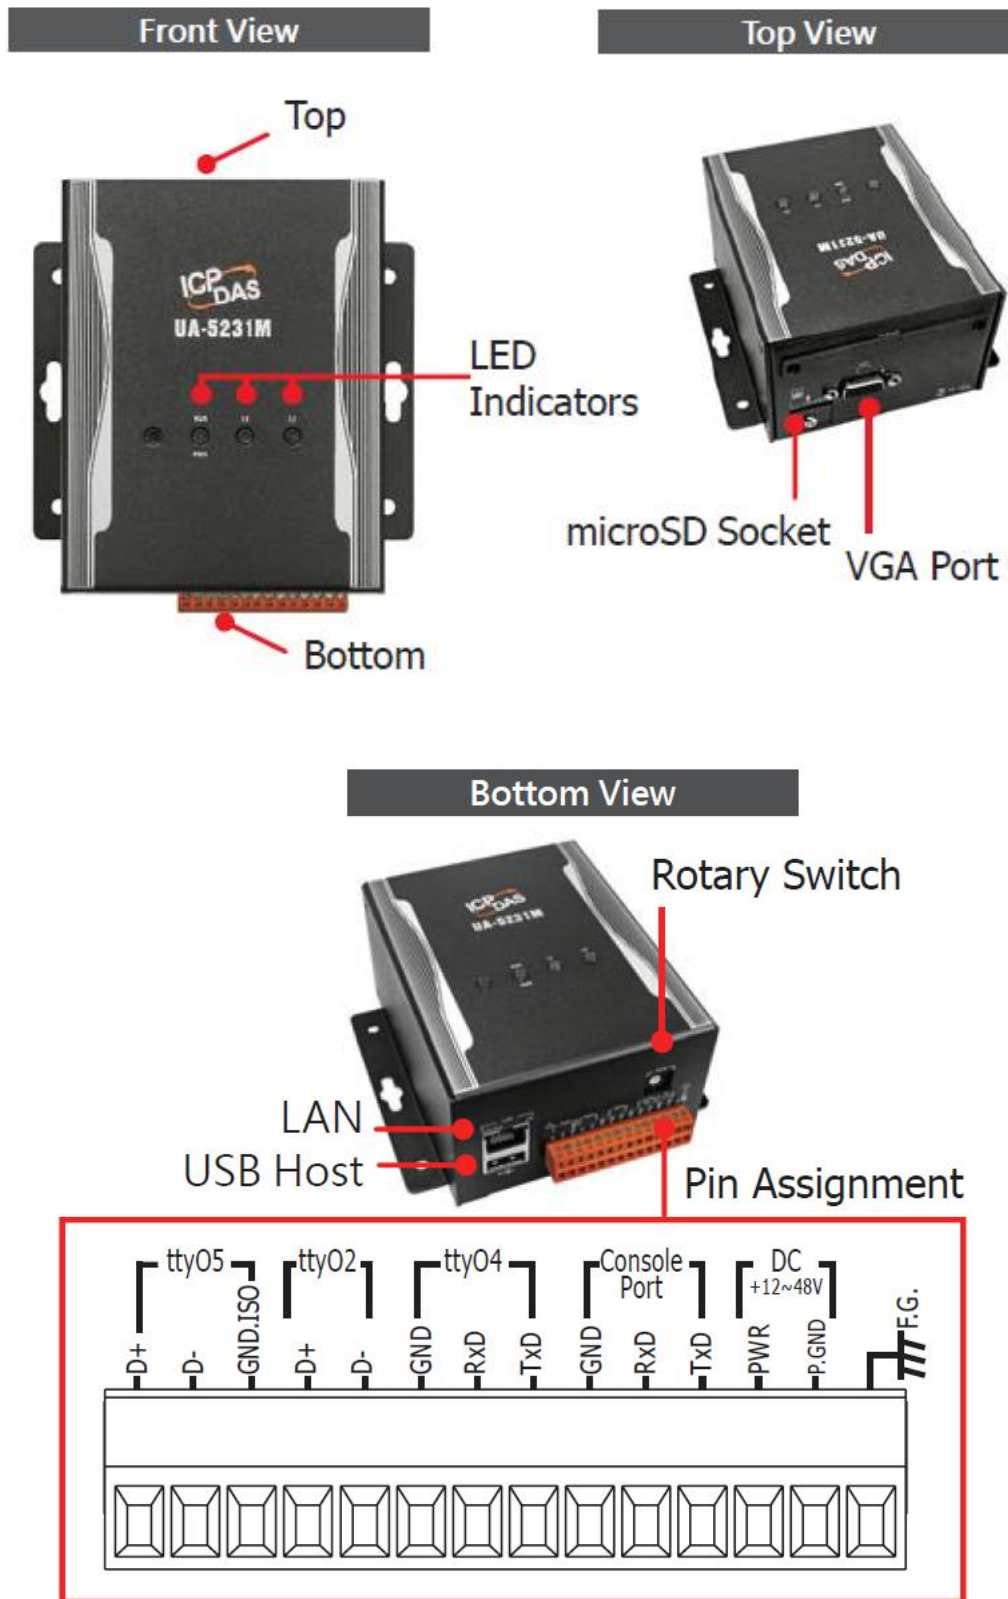

UA-5231M-3GWA / 4GE / 4GC

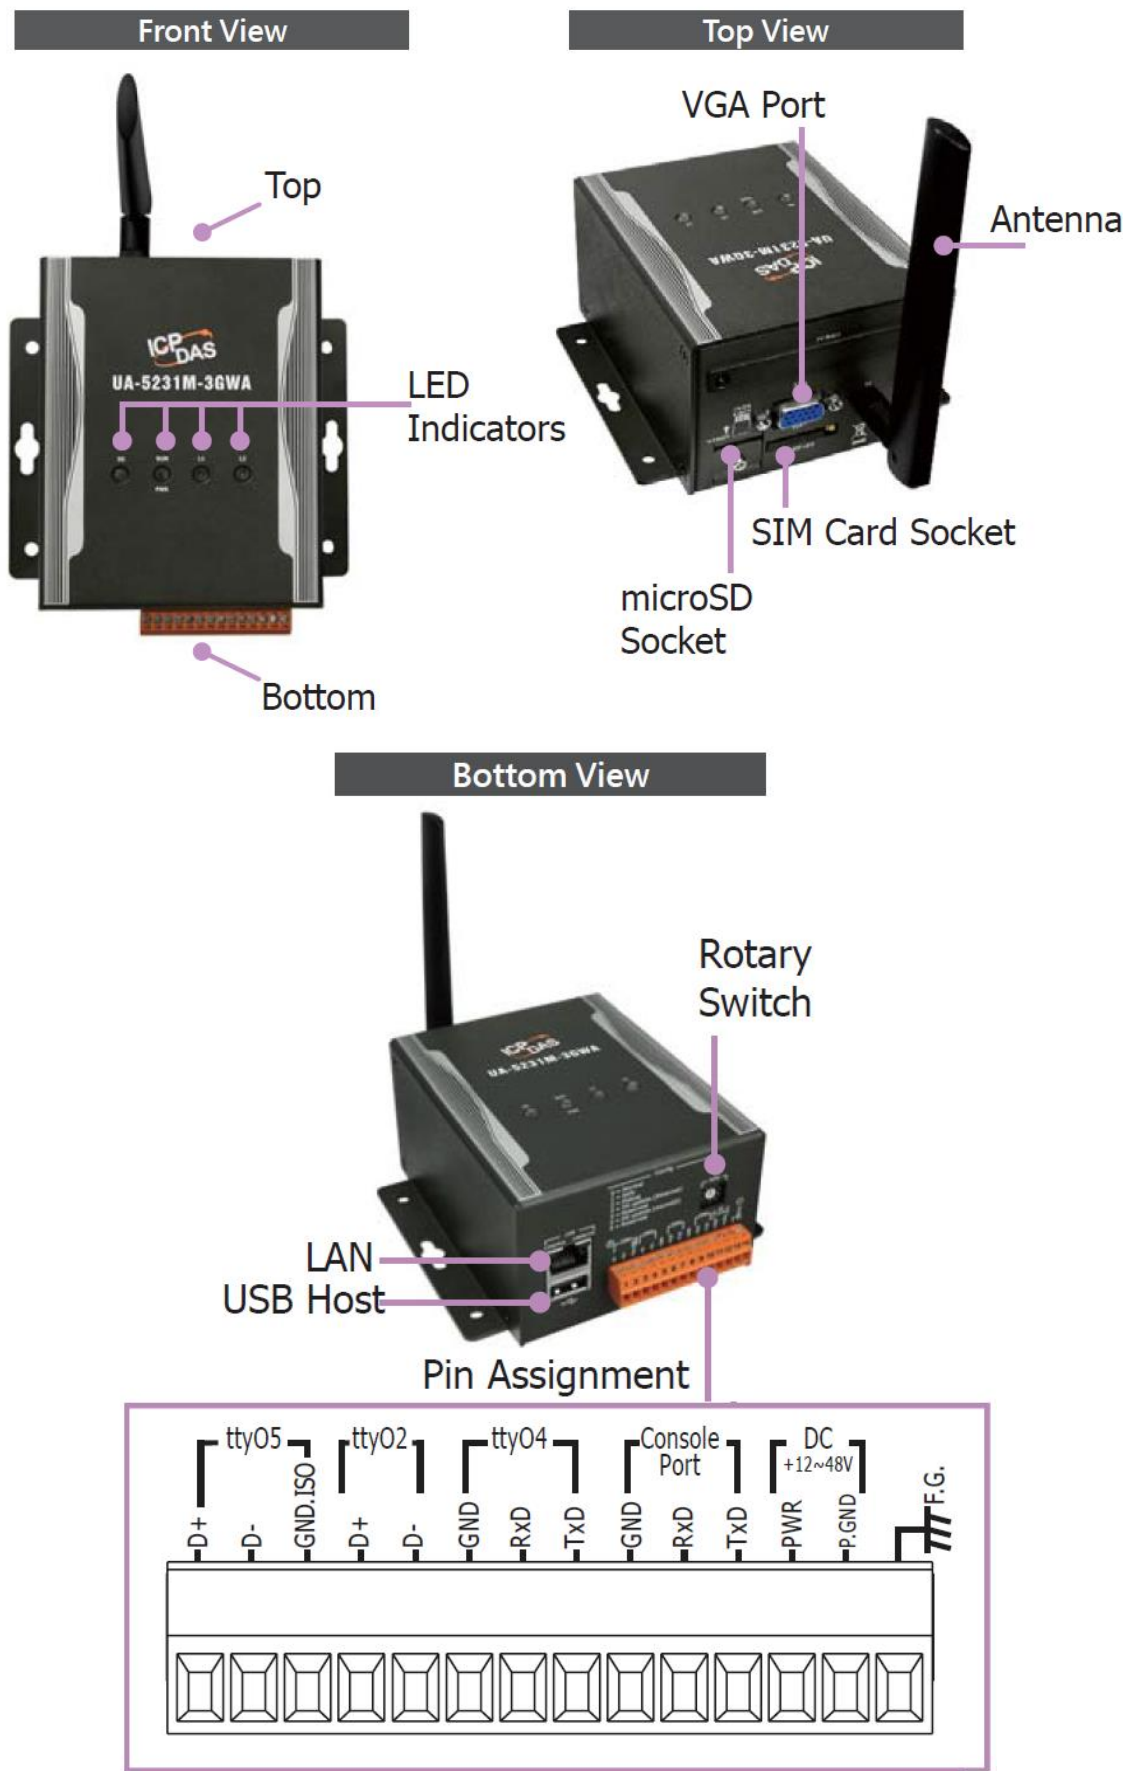


UA-2241M

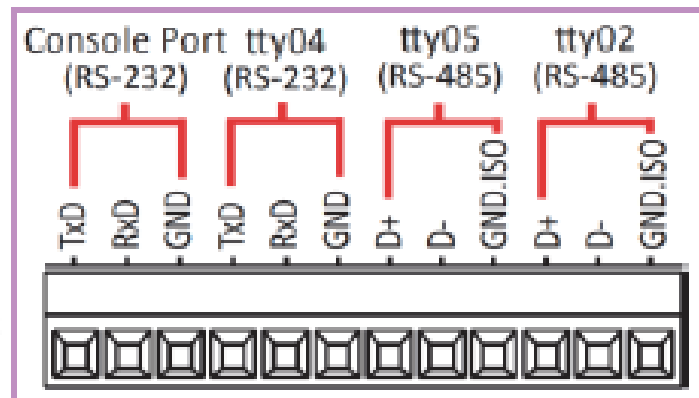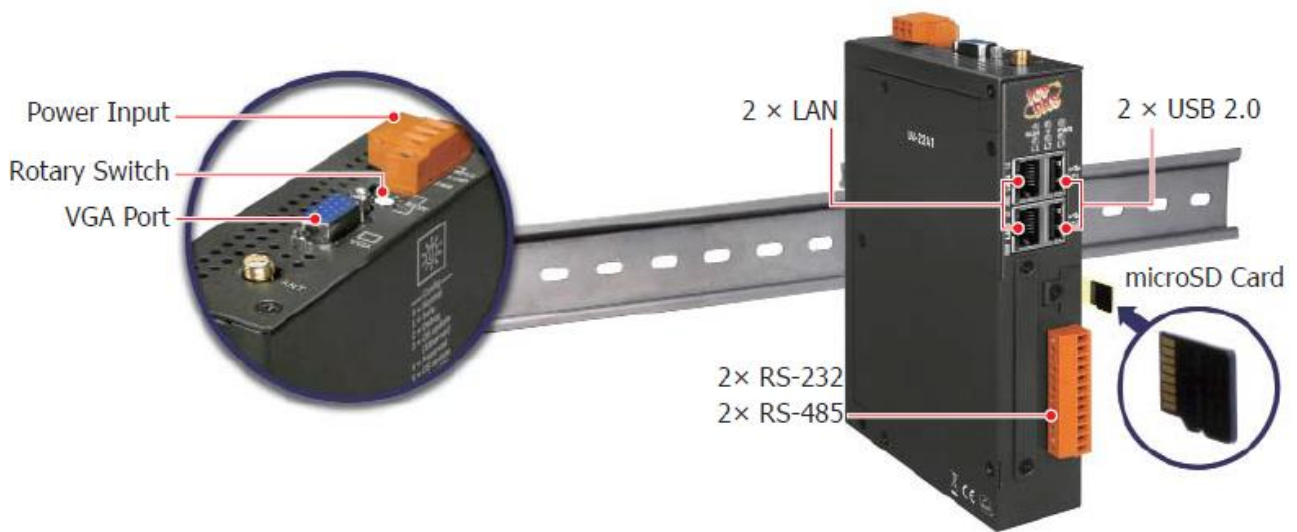

1.6. Dimensions


UA-5231

Unit: mm

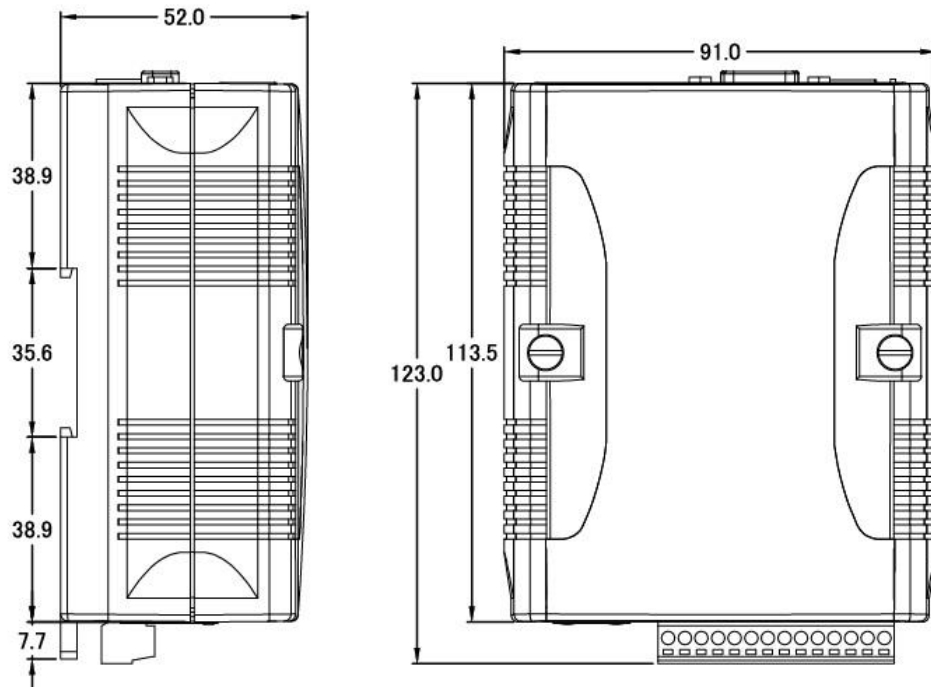



UA-5231M / UA-5231M-3GWA / UA-5231M-4GE / UA-5231M-4GC

Unit: mm

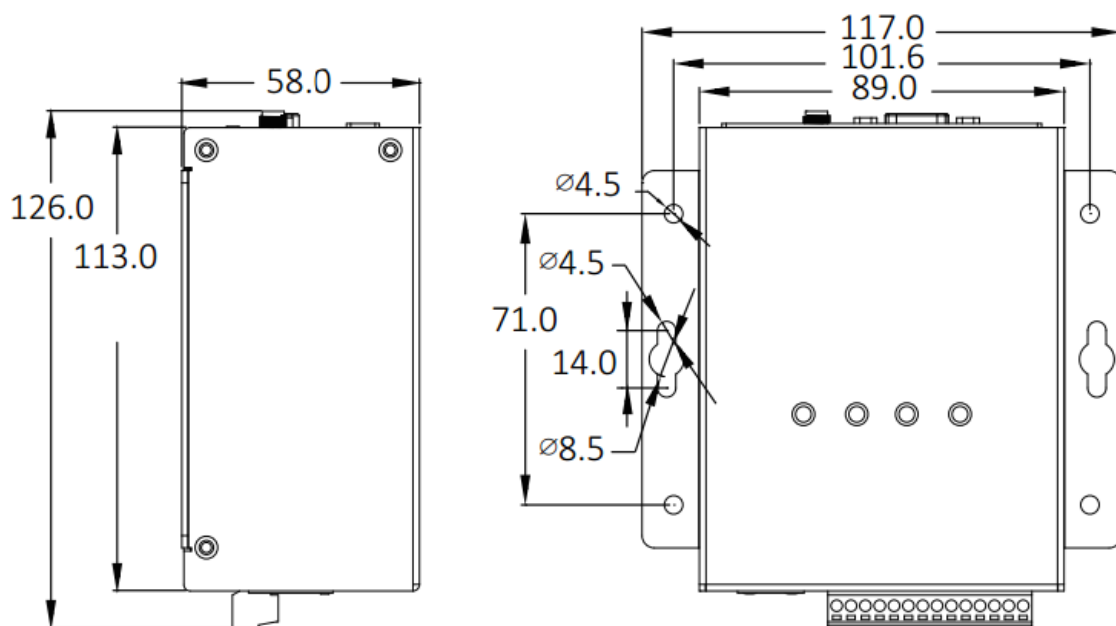

UA-2241M

Unit: mm

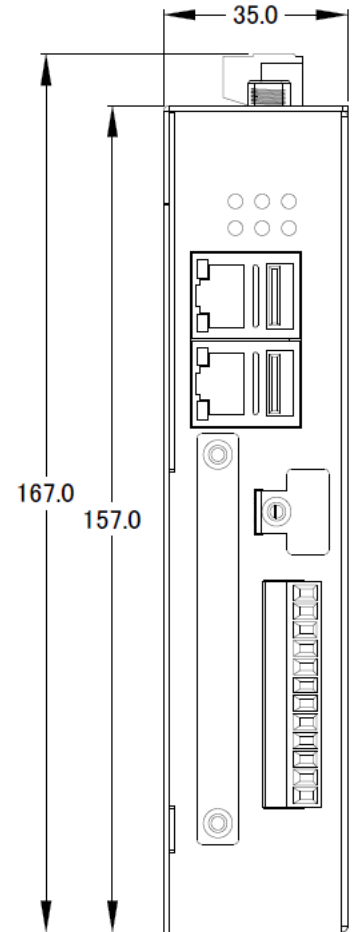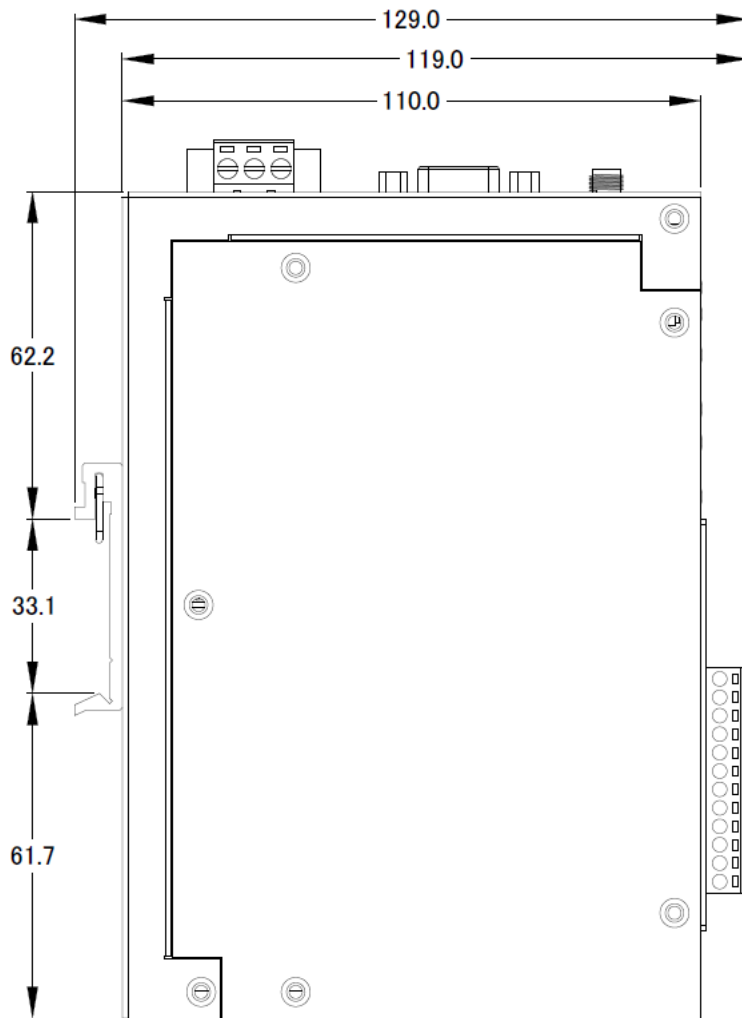

2. Quick Start 1: Hardware/Network Connection

This chapter describes the devices hardware connection, network connection and quick setting for the UA Controller, and how to connect to the UA controller web-based UI via a browser. Next chapter will set up web functions, and complete an example project.

2.1. Hardware Connection

This section describes the hardware wiring and connection for the UA Controller.

2.1.1. Preparations for Devices


In addition to the UA series controllers (Ex: UA-5231), please prepare the following:

1. **Power Supply: +12 ~ +48 VDC** (Ex: DP-665)
2. **Ethernet Hub or Switch** (Ex: NS-205)
3. **PC/NB**: Can connect to the network and set the network

2.1.2. Hardware Wiring

Connect the UA with the RJ-45 Ethernet port LAN1 to an Ethernet hub/switch and PC. You can also link directly the UA to PC with an Ethernet cable.

After power is connected, please [wait 1 minute] for UA start-up procedure. When the "RUN/PWR" light ("RUN" "PWR" lights for UA-2200) starts flashing, it represents the boot is complete.

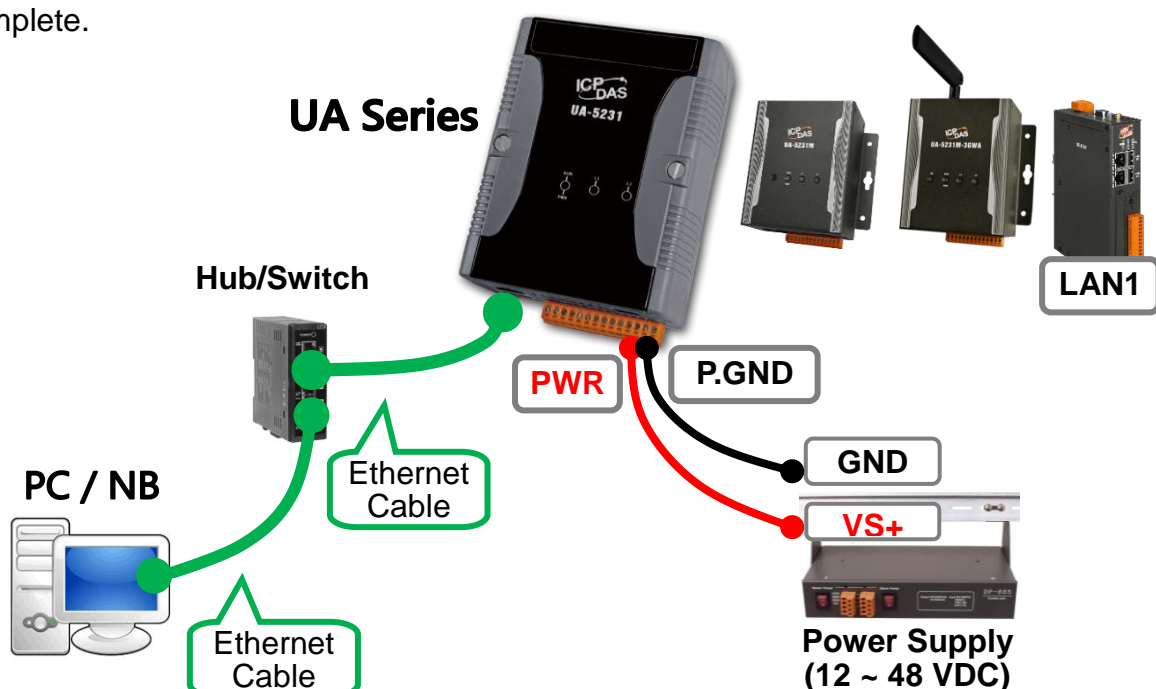


2.2. Network Connection

This section introduces how to connect to the UA Web User Interface (UA Web UI).

Setting new UA or the new user please uses the method in the [Chapter 2.2.1](#). (The same method as the “UA Series Quick Start” manual) Other users please see the following introductions

The methods to login the UA series Web UI:

- A. Using Factory Default Setting: Suitable for setting a new UA controller and the PC network IP is not in the same domain with UA.** This method changes the PC network IP to be the same domain with the UA factory default network IP to login the Web UI. (Refer [Section 2.2.1](#))
- B. Using Software Utility: Suitable for quick setting when many UA controllers are in the network but the IP are unknown.** UA Series provides a free software utility for auto searching UA controllers in the network and can quick jump to the login web page of UA. (Refer [Section 2.2.2](#))
- C. Using IP Address: Suitable for the UA has a fixed IP and in the same domain with the PC.** If the UA has a fixed IP and in the same domain with the PC, users can directly enter the IP in the address bar of a web browser and log in to the Web UI of the UA.

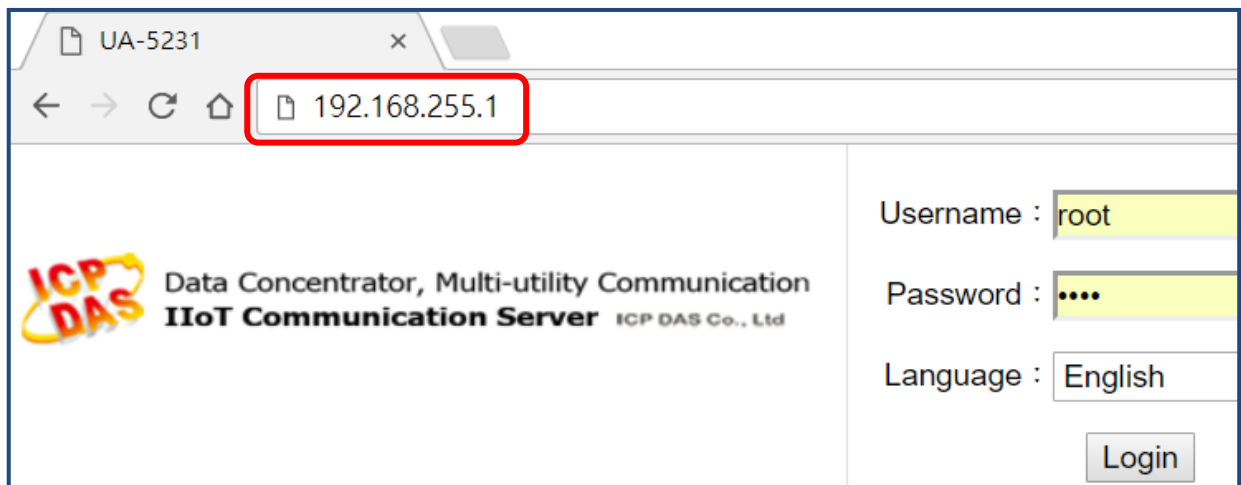

After login the UA Web UI, then can set up the UA project.

2.2.1. Connection by Factory Default Settings (For New UA)


The factory default settings of the UA series are as the following table:

Factory Default Settings of UA Series			
Network	IP	LAN1: 192.168.255.1 LAN2: 10.0.0.1	Assign UA a new IP setting according to your case. UA-2200 series uses LAN1 to connect PC.
	Netmask	255.255.0.0	
	Gateway	192.168.1.1	
OS Account	Username	root	After login, change your password as soon as possible. (Section 5.4 for Web UI) (Appendix F for OS)
	Password	icpdas	
Web UI Account	Username	root	
	Password	root	

1. Change the PC's IP setting as following. (Write down the PC original network settings before modify.)

IP	192.168.255.10
Subnet mask	255.255.0.0
Gateway address	192.168.1.1

2. Make sure the PC and UA is connecting through Ethernet. Then open a PC side browser (Ex: Chrome, IE...).
3. Type **http://192.168.255.1** in the URL address. Use default Web UI username / password "**root**" / "**root**" to login the system.

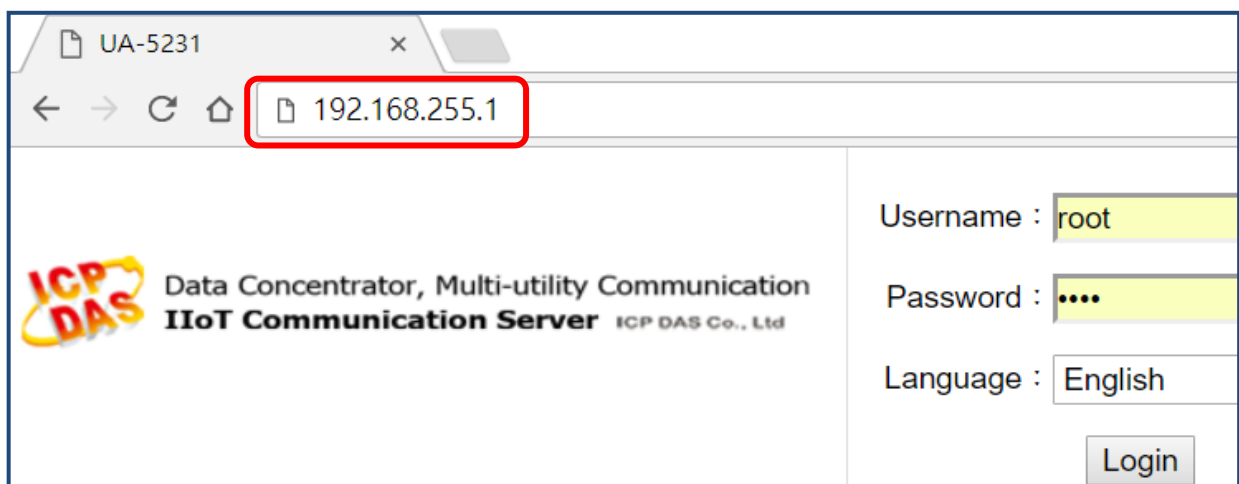

4. Click 【System Setting】 → 【Network Setting】 → 【Network Setting(LAN1)】 to change the IP setting by user network.

ICP DAS Data Concentrators, Multi-utility Communications
IIoT Communication Servers ICP DAS Co., Ltd

Function Wizard

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Set

System Setting Network Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

Network Setting(LAN1)

Connection Mode

☒ Specify an IP address

☐ Obtain an IP address automatically(DHCP)

IP 192 . 168 . 1 . 200

Mask 255 . 255 . 0 . 0

Gateway 192 . 168 . 1 . 1

Save

5. Save the IP setting, restore the PC original IP settings, and type the new IP in the browser as step-2 to login the Web UI of UA series. Then configure user's UA project.

UA-5231

192.168.81.200

ICP DAS Data Concentrator, Multi-utility Communication
IIoT Communication Server ICP DAS Co., Ltd

Username : root

Password :

Language : English

Login

2.2.2. Connection by Utility Searching

Setting new UA or the new user please uses the method in the [Chapter 2.2.1](#).

If the UA has a fixed IP and in the same domain as the PC, users can directly enter the IP in the address bar of a web browser and log in to the Web UI of the UA.

This chapter introduces the 2nd method that users use the UA Utility to search the Network IP. This method is suitable for connecting multiple UA series controllers to the Internet, but the IP addresses of UA are unknown or need to modify the UA controller quickly.


UA Utility is a free tool software to quickly search each UA controller on the network and connect to its Web UI for setting UA series controller and project.

In the PC, install the **UA-5000 Utility** (named “**UA-5000utility.exe**”) at the path of the companion CD (i.e., **CD:/UA-5000/Utility/**). Please copy this file to the user PC, and then run it to connect the device, or download the utility program from the website:

<http://ftp.icpdas.com.tw/pub/cd/UA-Series/utility/>


1. Install and execute the Utility

Run the UA-5000 Utility (file name: **UA-5000utility.exe**) to install the Utility program.

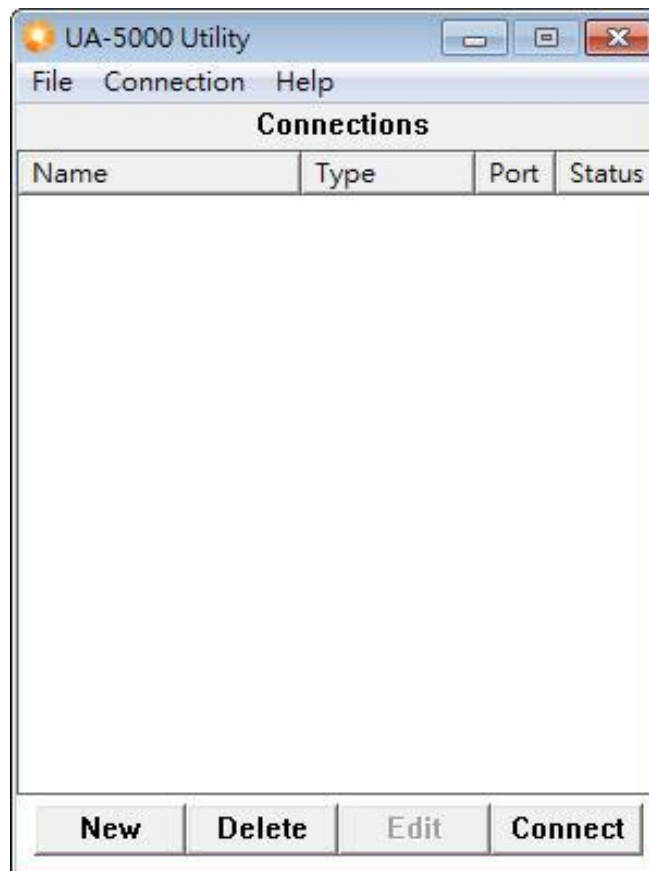


2. Create a new connection

Click “New” to add a connection item and give a name for it.

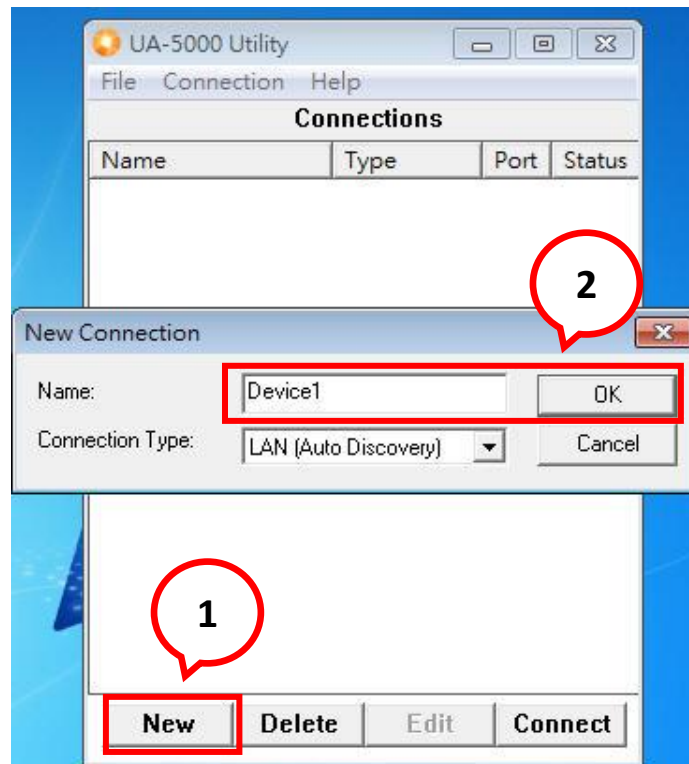


3. Search the UA controller

Mouse double-click on the name you created (or single-click and then click the “Connect” button), this utility will scan and list all UA devices over the network.

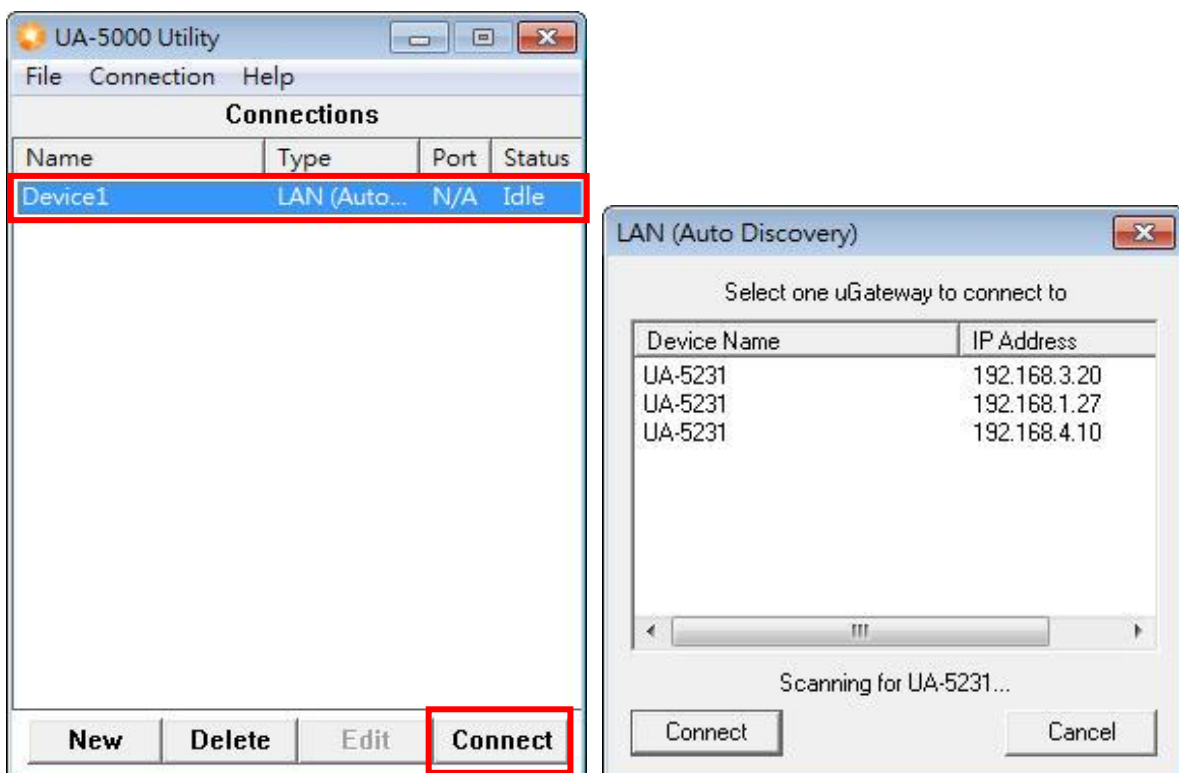


4. Connect to the UA controller

Click the device name you want to connect to, and then click the “Connect” button. It will connect to the UA webpage via the default Web browser (IE/Chrome...).

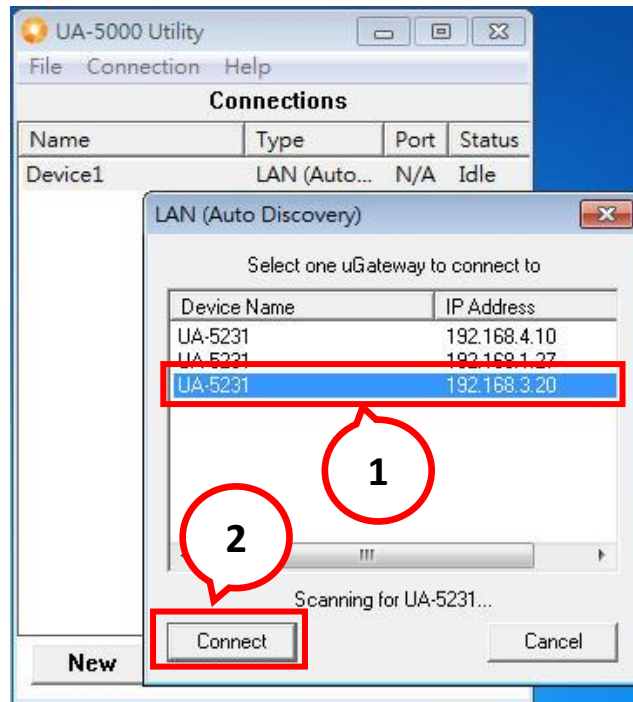

5. Connect to the UA controller

The default web browser will be run and direct go to the UA login web site. Please enter the username and password to login the UA series Web UI. The factory default username: **root**. The factory default password: **root**.

 Data Concentrator, Multi-utility Communication IIoT Communication Server ICP DAS Co., Ltd	Username : <input type="text"/>
	Password : <input type="password"/>
	Language : <input type="text" value="English"/> ▼
	<input type="button" value="Login"/>

6. Login the Web UI of the UA controller

When login into the web interface, the UA default home page (the main configuration screen) will as below, and will automatically read setting of that UA to the webpage.

System Setting

Module Setting

IoT Platform Setting

Convert Setting

Advanced Setting

Logger Setting

I/O Status

File Setting

System Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

Version Information

Middleware Version	Version 1.0.2.5
Main Program	Version 1.0.3.0
Web Interface	Version : 5.0.0 Date : 2018/11/30
Install Information	2018/12/24-12:14:03_Factory_InstallSuccess

System Setting

Controller Service Setting	Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.
Time Setting	Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)
Network Setting	Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)
Account Setting	Account Setting provides the function to set the username and password of the web UI.
Boot	Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.
COM Port Interface Setting	COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.

© ICP DAS Co., Ltd. All Rights Reserved

3. Quick Start 2: Web UI / Steps / Project Example

This chapter introduces the UA Web User Interface (UI), the steps for project / function / list settings, and a project example. For more project examples please see [Chapter 4](#). The detail parameters of the menus, functions, etc. will introduce in the next chapters.

First, login the UA Web UI as below. (Default username/password: **root/root**)

If your UA is not connect to the network yet, please refer to [Chapter 2](#).

ICP DAS Data Concentrator, Multi-utility Communication IIoT Communication Server ICP DAS Co., Ltd

Username :

Password :

Language :

Login

After log in the Web UI, users can see the version information, including the version of the install Middleware program, main program and Web Interface (and date).

ICP DAS IIoT Communication Server ICP DAS Co., Ltd

Function Wizard (Click here)

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Setting Logger Setting

I/O Status File Setting

System Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

Version Information	
Middleware Version	Version 1.0.2.5
Main Program	Version 1.0.3.0
Web Interface	Version : 5.0.0 Date : 2018/11/30
Install Information	2018/12/07-12:06:25_Factory_InstallSuccess

System Setting


Controller Service Setting	Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.
Time Setting	Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)
Network Setting	Network Setting provides the function to display and set the network settings. (Include IP host controller, DDNS, etc.)

3.1. Web UI Environment Overview

The function areas of the Web UI:

This chapter will overview these areas. The following chapters will introduce the settings of the functions and parameters.

1. **Function Wizard**: A quick setup area for commonly used projects or functions. The Web UI will enable a Wizard mode and show a “Step Box”. The user just follows the “Step Box” step-by-step and then can complete the project quickly and rightly. (Refer to [Chapter 4](#))
2. **Main Menu Area**: The main menu contains all the setting functions that classified into several categories. Click the main menu item, the sub-menu will appear on the left of the page, and the function descriptions will appear under the main menu area. (Refer to [Chapter 5](#) ~ [Chapter12](#))
3. **Sub-Menu Area**: The sub-menu will display detailed functions under the selected main menu. The user could setup or review detailed function options in the setting area. (Refer to [Chapter 5](#) ~ [Chapter12](#))
4. **Setting Area**: The setting area is for displaying and setting the functions and parameters of UA series controller. The content of this area will be vary according to the selected main menu and sub-menu.

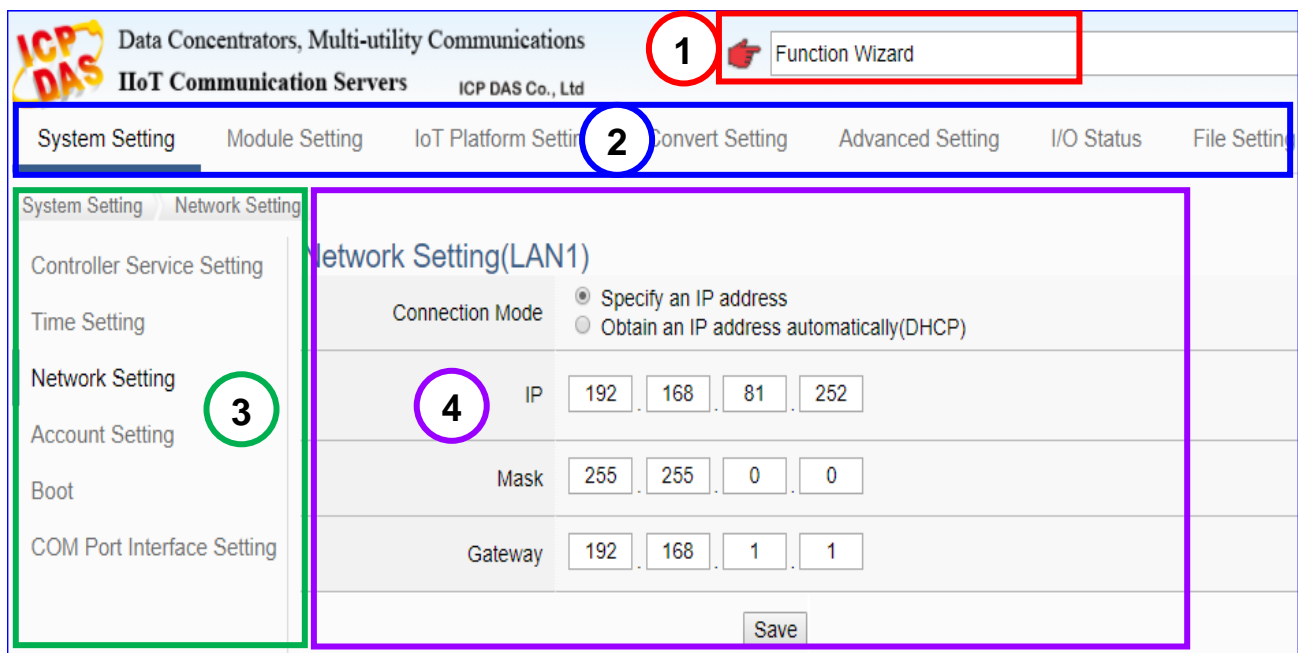

3.2. Setting Steps for Project / Function / List


● 【Steps for Project / Function Setting】 :

The setting for UA series controller is to set up from the left to the right of the main menu functions. The “Function Wizard” even provides the “Step Box” for users to follow the steps and prevent from selecting the wrong function, e.g. the setting steps of the Modbus communication conversion with the OPC UA protocol are as below:


Steps for Project/ Function:

Controller Setting > Module Setting > Connecting OPC UA (in IoT Platform)
> Conversion > File Setting > Execution

Main Menu:



Step Box of the Function Wizard:

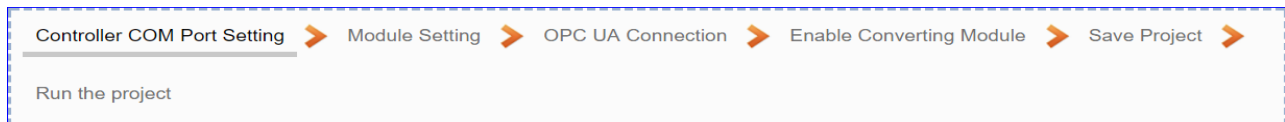


● 【Steps for List Setting】 :

About the List setting of module, connection..., they have the similar steps as below:

1. Select the connection port for the module (or connection...)
2. Select ICP DAS module or give a name/nickname, default name: Name
3. Click the button [+] to add a module, connect... list
4. Click the button [Edit] to enter the Content Setting page
5. Set up the list content, click [Save] to back, and then [Save] the list page.

Steps for List: e.g. Modbus RTU Module List.

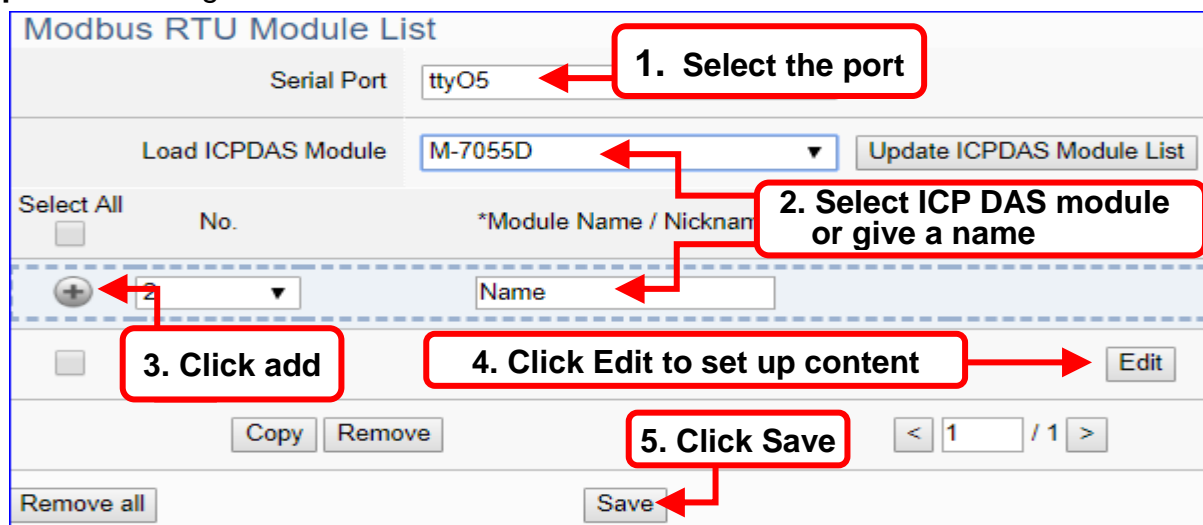

The [chapter 3.3](#) provides an example for user to know the setting steps, and the [chapter 4](#) provides various commonly projects and functions for user to apply.

3.3. Project Setting Example

After login, the UA Web UI (Web User Interface) screen view is as below picture. Then can start to setup the UA controller. If your UA has not connected to the Web UI, please refer to [Section 2.1 Hardware Connection](#) and [Section 2.2 Network Connection](#).

This section will introduce a quick method to set up a simple project example to allow users learning about the project steps (step-box) and list steps.

The quick method is to use the [**Function Wizard**] at the up-right corner of the Web UI. The Function Wizard provides several items for quick setting the projects or functions via a Wizard guide. The users just follow the “step box” and then can complete the project quickly and well. For more information of the Function Wizard, please refer to [Chapter 4](#).

The user can also select the main menu function of the Web UI to setup the project. The complete detail description of the menu functions, please see [Chapter 5](#) ~ Chapter 12.

ICP DAS IIoT Communication Server
ICP DAS Co., Ltd.

System Setting | Module Setting | IoT Platform Setting | Convert Setting | Advanced Setting | Logger Setting

I/O Status | File Setting

System Setting

Controller Service Setting
Time Setting
Network Setting
Account Setting
Boot
COM Port Interface Setting

Version Information

Middleware Version	Version 1.0.2.5
Main Program	Version 1.0.3.0
Web Interface	Version : 5.0.0 Date : 2018/11/30
Install Information	2018/11/29-17:39:19_Factory_InstallSuccess

System Setting

Controller Service Setting	Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.
Time Setting	Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)
Network Setting	Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)
Account Setting	Account Setting provides the function to set the username and password of the web UI.
Boot	Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.
COM Port Interface Setting	COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.

© ICP DAS Co., Ltd. All Rights Reserved


3.3.1. A Quick Setup Project Example

This example will setup a project for conversion of OPC UA and Modbus RTU (Master) communication protocol using the Function Wizard. The devices include a UA-5231 controller and an M-7055D module that wired with RS-485 interface to read/write the Modbus RTU I/O data and need the convert setting. The wiring is show as the picture below.



Note: 【Function Wizard】 at the up-right corner of the Web UI is a quick setup area. The hardware/network connection methods please see the [CH. 2](#).

This sample uses the conversion function of the Function Wizard to convert the Modbus RTU / OPC UA. First, click the “(Master) Modbus RTU / OPC UA” item of the Function Wizard.

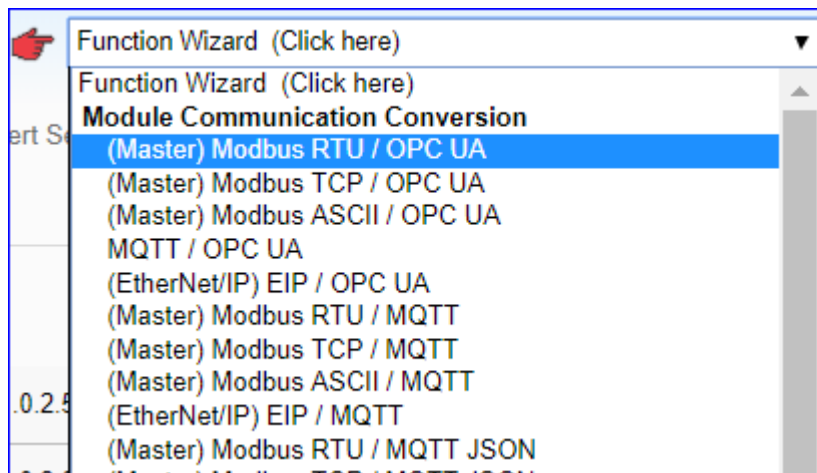

The Web UI will enable a Wizard guide mode and show a “Step Box” (as below picture). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and correctly.



After click the **【(Master) Modbus RTU / OPC UA】**, follow the “**Step Box**” to complete the 6 steps: (The step with a bold underline means it is the current step.)




Step 1. Controller COM Port Setting

This step sets up the COM port interface of the UA controller to connect with the module and the communication setting.

<This Example>

The UA uses the ttyO5 port to connect with the M-7055D, so set the **Serial Port: ttyO5**. The M-7055D module default setting is “9600, 8, N, 1”, so set **Baud Rate: 9600**, **others need not to change**. After setting, click [Save] button to store this page setting. (The user also can save the whole project until the step 5 of “Save Project”.)

Note: If user uses other port to link other module, or the module is not in the default state, please set this step according to your case. The user can find the M-7055D default state in the Module CD or its [Product Web Site](#).

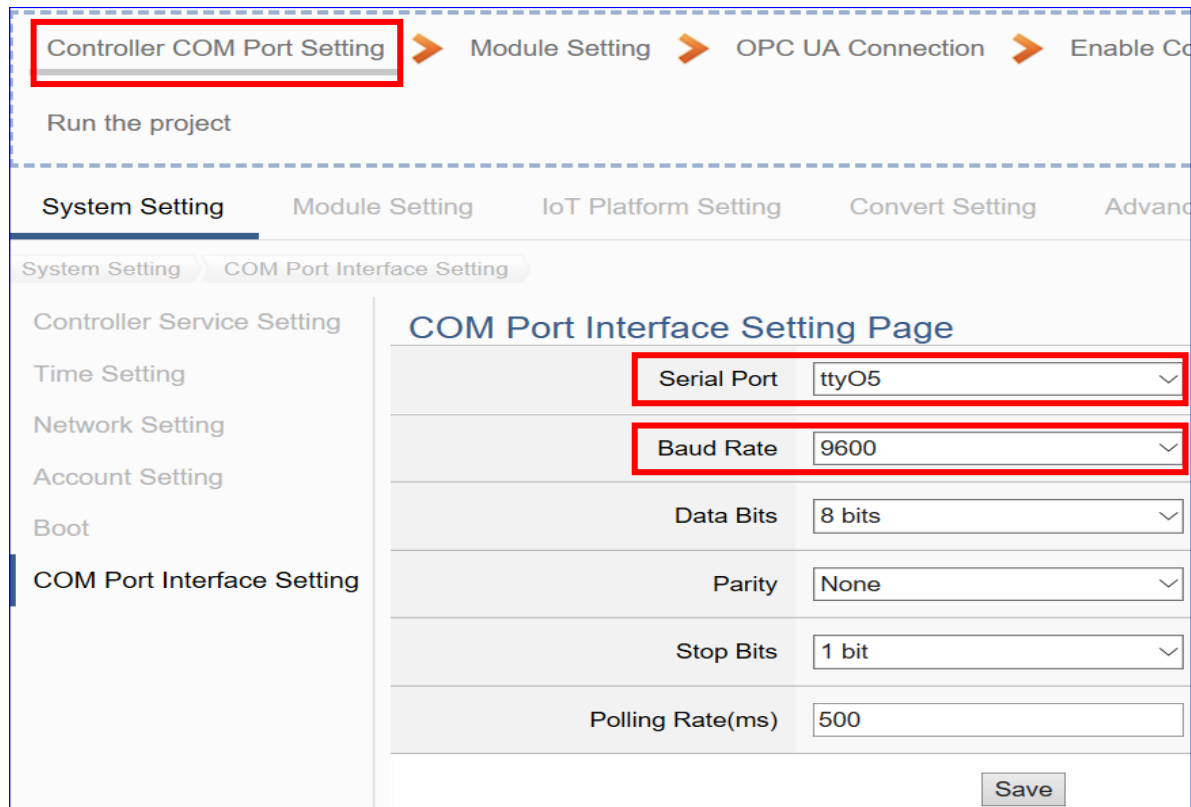

Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]** of the UI setting.

This step is for setting the connected modules. The user can set each module a name (Default name: Name), click [+] button to create a new module, and click [Edit] button to configure the module content and Modbus mapping table.

<This Example>

In “Module Setting”, select the **Serial Port: ttyO5**, and select **ICP DAS Module: M-7055D**, the system will auto setup the ICP DAS module. If not use ICP DAS module, please give a name and click the button [+] to add a Module List.

The screenshot shows the 'Module Setting' page in the UA Series User Manual. The interface includes a breadcrumb trail at the top: 'Controller COM Port Setting' > 'Module Setting' > 'OPC UA Connection' > 'Enable Converting Module' > 'Save Project'. Below this is a 'Run the project' button. The main content area has tabs for 'System Setting', 'Module Setting' (selected), 'ICP DAS Module Setting', 'Convert Setting', 'Advanced Setting', and 'Logger Setting'. Under 'Module Setting', there are sub-tabs for 'I/O Status' and 'File Setting'. The 'Modbus' section on the left lists 'RTU Module (Master)', 'TCP Module (Master)', and 'ASCII Module (Master)'. The 'MQTT' section lists 'MQTT Module'. The 'EtherNet/IP' section lists 'ICPDAS Module'. The main area is titled 'Modbus RTU Module List'. It features a 'Serial Port' dropdown set to 'ttyO5'. Below this is a 'Load ICPDAS Module' section with a 'Select The Module' dropdown and an 'Update ICPDAS Module List' button. A table below the dropdown has columns for 'Select All', 'No.', '*Module Name / Nickname', and 'Edit'. The table has one row with a '+' button in the 'Select All' column, '1' in the 'No.' column, and 'Name' in the '*Module Name / Nickname' column. A red box labeled '1' points to the 'Module Setting' breadcrumb. A red box labeled '2' points to the 'ttyO5' serial port selection. A red box labeled '3' points to the 'Select The Module' dropdown. A red box labeled '4' points to the '+' button in the table.

Add a module M-7055D as below, and then click [Edit] button to enter the “Module Content Setting” page.

This screenshot shows the 'Modbus RTU Module List' interface after adding a module. The 'Serial Port' is still 'ttyO5'. The 'Load ICPDAS Module' dropdown now shows 'M-7055D'. The table below has two rows. The first row is highlighted with a red box labeled '5' pointing to the 'Edit' button. The second row has a '+' button in the 'Select All' column, '2' in the 'No.' column, and 'Name' in the '*Module Name / Nickname' column. The first row has a checkbox in the 'Select All' column, '1' in the 'No.' column, 'M-7055D' in the '*Module Name / Nickname' column, and an 'Edit' button. At the bottom, there are 'Copy', 'Remove', and 'Save' buttons, and a pagination control showing '< 1 / 1 >'. A 'Remove all' button is also present.

[**Module Content Setting**] page can set the module and its Modbus mapping table.

If use ICP DAS module, system can auto-setup the module and its **Modbus Mapping Table**, such as this example M-7055D (DO x 8, DI x 8) module content and Modbus Mapping Table as below.

Module Content Setting

No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500

Modbus Mapping Table Setting

Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	<button>Add</button>

Modbus Mapping Table

Coil Status(0x)		Input Status(1x)	
Address	0	Address	0
Number	8	Number	8
Type	Bool	Type	Bool
<button>Edit</button>		<button>Edit</button>	

Address Setting

Nickname Setting

Holding Registers(4x)

Input Registers(3x)

OK

Cancel

If not use ICP DAS Module, please check the module's user manual to find out the module Modbus Address, and refer to Module Setting chapter of UA manual as below.

Please set up the addresses mapping with the module I/O channels in the [**Modbus Mapping Table Setting**]. The system provides 4 Modbus data models (as below) “01” to “04” for mapping to the **DO, DI, AO and AI** channels.

01 Coil Status(0x)
02 Input Status(1x)
03 Holding Registers(4x)
04 Input Registers(3x)

Note: the start address of UA series is bass on “0”. Some modules start address are bass on “1”, but please note UA is follow the rule of start address “0”, and set enough Data Number for mapping to the I/O channels of the linking module.

In this example, M-7055D has 8 DO and 8 DI channels, please create the table as following pictures of the [**Modbus Mapping Table Setting**]. After complete the setting, the DO and DI Modbus address settings will show in the [**Modbus Mapping Table**].

M-7055D 8 DO setting (left) and the [**Coil Status(0x)**] table after setting (right):

DO mapping 01 → Data Model

01 Coil Status(0x)

UA start address: 0 → Start Address

0

DO x 8 → Data Number

8

Click [Add] → Create Tables

Add

Coil Status(0x)

Address	0
Number	8
Type	Bool

Edit

M-7055D 8 DI setting (left) and the [**Input Status(1x)**] table after setting (right):

DI mapping 02 → Data Model

02 Input Status(1x)

UA start address: 0 → Start Address

0

DI x 8 → Data Number

8

Click [Add] → Create Tables

Add Success.

Input Status(1x)

Address	0
Number	8
Type	Bool

Edit

The Modbus Mapping table is showing as below. Click [OK] to save and exit.

Modbus Mapping Table				Address Setting	Nickname Setting
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)	
Address	0	Address	0		
Number	8	Number	8		
Type	Bool	Type	Bool		
<div>Edit</div>		<div>Edit</div>			
<div>OK</div> <div>Cancel</div>					

For more setting item description, please refer to chapter [Chapter 6. Module Setting](#).

Step 3. OPC UA Connection

Click the next step, and enter the **Step 3 [OPC UA Connection]** of the UI setting

This step is for setting the IoT platform and the OPC UA connection, e.g. the server name, port, login identity information, etc.

We select the “Modbus RTU / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA Connection > Local Server]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform.

<This Example>

The server name and port of **[OPC UA Connection]** will auto show up, user needs not to change in this example, but can change the port if needs.

The Anonymous Login default enables, you need not to change in this example. At last, click [Save] button.

Controller COM Port Setting > Module Setting > **OPC UA Connection** > Enable Converting Module > Save Project >

Run the project

System Setting Module Setting **IoT Platform Setting** Convert Setting Advanced Setting File Setting

IoT Platform Setting Local Server

MQTT Connection

Local Broker

Remote Broker

MQTT Group Connection

Microsoft Azure Platform

OPC UA Connection

Local Server

Server

Server Name ICPDAS_OPC_UA_Server

Port 48010

Save

User Identity Tokens

Anonymous Login ☒ Enabled

User Password Login ☐ Enabled

Certificate Login ☐ Enabled

Save

For enabling other logins, please see the [OPC UA Connection] in the [Chapter 7 IoT Platform Setting](#) .

Step 4. Enable Converting Module

Click the next step, and enter the **Step 4 [Enable Converting Module]** UI setting

This step is for enabling the Modbus RTU / OPC UA conversion.

This step will auto enter the **[OPC UA > Modbus RTU (Master)]** page of Conversion setting because we select the “Modbus RTU / OPC UA” conversion at the beginning. The “Step Box” will prevent the user from selecting the wrong platform.

<This Example>

In this setting page, please check the enable box of the module **M-7055D** we set up in the previous steps. Then click [Save] button.

The above action will enable all I/O channels of the M-7055D for communication conversion. If users need to enable some channels only, please click [Edit] to enable individual channels. (Refer to [Chapter 8](#))

Controller COM Port Setting > Module Setting > OPC UA Connection > **Enable Converting Module** > Save Project

Run the project

System Setting Module Setting IoT Platform Setting **Convert Setting** Advanced Setting Device Setting

Convert Setting Modbus RTU (Master)

OPC UA

- Modbus RTU (Master)
- Modbus TCP (Master)
- Modbus ASCII (Master)

MQTT

- Modbus RTU (Master)
- Modbus TCP (Master)
- Modbus ASCII (Master)

MQTT JSON

- Modbus RTU (Master)

Modbus RTU Module List

No.	*Module Name / Nickname	Edit	All Enabled
1	M-7055D	Edit	<input checked="" type="checkbox"/>


< 1 / 1 >

Save

Step 5. Save Project

The setting of this example is finished now. The left steps are to save all settings and run the project. The last two steps will not show setting pages, but some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation disappears, the project is saved completely.

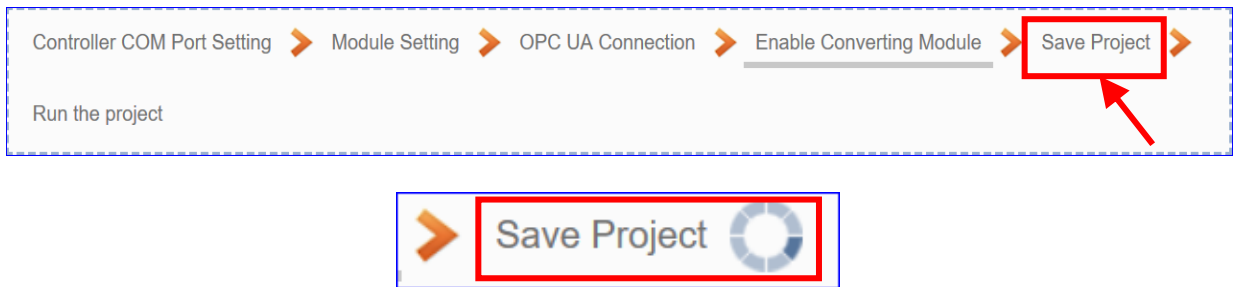

Step 6. Run the Project

The project, after saving, needs to execute. Click the next step [**Run the Project**].



The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the screen view before into the “Step Box”.

This example now completes the setting, uploading and running in the UA controller that connected with the M-7055D and can convert the OPC UA and Modbus RTU protocol communication.


For more and detail setting descriptions of the Web UI, please refer to the following chapters.

4. Function Wizard: Quick Setup

Chapter 4 is main for UA project setting. [Function Wizard] in the up-right corner of the Web UI provides a quick setting “Step Box” suitable for setting up the projects or functions.

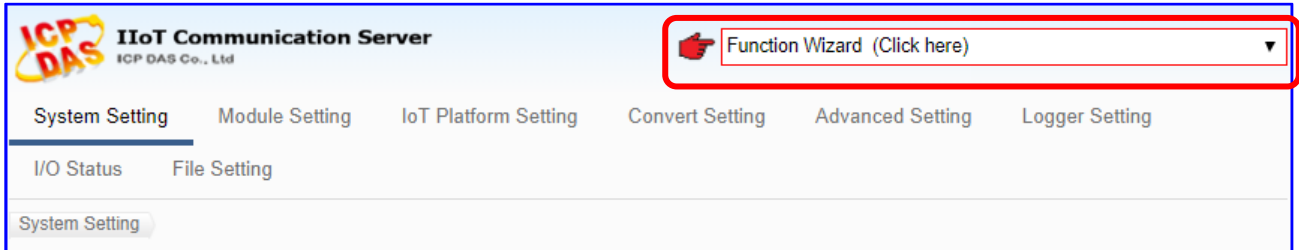


[Step Box] (As below picture) is a Wizard-like step guide. When the user selects a function item of the Function Wizard, the Web UI will enable a Wizard mode and show a “Step Box”. The user just needs to follow the “Step Box” step-by-step and then can complete the project or function quickly and rightly.

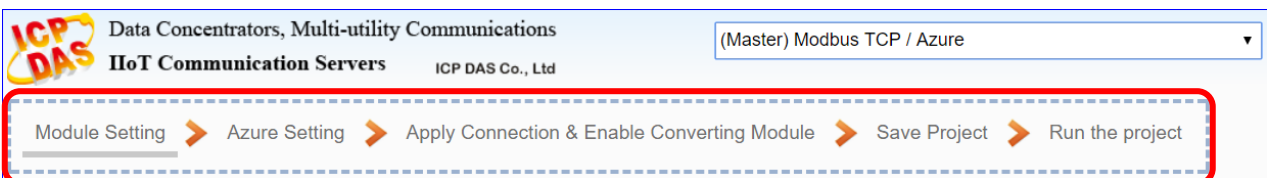

This chapter will focus on the function settings. About the real module using steps, please refer to [Section 3.3](#), there is a project using UA and M-7055D, and converting Modbus RTU with OPC UA protocol. The user could see that section and this chapter to know more concept about the setting steps and tips.

Function Wizard will develop more functions or projects, but now there are 21 items in 5 major categories, this chapter will introduce them in 5 sections.

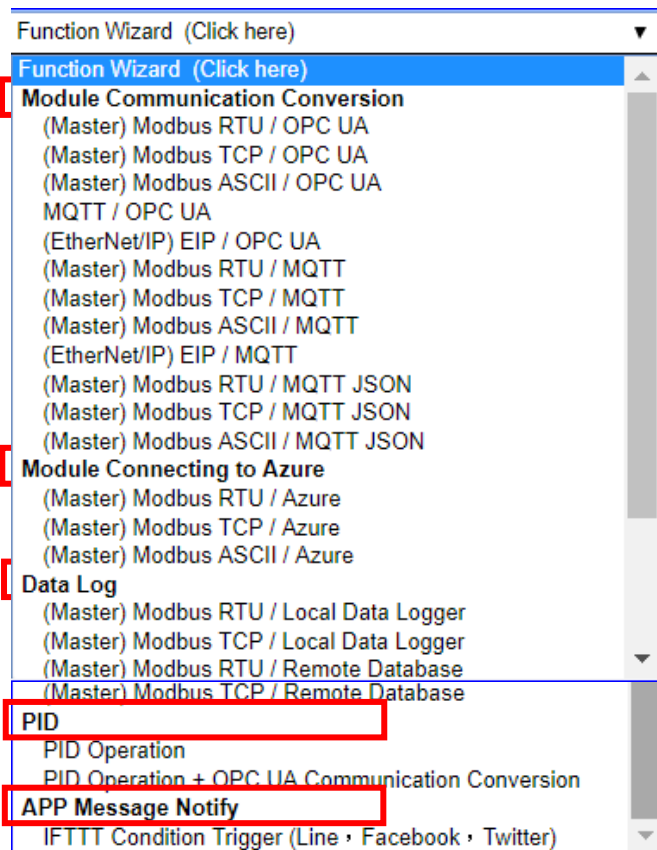


4.1. Module Communication Conversion

“Module Communication Conversion” of UA series, a very commonly used function, can effectively communicate the IoT devices or systems (e.g. cloud, database...) with I/O data of the module (e.g. Modbus module). This section will introduce the setting steps and the function parameters of the “Module Communication Conversion”. In the category, there are several items that can be divided into the following protocol types and will introduce them in the sub-sections: OPC UA, MQTT, and MQTT JSON.

Module Communication Conversion
 (Master) Modbus RTU / OPC UA
 (Master) Modbus TCP / OPC UA
 (Master) Modbus ASCII / OPC UA
 MQTT / OPC UA
 (EtherNet/IP) EIP / OPC UA
 (Master) Modbus RTU / MQTT
 (Master) Modbus TCP / MQTT
 (Master) Modbus ASCII / MQTT
 (EtherNet/IP) EIP / MQTT
 (Master) Modbus RTU / MQTT JSON
 (Master) Modbus TCP / MQTT JSON
 (Master) Modbus ASCII / MQTT JSON

Modbus / OPC UA	Using the OPC UA Service to convert with Modbus RTU/TCP/ ASCII protocols. (Section 4.1.1)
MQTT / OPC UA	Using the OPC UA Service to convert with MQTT protocols. (Section 4.1.2)
EIP / OPC UA	Using the OPC UA Service to convert with EtherNet/IP protocols. (Section 4.1.3)
Modbus / MQTT	Using the MQTT Service function to convert with Modbus RTU/TCP/ ASCII protocols. (Section 4.1.4)
EIP/ MQTT	Using the MQTT Service function to convert with EtherNet/IP protocols. (Section 4.1.5)
Modbus / MQTT JSON	Using the MQTT Service function in-group of JSON format to convert with Modbus RTU/TCP/ ASCII protocols. (Section 4.1.6)

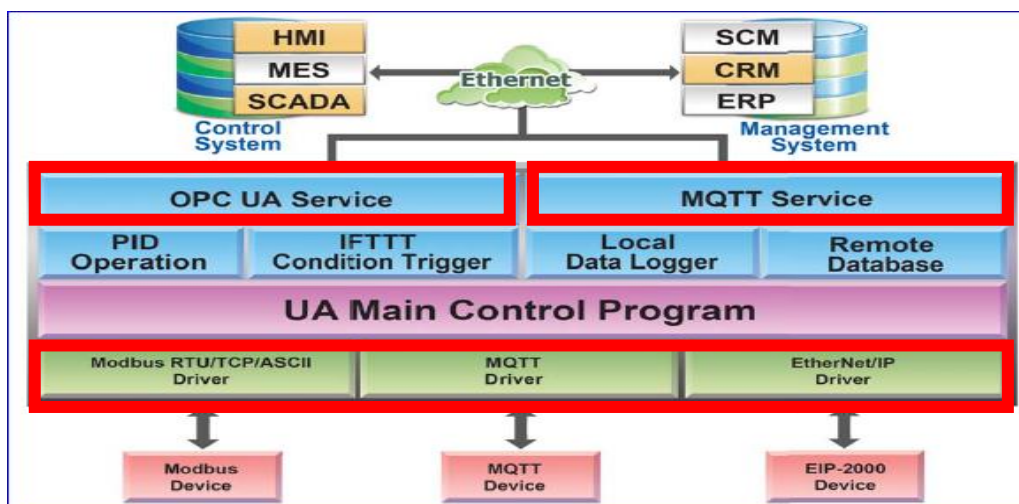


4.1.1. Modbus / OPC UA Conversion


Modbus / OPC UA Conversion include the conversion of OPC UA and Modbus RTU / TCP / ASCII three protocols. With the OPC UA Service function, the OPC UA Server can read and write the Modbus RTU/TCP/ASCII devices that connected to the controller.

The settings of Modbus RTU/ASCII are the same. Here will introduce them together for a setting sample.


Modbus / OPC UA Function Diagram:

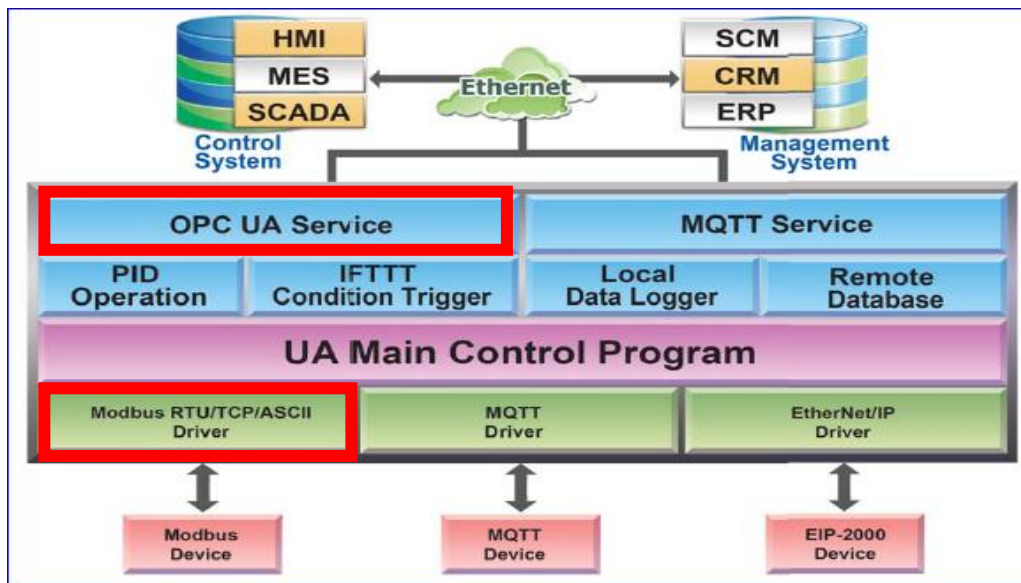

Application Solution:

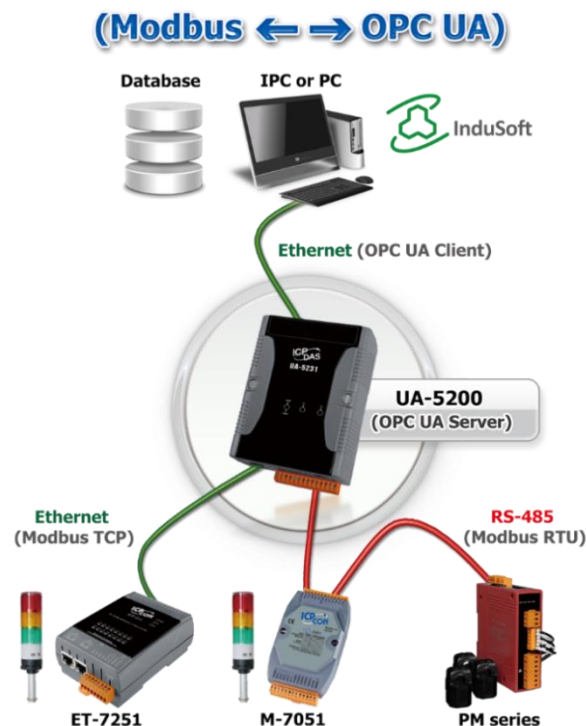


- **Convert Setting: Modbus RTU/ASCII and OPC UA**

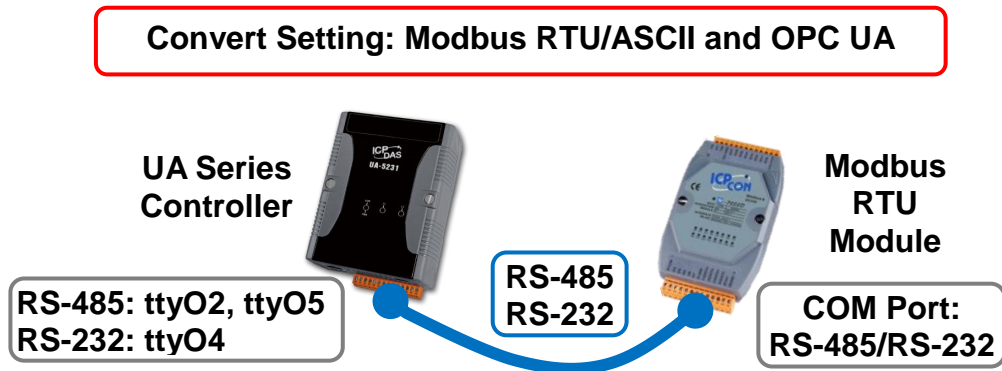


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the Modbus RTU or ASCII module (via RS-485 / RS-232, as the picture) and read/write the Modbus I/O by OPC UA Server, user can choose the item [**Modbus RTU / OPC UA**] or [**Modbus ASCII / OPC UA**] of the “Module Communication Conversion” in the Function Wizard.

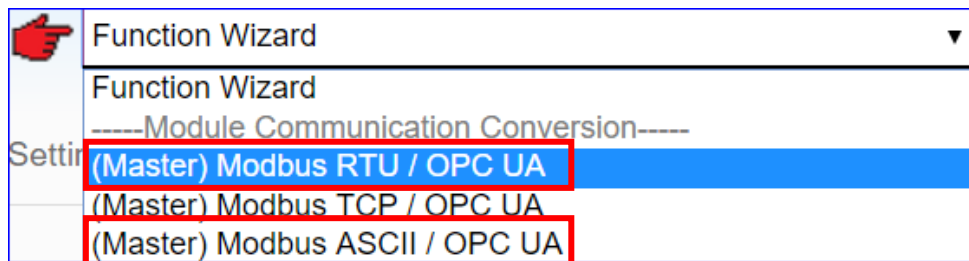

[Step Box]:

The Step Box of the [**Modbus RTU / OPC UA**] and [**Modbus ASCII / OPC UA**] has the same 6 steps, here will introduce them together. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.

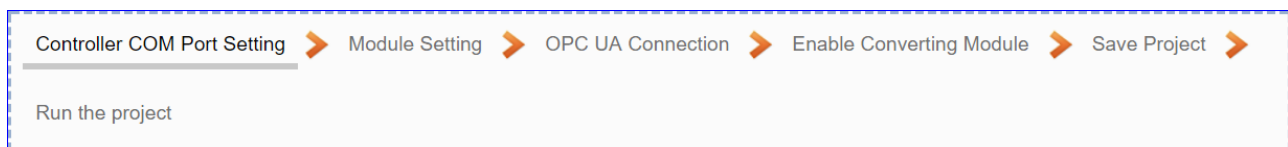

Step 1. Controller COM Port Setting

This page allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.

The user can find the default communication values of our I/O modules from the module CD, manual or [I/O Module website](#).

Controller COM Port Setting > Module Setting > OPC UA Connection > Enable Con

Run the project

System Setting Module Setting IoT Platform Setting Convert Setting Advance

System Setting COM Port Interface Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

COM Port Interface Setting Page

Serial Port	ttyO5
Baud Rate	9600
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Polling Rate(ms)	500

Save

COM Port Interface Setting Page	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485 ; ttyO4: RS-232 ; ttyO5: RS-485
Baud Rate	Choose a baud rate to communicate with the module: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The UA controller and the I/O module need have the same baud rate.
Data Bits	The number of bits used to represent one byte of data: 7 bits or 8 bits. Default: 8 Bits.
Parity	Choose one way for the parity checking. Options: None, Even, and Odd. Default: None.
Stop Bits	Choose the number of stop bit: 1 bit or 2 bits. Default: 1.
Polling Rate(ms)	Set a time interval for the command. Default: 500 ms
Save	Click [Save] button could save the settings of this page.

Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]** of the UI setting.

This page is for setting the communication values with the connected modules. If using ICP DAS module, user just need to select the model number, system will auto add and setup the module. If not, give a module name (Default: Name), click [+] button to add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

The screenshot shows the 'Module Setting' page in the UA Series User Manual. The page has a breadcrumb trail at the top: 'Controller COM Port Setting > Module Setting > OPC UA Connection > Enable Converting Module > Save Project'. Below this is a navigation bar with tabs: 'System Setting', 'Module Setting' (selected), 'I/O Status', 'File Setting', 'IOT Setting', 'Convert Setting', 'Advanced Setting', and 'Logger Setting'. The main content area is titled 'Modbus RTU Module List'. It includes a 'Serial Port' dropdown set to 'ttyO5', a 'Load ICPDAS Module' dropdown set to 'Select The Module', and an 'Update ICPDAS Module List' button. Below this is a table with columns: 'No.', '*Module Name / Nickname', and 'Edit'. The table has one row with '1' in the 'No.' column and 'Name' in the '*Module Name / Nickname' column. To the left of the table is a '+ ' button. Below the table are 'Remove all' and 'Save' buttons. Four numbered callouts are present: 1 points to the 'Module Setting' tab; 2 points to the 'Serial Port' dropdown; 3 points to the 'Load ICPDAS Module' dropdown; 4 points to the '+ ' button.

Add a module (No.: 1, Name: M-7055D) as below, and then click [Edit] button to enter the “Module Content Setting” page.

This screenshot shows the 'Modbus RTU Module List' after adding a module. The 'Serial Port' is still 'ttyO5'. The 'Load ICPDAS Module' dropdown is now set to 'M-7055D'. The table now has two rows: the first row has '2' in the 'No.' column and 'Name' in the '*Module Name / Nickname' column; the second row has '1' in the 'No.' column and 'M-7055D' in the '*Module Name / Nickname' column. The 'Edit' button for the second row is highlighted with a red box and callout 5. Below the table are 'Copy', 'Remove', and 'Remove all' buttons, and a 'Save' button at the bottom.

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page can set up the module and the Modbus address mapping table:

Module Content Setting	
No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500

Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	<input type="button" value="Add"/>

If use ICP DAS module, system will auto setup the Modbus Mapping Table; if not, user needs to check the Modbus address or I/O number from the module user manual.

> **Modbus Mapping Table Setting:**
Set module in the order of Data Model, Start Address and Data Number, then click "Add".

Ex: M-7055D has 8 Data Models of "01 Coil Status (0x)" (Mapping: DO), so select Model "01", Start Add. "0", Number "8", and click "Add".

Coil Status(0x)	
Address	0
Number	8
Type	Bool
<input type="button" value="Edit"/>	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table				Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)		Input Registers(3x)	
Address	0	Address	0				
Number	8	Number	8				
Type	Bool	Type	Bool				
<input type="button" value="Edit"/>		<input type="button" value="Edit"/>					
				<input type="button" value="OK"/>		<input type="button" value="Cancel"/>	

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 3. OPC UA Connection

Click the next step, and enter the **Step 3 [OPC UA Connection]** of the UI setting. This page is for setting the IoT platform and the OPC UA connection, e.g. the server name, port, login identity information, etc.

We select the “Modbus RTU / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA Connection > Local Server]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform.

OPC UA Connection > Local Server Setting –Server	
Server Name	Display the active OPC UA Server name. Not editable. System values: ICPDAS_OPC_UA_Server
Port	The communication port number of the OPC UA Server. System Default: 48010.
Save	Click to save the settings of this item.
OPC UA Connection > Local Server Setting –User Identity Tokens	
Anonymous Login	Check to enable the anonymous login of clients. Default: check.
User Password Login	Check to enable the user password login of clients. Default: uncheck.
Certificate Login	Check to enable the certificate login of clients. Default: uncheck.
Save	Click to save the settings of this item.

Step 4. Enable Converting Module

Click the next step, and enter the **Step 4 [Enable Converting Module]** UI setting
This step is for enabling the Modbus RTU (or ASCII) / OPC UA conversion.

We select the “Modbus RTU (or ASCII) / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA > Modbus RTU/ASCII (Master)]** page of Conversion setting. The “Step Box” will prevent the user from selecting the wrong platform.



In this step, user just need check the enabled box of the module. If user want to enable some I/O only, please click “Edit” to check the I/O one by one.

Convert Setting > OPC UA > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
< 1 / 1 >	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 5. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.


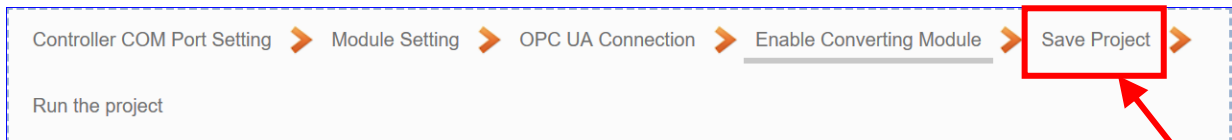


Step 6. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

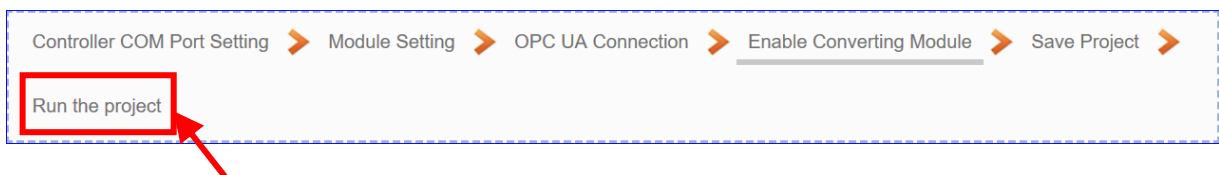

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.

4.1.2. MQTT / OPC UA Conversion

MQTT / OPC UA Conversion include the conversion of OPC UA and MQTT protocols. With the **OPC UA Service** function, the OPC UA Server can read and write the MQTT device that connected to the controller.


MQTT / OPC UA Function Diagram:

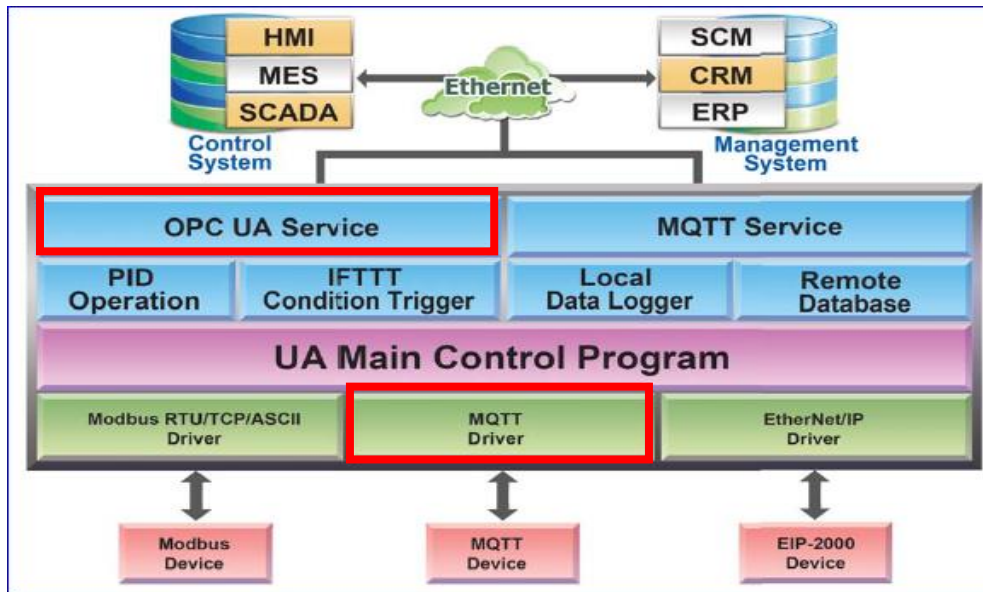

Application Solution:




● Convert Setting: MQTT and OPC UA

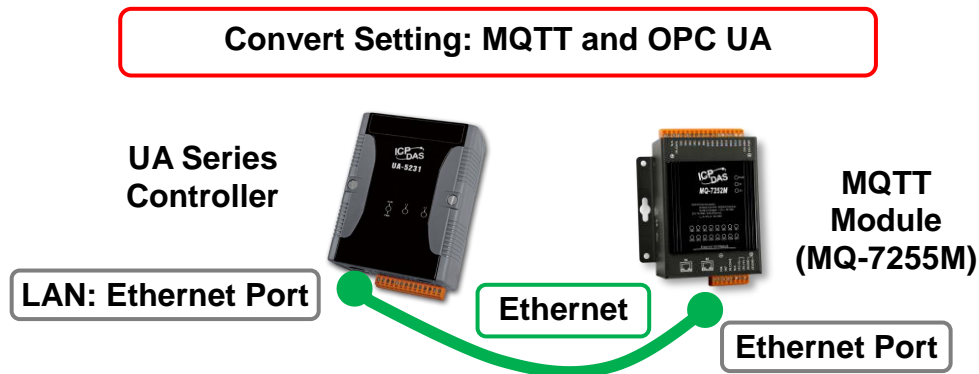


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the MQTT module (via Ethernet, as MQ-7255M in the picture) and through the OPC UA server to read/write the I/O data of the MQTT module, user can choose the item **[MQTT / OPC UA]** of the “Module Communication Conversion” in the Function Wizard.

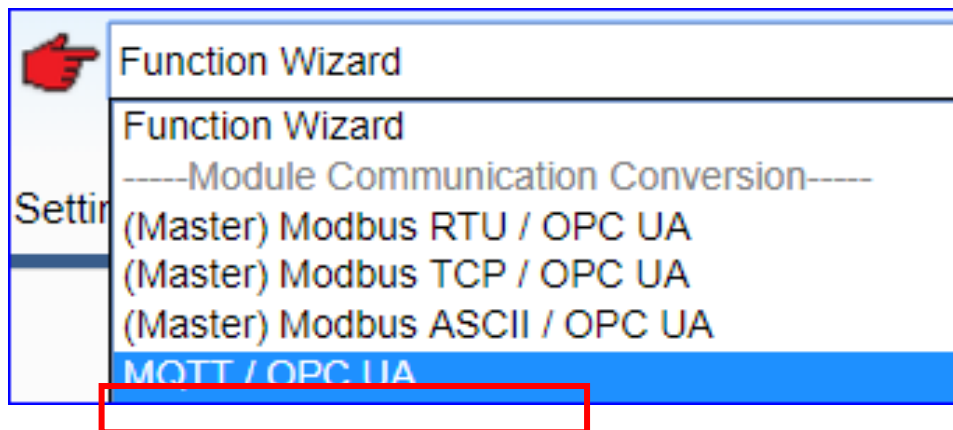

[Step Box]:

The Step Box of the **[MQTT / OPC UA]** has 6 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.

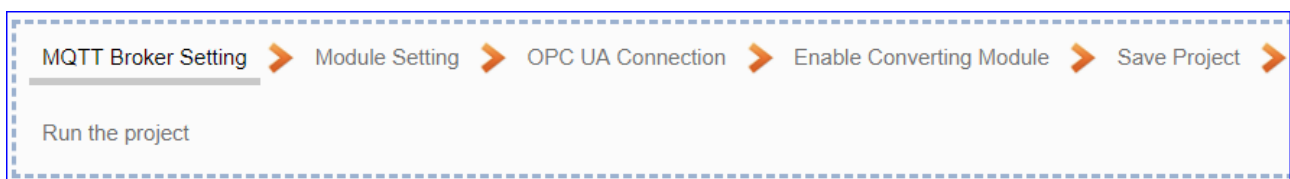

Step 1. MQTT Broker Setting

The **[MQTT Broker Setting]** is for setting the IoT platform and the MQTT Broker connection, e.g. the local or remote broker, port, login information, etc.

We select the “MQTT / OPC UA” conversion, so this step will auto enter the **[IoT Platform Setting > MQTT Connection > Local Broker]** page. The “Step Box” will prevent the user from selecting the wrong platform. User can choose the **local or remote** broker for the MQTT connection. The example uses local Broker.

The screenshot shows the 'MQTT Broker Setting' page. At the top, there's a breadcrumb trail: 'MQTT Broker Setting > Module Setting > OPC UA Connection > Enable Converting Mo'. Below this is a 'Run the project' button. The main navigation bar includes 'System Setting', 'Module Setting', 'IoT Platform Setting' (which is active), 'Convert Setting', and 'Advanced Se'. Under 'IoT Platform Setting', there are two sub-tabs: 'Local Broker' (selected) and 'Remote Broker'. On the left, under 'MQTT Connection', there are four options: 'Local Broker' (highlighted with a red box), 'Remote Broker', 'MQTT Group Connection', and 'Microsoft Azure Platform'. The main area is titled 'Local Broker Setting' and contains a 'Port' field with the value '1883' and an 'Anonymous Login' checkbox that is checked and labeled 'Enabled'. A 'Save' button is at the bottom right.

MQTT Connection > Local Broker Setting

Port	The COM port of the Local MQTT Broker. System default: 1883
Anonymous Login	Check to allow anonymous login. Default: Check.
Save	Click to save the setting of this page.

If users apply a remote Broker, the screen will as following:

The screenshot shows the 'MQTT Broker Setting' page with the 'Remote Broker' sub-tab selected. On the left, under 'MQTT Connection', the 'Remote Broker' option is highlighted with a red box. The main area is titled 'Remote Broker List' and contains a table with columns: 'Broker Name', 'IP / Domain', 'Port', and 'Edit'. There is a '+' button to add a new broker. Below the table, there is a 'Remove' button and a pagination control showing '< 1 / 1 >'. The table currently has one entry with 'broker' as the name, '192.168.101.2' as the IP, and '1883' as the port.

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
	Click to add a new remote Broker.
Save	Click to save the settings of this page.

After creating a new Remote Broker (as below):

<input type="checkbox"/>	Broker Name	IP / Domain	Port	Edit
<input type="checkbox"/>	Name1			
<input type="checkbox"/>	Broker1	127.0.0.1	1883	Edit

Remove < 1 / 1 > Save

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Edit / Remove	Click [Edit] can set the Broker. Click the left box and [remove] can delete the Broker.
Save	Click to save the settings of this item.

Broker Name	Broker1
IP / Domain	127.0.0.1
Port	1883
Keep Alive Time(second)	60
SSL/TLS	<input type="checkbox"/> Enabled
Anonymous Login	<input checked="" type="checkbox"/> Enabled

OK Cancel


MQTT Connection > Remote Broker > Broker Content Settings

Broker Name	The name of the remote MQTT Broker. (Editable)
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Keep Alive Time	The keep alive time. Default: 60 (second)
SSL/TLS	Check to enable the supporting of SSL/TLS security communication. Default: uncheck.
Anonymous Login	Check to allow anonymous login. Default: Check.
OK	Click to save the settings and exit.


Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]**. This page is for setting the communication values of the connected modules.

The Ethernet port is LAN for connecting with the TCP module, and each module can give a name (Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

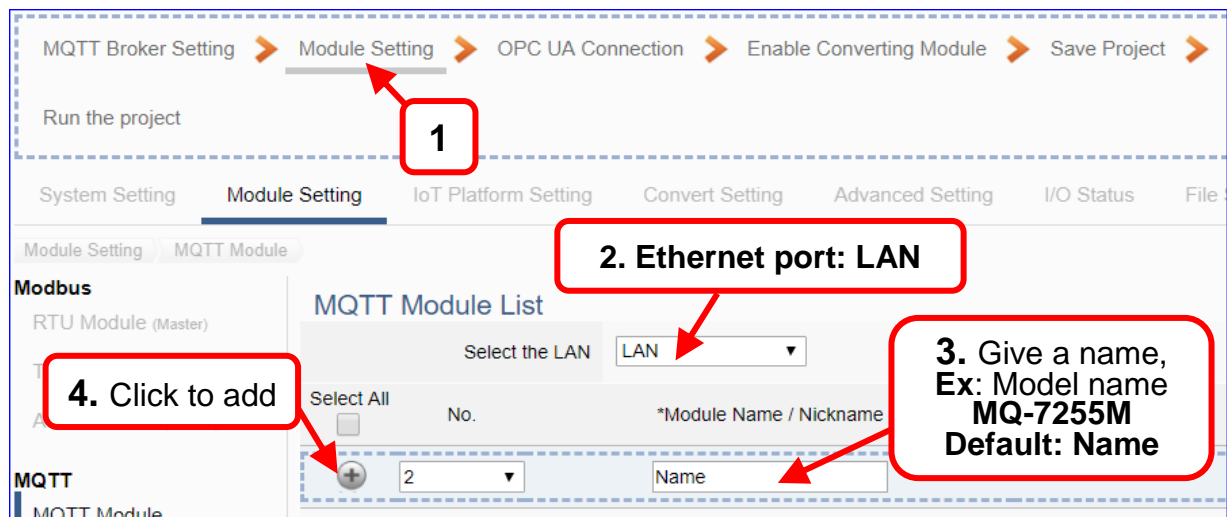

Add a module (No.: 1, Name: MQ-7255M) as below, and then click [Edit] button to enter the “Module Content Setting” page.

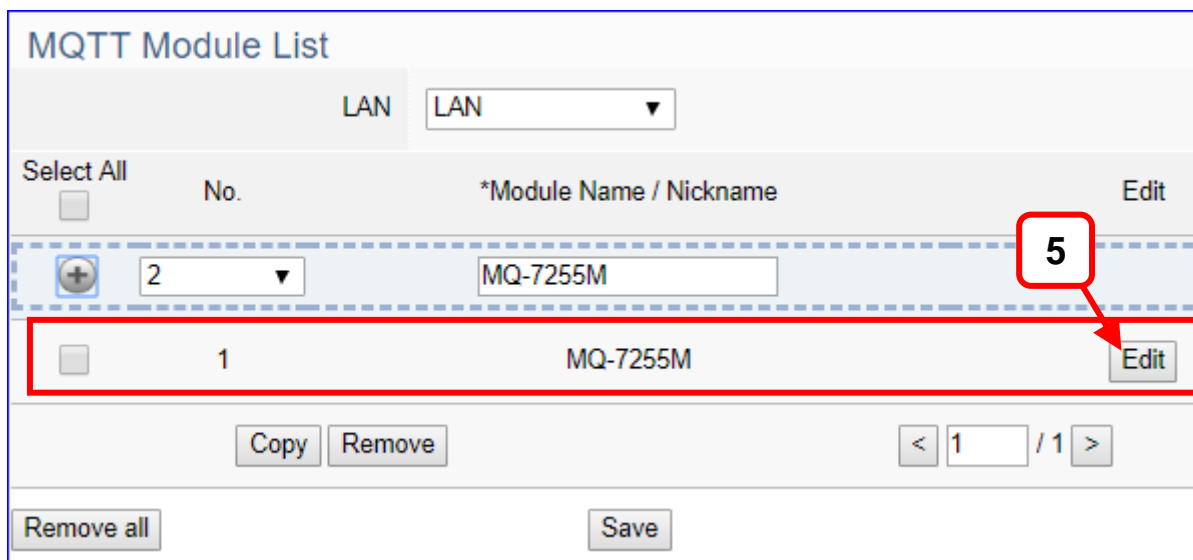

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[MQTT Client Setting] page:

MQTT Client Setting

No.	1
Module Name	MQ-7255M
MQTT Connection	<input checked="" type="radio"/> Broker (Local)

MQTT Variable Setting

Attribute	Read
Data Type	Bool
Data Number	1
Create Tables	<input type="button" value="Add"/>
Details	<input type="button" value="Show"/> <input type="button" value="Hide"/>

> MQTT Variable Setting:
 Select attribute, data type and number of the module I/O, and click "Add".
Ex: MQ-7255M, 8xDI, 8xDO
 [DI] Attribute: Read, Type: Bool, Number: 8, click "Add"
 [DO] Attribute: Read/Write, Type: Bool, Number: 8, click "Add"

User can check the I/O data of module via user manual to set up the variable table.

MQTT Client Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
MQTT Connection	The used Broker: Local Broker.
MQTT Variable Setting	
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the MQTT variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String.
Data Number	The number for the I/O variables of the module. Default: 1.
Create Tables	Click [Add] button, it will add a variable list in the MQTT Variable Table.
Details Show / Hide	Click [Show] to display all fields, click [Hide] to hide some fields. The hide fields: Subscribe QoS, Publish QoS, Retain.

Please create the variable table in the page. Select "Attribute", "Data Type" and "Data Number", and click "Add" button to create a variable table.

Note: The different "Attribute" variables need to create separately.

[MQTT Variable Table] :

Details Show Hide

MQTT Variable Table

Remove Tables Remove

	Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Description	Retain
<input type="checkbox"/>	Tag1	Read	Bool	/MQTT No.1 MQ-7255M/Tag1/Subscribe	2		2		<input type="checkbox"/>
<input type="checkbox"/>	Tag3	Read / Write	Bool	/MQTT No.1 MQ-7255M/Tag3/Subscribe	2	/MQTT No.1 MQ-7255M/Tag3/Publish	2		<input type="checkbox"/>

OK Cancel

MQTT Variable Table	
Details Show / Hide	Click [Show] to display all fields, click [Hide] to hide some fields. The hide fields: Subscribe QoS, Publish QoS and Retain.
Remove Table / Remove	Check the box in the left of the variable is to select that variable list, and click the "remove" on the box can delete that variable list. Click the "Remove" of the "Remove Table" will delete all lists.
Name	The name of the MQTT variable. Default: Tag#
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String
Subscribe Topic	The topic of receiving/subscribing data message. It can copy the Publish Topic of linked module, e.g. MQ-7255M in this example.
Subscribe QoS	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message. It can copy the Subscribe Topic of linked module, e.g. MQ-7255M in this example.
Publish QoS	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Description	For users set up the description for the variables.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.

MQTT Variable Table

OK / Cancel	Click [OK] to save and exit the page settings. Click [Cancel] to exit without saving.
-------------	--

The Subscribe / Publish Topic items must fill the related Topics of the connected MQTT module, e.g. UA connects with MQ-7255M in this case.

User can find the Topics from the MQTT setting of MQ-7200 Web page, and copy them to the UA setting:

Copy the Subscriptions I/O Topic of MQ-7200 to the I/O Publish Topic of UA, and copy the Publications I/O Topic of MQ-7200 to the I/O Subscribe Topic of UA.

ICP DAS
http://www.icpdas.com

Subscriptions

I/O	No.	Topic
Digital Output	0	MQ7255M_656660/SetValue/DO0
Digital Output	1	MQ7255M_656660/SetValue/DO1
Digital Output	2	MQ7255M_656660/SetValue/DO2
Digital Output	3	MQ7255M_656660/SetValue/DO3
Digital Output	4	MQ7255M_656660/SetValue/DO4
Digital Output	5	MQ7255M_656660/SetValue/DO5
Digital Output	6	MQ7255M_656660/SetValue/DO6
Digital Output	7	MQ7255M_656660/SetValue/DO7

Publications

I/O	No.	Topic
Digital Output	0	MQ7255M_656660/GetValue/DO0
Digital Output	1	MQ7255M_656660/GetValue/DO1
Digital Output	2	MQ7255M_656660/GetValue/DO2
Digital Output	3	MQ7255M_656660/GetValue/DO3
Digital Output	4	MQ7255M_656660/GetValue/DO4
Digital Output	5	MQ7255M_656660/GetValue/DO5
Digital Output	6	MQ7255M_656660/GetValue/DO6
Digital Output	7	MQ7255M_656660/GetValue/DO7
Digital Input	0	MQ7255M_656660/GetValue/DI0
Digital Input	1	MQ7255M_656660/GetValue/DI1
Digital Input	2	MQ7255M_656660/GetValue/DI2
Digital Input	3	MQ7255M_656660/GetValue/DI3

Step 3. OPC UA Connection

Click the next step, and enter the **Step 3 [OPC UA Connection]** of the UI setting. This page is for setting the IoT platform and the OPC UA connection, e.g. the server name, port, login identity information, etc.

We select the “MQTT / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA Connection > Local Server]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform.

OPC UA Connection > Local Server Setting –Server

Server Name	Display the active OPC UA Server name. Not editable. System value: ICPDAS_OPC_UA_Server
Port	The communication port number of the OPC UA Server. System Default: 48010.
Save	Click to save the settings of this item.

OPC UA Connection > Local Server Setting –User Identity Tokens

Anonymous Login	Check to enable the anonymous login of clients. Default: check.
User Password Login	Check to enable the user password login of clients. Default: uncheck.
Certificate Login	Check to enable the certificate login of clients. Default: uncheck.
Save	Click to save the settings of this item.


Step 4. Enable Converting Module

Click the next step, and enter the **Step 4 [Enable Converting Module]** UI setting

This step is for enabling the MQTT / OPC UA conversion.

We select the “MQTT / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA > MQTT]** page of Conversion setting. The “Step Box” will prevent the user from selecting the wrong platform.



This step: Please check the box of the module to enable the converting.

Convert Setting > OPC UA > MQTT - MQTT Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 5. Save Project

The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.


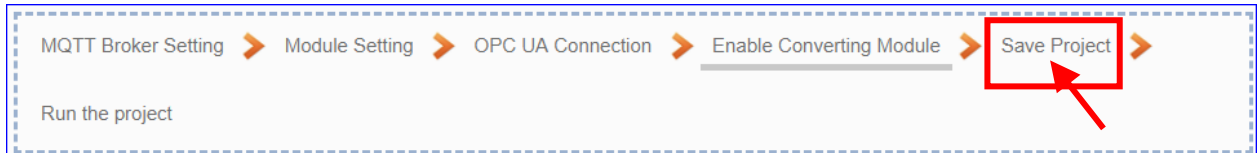


Step 6. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].



The Step Box will show the words "**Please wait**" (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words "**Please wait**" disappears, the new words "**Success**" appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.

4.1.3. EIP / OPC UA Conversion


EIP / OPC UA Conversion include the conversion of OPC UA and **EtherNet/IP** protocols. With the **OPC UA Service** function, the OPC UA Server can read and write the EIP-2000 device that connected to the controller.

(EtherNet/IP) EIP / OPC UA Function Diagram:

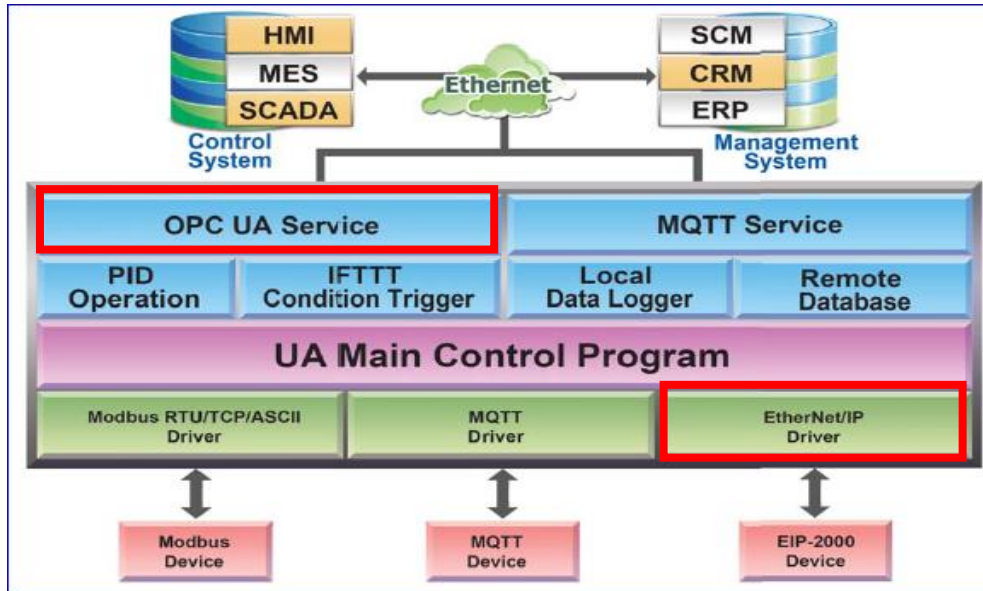


Application Solution:

(EtherNet/IP ↔ OPC UA)

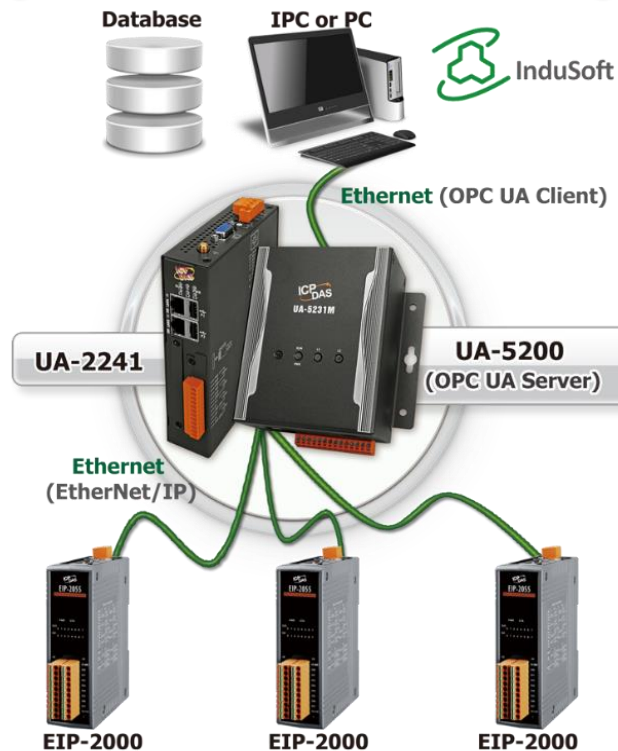


● Convert Setting: EIP and OPC UA

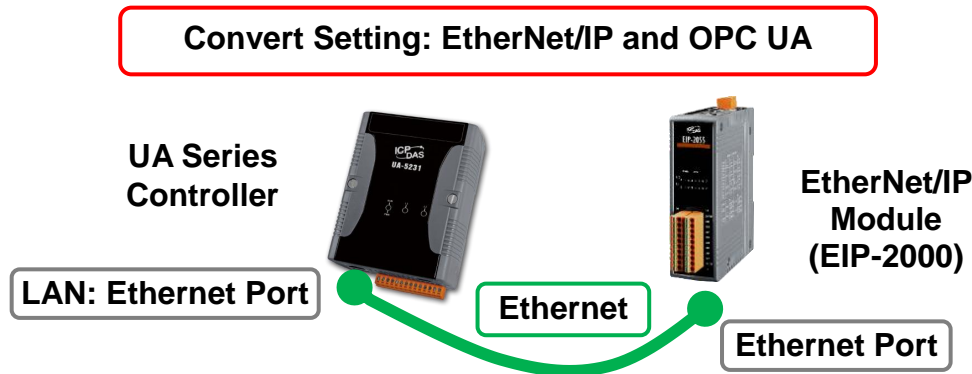

Note: The hardware/network connection methods please see the [Chapter 2](#) .

When UA series controller connects the EIP-2000 module (via Ethernet, as EIP-2060 in the picture) and through the OPC UA server to read/write the I/O data of the EIP-2000 module, user can choose the item **[(EtherNet/IP) EIP / OPC UA]** of the “Module Communication Conversion” in the Function Wizard.

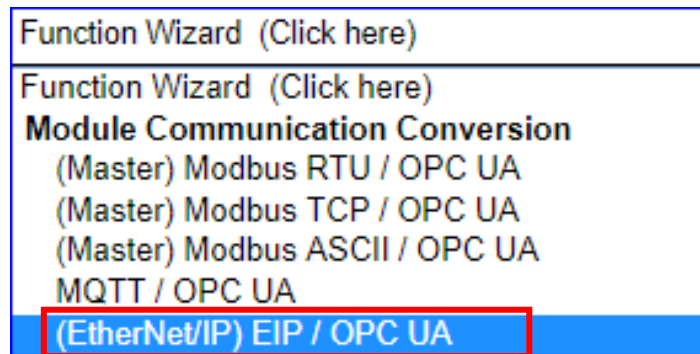

[Step Box]:


The Step Box of the **[(EtherNet/IP) EIP / OPC UA]** has 5 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.




Step 1. Module Setting

It auto enters the first step of **Step 1 [Module Setting]**. This page is for setting the communication values of the connected modules.

The Ethernet port is LAN for connecting with the EtherNet/IP module. Select one EIP-2000 series model and click [+] button could add a new module.

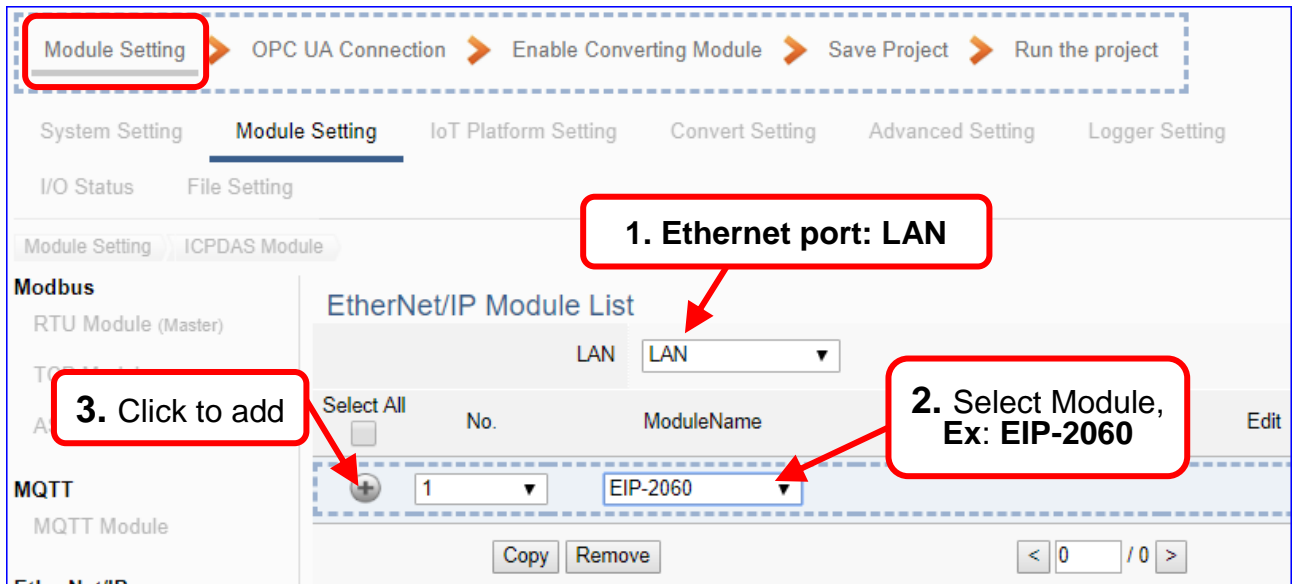

Add a module (No.: 1, Name: EIP-2060) as below. Then click [Edit] button to enter the “Module Content Setting” page.

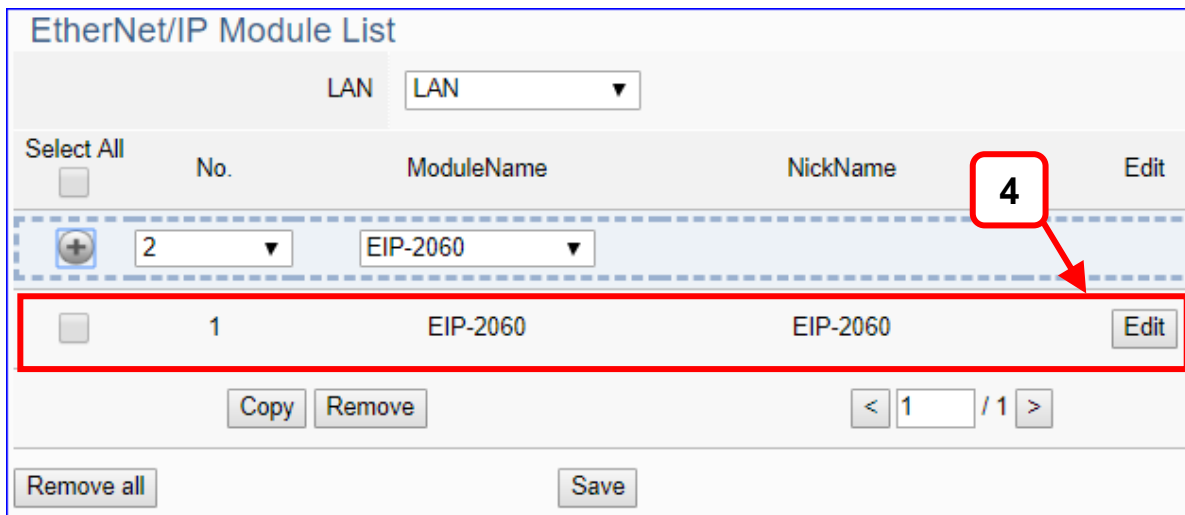

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[Module Content Setting] page:

Module Content Setting				
No.	<input type="text" value="1"/>			
Module Name	<input type="text" value="EIP-2060"/>			
NickName	<input type="text" value="EIP-2060"/>			
IP	<input type="text" value="192"/>	<input type="text" value="168"/>	<input type="text" value="13"/>	<input type="text" value="5"/>
ChannelNumber	<input type="text" value="12-ch(6DI+6DO)"/>			

User enters the real connected IP address.

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The selected model number. (Not editable here)
NickName	User can give a nick name, default: selected model number
IP	Enter the IP address of the connected EIP module. This example: IP address of the EIP-2060 is 192.168.13.5
ChannelNumber	Select the number of the I/O channels.

The system will auto-display the selected I/O table by the order of Digital Input / Digital Output / Analogy Input / Analogy Output. This example: EIP-2060 have 6 DI and 6 DO.

Digital Input				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="DI0"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>
1	<input type="text" value="DI1"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>
2	<input type="text" value="DI2"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>
3	<input type="text" value="DI3"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>
4	<input type="text" value="DI4"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>
5	<input type="text" value="DI5"/>	<input type="text" value="Read"/>	Bool	<input type="text"/>

Digital Output				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="DO0"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
1	<input type="text" value="DO1"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
2	<input type="text" value="DO2"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
3	<input type="text" value="DO3"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
4	<input type="text" value="DO4"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
5	<input type="text" value="DO5"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>

Analogy Input				
Channel	Name	Attributes	Data Type	Description

Analogy Output				
Channel	Name	Attributes	Data Type	Description

Digital Input / Digital Output / Analogy Input / Analogy Output	
Channel	Channel number will auto-display according to the model. (Not editable) Default: Number from 0.
Name	User can define the name. Default: DI#, DO#, AI#, AO# Available: number, English character, underline "_", dash line "-", cannot be a space, slash "/", Chinese character, and other symbols.
Attributes	Display data attribute of the variable. (Not editable) Include Read, Read/Write...
Data Type	Display data type of the variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String
Description	For users set up the description for the channel.
OK / Cannel	Click [OK] to save and exit the page settings. Click [Cancer] to exit without saving.

Step 2. OPC UA Connection

Click the next step, and enter the **Step 2 [OPC UA Connection]** of the UI setting. This page is for setting the IoT platform and the OPC UA connection, e.g. the server name, port, login identity information, etc.

We select the “EIP / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA Connection > Local Server]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform.

OPC UA Connection > Local Server Setting –Server	
Server Name	Display the active OPC UA Server name. Not editable. System value: ICPDAS_OPC_UA_Server
Port	The communication port number of the OPC UA Server. System Default: 48010.
Save	Click to save the settings of this item.
OPC UA Connection > Local Server Setting –User Identity Tokens	
Anonymous Login	Check to enable the anonymous login of clients. Default: check.
User Password Login	Check to enable the user password login of clients. Default: uncheck.
Certificate Login	Check to enable the certificate login of clients. Default: uncheck.
Save	Click to save the settings of this item.

Step 3. Enable Converting Module

Click the next step, and enter the **Step 3 [Enable Converting Module]** UI setting
This step is for enabling the EIP / OPC UA conversion.

We select the “EIP / OPC UA” conversion at the beginning, so this step will auto enter the **[OPC UA > EtherNet/IP]** page of Conversion setting. The “Step Box” will prevent the user from selecting the wrong platform.


Check the box of the module to enable all I/O. If want to enable some I/O, click “Edit” to select I/O one by one.

Convert Setting > OPC UA > EtherNet/IP - EIP Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
< 1 / 1 >	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

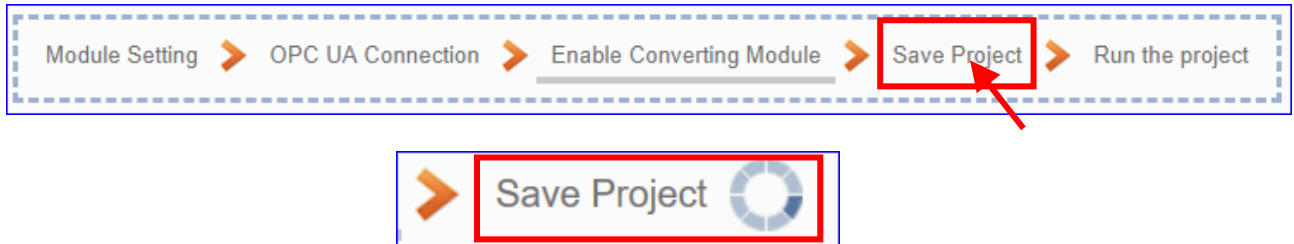

Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

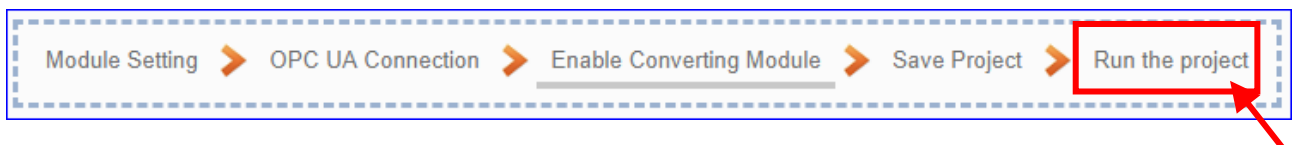

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.


4.1.4. Modbus / MQTT Conversion

Modbus / MQTT Conversion include the conversion of MQTT and Modbus RTU / TCP / ASCII three protocols. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus device that connected to the controller.

Modbus / MQTT Function Diagram:

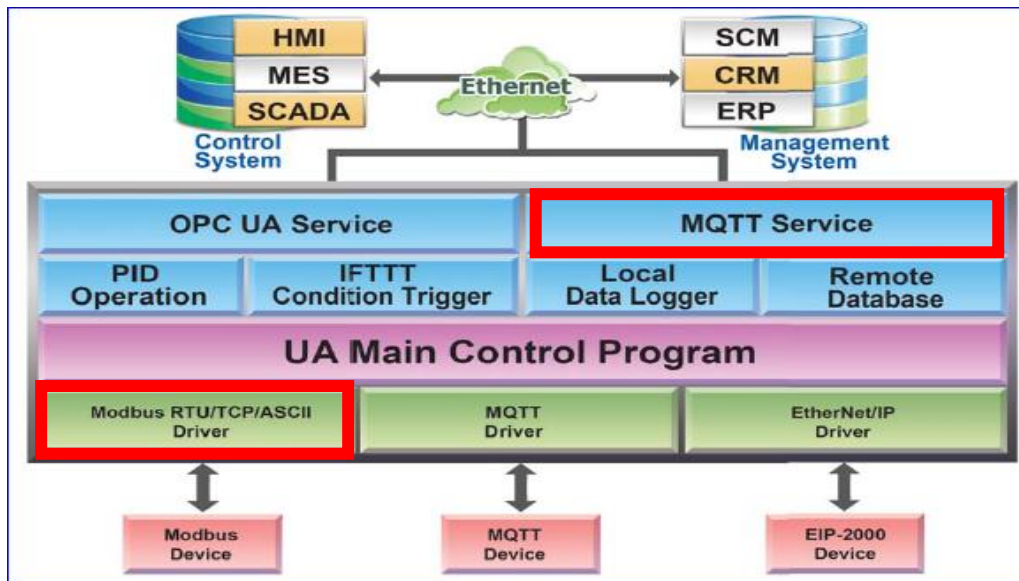


Application Solution:

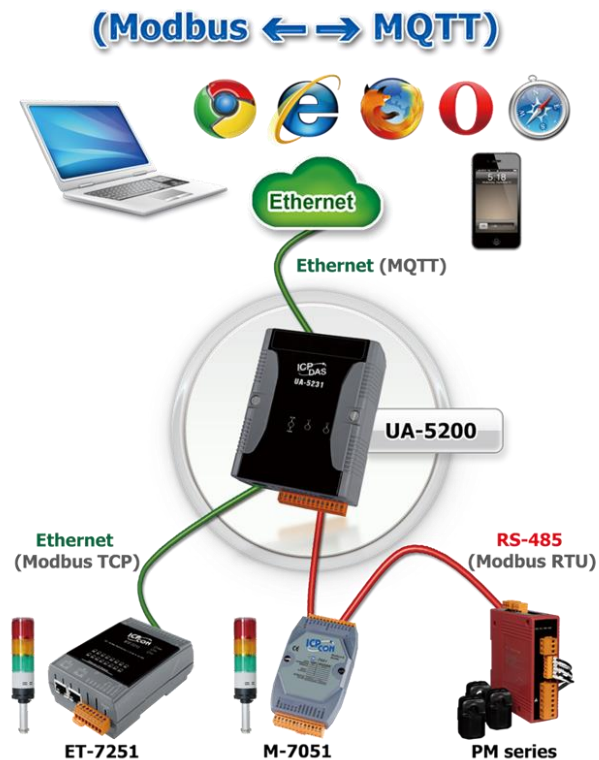


This section introduces the Modbus / MQTT conversion through the conversion of Modbus TCP and MQTT protocol.

- **Convert Setting: Modbus TCP and MQTT**

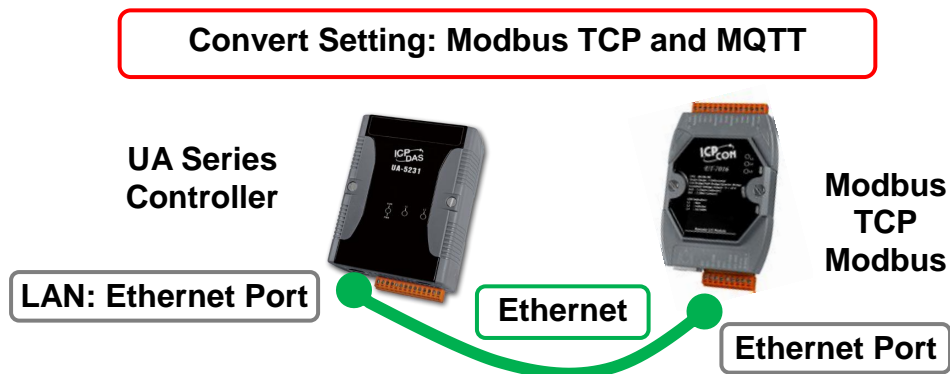


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the Modbus TCP (via Ethernet, as the picture) and read/write the Modbus I/O via MQTT Broker, user can choose the item [**Modbus TCP / MQTT**] of the “Module Communication Conversion” in the Function Wizard.

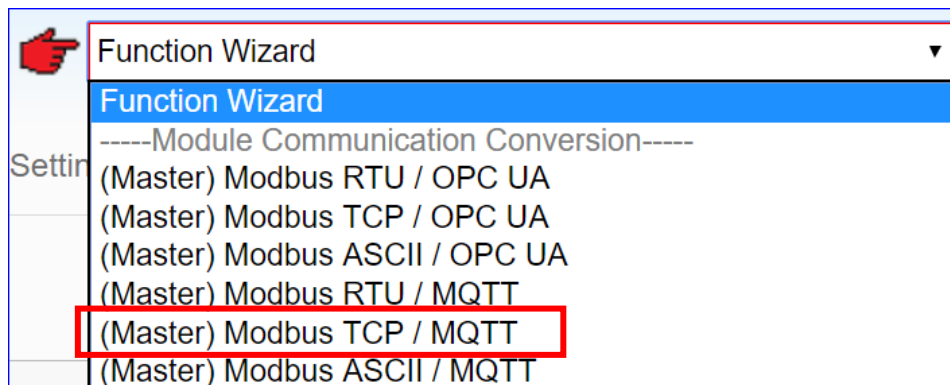

[Step Box]:

The Step Box of the [**Modbus TCP / MQTT**] has 5 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.



Step 1. Module Setting

This page is for setting the communication values of the connected modules.

The Ethernet port is LAN for connecting with the TCP module. If using ICP DAS module, select the module and system will auto load the module data. If not, give a module name (Default: Name), click [+] button to add a new module.

The screenshot shows the 'Module Setting' page with the following components and annotations:

- Navigation Bar:** Module Setting (selected), MQTT Broker Setting, Enable Converting Module, Save Project, Run the project.
- System Setting:** System Setting, Module Setting (selected), IoT Platform Setting, Convert Setting, Advanced Setting, Logger Setting.
- I/O Status:** I/O Status, File Setting.
- Modbus Section:**
 - Modbus TCP Module List:**
 - 1. Ethernet port: LAN:** Points to the 'LAN' dropdown menu.
 - 2. Select an ICP DAS module or give a name to add a module:** Points to the 'Select The Module' dropdown menu.
 - 3. Click to add:** Points to the '+' button in the 'Add New Module' row.
 - Load ICPDAS Module:** Select The Module (dropdown), Update ICPDAS Module List (button).
- MQTT Section:** MQTT Module.
- Table:**

Select All	No.	*Module Name / Nickname	Edit
<input type="checkbox"/>	2	Name	
<input type="checkbox"/>	1	DL-302	<input type="button" value="Edit"/>

Add a module (e.g. No.: 1, Name: DL-302) as below, and then click [Edit] button to enter the “Module Content Setting” page.

The detailed view of the 'Modbus TCP Module List' table shows the following structure:

Select All	No.	*Module Name / Nickname	Edit
<input type="checkbox"/>	2	Name	
<input type="checkbox"/>	1	DL-302	<input type="button" value="Edit"/>

Annotations in the image:

- 4:** Points to the 'Edit' button for the module with No. 1.

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page to set up IP and the Modbus address mapping table.

Module Content Setting	
No.	1
Module Name	DL-302
IP	192 . 168 . 81 . 251
Port	502
Slave ID	1
Timeout(ms)	500
Polling Rate(ms)	500
Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	Add

This Example: DL-302

[IP] 192.168.81.251 (by user case)

[Modbus mapping Table Setting]

Data Model: 04 Input Registers(3x)

Start Address: 0

Data Number: 3

Type: 16-bit Short

→ Click [Add]

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
IP	Give the IP address of the connected module. Default: 0.0.0.0
Port	The port number for Modbus TCP. Default: 502
Slave ID	Set the Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Polling Rate	Set a time interval for the command. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI) <div> 01 Coil Status(0x) 02 Input Status(1x) 03 Holding Registers(4x) 04 Input Registers(3x) </div>
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table		Address Setting	Nickname Setting
Coil Status(0x)	Input Status(1x)	Holding Registers(4x)	Input Registers(3x)
			<div>Address 0</div> <div>Number 3</div> <div>Type Short</div> <div>Edit</div>
<div>OK</div> <div>Cancel</div>			

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting		
01 Coil Status(0x)					
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>		
Address	Variable name	Data Type	Description		
02 Input Status(1x)					
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>		
Address	Variable name	Data Type	Description		
03 Holding Registers(4x)					
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>		
Address	Variable name	Data Type	Swap	Description	
04 Input Registers(3x)					
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>		
Address	Variable name	Data Type	Swap	Description	
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Short	<input type="checkbox"/>	<input type="text"/>	
2	<input type="text" value="Tag2"/>	Short	<input type="checkbox"/>	<input type="text"/>	
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>		

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 2. MQTT Broker Setting

Click the next step, and enter the **Step 2 [MQTT Broker Setting]** of the UI setting.

This page is for setting the IoT platform and the MQTT Broker connection, e.g. the local or remote broker, port, login information, etc.

We select the “Modbus RTU / MQTT” conversion at the beginning, so this step will auto enter the **[MQTT Connection > Local Broker]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform. User can choose the local or remote broker for the MQTT connection.

MQTT Connection > Local Broker Setting

Port	The COM port of the Local MQTT Broker. System default: 1883
Anonymous Login	Check to allow anonymous login. Default: Check.
Save	Click to save the setting of this page.

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
	Click to add a new remote Broker.
Save	Click to save the settings of this page.

After creating a new Remote Broker (as below) :

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Edit / Remove	Click [Edit] can set the Broker. Click the left box and [remove] can delete the Broker.
Save	Click to save the settings of this item.

MQTT Connection > Remote Broker > Broker Content Settings

Broker Name	The name of the remote MQTT Broker. (Editable)
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Keep Alive Time	The keep alive time. Default: 60 (second)
SSL/TLS	Check to enable the supporting of SSL/TLS security communication. Default: uncheck.
Anonymous Login	Check to allow anonymous login. Default: Check.
OK	Click to save the settings and exit.

Step 3. Enable Converting Module

Click the next step, and enter the **Step 3 [Enable Converting Module]** UI setting
This step is for enabling the module for the Modbus TCP / MQTT conversion.

We select the “Modbus TCP / MQTT” conversion at the beginning, so this step will auto enter the **[MQTT > Modbus TCP (Master)]** page of Conversion setting. The “Step Box” will prevent the user from selecting the wrong platform.

The screenshot shows the 'Convert Setting' interface. At the top, a breadcrumb trail indicates the path: Module Setting > MQTT Broker Setting > Enable Converting Module > Save Project > Run the project. Below this, a navigation bar includes 'System Setting', 'Module Setting', 'IoT Platform Setting', 'Convert Setting' (highlighted with a red box), 'Advanced Setting', and 'Logger Setting'. The main content area is titled 'Modbus TCP Module List' and contains a table with columns: No., *Module Name / Nickname, Edit, and All Enabled. The table lists one module, 'DL-302', with its 'All Enabled' checkbox checked (highlighted with a red box). A sidebar on the left shows the navigation menu with 'MQTT' selected (highlighted with a red box) and 'Modbus TCP (Master)' chosen under it. At the bottom of the table, there is a 'Save' button and a pagination control showing '< 1 / 1 >'.

Convert Setting > MQTT > Modbus TCP (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to set up the Topic, QoS, Publish, Subscribe ...
< 1 / 1 >	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Click [Edit] button could enter the “MQTT Client Setting” page:

MQTT Client Setting	
No.	1
Module Name	DL-302
Scan Rate(ms)	1000
Dead Band	0
Will Topic	
Will	
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Name (Remote)

Convert Setting > MQTT > Modbus TCP (Master) – MQTT Client Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)
Dead Bend	Give a dead bend value for updating a float signal. Default: 0
Will Topic	Enter the title of a disconnect notice. Default: Null.
Will	Enter a disconnect notice. Default: Null.
MQTT Connection	Check the Broker want to use Local Broker or Remote Broker.


Publish & Subscribe									
Details <input type="button" value="Show"/> <input type="button" value="Hide"/>									
Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Retain	Enabled	
Tag0	Read ▼	Short		2 ▼	/MTCP_No.1_DL-302/Input_Registers/Tag0/Publish	2 ▼	<input type="checkbox"/>	<input checked="" type="checkbox"/>	
Tag1	Read ▼	Short		2 ▼	/MTCP_No.1_DL-302/Input_Registers/Tag1/Publish	2 ▼	<input type="checkbox"/>	<input checked="" type="checkbox"/>	
Tag2	Read ▼	Short		2 ▼	/MTCP_No.1_DL-302/Input_Registers/Tag2/Publish	2 ▼	<input type="checkbox"/>	<input checked="" type="checkbox"/>	

Convert Setting > MQTT > Modbus TCP (Master) – Publish & Subscribe	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Name	The variable name of the mapping address. (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe Qos	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message.
Publish Qos	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

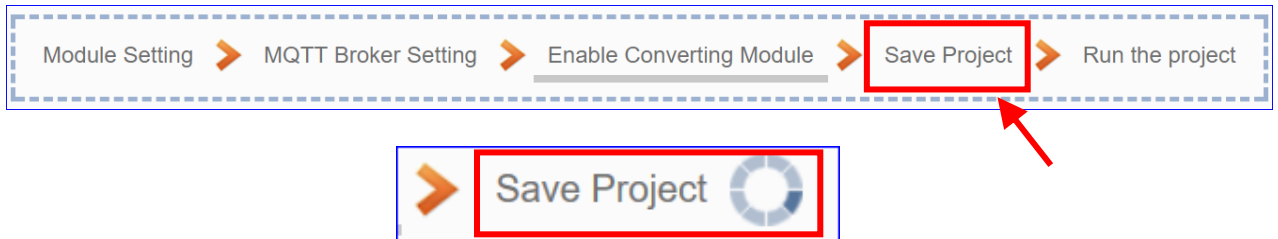


Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

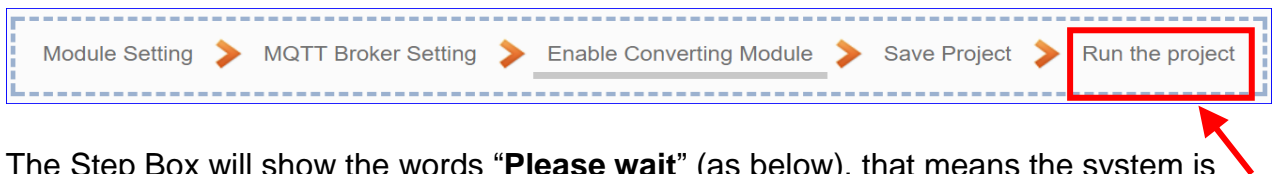

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.




And then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.

4.1.5. EIP / MQTT Conversion

EIP / MQTT Conversion include the conversion of **MQTT** and **EtherNet/IP** protocol. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the **EIP-2000** module that connected to the controller.


Modbus / MQTT Function Diagram:

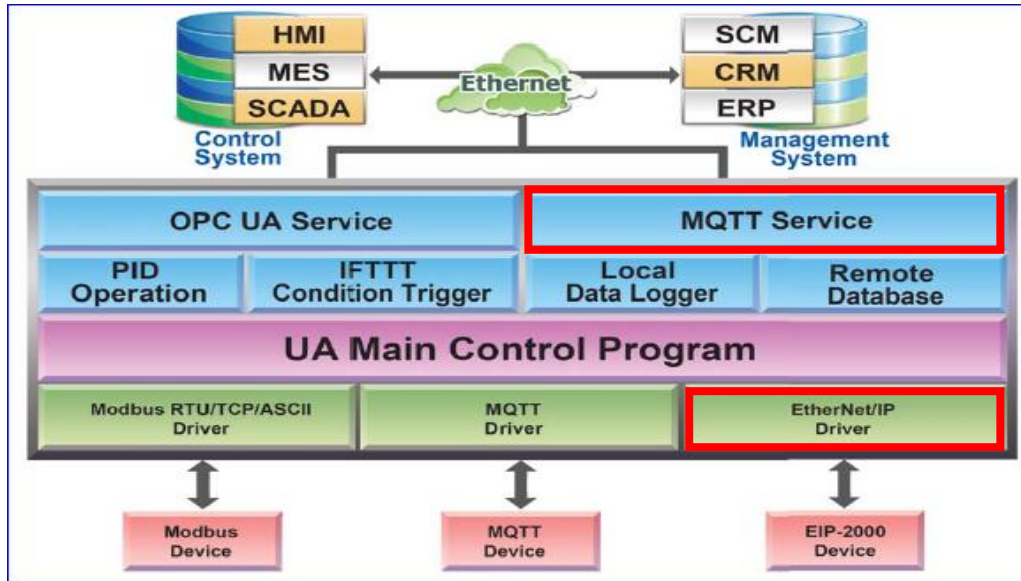

Application Solution:




- **Convert Setting: EtherNet/IP and MQTT**

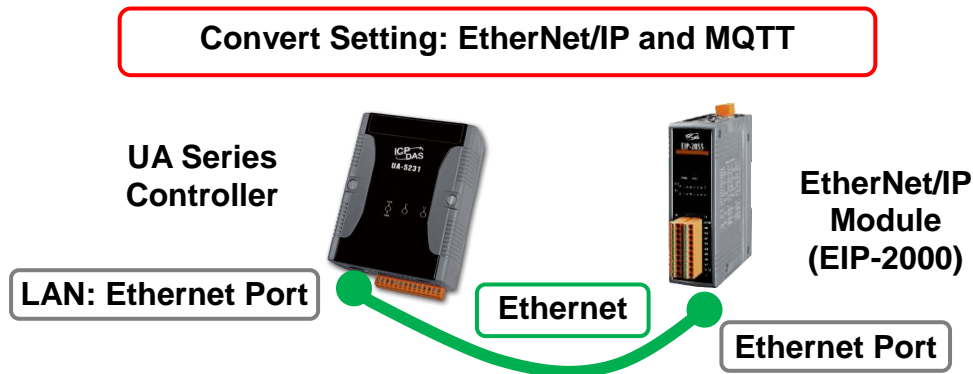

Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the EIP-2000 (via Ethernet, as the picture) and read/write the EIP-2000 I/O via MQTT Broker, user can choose the item **[(EtherNet/IP) EIP / MQTT]** of the “Module Communication Conversion” in the Function Wizard.

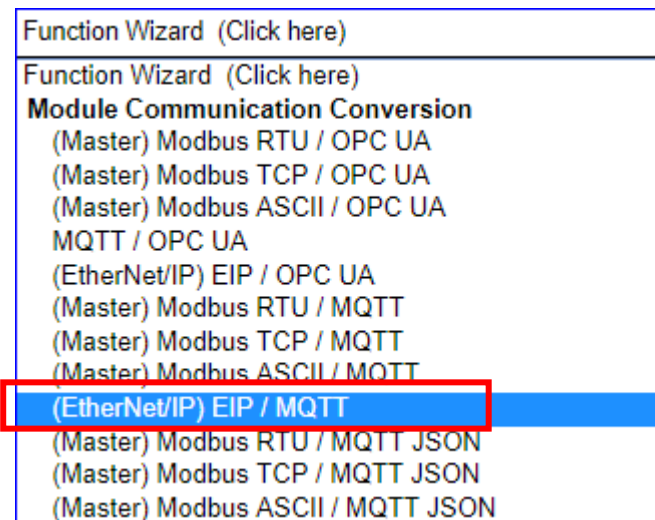

[Step Box]:


The Step Box of the **[(EtherNet/IP) EIP / MQTT]** has 5 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.




Step 1. Module Setting

This page is for setting the communication values of the connected modules.

The Ethernet port is LAN for connecting with the EtherNet/IP module EIP-2000 Series by ICP DAS, and select the connected module (This example: EIP-2060). Click [+] button could add a new module, and then click [Edit] button to configure the module content and I/O.

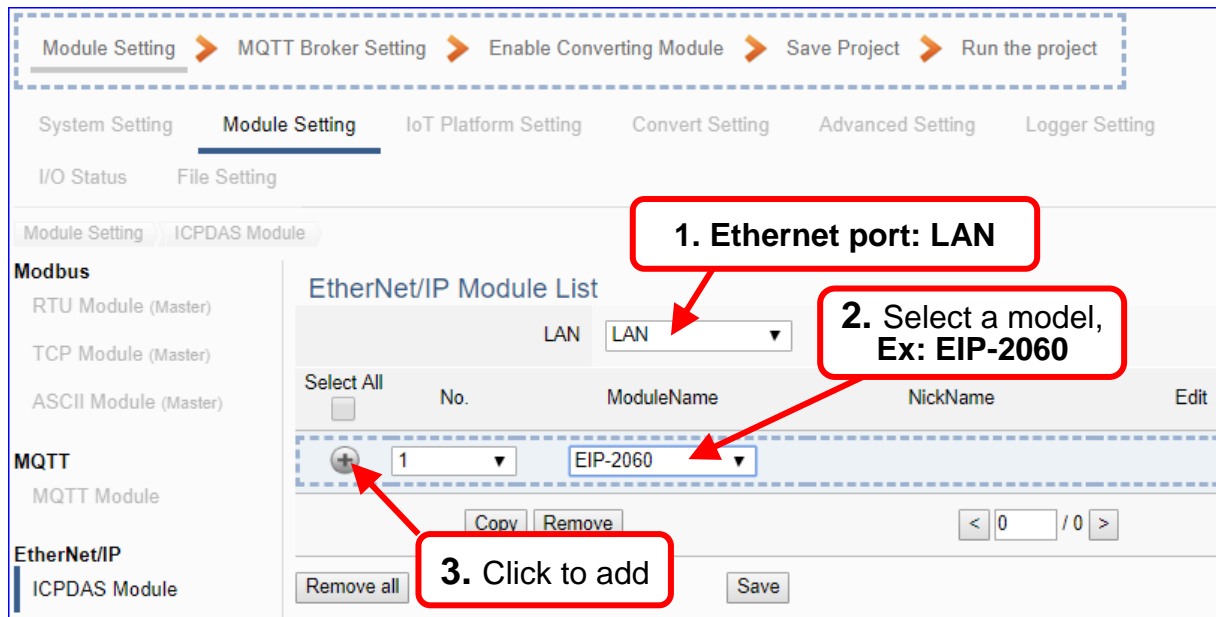

Add a module (No.: 1, Name: EIP-2060) as below.

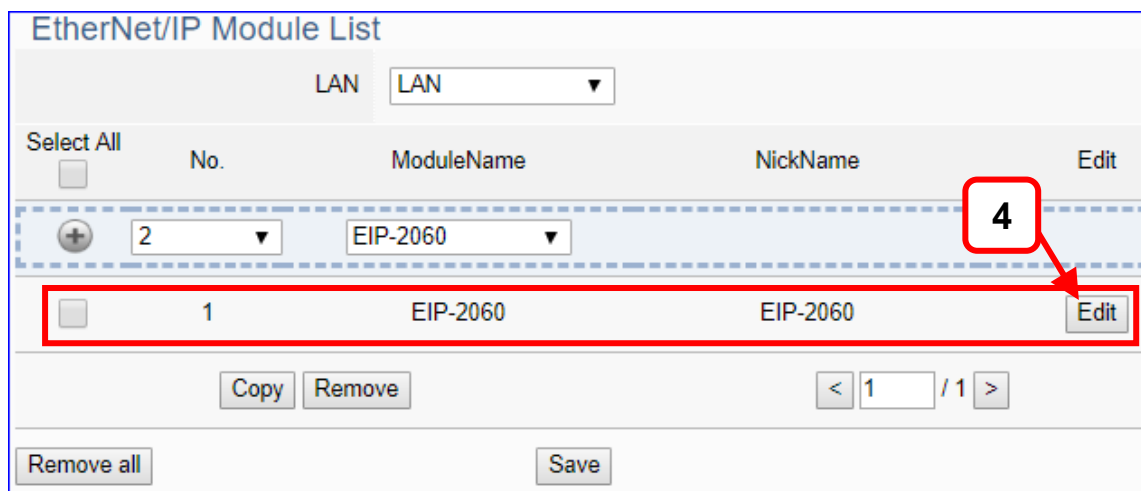

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

Click [Edit] button to enter the “Module Content Setting” page.

[Module Content Setting] page:

Module Content Setting	
No.	1
Module Name	EIP-2060
NickName	EIP-2060
IP	192 . 168 . 13 . 5
ChannelNumber	12-ch(6DI+6DO)

User enters the module connected IP address.

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The selected model number. (Not editable here)
NickName	User can give a nick name, default: selected model number
IP	Enter the IP address of the connected EIP module. This example: IP address of the EIP-2060 is 192.168.13.5
ChannelNumber	Select the number of the I/O channels.

The system will auto-display the selected I/O table by the order of Digital Input / Digital Output / Analogy Input / Analogy Output. This example: EIP-2060 have 6 DI and 6 DO.

Digital Input				
Channel	Name	Attributes	Data Type	Description
0	DI0	Read	Bool	
1	DI1	Read	Bool	
2	DI2	Read	Bool	
3	DI3	Read	Bool	
4	DI4	Read	Bool	
5	DI5	Read	Bool	

Digital Output				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="DO0"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
1	<input type="text" value="DO1"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
2	<input type="text" value="DO2"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
3	<input type="text" value="DO3"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
4	<input type="text" value="DO4"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>
5	<input type="text" value="DO5"/>	<input type="text" value="Read / Write ▼"/>	Bool	<input type="text"/>

Analogy Input				
Channel	Name	Attributes	Data Type	Description

Analogy Output				
Channel	Name	Attributes	Data Type	Description

Digital Input / Digital Output / Analogy Input / Analogy Output	
Channel	Channel number will auto-display according to the model. (Not editable) Default: Number from 0.
Name	User can define the name. Default: DI#, DO#, AI#, AO# Available: number, English character, underline "_", dash line "-", cannot be a space, slash "/", Chinese character, and other symbols.
Attributes	Display data attribute of the variable. (Not editable) Include Read, Read/Write...
Data Type	Display data type of the variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String
Description	For users set up the description for the channel.
OK / Cannel	Click [OK] to save and exit the page settings. Click [Cancer] to exit without saving.

Step 2. MQTT Broker Setting

Click the next step, and enter the **Step 2 [MQTT Broker Setting]** of the UI setting.

This page is for setting the IoT platform and the MQTT Broker connection, e.g. the local or remote broker, port, login information, etc.

We select the “EIP / MQTT” conversion at the beginning, so this step will auto enter the **[MQTT Connection > Local Broker]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform. User can choose the local or remote broker for the MQTT connection.

MQTT Connection > Local Broker Setting

Port	The COM port of the Local MQTT Broker. System default: 1883
Anonymous Login	Check to allow anonymous login. Default: Check.
Save	Click to save the setting of this page.

If user wants to use the remote Broker, please click the “Remote Broker” to set up.

MQTT Connection > Remote Broker List


Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
	Click to add a new remote Broker.
Save	Click to save the settings of this page.

Step 3. Enable Converting Module

Click the next step, and enter the **Step 3 [Enable Converting Module]** UI setting
This step is for enabling the module for the EtherNet/IP / MQTT conversion.

We select the “EIP / MQTT” conversion at the beginning, so this step will auto enter the **[MQTT > EtherNet/IP]** page of Conversion setting. The “Step Box” will prevent the user from selecting the wrong platform.


Please check the Enabled box of the module.

Convert Setting > MQTT > EtherNet/IP –EtherNet/IP Module List	
No.	The module number in the module list (Not editable here)
Module Name	The module user selected (Not editable here)
Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to set up the Topic, QoS, Publish, Subscribe ...
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 4. Save Project

The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

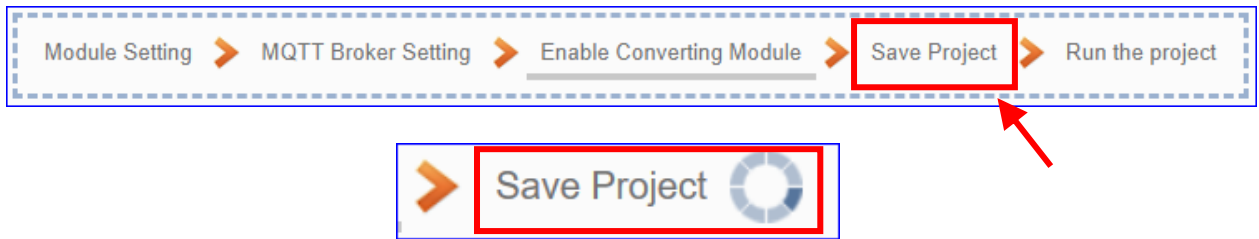


Step 5. Run the Project

The project, after saving, needs to execute. Click the next step [**Run the Project**].



The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.


4.1.6. Modbus / MQTT JSON Conversion

Modbus / MQTT JSON Conversion include the conversion of MQTT and Modbus RTU / TCP / ASCII three protocols. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus RTU devices that connected to the controller.

Modbus / MQTT JSON Function Diagram:

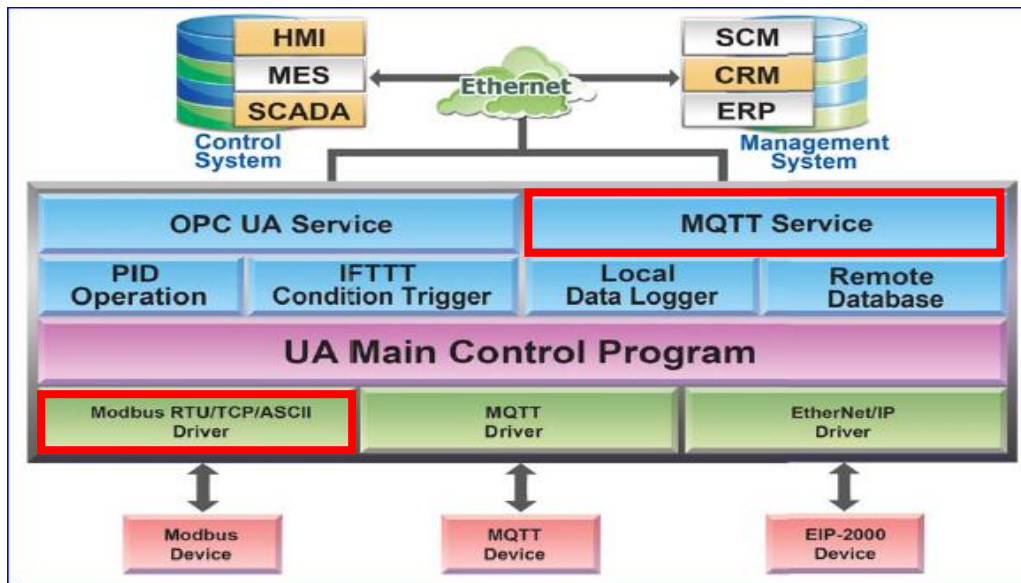


Application Solution:

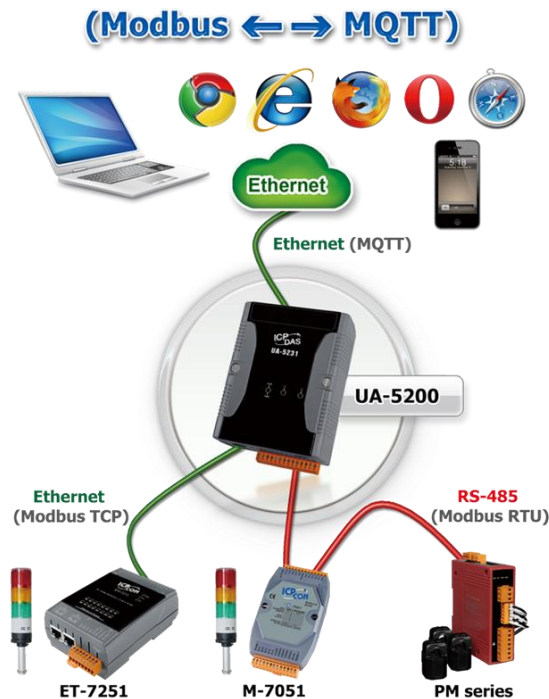


The settings of Modbus RTU/ASCII are the same. Here will introduce them together as a setting sample for Modbus / MQTT JSON conversion.

● **Modbus RTU / ASCII 與 MQTT JSON 轉換傳輸:**

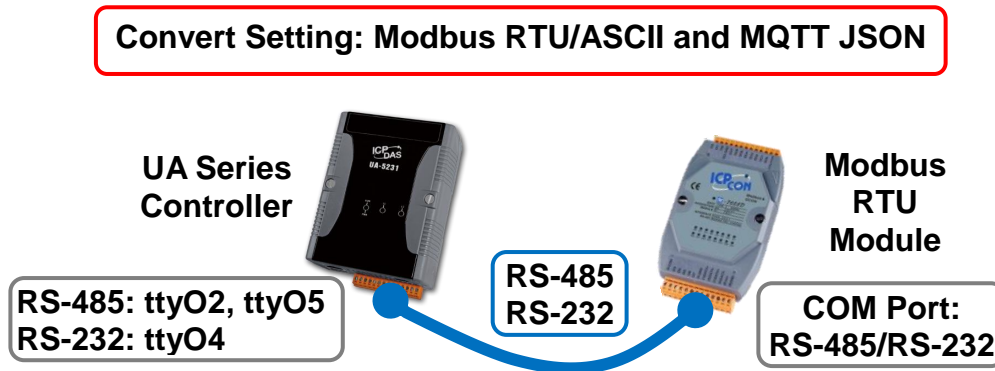


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the Modbus RTU or ASCII module (via RS-485 / RS-232, as the picture) and read/write the Modbus I/O via MQTT Broker, user can choose the item [**Modbus RTU / MQTT JSON**] or [**Modbus ASCII / MQTT JSON**] of the “Module Communication Conversion” in the Function Wizard.

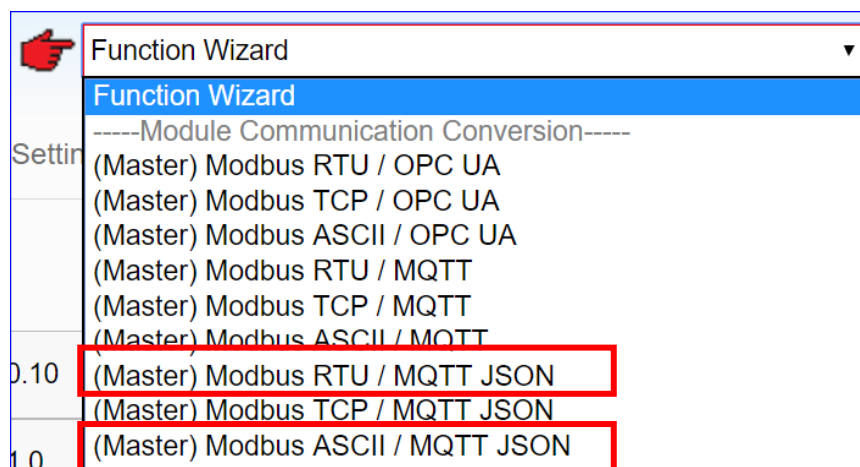

[Step Box]:

The Step Box of the [**Modbus RTU / MQTT JSON**] and [**Modbus ASCII / MQTT JSON**] has the same 7 steps, here will introduce them together. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.

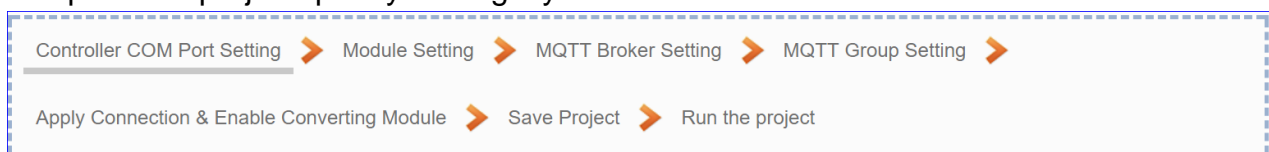

Step 1. Controller COM Port Setting

This page allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication. The user can find the default communication values of our I/O modules from the module CD, manual or [I/O Module website](#).

Controller COM Port Setting > Module Setting > MQTT Broker Setting > MQTT Group Setting >

Apply Connection & Enable Converting Module > Save Project > Run the project

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Setting F

System Setting COM Port Interface Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

COM Port Interface Setting Page

Serial Port	ttyO2
Baud Rate	115200
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Polling Rate(ms)	500


Save

COM Port Interface Setting Page	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485 ; ttyO4: RS-232 ; ttyO5: RS-485
Baud Rate	Choose a baud rate to communicate with the module: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The UA controller and the I/O module need have the same baud rate.
Data Bits	The number of bits used to represent one byte of data: 7 bits or 8 bits. Default: 8 Bits.
Parity	Choose one way for the parity checking. Options: None, Even, and Odd. Default: None.
Stop Bits	Choose the number of stop bit: 1 bit or 2 bits. Default: 1.
Polling Rate(ms)	Set a time interval for the command. Default: 500 ms
Save	Click [Save] button could save the settings of this page.


Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]** of the UI setting.

This page is for setting the communication values with the connected modules. First, choose the connected port with the module. If using ICP DAS module, select the model to auto load and setup the module. If not, give a module name (Default: Name) and click [+] button to add a new module.

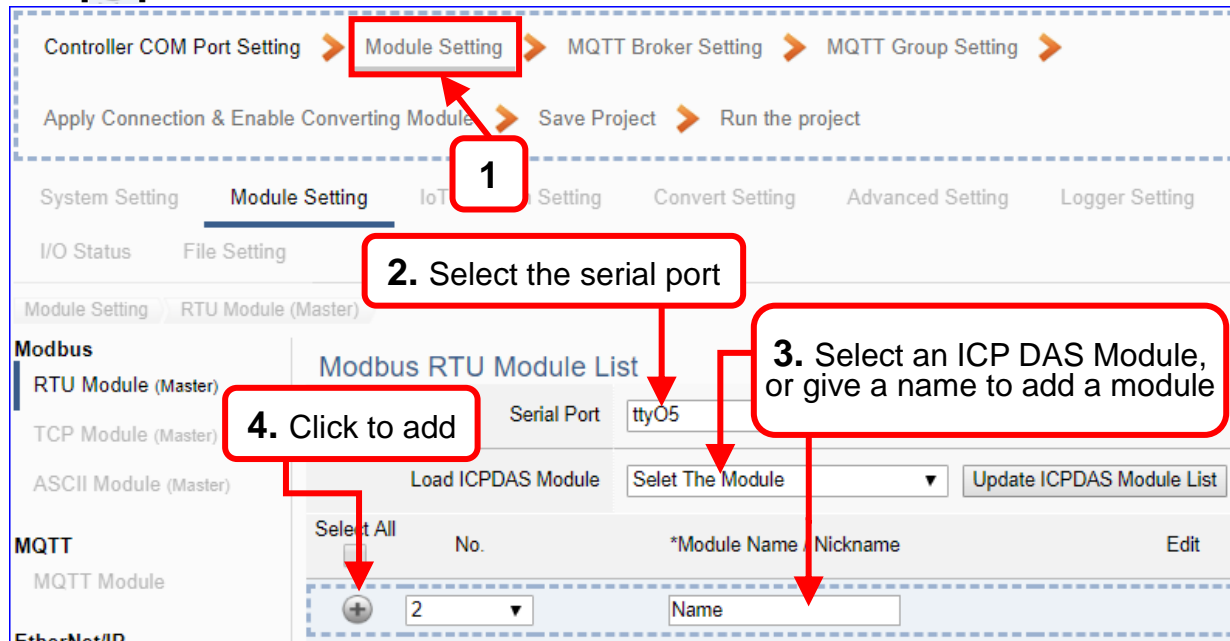

Add a module (No.: 1, Name: M-7055D) as below, and then click [Edit] button to enter the “Module Content Setting” page.

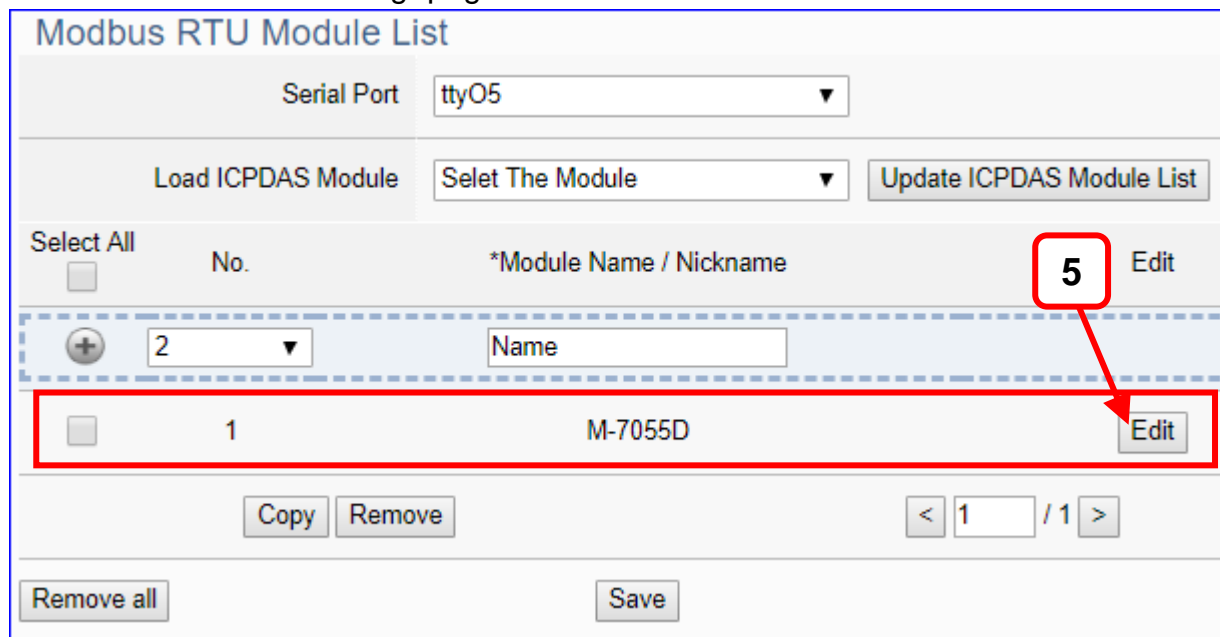

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page can set up the module and the Modbus address mapping table:

Module Content Setting	
No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500
Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	<input type="button" value="Add"/>

If select ICP DAS module, system will auto set up the Modbus Mapping Table, or user needs to check the module Modbus address or I/O number from the module user manual.

> **Modbus Mapping Table Setting:**
Set module in the order of Data Model, Start Address and Data Number, then click "Add".

Ex: M-7055D has 8 Data Models of "01 Coil Status (0x)" (Mapping: DO), so select Model "01", Start Add. "0", Number "8", and click "Add".

Coil Status(0x)	
Address	0
Number	8
Type	Bool
<input type="button" value="Edit"/>	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI) <div> 01 Coil Status(0x) 02 Input Status(1x) 03 Holding Registers(4x) 04 Input Registers(3x) </div>
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table				Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)		Input Registers(3x)	
Address	0	Address	0				
Number	8	Number	8				
Type	Bool	Type	Bool				
<input type="button" value="Edit"/>		<input type="button" value="Edit"/>					
				<input type="button" value="OK"/>		<input type="button" value="Cancel"/>	

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table

Address Setting

Nickname Setting

01 Coil Status(0x)

Table Display

Show

Hide

Address	Variable name	Data Type	Description
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>

02 Input Status(1x)

Table Display

Show

Hide

Address	Variable name	Data Type	Description
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>

03 Holding Registers(4x)

Table Display

Show

Hide

Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>

04 Input Registers(3x)

Table Display

Show

Hide

Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>

OK

Cancel

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 3. MQTT Broker Setting

Click the next step, and enter the **Step 3 [MQTT Broker Setting]** of the UI setting.

This page is for setting the IoT platform and the MQTT Broker connection, e.g. the local or remote broker, port, login information, etc.

We select the “Modbus RTU (or ASCII) / MQTT JSON” conversion at the beginning, so this step will auto enter the **[MQTT Connection > Local Broker]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform. User can choose the local or remote broker for the MQTT connection.

MQTT Connection > Local Broker Setting

Port	The COM port of the Local MQTT Broker. System default: 1883
Anonymous Login	Check to allow anonymous login. Default: Check.
Save	Click to save the setting of this page.

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
	Click to add a new remote Broker.
Save	Click to save the settings of this page.

After creating a new Remote Broker (as below) :

<input type="checkbox"/>	Broker Name	IP / Domain	Port	Edit
<input type="checkbox"/>	Name1			
<input type="checkbox"/>	Broker1	127.0.0.1	1883	Edit

Remove < 1 / 1 > Save

MQTT Connection > Remote Broker List

Broker Name	The name of the remote MQTT Broker. User can define the name, e.g. Broker1. Default: Name.
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Edit / Remove	Click [Edit] can set the Broker. Click the left box and [remove] can delete the Broker.
Save	Click to save the settings of this item.

Broker Name	Broker1
IP / Domain	127.0.0.1
Port	1883
Keep Alive Time(second)	60
SSL/TLS	<input type="checkbox"/> Enabled
Anonymous Login	<input checked="" type="checkbox"/> Enabled

OK Cancel

MQTT Connection > Remote Broker > Broker Content Settings


Broker Name	The name of the remote MQTT Broker. (Editable)
IP / Domain	The IP address of the remote Broker. Default: 127.0.0.1
Port	The COM port of the remote Broker. Default: 1883
Keep Alive Time	The keep alive time. Default: 60 (second)
SSL/TLS	Check to enable the supporting of SSL/TLS security communication. Default: uncheck.
Anonymous Login	Check to allow anonymous login. Default: Check.
OK	Click to save the settings and exit.

Step 4. MQTT Group Setting

Click the next step, and enter the **Step 4 [MQTT Group Setting]** of the UI setting.

This page is for setting the MQTT Group connection, setting with the MQTT JSON function in the Convert Transmission, It can make the I/O module messages in groups and then mapping to the user-defined publish and subscribe topics.

We select the “Modbus RTU (or ASCII) / MQTT JSON” conversion at the beginning, so this step will auto enter the **[MQTT Connection > MQTT Group Connection]** page of IoT Platform Setting. The “Step Box” will prevent from selecting the wrong platform.



MQTT Connection > MQTT Group Connection > MQTT Connection Group Name List	
Group Name	MQTT group name, user can define, e.g. Group1. Default: Name.
	Click add button to add a new MQTT Group.
	The page number of the group list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the setting of this page.

Enter a name and click add button to create a new group (as below).

Click [Edit] button to enter the [MQTT Client Setting] page:

MQTT Client Setting	
No.	1
Group Name	Default
Scan Rate(ms)	1000
Dead Band	0
Will Topic	
Will	
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Name (Remote)

IoT Platform Setting > MQTT Group Connection > MQTT Client Setting	
No.	The group number in the MQTT Client list (Not editable here)
Group Name	Give a name, e.g. Group1. Default: Name.
Scan Rate(ms)	Set an update frequency for the data. Default: 1000 (Unit: ms)
Dead Bend	Give a dead bend value for updating a float signal. Default: 0
Will Topic	Enter the title of a disconnect notice. Default: Null.
Will	Enter a disconnect notice. Default: Null.
MQTT Connection	Check the Broker want to use Local Broker or Remote Broker.


Publish & Subscribe	
Publish Topic	<input type="text" value="/Name/Publish"/>
Publish QoS	<input type="text" value="2"/>
Subscribe Topic	<input type="text" value="/Name/Subscribe"/>
Subscribe QoS	<input type="text" value="2"/>
Retain	<input type="text" value="No"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

IoT Platform Setting > MQTT Group Connection > MQTT Client Setting – Publish & Subscribe	
Publish Topic	The topic of sending/publishing data message.
Publish Qos	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe Qos	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Retain	Whether to store a broker message. Default: No
OK	Click to save the settings and exit.

Step 5. Apply Connection & Enable Converting Module

Click the next step, and enter the **Step 5 [Apply Connection & Enable Converting Module]** UI setting. This page is for applying the connection and enabling the converting module.

We select the “Modbus RTU (or ASCII) / MQTT JSON” conversion at the beginning, so this step will auto enter the [**Convert Setting > MQTT JSON - Modbus RTU (or ASCII) (Master)**] page of Convert setting. The “Step Box” will prevent the user from selecting the wrong platform.

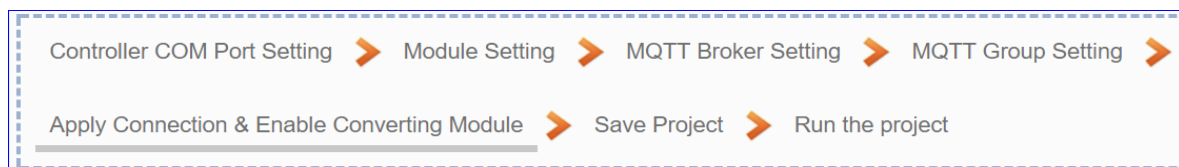

Convert Setting Modbus RTU (Master)

Modbus RTU Module List

No.	*Module Name / Nickname	Edit	Connection Name	All Enabled
1	M-7055D	<input type="button" value="Edit"/>	Default <input type="button" value="Apply"/>	<input checked="" type="checkbox"/>

1 / 1


Convert Setting > MQTT JSON > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name	The module name set in the module list (Not editable here)
Connection Name	Select a group connection name, and then click [Apply].
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting.
<input type="button" value="Previous"/> 1 / 1 <input type="button" value="Next"/>	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Check the enabled box of the module, select the connection name and click “Apply”.

Step 6. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step **[Save Project]**, the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

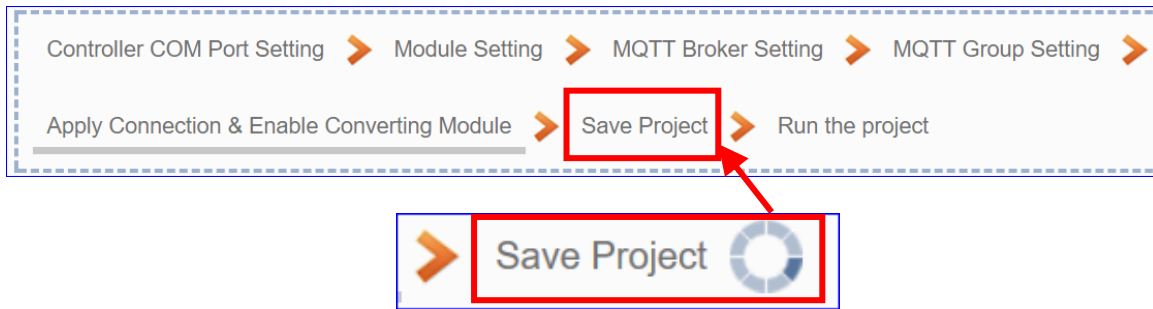

Step 7. Run the Project

The project, after saving, needs to be executed. Click the next step **[Run the Project]**.

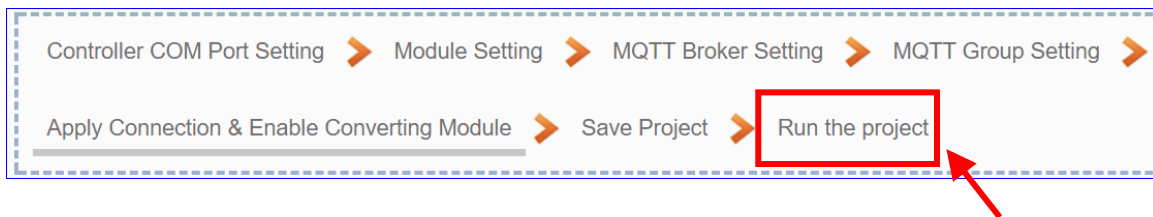

The Step Box will show the words **“Please wait”** (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words **“Please wait”** disappears, the new words **“Success”** appears (as below), that means the UA controller is running new project successfully.



Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.


The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.

4.2. Module Connecting to Azure

"Module Connecting to Azure" is a common way to integrate IoT devices into the cloud. Many of the applications use MQTT connection to the cloud for the setting is fast and easy. The UA series also provides the MQTT function for module to connect to the Azure platform and allows users to publish messages to Microsoft Azure and receive messages from Microsoft Azure. This section will introduce the setting steps and the function parameters of the "Module Connecting to Azure". There are 3 items in this category for 3 protocol types. Here will introduce the Modbus TCP / Azure for this category.

-----Module Connecting to Azure-----
 (Master) Modbus RTU / Azure
 (Master) Modbus TCP / Azure
 (Master) Modbus ASCII / Azure


Modbus RTU / Azure	Allow the Modbus RTU connecting to the Microsoft Azure platform and can publish messages to Microsoft Azure and receive messages from Microsoft Azure.
Modbus TCP / Azure	Allow the Modbus RTU connecting to the Microsoft Azure platform and can publish messages to Microsoft Azure and receive messages from Microsoft Azure. (Section 4.2.1)
Modbus ASCII / Azure	Allow the Modbus RTU connecting to the Microsoft Azure platform and can publish messages to Microsoft Azure and receive messages from Microsoft Azure.

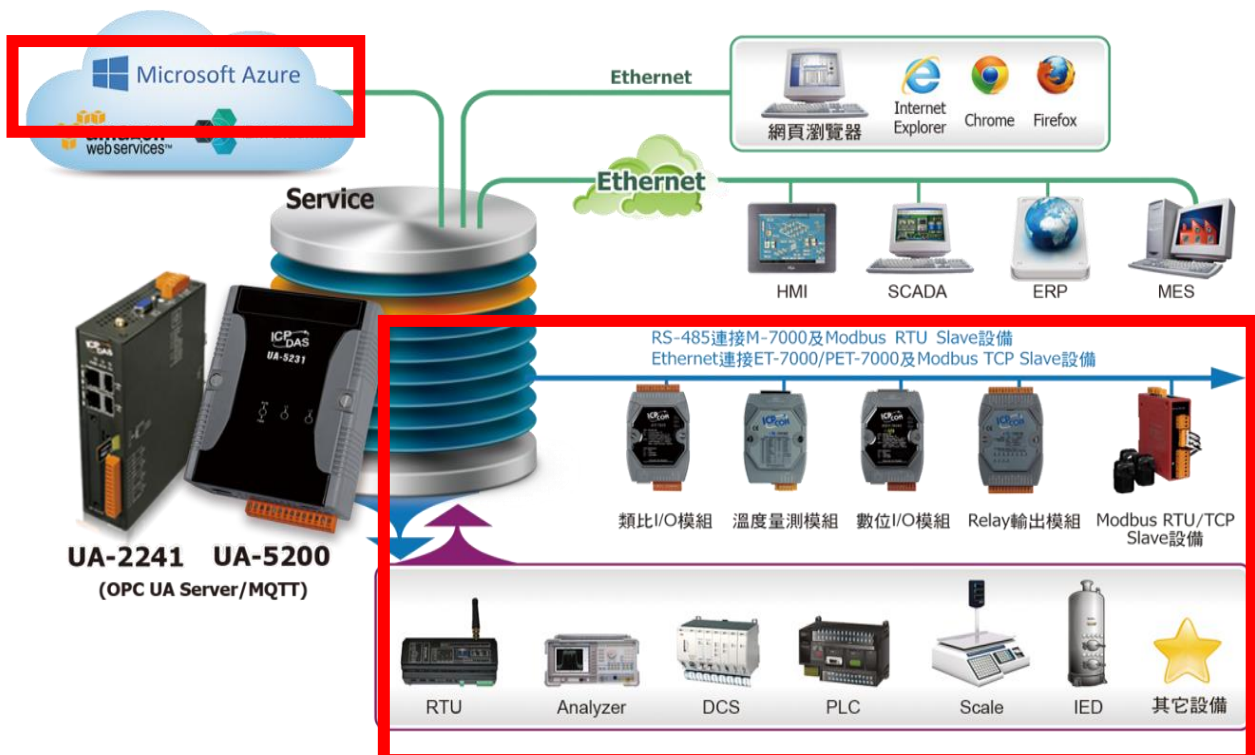


4.2.1. Modbus TCP / Azure Connecting

The UA series provides the MQTT function for module to connect to the Microsoft Azure platform and allows users to publish messages to Azure and receive messages from Azure. Before setting the Azure connection, user needs to apply user **SAS Token** and **Root CA** from Microsoft Azure. This section will introduce the setting steps and the function parameters. There are 3 items about Azure function in the “Function Wizard”. Here will introduce the Modbus TCP / Azure.


Function Diagram for Modbus TCP / Azure:

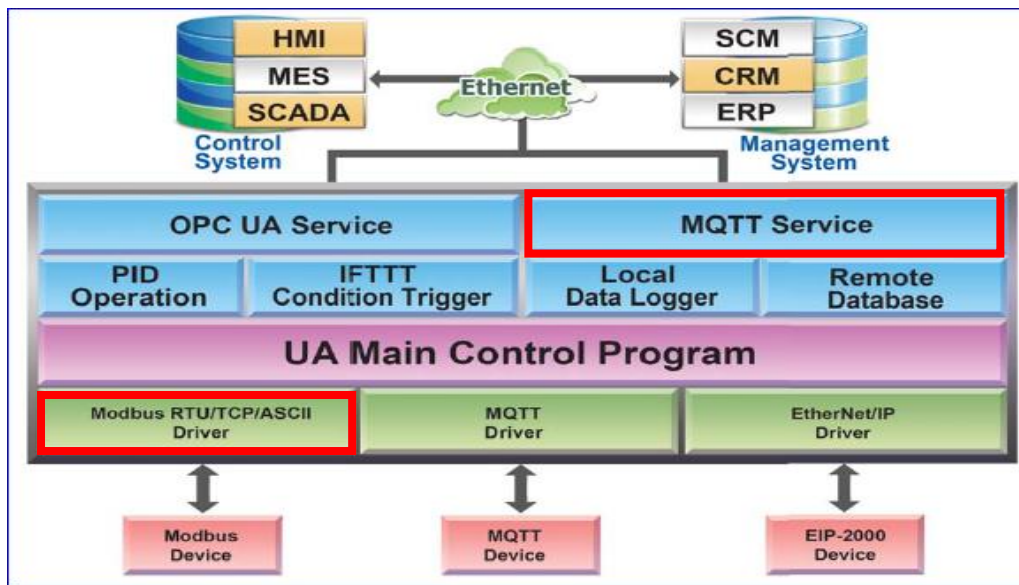

Application Solution:

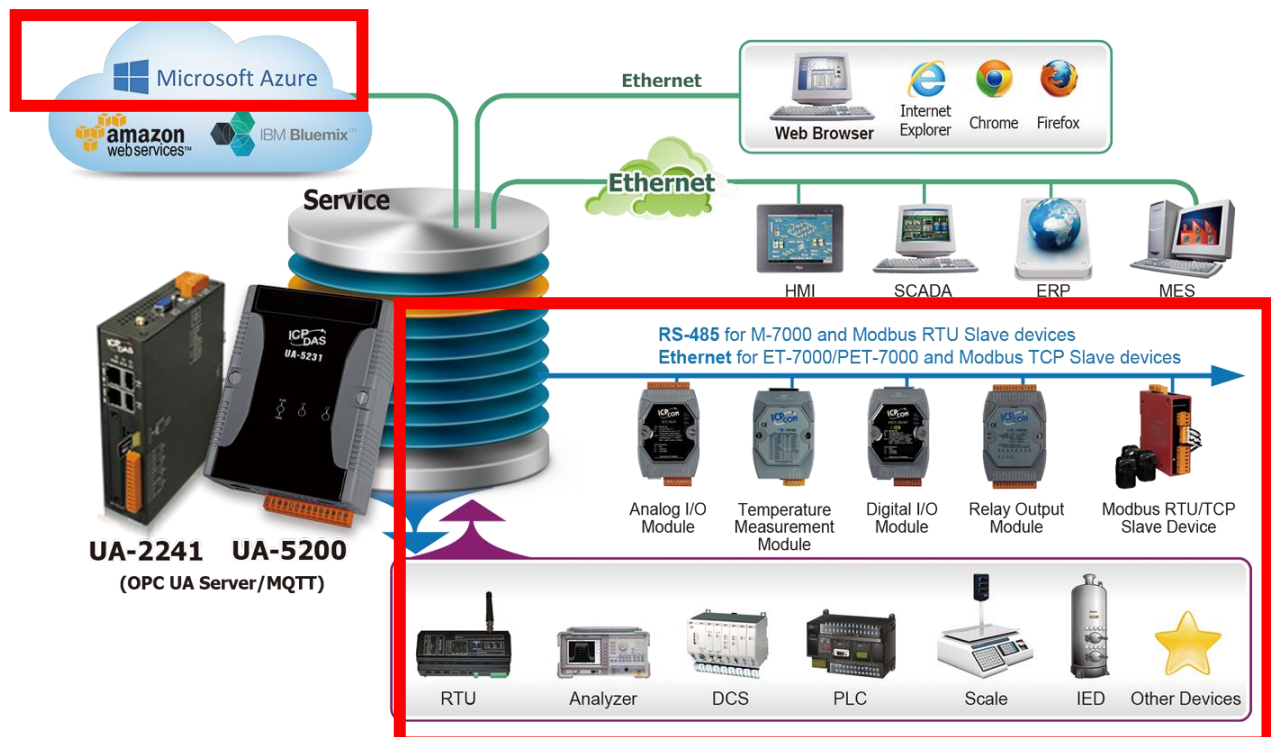

● Modbus TCP Module Connecting to Azure

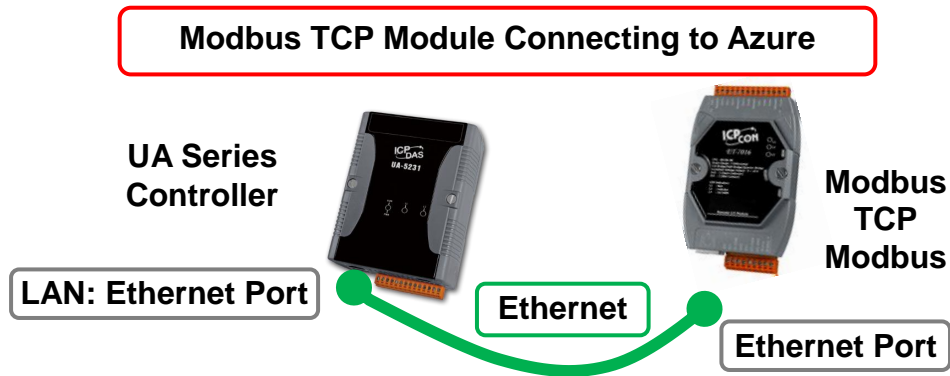


Note: The hardware/network connection methods please see the [Chapter 2](#) .

When UA series controller connects the Modbus TCP (via Ethernet, as the picture), read/write the Modbus I/O via MQTT Broker and transfer the data to the Microsoft Azure platform, user can choose the item **[Modbus TCP / Azure]** of the “Module Connecting to Azure” in the Function Wizard.


-----Module Connecting to Azure-----
 (Master) Modbus RTU / Azure
(Master) Modbus TCP / Azure
 (Master) Modbus ASCII / Azure

[Step Box]:

The Step Box of the **[Modbus TCP / Azure]** has 5 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.




In addition, the Step Box of [Modbus RTU / Azure] or [Modbus ASCII / Azure] has 6 steps. The different step is “Controller COM Port Setting” that can refer to Section 4.1.1 or 4.1.3.

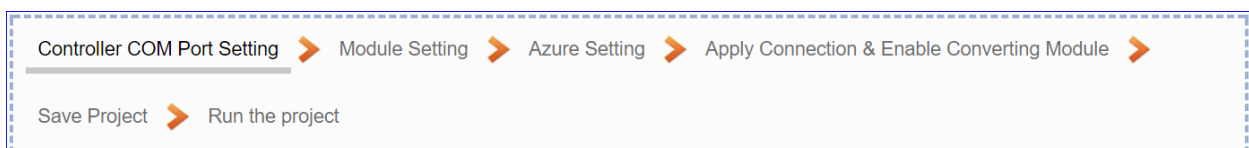


Step 1. Module Setting

This page is for setting the communication values of the connected modules.

The Ethernet port is LAN for connecting with the TCP module, and each module can give a name (Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

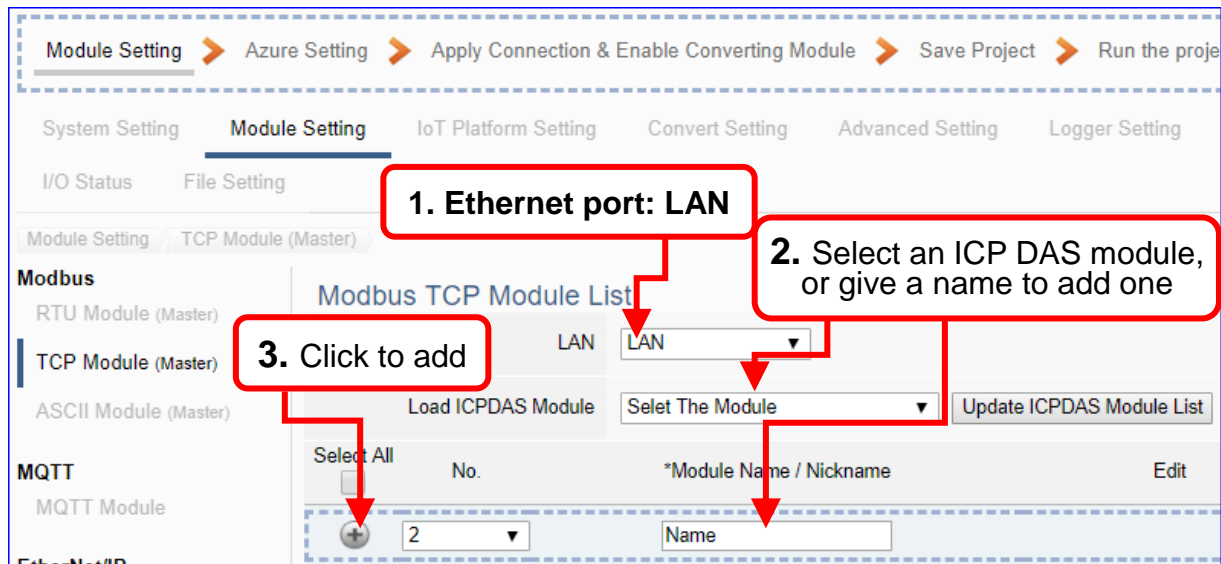

Add a module (No.: 1, Name: DL-302) as below, and then click [Edit] button to enter the “Module Content Setting” page.

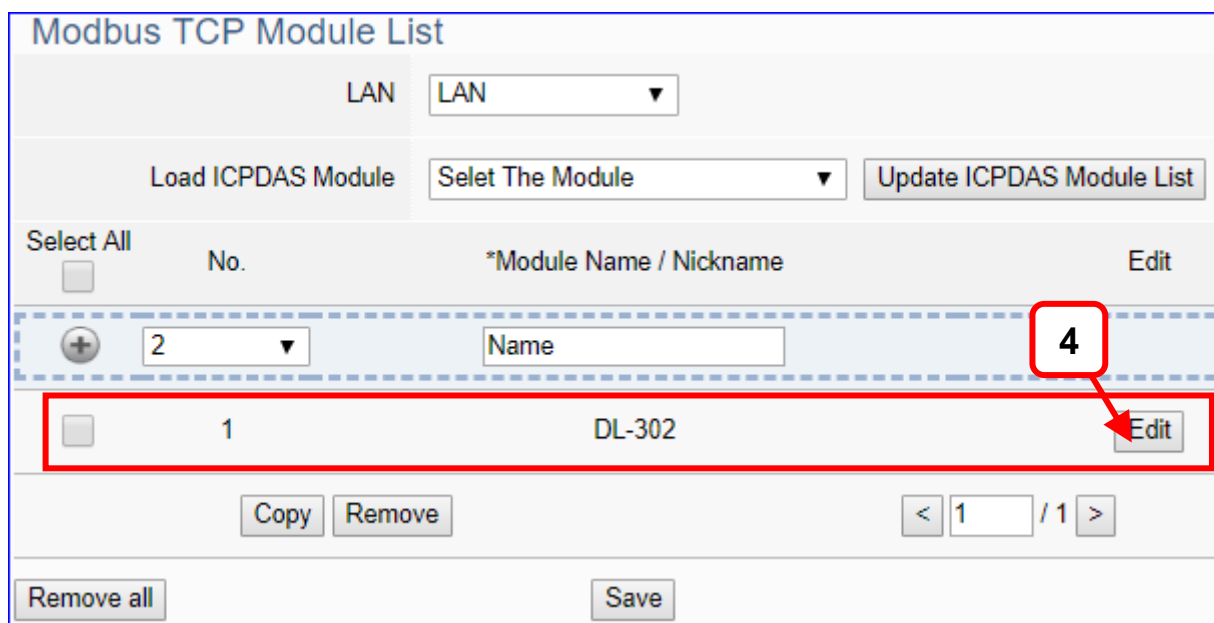

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

Click [Edit] can enter the [**Module Content Setting**] page to set up the module and the Modbus address mapping table.

Module Content Setting	
No.	1
Module Name	DL-302
IP	192 . 168 . 81 . 251
Port	502
Slave ID	1
Timeout(ms)	500
Polling Rate(ms)	500
Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x)
Start Address	0
Data Number	1
Create Tables	Add

Enter the IP
by user case.

[Modbus Mapping Table Setting]

Please check the module I/O & Modbus address via the module user manual.

Here use DL-302 as an example.

Data Model: 04 Input Registers (3x)

Start Address: 0

Data Number: 3

Type: 16-bit Short

⇒ click [Add]

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
IP	The IP address of the connected module. Default: 0.0.0.0
Port	The port number for Modbus TCP. Default: 502
Slave ID	Set the Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Polling Rate	Set a time interval for the command. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table		Address Setting	Nickname Setting
Coil Status(0x)	Input Status(1x)	Holding Registers(4x)	Input Registers(3x)
		<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>3</div> </div> <div> <div>Type</div> <div>Short</div> </div> <div>Edit</div>	
		<div>OK</div> <div>Cancel</div>	

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Description	
0	Tag0	Bool		
1	Tag1	Bool		
02 Input Status(1x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Description	
0	Tag0	Bool		
03 Holding Registers(4x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Swap	Description
0	Tag0	Short	<input type="checkbox"/>	
04 Input Registers(3x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Swap	Description
0	Tag0	Float	<input type="checkbox"/>	
		OK	Cancel	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 2. Azure Setting

Click the next step, and enter the **Step 2 [Azure Setting]** of the UI setting.

This page is for setting the Microsoft Azure Platform related information of the MQTT Connection in the IoT platform, e.g. the name, SAS Token, etc.

We select the “Modbus TCP / Azure” connecting item at the beginning, so this step will auto enter the **[MQTT Connection > Microsoft Azure Platform]** page of IoT Platform Setting. The “Step Box” will prevent the user from selecting the wrong platform.

MQTT Connection > Microsoft Azure Platform > Azure List	
Azure Name	Azure name. User can define the name. Default: Name.
	Click to add a new Azure list.
Edit / Remove	Click [Edit] can set the Azure list. Click the left box and [remove] can delete the Azure list.
	The page number of the Azure list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Click [Edit] button could enter the “**Azure Content Settings**” page:

Azure Content Settings	
Azure Name	<input type="text" value="Azure"/>
SAS Token	<input type="text" value="HostName=ICPDASIoTHub.azure-devices.net;DeviceId=UA-5231_1;SharedAccessSignature=SharedAccessSignature sr=ICPDASIoTHub.azure-devices.net%2Fdevices%2FUA-5231_1&sig=9kUwQZc3OGLt8bMlrPWcfLSQT8AMOHqL0jhrVgqGZ6s%3D&se=1575703053"/>
Trusted Certificate	<input type="text" value="ca.crt"/>
Keep Alive Time(second)	<input type="text" value="60"/>
Scan Rate(ms)	<input type="text" value="1000"/>
Dead Band	<input type="text" value="0"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	


MQTT Connection > Microsoft Azure Platform > Azure List > Azure Content Settings	
Azure Name	Azure name. User can define the name. Default: Name.
SAS Token	Input the SAS Token user previously registered for the UA controller from Microsoft Azure. For the procedure to generate a SAS Token, please refer to the “Documentation > Azure IoT Hub > IoT Hub MQTT support” section on the Microsoft Azure Web Site for detailed information.
Trusted Certificate	Input the Root CA file you previously downloaded for the UA controller from Microsoft Azure.
Keep Alive Time(second)	Set the time in second that pass away without communication between the UA controller and Microsoft Azure. Default: 60 second.
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)
Dead Band	Give a dead bend value for updating a float signal. Default: 0
OK	Click to save and exit this page.

Step 3. Apply Connection & Enable Converting Module

Click the next step, and enter the **Step 3 [Apply Connection & Enable Converting Module]** UI setting. This page is for applying the connection and enabling the converting module.

We select the “Modbus TCP / Azure” at the beginning, and UA system connecting to Azure through MQTT JSON group method, so this step will auto enter the [**Convert Setting > MQTT JSON - Modbus TCP (Master)**] page of Convert setting. The “Step Box” will prevent the user from selecting the wrong platform.


Check the module enabled box, select and apply the connection name.

Convert Setting > MQTT JSON > Modbus TCP (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting.
Connection Name	Select an Azure connection name, and then click [Apply].
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

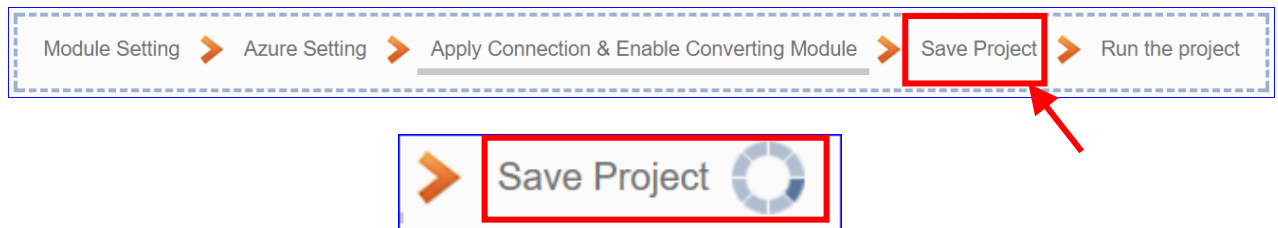

Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

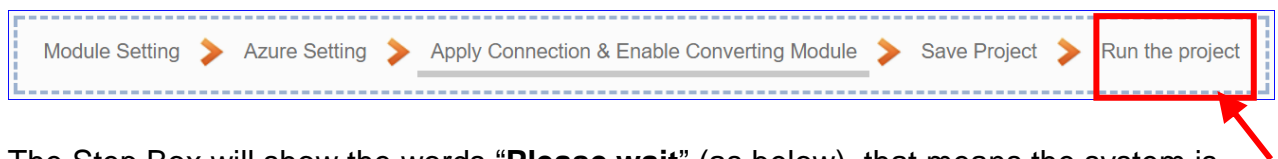

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.



And then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the new function project.


4.3. Data Log

UA series supports Data Logger function. Its Local Data Logger can save I/O data log to local CSV file, and record I/O status at the scheduled time. Furthermore, users can set the time interval of which CSV file to generate and divide on the local side. Its Remote Database can import I/O data collection directly into the remote SQL database for the Big Data analysis.

This section will introduce the setting steps and the function parameters of the “Data Log”. In the category, there are 4 items about Modbus RTU/TCP module for Local Data Logger or Remote Database. This section will introduce the function items in two sub-sections. The descriptions of Local Data Logger will select the Modbus RTU as a sample, and the Remote Database will select the Modbus TCP as a sample.

Data Log
(Master) Modbus RTU / Local Data Logger
(Master) Modbus TCP / Local Data Logger
(Master) Modbus RTU / Remote Database
(Master) Modbus TCP / Remote Database

Modbus RTU / Local Data Logger Modbus TCP / Local Data Logger	Provide users to record I/O data of Modbus RTU/TCP module to internal register. (Section 4.3.1)
Modbus RTU / Remote Database Modbus TCP / Remote Database	Provide users to record I/O data of Modbus RTU/TCP module into remote database. (Section 4.3.2)

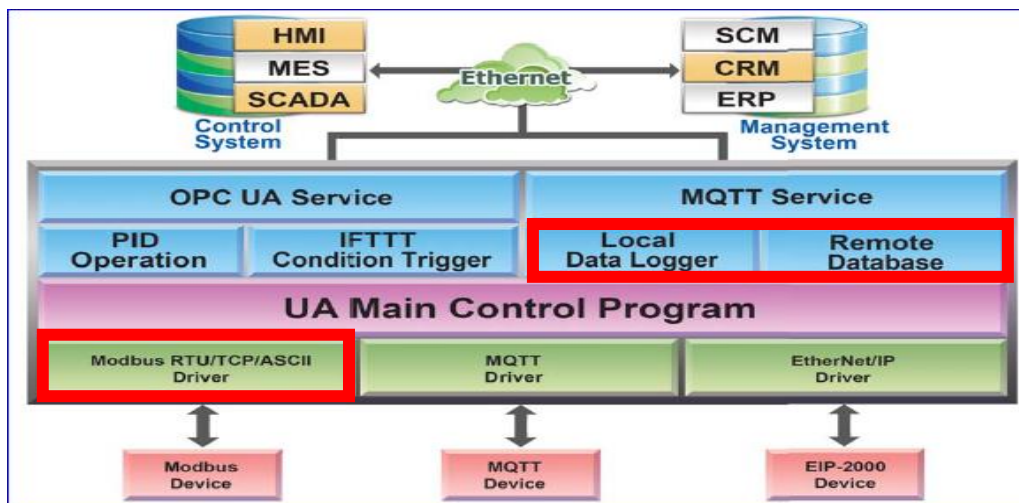


4.3.1. Modbus / Local Data Logger


Local Data Logger supports to save I/O data log to Local CSV file in the SD card of the UA, and can record I/O status at the scheduled time. Furthermore, users can set the time interval of which CSV file to generate and divide on the local side.

The Modbus / Local Data Logger settings include Modbus RTU and TCP. Here will introduce Modbus TCP as the setting sample.


Modbus / Local Data Logger Function Diagram:

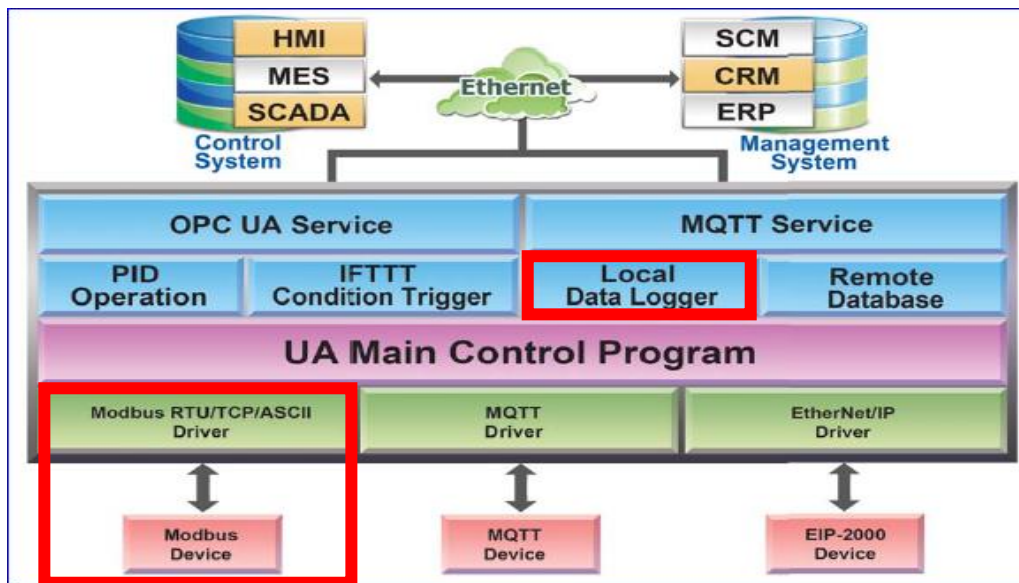

Application Solution:

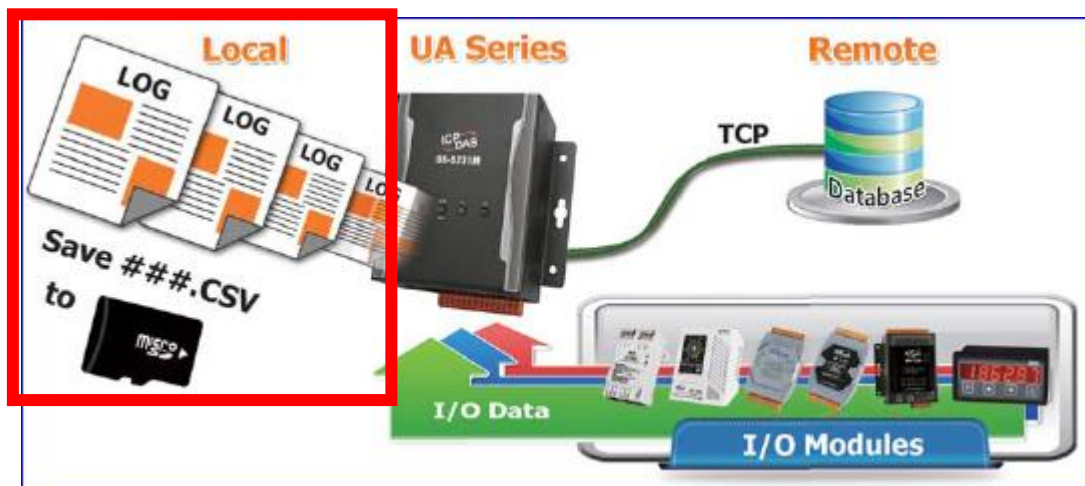


- **Modbus TCP / Local Data Logger**

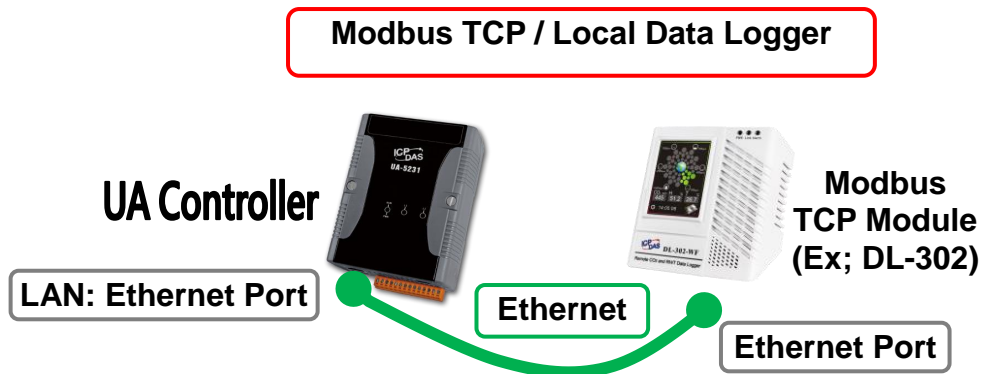


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the Modbus TCP module (via Ethernet, as the picture) and save the data logger record to the microSD card in the UA, user can choose the item **[Modbus TCP / Local Data Logger]** of the “Data Log” in the Function Wizard.

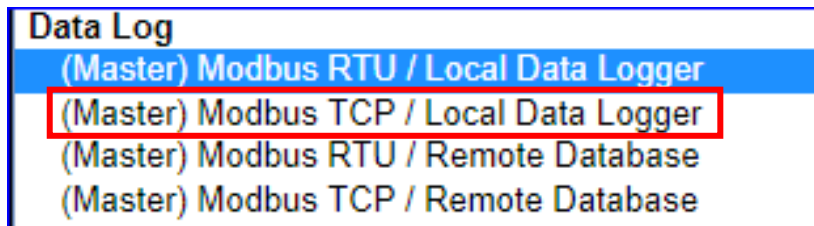

[Step Box]:


The Step Box of the **[Modbus TCP / Local Data Logger]** has 5 steps. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.




Step 1. Module Setting

It auto-enter the first step, **Step 1 [Module Setting]** of the UI setting.

This page is for setting the communication values with the connected modules. First check the LAN port that connected with the module, and each module can give a name (Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

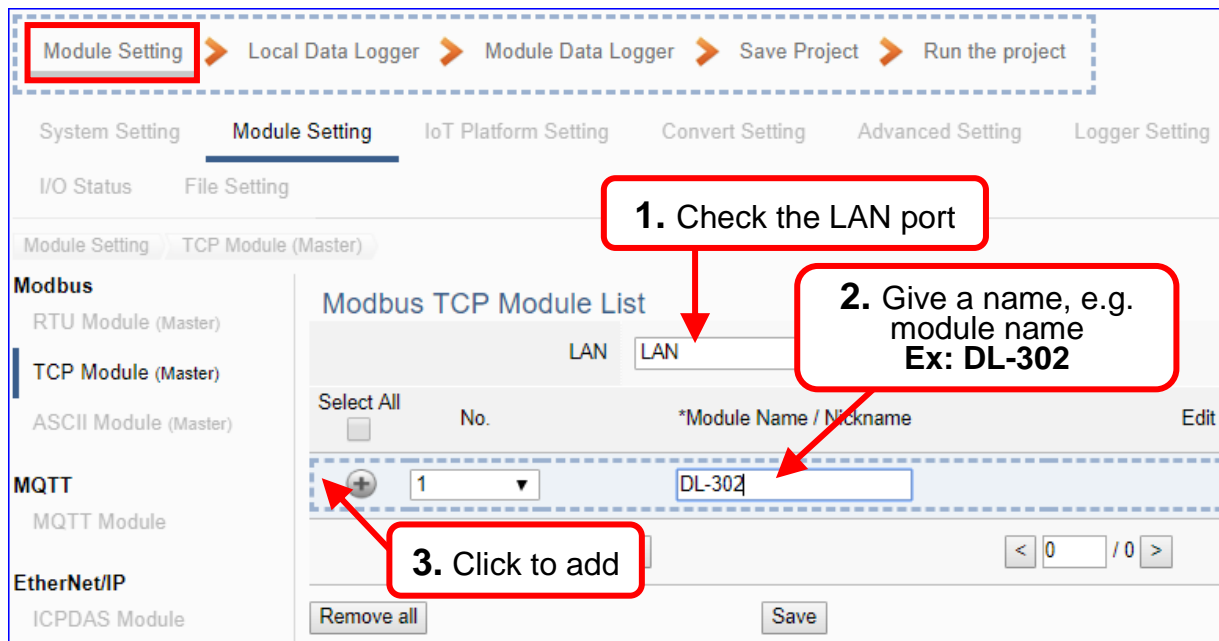

Add a module (No.: 1, Name: DL-302) as below, and then click [Edit] button to enter the “Module Content Setting” page.

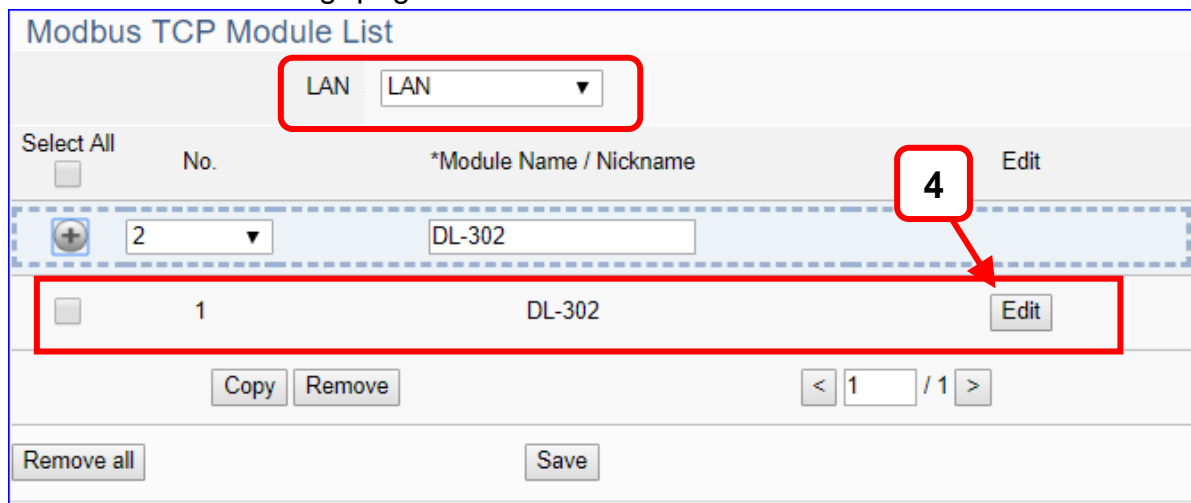

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[Module Content Setting] can set up the module and the Modbus mapping table:

Module Content Setting	
No.	1
Module Name	DL-302
IP	192 . 168 . 81 . 251
Port	502
Slave ID	1
Timeout(ms)	500
Polling Rate(ms)	500
Modbus Mapping Table Setting	
Data Model	04 Input Registers(3x)
Start Address	0
Data Number	3
Type	16-bit Short
Create Tables	<input type="button" value="Add"/> Success.

This Example: DL-302

[IP] 192.168.81.251 (by user case)

[Modbus mapping Table Setting]

Data Model: 04 Input Registers(3x)

Start Address: 0

Data Number: 3

Type: 16-bit Short

→ Click [Add]

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
IP	The IP address of the connected module. Default: 0.0.0.0
Port	The port number for Modbus TCP. Default: 502
Slave ID	Set the Slave ID of the UA. (Range: 1 ~ 247)
Timeout(ms)	Set the timeout value for the module. Default: 500 ms
Polling Rate	Set a time interval for the command. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI) <div> 01 Coil Status(0x) 02 Input Status(1x) 03 Holding Registers(4x) 04 Input Registers(3x) </div>
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of mapping DO, DI, AO & AI.

Modbus Mapping Table		Address Setting	Nickname Setting								
Coil Status(0x)	Input Status(1x)	Holding Registers(4x)	Input Registers(3x)								
		<table border="1"> <tr> <td>Address</td> <td>0</td> </tr> <tr> <td>Number</td> <td>3</td> </tr> <tr> <td>Type</td> <td>Short</td> </tr> <tr> <td colspan="2"> <input type="button" value="Edit"/> </td> </tr> </table>		Address	0	Number	3	Type	Short	<input type="button" value="Edit"/>	
Address	0										
Number	3										
Type	Short										
<input type="button" value="Edit"/>											
<input type="button" value="OK"/> <input type="button" value="Cancel"/>											

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
1	<input type="text" value="Tag1"/>	Short	<input type="checkbox"/>	<input type="text"/>
2	<input type="text" value="Tag2"/>	Short	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 2. Local Data Logger

Click the next step, and enter the **Step 2 [Local Data Logger]** of the UI setting.

This page is for setting the saving microSD card, e.g. the folder name, file length, log interval, card usage rate, and mount/unmount.

We select the “Modbus TCP / Local Data Logger” conversion at the beginning, so this step will auto enter the **[Data Logger > Local Data Logger]** page of Advanced Setting. The “Step Box” will prevent the user from selecting the wrong platform.

[EX] Folder Name: Datalog
Save I/O data to log.csv per 10 sec.
Divide csv file per 1 hr
into the file log-Y-M-D-H-M-S.csv
under the folder Y-M (e.g. 2018-12)


Advanced Setting > Data Logger > Local Data Logger	
Folder Name	The folder name in microSD card of UA, user definable. The I/O data will save into the file “log.csv” under this folder.
File Length	Unit: hour. User can select per 1, 2, 3, ... 8, 12, or 24 hours to divide the log.csv into the file “log-Y-M-D-H-M-S.csv” under the folder “Y-M”. (e.g. 2018-12)
Log Interval	The interval to save I/O data per seconds, minutes or hours.
Max SD Card Usage Rate (%)	Set up the maximum usage rate (Unit: %) of UA microSD card. If the data current rate meet the max rate, the oldest data will be removed first.
SD Card Currently Usage Rate	Display the current usage rate of UA microSD card (show %).
SD Card	Mount: Click to mount microSD card and begin to record data. Unmount: Click to unmount microSD card and stop record data.
Save	Click to save the settings of this item.

Step 3. Module Data logger

Click the next step, and enter the **Step 3 [Module Data logger]** UI setting. This step is for enabling the Modbus TCP module for Local Data Logger.

We select the “Modbus TCP / Local data logger” of Data Log at the beginning, so this step will auto enter the **[Local Data Logger > TCP Module (Master)]** page of Logger Setting. The “Step Box” will prevent the user from selecting the wrong platform.


Please check the box of the module user wants to do the data logger, e.g. DL-302.

Logger Setting > Local Data Logger > TCP Module – Modbus TCP Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	If user wants to enable some I/O channels for data logger, click [Edit] of that module to enter the “Content Setting”. It is normal to set all channels as enabled, and the function will not affect the unconnected channels.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

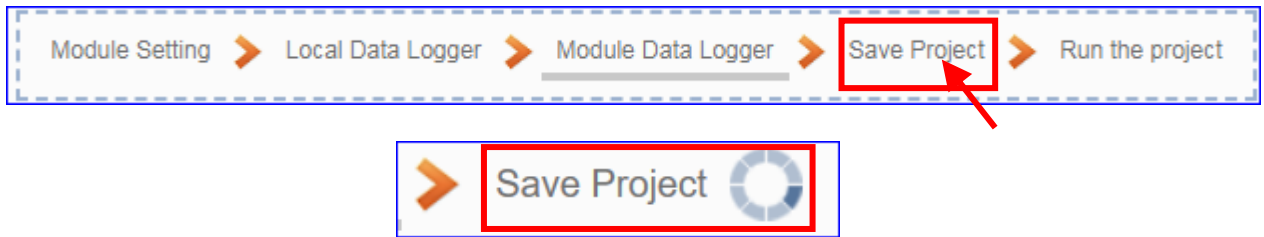


Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

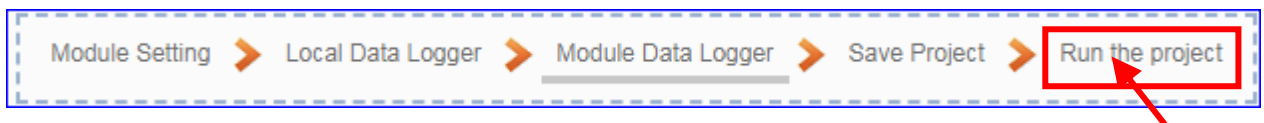

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.



Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.


The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.

4.3.2. Modbus / Remote Database


UA Data Logger supports to collect devices I/O status and then directly write into remote side SQL Database for the Big Data analysis.

The Modbus / Remote Database settings include Modbus RTU and TCP. Here will introduce Modbus TCP as the setting sample.


Modbus / Remote Database Function Diagram:

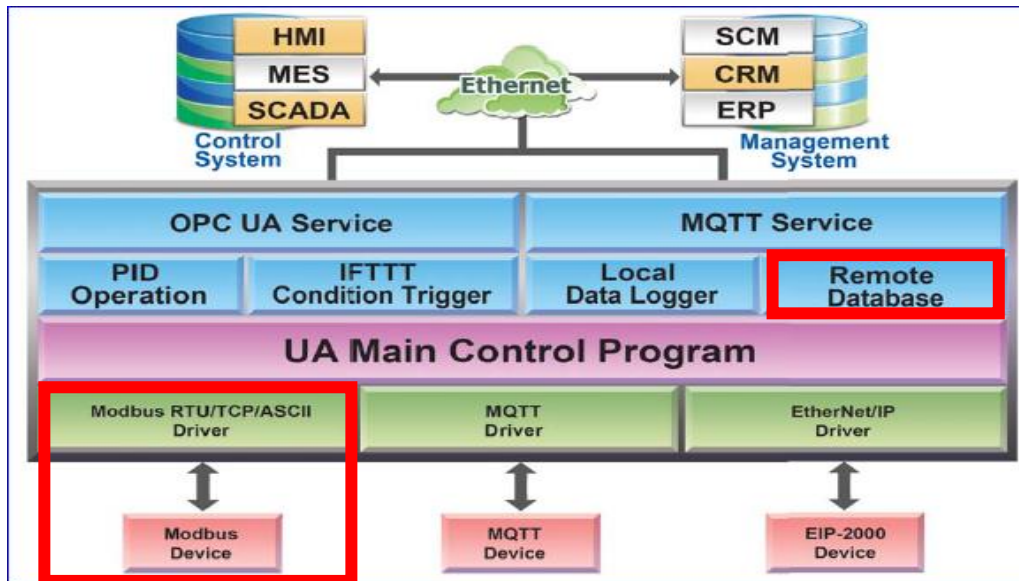

Application Solution:

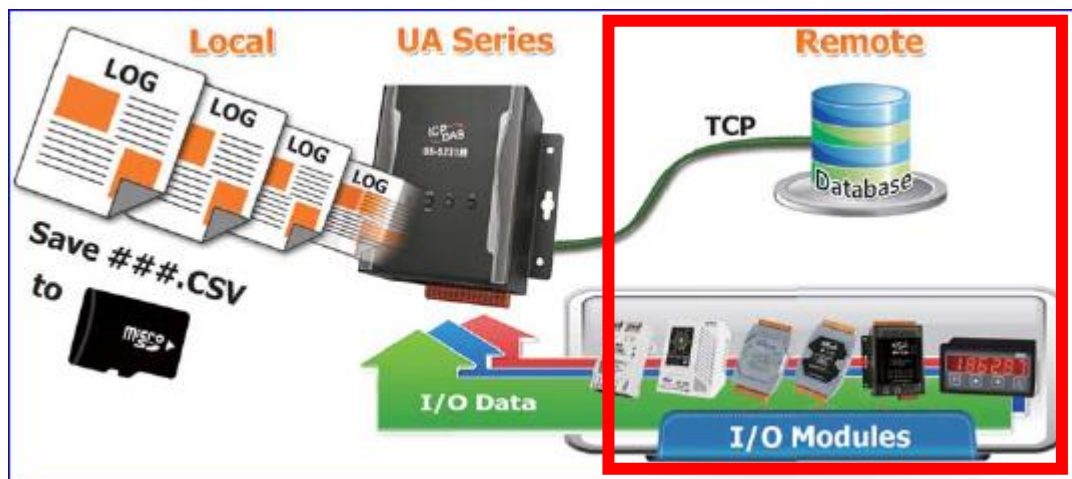


- **Modbus RTU / Remote Database**

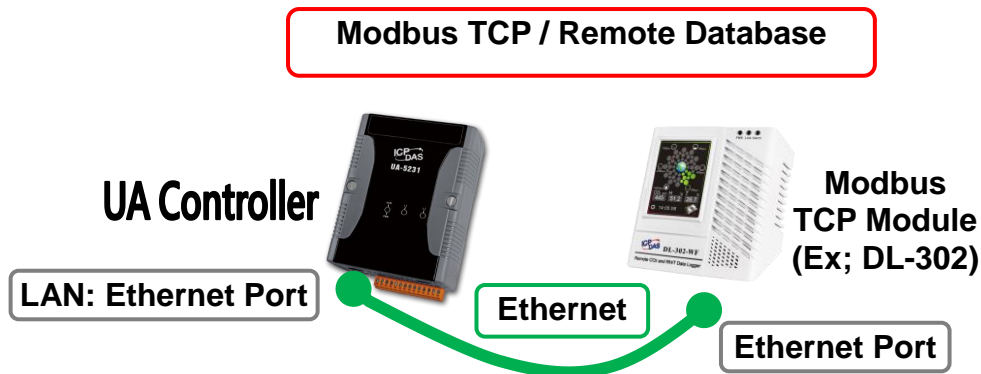


Note: The hardware/network connection methods please see the [Chapter 2](#).

When UA series controller connects the Modbus TCP module (via Ethernet, as the picture), user can choose the item **[Modbus TCP / Remote Database]** of the “Data Log” in the Function Wizard.

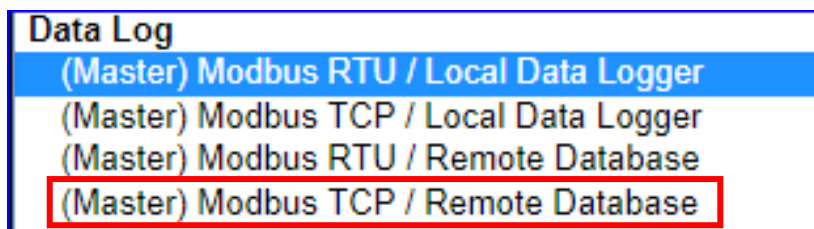

[Step Box]:

The Step Box of the **[Modbus TCP / Remote Database]** has 5 steps. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project quickly and rightly.

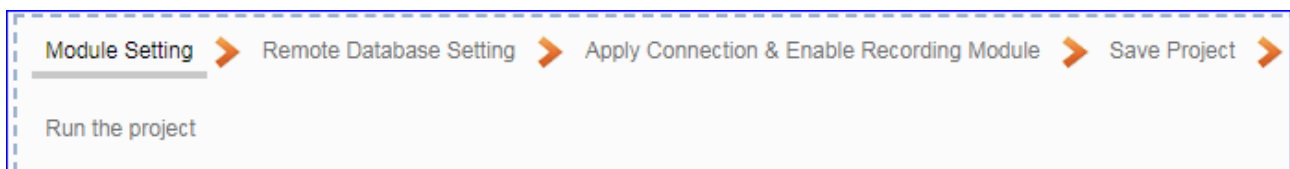


Step 1. Module Setting


It auto-enter the first step, **Step 1 [Module Setting]** of the UI setting.

This page is for setting the communication values with the connected modules. First check the port that connected with the module, and each module can give a name

(Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

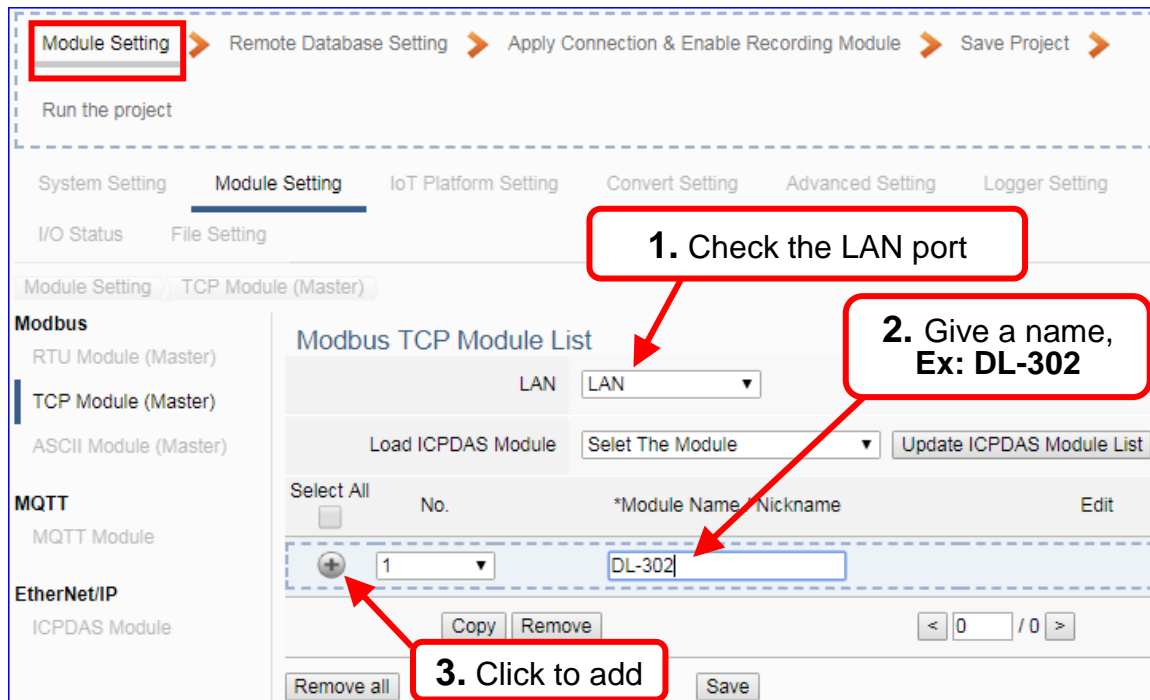

Add a module (No.: 1, Name: DL-302) as below, and then click [Edit] button to enter the “Module Content Setting” page.

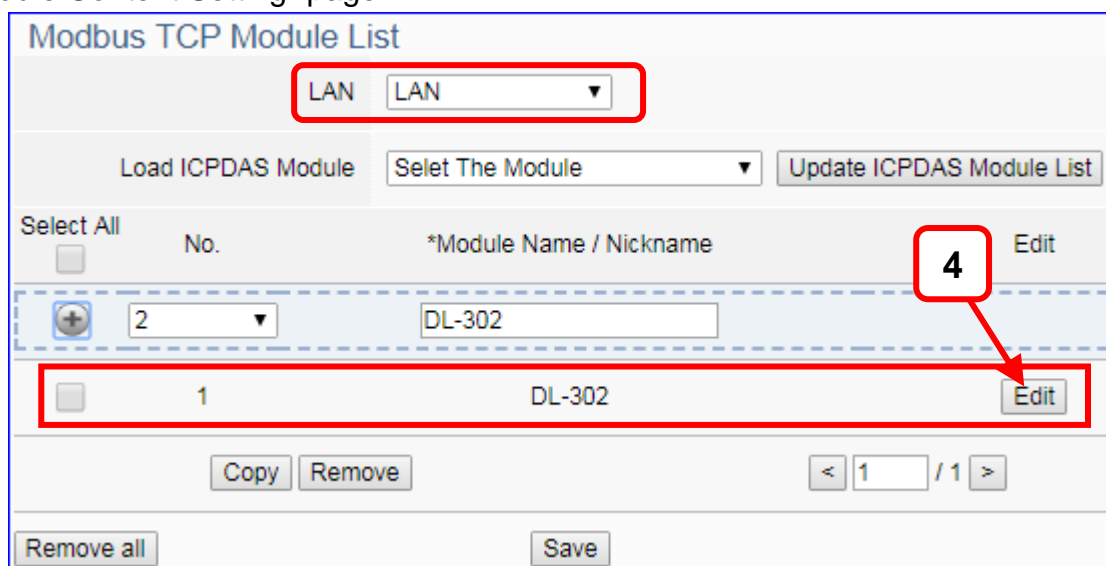

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page can set up the module and the Modbus mapping table:

Module Content Setting	
No.	1
Module Name	DL-302
IP	192 . 168 . 81 . 251
Port	502
Slave ID	1
Timeout(ms)	500
Polling Rate(ms)	500
Modbus Mapping Table Setting	
Data Model	04 Input Registers(3x)
Start Address	0
Data Number	3
Type	16-bit Short
Create Tables	Add Success.

Example: DL-302

[IP] 192.168.81.251 (by user case)

[Modbus Mapping Table Setting]
Data Model: 04 Input Registers(3x)
Start Address: 0
Data Number: 3
Type: 16-bit Short
→ Click [Add]

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI) <div> 01 Coil Status(0x) 02 Input Status(1x) 03 Holding Registers(4x) 04 Input Registers(3x) </div>
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of mapping DO, DI, AO & AI.

Modbus Mapping Table		Address Setting	Nickname Setting
Coil Status(0x)	Input Status(1x)	Holding Registers(4x)	Input Registers(3x)
		<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>3</div> </div> <div> <div>Type</div> <div>Short</div> </div> <div>Edit</div>	
<div>OK</div> <div>Cancel</div>			

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.


Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="CO2"/>	Short	<input type="checkbox"/>	<input type="text"/>
1	<input type="text" value="Humidity"/>	Short	<input type="checkbox"/>	<input type="text"/>
2	<input type="text" value="Temperature"/>	Short	<input type="checkbox"/>	<input type="text"/>
<div style="border: 2px solid red; padding: 5px; display: inline-block;"> User can change, as above. </div>				
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.


Step 2. Remote Database Setting

Click the next step, and enter the **Step 2 [Remote Database Setting]** of the UI setting. This page is for setting the connecting remote database.

We select the “Modbus TCP / Remote Database” at the beginning, so this step will auto enter the **[Advanced Setting > Data Logger > Remote Database]** Setting. The “Step Box” will prevent the user from selecting the wrong platform.

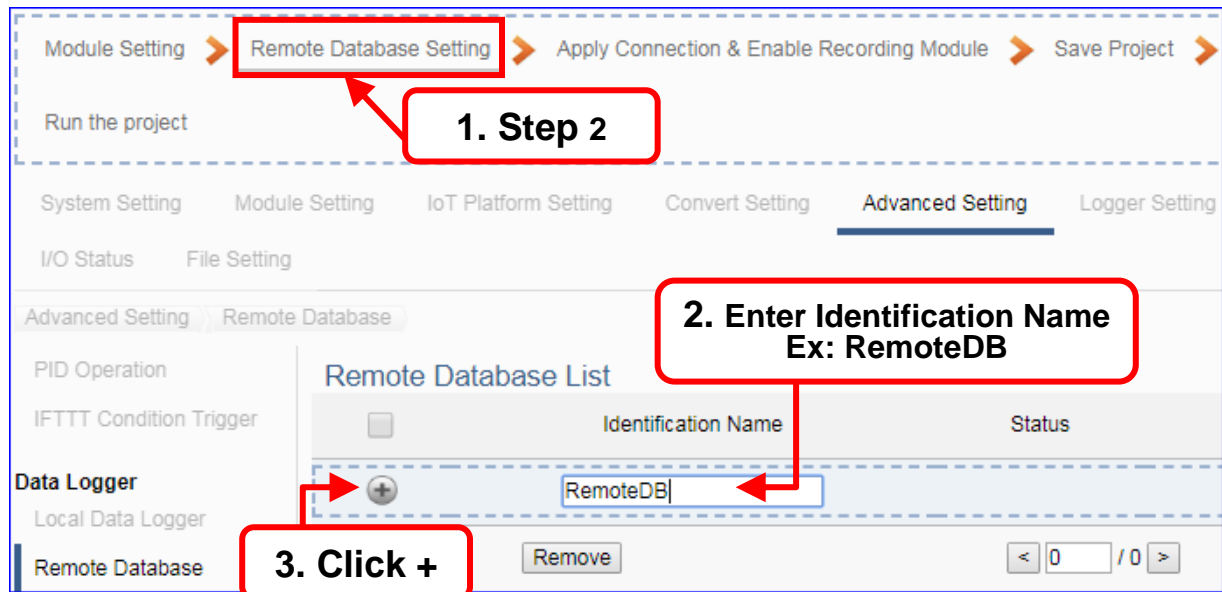

Add a database identification name (Ex: RemoteDB) as below, and then click [Edit] button to enter the “Remote Database Content Setting” page.

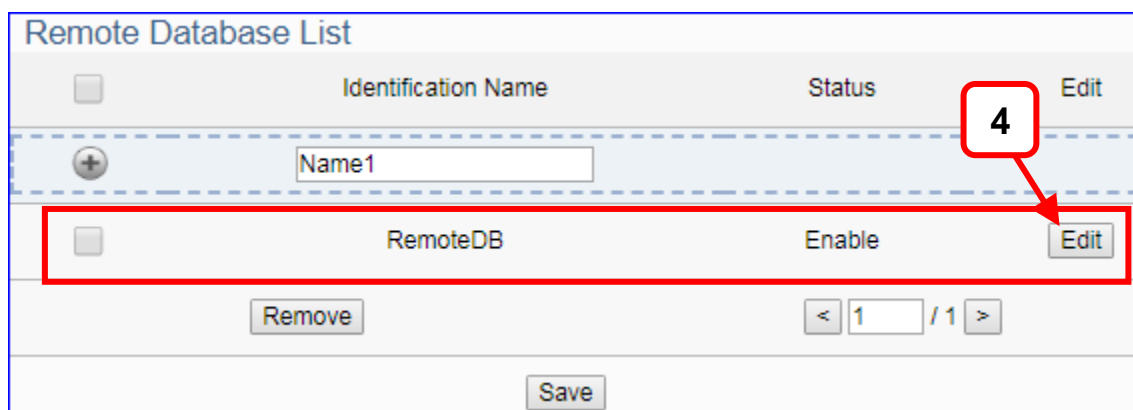

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[Remote Database Content Setting] can set up the database relational setting.

Remote database content settings	
Identification Name	RemoteDB
Database Type	MSSQL ▼
Database Name	DatabaseName
Table Name	TableName
Server Name	127.0.0.1\SQLEXPRESS
Port	1433
Account	root
Password
Interval Seconds	5
Enable	<input checked="" type="checkbox"/>
Test Connection	Connection
<div>OK Cancel</div>	

Advanced Setting > Data Logger > Remote Database – Content Setting	
Identification Name	User defined name to identify the database.
Database Type	Select the MSSQL type for the Microsoft SQL database.
Database Name	The name of the remote database.
Table Name	The table name of the remote database.
Server Name	The Server IP and name of the remote database.
Port	The port to link with database. Default: 1433 (for MS SQL)
Account	The login name of the remote database.
Password	The login password of the remote database.
Interval Seconds	Set up the interval time to save the I/O data to the remote database. Unit: Second.
Enable	Check to enable the data logger to the remote database. Default: check.
Test Connection	Click to test the connection to the remote database. Result: Success or Failure.
OK / Cancel	Click “OK” to save the settings of this page. Click “Cancel” to exit the setting page without saving.

Step 3. Apply Connection & Enable Recording Module

Click the next step, and enter the **Step 3 [Apply Connection & Enable Recording Module]** UI setting. This step is to enable the Modbus TCP module and connection. We select the “Modbus TCP / Remote Database” of “Data Log” at the beginning, so this step will auto enter the **[Logger Setting > Remote Database > TCP Module (Master)]** setting page. The “Step Box” will prevent the user from selecting the wrong platform.



Here select and apply the Database name (Ex: RemoteDB), and enable the DL-302.

Logger Setting > Remote Database > TCP Module (Master)	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for data logger, click [Edit] of that module to enter the “Content Setting”. It is normal to set all channels as enabled, and the function will not affect the unconnected channels.
Database Name	Select and apply the recording remote database name.
All Enabled	Check [All Enabled] box to enable all modules in list for data logger. Default: Uncheck. Check the “box” of each module can enable just that module for data logger.
< 1 / 1 >	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

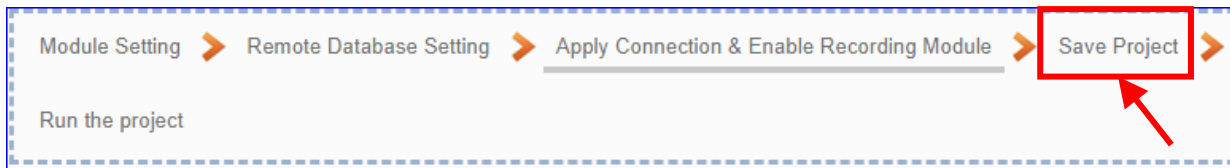


Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

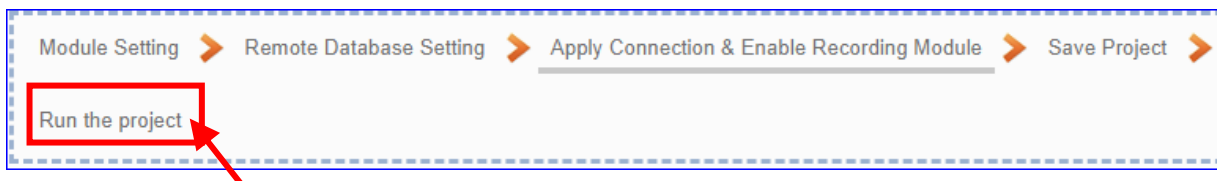

The Step Box will show the words "**Please wait**" (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words "**Please wait**" disappears, the new words "**Success**" appears (as below), that means the UA controller is running new project successfully.




Then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the conversion communication.


4.4. PID

PID (Proportional-Integral-Derivative) control is the most widely used in industrial control systems. A regulator that controlled in accordance with Proportional, Integral and Derivative is called PID control for short, also called PID regulator. When the user cannot fully grasp or measure parameters of the control system, the PID regulator is the best solution.


The PID controller is a common feedback loop component in industrial control applications. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.

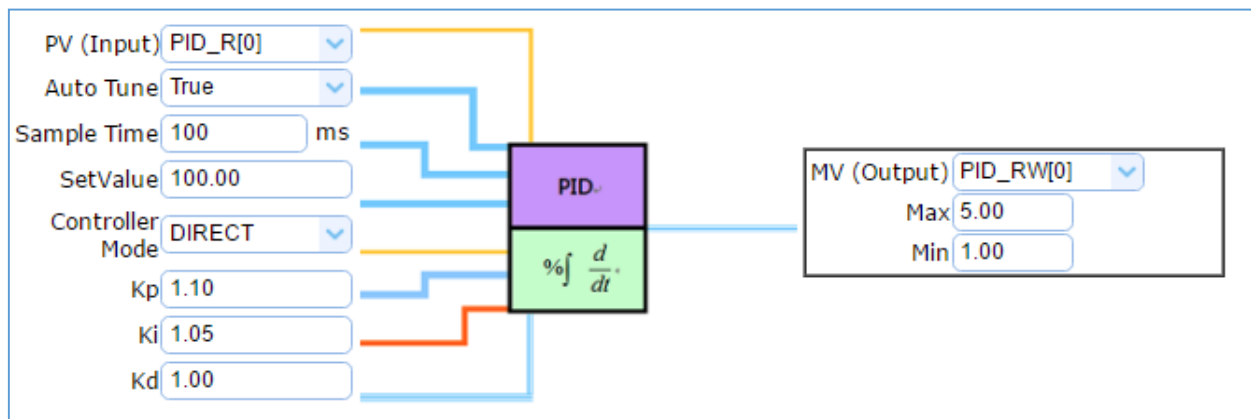


This section introduces the setting steps and the function parameters of the PID. There are 2 items about “PID” function in the “Function Wizard”. The 2nd item [PID Operation + OPC UA Communication Conversion] is combining the 1st item [PID Operation] and the [Section 4.1.1 Modbus / OPC UA Conversion](#) .

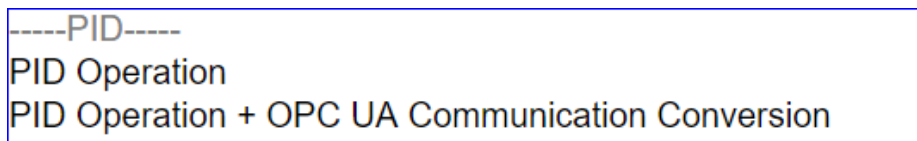

[Step Box] of [PID Operation] :

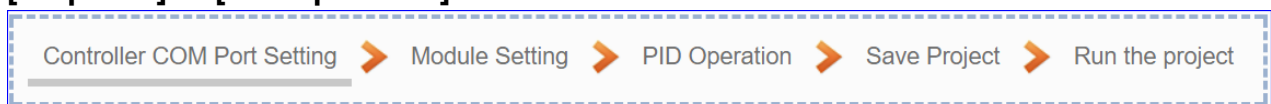


[Step Box] of [PID Operation + OPC UA Conversion] :

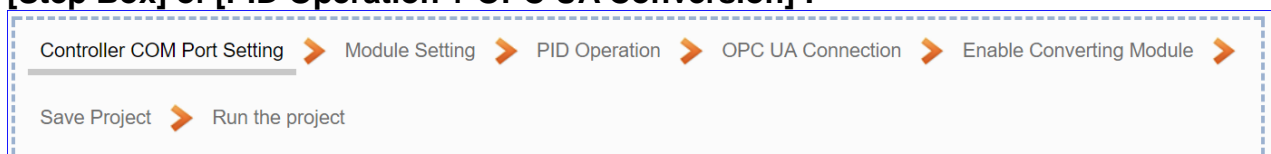


4.4.1. PID Operation

In the PID Operation function, UA controller collects the module's data to operate via the feedback loop component of PID control. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value. This section will introduce the setting steps and the function parameters of the [PID Operation].

Function Diagram for PID Operation:

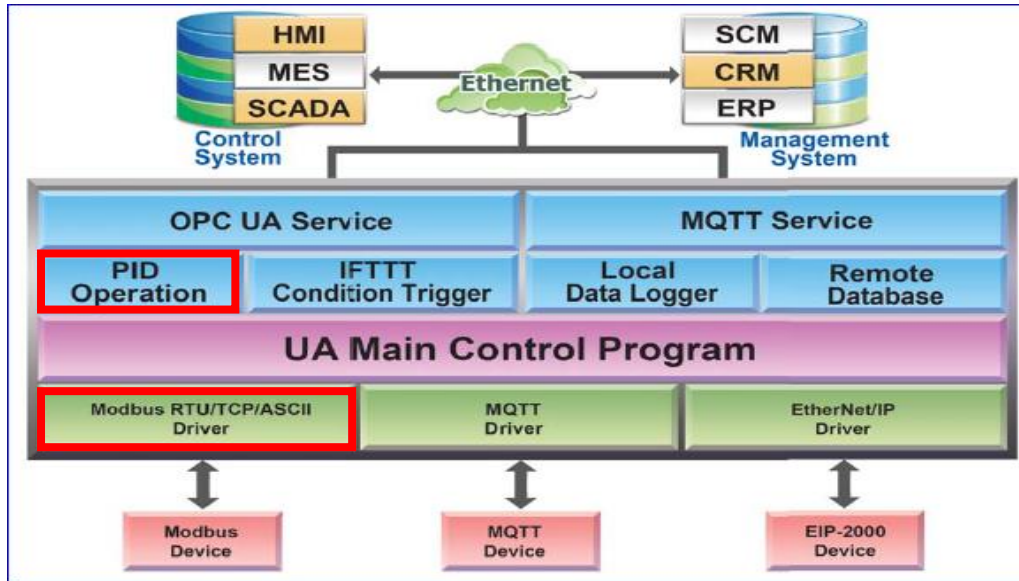


Application Solution Example:

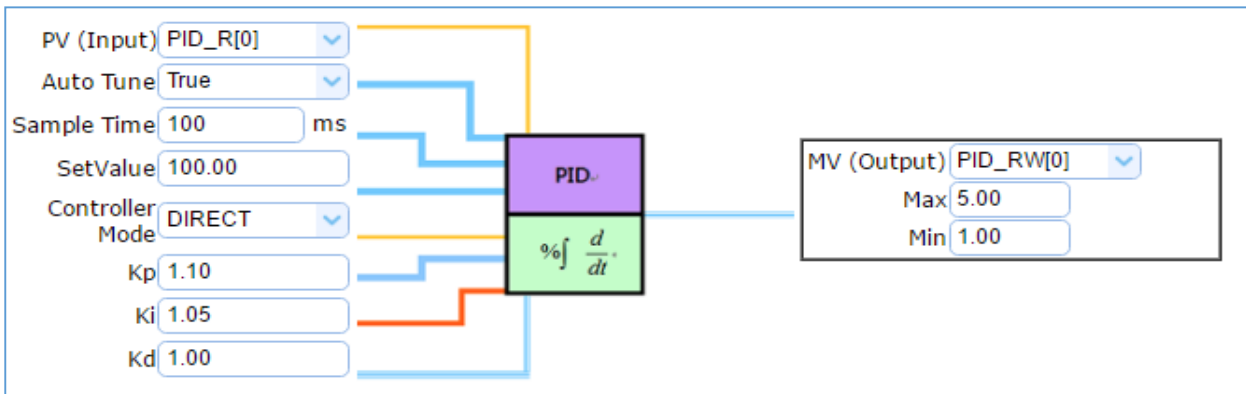

[Step Box]:

The Step Box of the [PID Operation] has 5 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project.



Step 1. Controller COM Port Setting

This page allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.

The user can find the default communication values of our I/O modules from the module CD, manual or [I/O Module website](#).

Controller COM Port Setting > Module Setting > PID Operation > Save Project > Run the project

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Setting File Setting

System Setting COM Port Interface Setting

Controller Service Setting
Time Setting
Network Setting
Account Setting
Boot
COM Port Interface Setting

COM Port Interface Setting Page

Serial Port	ttyO5
Baud Rate	9600
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Polling Rate(ms)	500


Save

COM Port Interface Setting Page	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485 ; ttyO4: RS-232 ; ttyO5: RS-485
Baud Rate	Choose a baud rate to communicate with the module: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The UA controller and the I/O module need have the same baud rate.
Data Bits	The number of bits used to represent one byte of data: 7 bits or 8 bits. Default: 8 Bits.
Parity	Choose one way for the parity checking. Options: None, Even, and Odd. Default: None.
Stop Bits	Choose the number of stop bit: 1 bit or 2 bits. Default: 1.
Polling Rate(ms)	Set a time interval for the command. Default: 500 ms
Save	Click [Save] button could save the settings of this page.


Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]** of the UI setting. This page is for setting the communication values with the connected modules.

First, choose the serial port that connected with the module. If use ICP DAS module, select the model to auto load the module setting. If not, give a name (Default: Name), click [+] button to add a module.

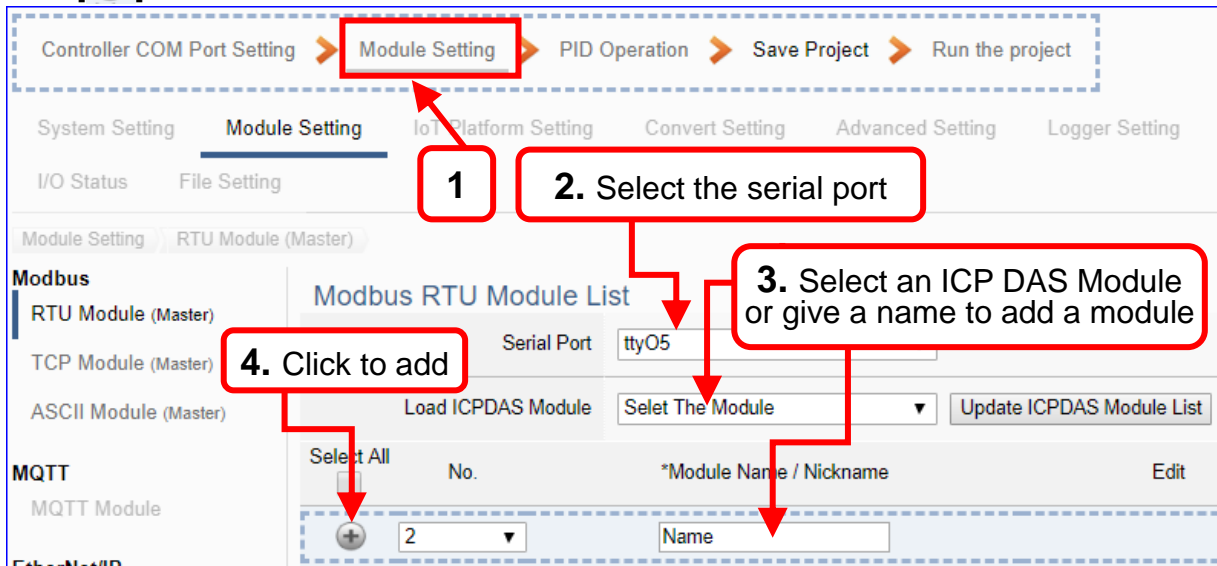

Add a module (No.: 1, Name: M-7055D) as below, and then click [Edit] button to enter the “Module Content Setting” page.

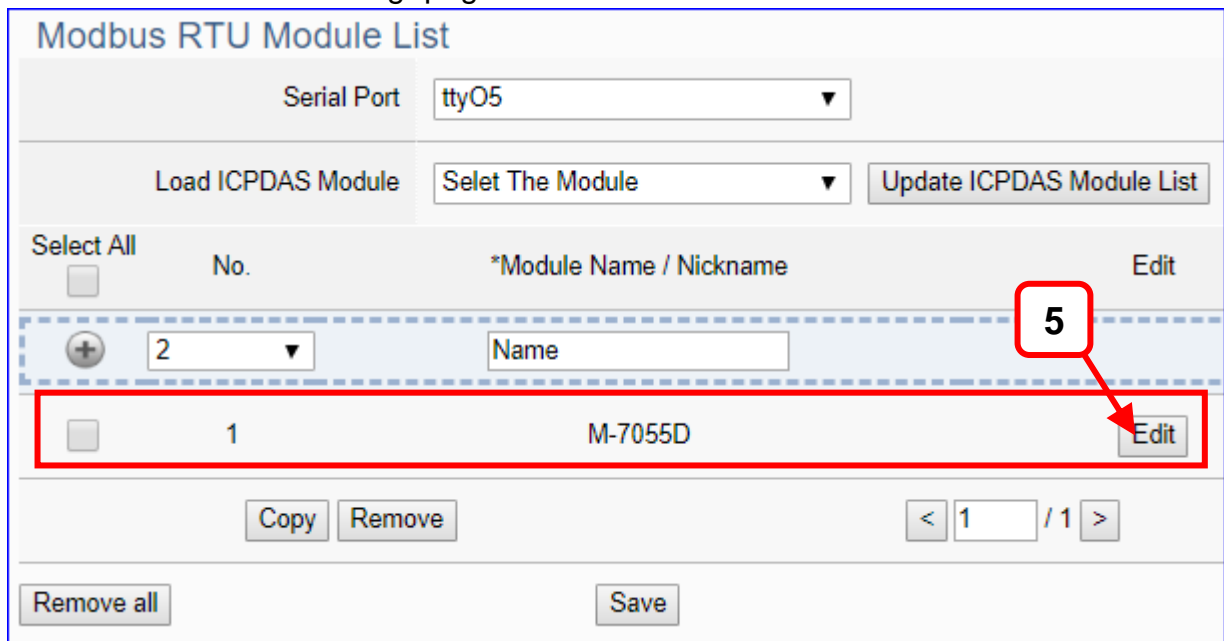

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page can set up the module and the Modbus address mapping table:

Module Content Setting	
No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500

Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x)
Start Address	0
Data Number	1
Create Tables	Add

If select ICP DAS module, system will auto set up the Modbus Mapping Table; if not, user needs to check the Modbus address or I/O number from the module user manual.

> **Modbus Mapping Table Setting:**

Set module in the order of Data Model, Start Address and Data Number, then click "Add".

Ex: M-7055D has 8 Data Models of "01 Coil Status (0x)" (Mapping: DO), so select Model "01", Start Add. "0", Number "8", and click "Add".

Coil Status(0x)	
Address	0
Number	8
Type	Bool
Edit	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table		Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)	
Input Registers(3x)					
Address	0	Address	0		
Number	8	Number	8		
Type	Bool	Type	Bool		
<input type="button" value="Edit"/>		<input type="button" value="Edit"/>			
				<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.


Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 3. PID Operation


Click the next step, and enter the **Step 3 [PID Operation]** of the UI setting.
This page is for setting the Task and related parameters of the PID Operation, e.g. I/O module, I/O channels, variables, set point, control mode

We select the “**PID Operation**” at the beginning, so this step will auto enter the setting page [**Advanced Setting > PID Operation**]. The “Step Box” will prevent the user from selecting the wrong platform.

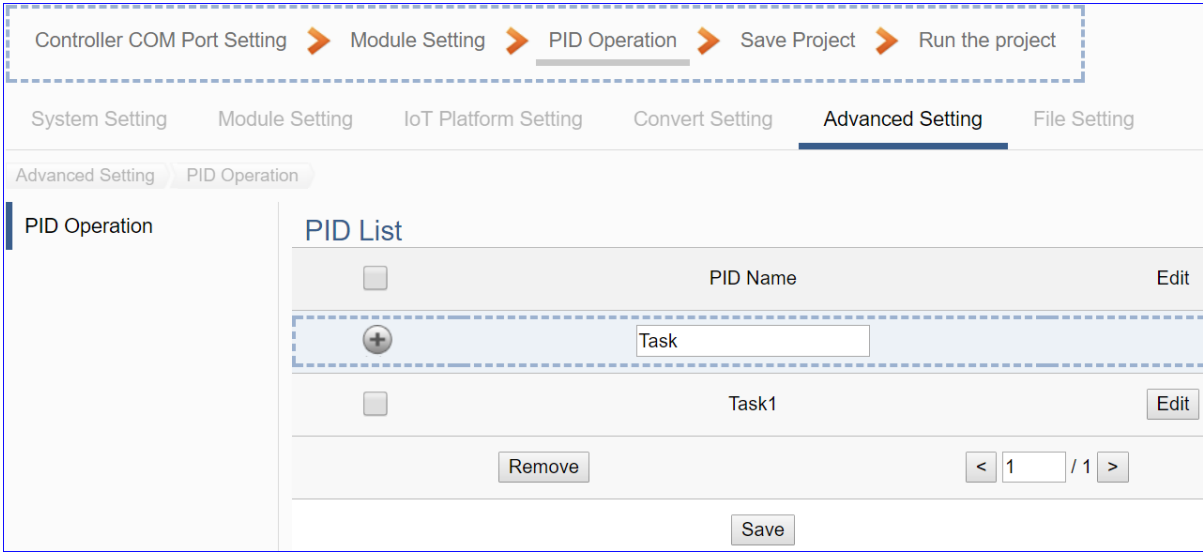

Advanced Setting > PID Operation > PID List	
PID Name	PID name, user can define, e.g. Task1. Default: Task.
	Click to add a new PID Task.
Edit / Remove	Click [Edit] can set the PID content. Click the left box and [remove] can delete the PID list.
	The page number of the PID list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the setting of this page.

Click to add a PID Task, and click [Edit] button to enter the [Content Settings] page:

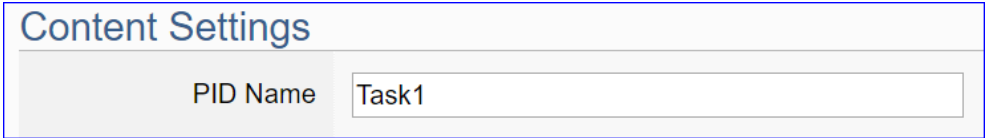

Advanced Setting > PID Operation > Content Settings	
PID Name	PID name, user can define, e.g. Task1. Default: Task.

Input Item	
Module selection	Type : <input type="text"/> Please select the module type.
	No. : <input type="text"/> Please select the number. When no option is available, add a module.
	Name : <input type="text"/>
Variable selection	Attribute <input type="text"/> Please select item.
	Type : <input type="text"/> Please select item.
	Name : <input type="text"/> Please select name. When there is no option, add the variables in the module.
Auto Tune	<input checked="" type="checkbox"/> Enabled
Sample Time(ms)	<input type="text" value="500"/>
Setpoint	<input type="text" value="0"/>
Controller Mode	<input type="text" value="DIRECT"/>
Kp	<input type="text" value="1"/>
Ki	<input type="text" value="1"/>
Kd	<input type="text" value="1"/>


Advanced Setting > PID Operation > Input Item	
Module selection	Choose a predefined module for input data of the PID. Select the type, number and name of the input module. If no option is available, add a new module.
Variable selection	Choose a predefined float variable as the input parameter for PID operation. Select the attribute, type and name of the float variable.
Auto Tune	Enable: Auto-tuning PID parameters for your system. Default: check. Un-Enable: Tuning PID parameters manually, e.g. Kp, Ki, Kd.
Sample Time (ms)	Set the sampling time. (Unit: ms) Default: 500 ms.
Setpoint	The target value for PID control. Default: 0.
Controller Mode	DIRECT: Set it as positive output value. Default: DIRECT. REVERSE: Set it as reverse output value.
Kp	Set the Proportional gain. Default: 1.
Ki	Set the Integral gain. Default: 1.
Kd	Set the Derivative gain. Default: 1.

Output Item	
Module selection	Type : <input type="text"/> Please select the module type.
	No. : <input type="text"/> Please select the number. When no option is available, add a module.
	Name : <input type="text"/>
Variable selection	Attribute <input type="text"/> Please select item.
	Type : <input type="text"/> Please select item.
	Name : <input type="text"/> Please select name. When there is no option, add the variables in the module.
Max	<input type="text" value="0"/>
Min	<input type="text" value="0"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Advanced Setting > PID Operation > Output Item

Module selection	Choose a predefined module for output data of the PID. Select the type, number and name of the input module. If no option is available, add a new module.
Variable selection	Choose a predefined float variable as the output parameter for PID operation. Select the attribute, type and name of the float variable.
Max	Set the upper-limit value for the variable. Default: 0.
Min	Set the lower-limit value for the variable. Default: 0.
OK	Click to save the settings of the page and back to the PID list page.


Example:

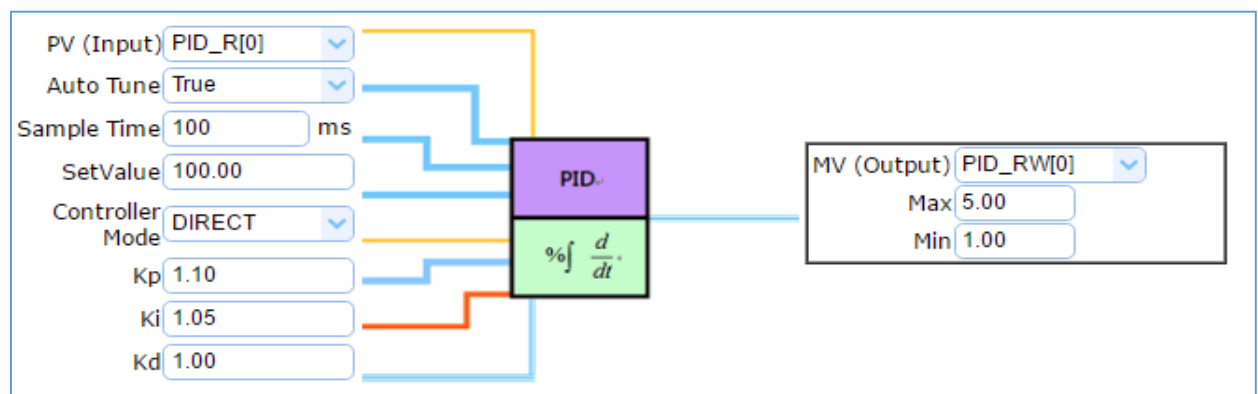

Step 4. Save Project


The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.

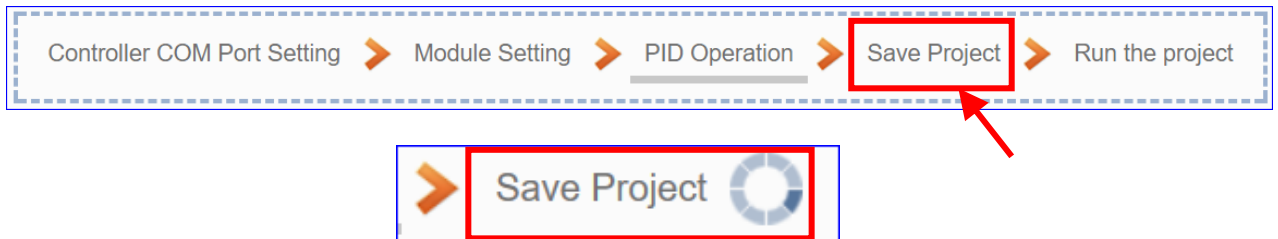


Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].

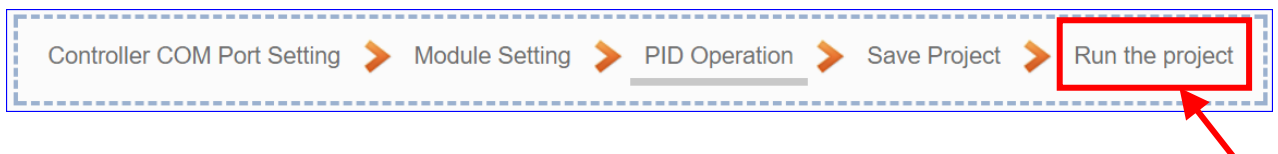

The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.



And then the Step Box will disappear automatically now, and back to the first screen view of the Web UI.

The new project now completes the setting, uploading and running in the UA controller and can process the new function project.


4.5. APP Message Notify

The "APP Message Notify" in the UA Function Wizard provides a condition trigger of IFTTT.

IFTTT (if this then that) is a cloud service platform that easy to get your apps and devices working together via creating chains of simple conditional statements (applets). An applet is triggered by changes that occur within other web services such as Line, Facebook, Twitter, Gmail, Instagram, etc. For example, "if" Facebook (Service A) has a new message, "then" send an email to Gmail (Service B). With the IFTTT cloud platform and UA functions, the users can send messages to IFTTT-related cloud services such as Line, Facebook, Twitter, etc. when the special events occur.



This section introduces the setting steps and the function parameters of the "APP Message Notify" and its item of "IFTTT Condition Trigger (Line, Face, Twitter)" function in the "Function Wizard" (Detail in [Section 4.4.1](#)).



[Step Box] of [IFTTT Condition Trigger (Line, Facebook, Twitter)] :



4.5.1. IFTTT Condition Trigger (Line, Facebook, Twitter)

The “IFTTT Condition Trigger (Line, Facebook, Twitter)” combines the functions of the UA and IFTTT cloud platform. When the modules occur the special events that setting in the UA condition, it will trigger the IFTTT and send the message to the IFTTT-related cloud services (such as Line, Facebook, Twitter, etc.)

The settings for sending the message to the APP with the "IFTTT Condition Trigger (Line, Facebook, Twitter)" function includes two parts:

1. UA Web Interface Setting:

In the UA Web HMI, set up the UA controller, modules, IFTTT trigger conditions, the condition variable table, and the IFTTT event connection.


2. IFTTT Cloud Platform Setting:

In the IFTTT website, set up the “**if**” side service and event (**this**: use **webhooks** for the UA), the “**then**” side service and action (**that**: user can select the service, such as the Line, Facebook, twitter, etc.). And then fill the “**Event Name**” and “**Key**” getting from the IFTTT website setting into the “**Content Setting**” of the UA We HMI. (Detail in the [Appendix C.](#))



[Step Box]:

The Step Box of the [IFTTT Condition Trigger (Line, Facebook, Twitter)] has 6 steps as below. When enabling the Step Box, it auto enters the first step setting page (The step with a bold underline means it is the current step.). The user just needs to follow the “Step Box” step-by-step and then can complete the project.

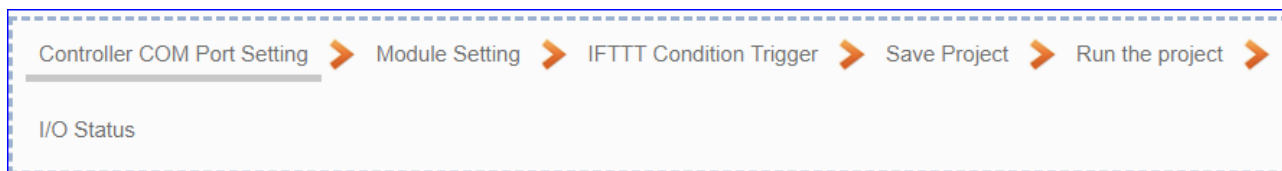

Step 1. Controller COM Port Setting

This page allows display and set the COM port interface of the controller for the serial communication. The user can find the default communication values of our I/O modules from the module CD, manual or [I/O Module website](#).

The screenshot shows the 'Controller COM Port Setting' page. The breadcrumb navigation at the top is: Controller COM Port Setting > Module Setting > IFTTT Condition Trigger > Save Pr. The left sidebar contains the following menu items: I/O Status, System Setting (selected), Module Setting, IoT Platform Setting, Convert Setting, and Advance. Under 'System Setting', the sub-menu 'COM Port Interface Setting' is selected. The main content area is titled 'COM Port Interface Setting Page' and contains the following settings:

Setting	Value
Serial Port	ttyO2
Baud Rate	115200
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Polling Rate(ms)	500


A 'Save' button is located at the bottom right of the settings area.

COM Port Interface Setting Page	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485 ; ttyO4: RS-232 ; ttyO5: RS-485
Baud Rate	Choose a baud rate to communicate with the module: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The UA controller and the I/O module need have the same baud rate.
Data Bits	The number of bits used to represent one byte of data: 7 bits or 8 bits. Default: 8 Bits.
Parity	Choose one way for the parity checking. Options: None, Even, and Odd. Default: None.
Stop Bits	Choose the number of stop bit: 1 bit or 2 bits. Default: 1.
Polling Rate(ms)	Set a time interval for the command. Default: 500 ms
Save	Click [Save] button could save the settings of this page.


Step 2. Module Setting

Click the next step, and enter the **Step 2 [Module Setting]** of the UI setting. This page is for setting the communication values with the connected modules.

First, choose the serial port that connected with the module. If use ICP DAS module, select the model to auto load the module setting. If not, give a name (Default: Name), click [+] button to add a module.

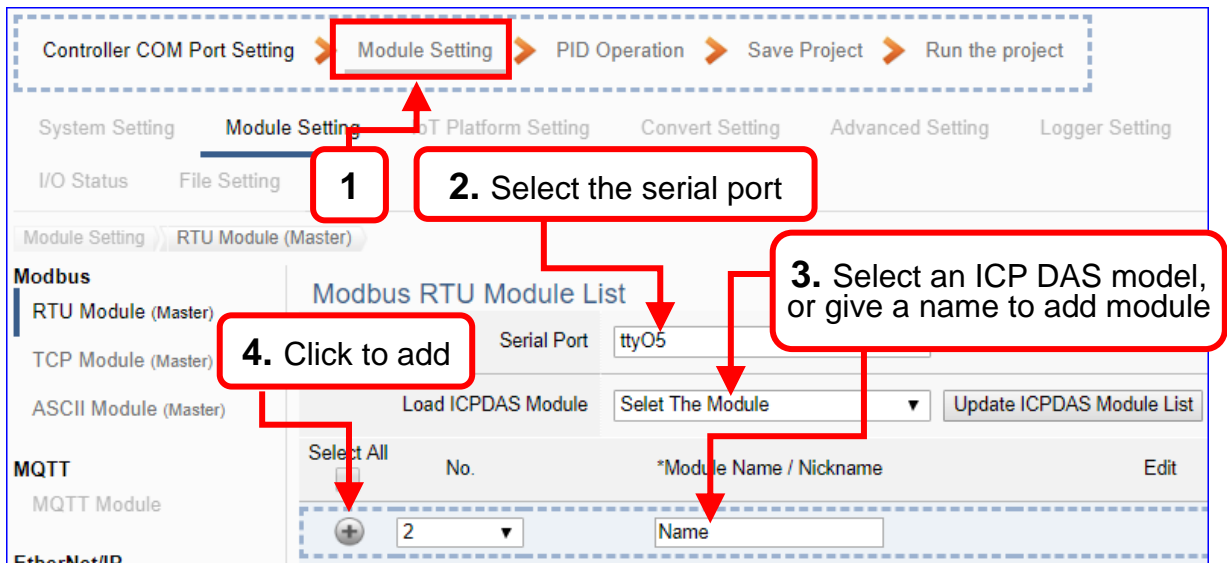

Add a module (Ex: No.: 1, Name: M-7055D) as below, and then click [Edit] button to enter the “Module Content Setting” page.

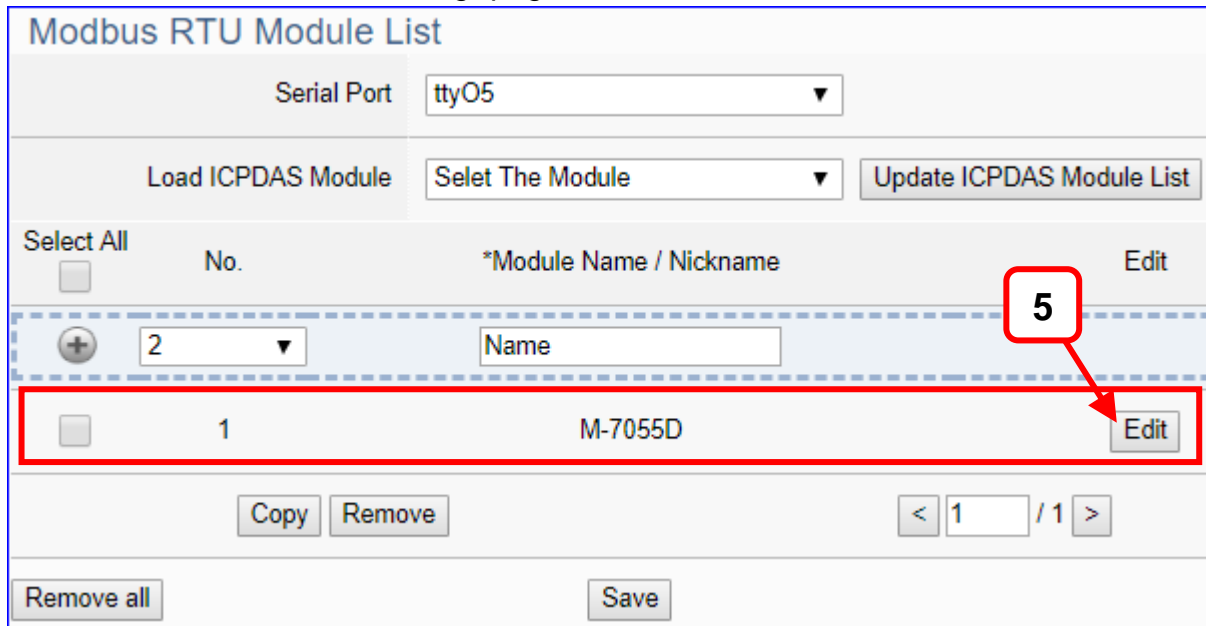

If set up a wrong module, user can click the box in the left side of the module number and click the [Remove] button to delete the module.

[**Module Content Setting**] page can set up the module and the Modbus address mapping table:

Module Content Setting	
No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500

Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x)
Start Address	0
Data Number	1
Create Tables	<input type="button" value="Add"/>

If use ICP DAS module, system can auto setup Modbus Mapping Table; if not, user needs to check Modbus address or I/O number from the module user manual.

> **Modbus Mapping Table Setting:**

Set up in the order of Data Model, Start Address and Data Number, then click "Add".

Ex: M-7055D has 8 Data Models of "01 Coil Status (0x)" (Mapping: DO), so select Model "01", Start Add. "0", Number "8", and click "Add".

Coil Status(0x)	
Address	0
Number	8
Type	Bool
<input type="button" value="Edit"/>	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table				Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)		Input Registers(3x)	
Address	0	Address	0				
Number	8	Number	8				
Type	Bool	Type	Bool				
<input type="button" value="Edit"/>		<input type="button" value="Edit"/>					
				<input type="button" value="OK"/>		<input type="button" value="Cancel"/>	

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

Step 3. IFTTT Condition Trigger

Click the next step, and enter the **Step 3 [IFTTT Condition Trigger]**.

This page is for the APP message related setting, e.g. IFTTT event name, key, trigger condition, I/O variables

We select the “**IFTTT Condition Trigger (Line, Facebook, Twitter)**” at the beginning, so this step will auto enter the setting page [**Advanced Setting > IFTTT Condition Trigger**]. The “Step Box” will prevent the user from selecting the wrong platform.

Advanced Setting > IFTTT Condition Trigger > FTTT Condition Trigger List	
Add Message	Click to add a new IFTTT message. After setting, an IFTTT condition trigger list will show on the bottom includes left box, event name, key and status.
<input type="checkbox"/>	Check the box in the left of the list is to select and to delete the list. Check the box on the top will select all lists.
Event Name	Display the “Event Name” setting in the IFTTT website. (Append. C)
Key	Display the “Key” getting from the IFTTT website. (Append. C)
Edit	Click [Edit] can set the IFTTT condition trigger content.
Status	Display the enable status of the IFTTT condition trigger list.
Remove	Click the left box and [remove] can delete the IFTTT list.
	The page number of the IFTTT list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the setting of this page.

Click [Add Message] button to enter the IFTTT [Content Settings] page:

Content Setting	
Event Name	UA-5200 test
Key	fkCGvasDPR-xYe2ugpgQ7
Status	<input checked="" type="checkbox"/> Enabled

Note: Case sensitive for Event Name and Key.

Note: The “Event Name” and “Key” are set in the IFTTT website. If you are not familiar with IFTTT, please see the [Appendix C](#) for the setting introductions.

Advanced Setting > IFTTT Condition Trigger > Content Setting	
Event Name	Input the “Event Name” setting in the IFTTT website. (Appendix C)
Key	Input the “Key” getting from the IFTTT website. (Appendix C)
Status	Check to enable the IFTTT condition trigger event.


Module Variables	Operator	Value
<div>↓ Module Type</div> <div>Modbus RTU (Master) ▼</div>		
<div>↓ Module Name</div> <div>No.1 M-7 ▼</div>		<div>Type : User-Defined ▼</div>
<div>↓ Variable Attribute</div> <div>Read ▼</div>	= ▼	<div>Dead Band : 1</div>
<div>↓ Variable Name</div> <div>Tag0 (Short) ▼</div>		
<div>Add</div>		

Advanced Setting > IFTTT Condition Trigger > Condition Setting	
Module Variables	Select the module and variable for the condition trigger. Module Type: select the module type, Modbus RTU/TCP/ASCII... Module Name: select the module that set for condition trigger. Variable Attribute: select the variable attribute for condition trigger. Variable Name: select the variable name for condition trigger.
The following condition fields may different depending on the selected variable attribute. The condition trigger method will be described after this table.	
Operator	Select the operator for the trigger condition.
Value	Set up the value for the condition, include Type and Dead Band.
Status	Set up the status for the condition. Default: 0.
Add	Click to add a condition trigger list in the Condition Table..

Condition Trigger Descriptions:

The condition trigger method will be different depending on the attribute of the selected variable and the trigger will be different. There are two operation styles: **DIO** and **AIO**.


(A) If select **DIO variable**, then Condition is "Status Change". When detecting the status is changed, it will trigger the event and send the assigned message. (Below is a switch detecting example.)

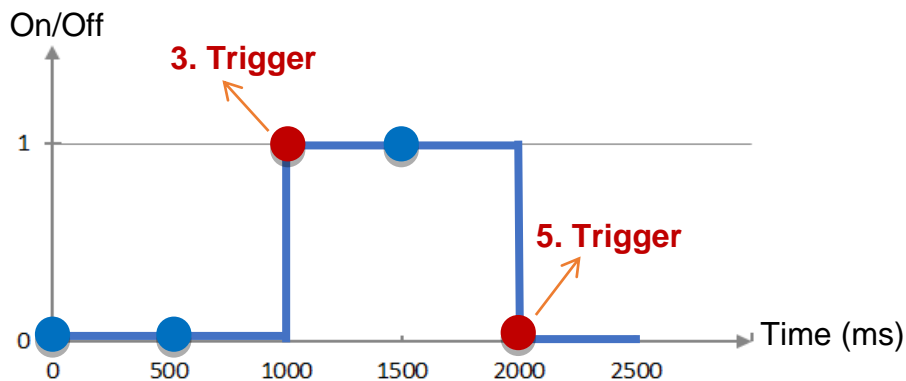

DIO Trigger: (Detect per 500 ms)

1. Detect initial switch status "Off" (status = 0)
2. Detect "Off" (status = 0, status no change), no trigger
3. Detect "On" (status = 1, status changed), **trigger** a message notification
4. Detect "On" (status = 1, status no change), no trigger
5. Detect "Off" (status = 0, status changed), **trigger** a message notification

(B) If select **AIO variable**, then Condition is “Value” and can set the “Dead Band”. The condition will be triggered and send the message when the detected value exceeds the upper or lower Dead Band. (Below is a CO2 example. Detect per 500 ms)

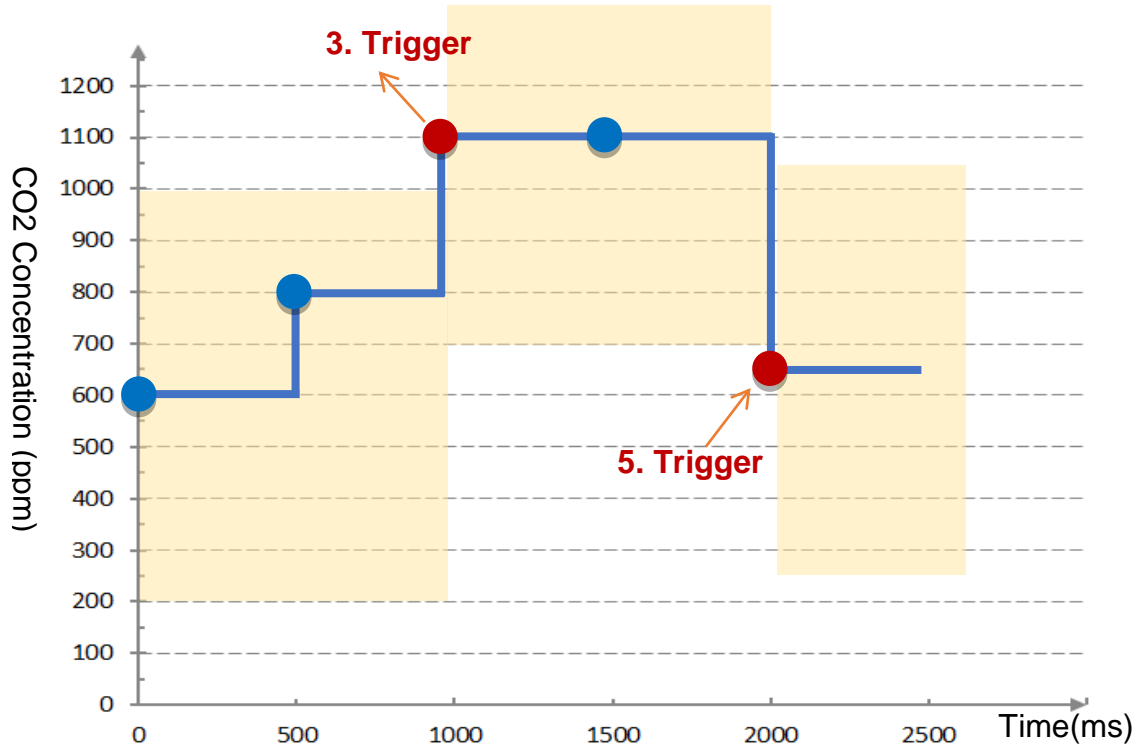

AIO Trigger: (Detect per 500 ms. The yellow block means the Dead Band.)

1. Detect initial CO2 concentration 600 (ppm).
Set Dead Band=400 (Initial Trigger Condition: ≥ 1000 or ≤ 200)
2. Detect CO2 concentration 800. It is in the range of Dead Band.
3. Detect CO2 concentration 1100. It exceeds the upper value (≥ 1000) of Dead Band, so **trigger** a message for danger notification.
4. Detect CO2 concentration 1100. It is in the new range of Dead Band.
Dead Band=400 (New Trigger Condition: ≥ 1500 or ≤ 700)
5. Detect CO2 concentration 650. It is below the lower value (≤ 700) of Dead Band, so **trigger** a message for safety notification.

Please refer to the previous Condition Trigger Descriptions to set up your Condition. When complete, click the “Add” button. The setting will show in the Condition Table. Below Table is setting 2 conditions.

Condition Table			
<input type="checkbox"/>	Module	Variable	Define Message
<input type="checkbox"/>	Modbus RTU (Master) No.2 M-7055D	Tag0 Read / Write Bool	Status Change MRTU_No.2_M-7055D
<input type="checkbox"/>	Modbus TCP (Master) No.1 DL-302	CO2 Read / Write Short	Deadband=400 MTCP_No.1_DL-302
Remove			
OK Cancel			

Advanced Setting > IFTTT Condition Trigger > Condition Table	
Module	Display the module type and name of the condition. (Not editable here)
Variable	Display the variable attribute and name of the condition. (Not editable here)
Condition	Display the trigger condition. (Not editable here)
Define Message	Default Message: module code_variable code. The user can define own message in the format of English character, number, general symbol...
Remove	Click the left box and [remove] can delete the IFTTT list.
OK	Click to save this page settings and back to the module list page.
Cancel	Click to exit without saving and back to the module list page.


When back to the IFTTT Condition Trigger List, the condition trigger message will show as below picture. If need more trigger conditions, click the “Add Message” again to combine the IFTTT APP message sending and the UA system. At last, click the Save button.

IFTTT Condition Trigger List			
<input type="checkbox"/>	Event Name	Key	Status
Add Message			
<input type="checkbox"/>	UA-5200 test	fkCGvasDPR-xYe2ugpgQ7	Enabled
Remove		< 1 / 1 >	
Save			

Step 4. Save Project

The setting of this example is finished now, and then to save the whole project and run the project. So the last two steps will not show setting pages, but show some displays.

Click the next step [**Save Project**], the Step Box will show an animation as below picture, that means the project is saving. When the animation vanished, the project is saved completely.




Step 5. Run the Project

The project, after saving, needs to be executed. Click the next step [**Run the Project**].




The Step Box will show the words “**Please wait**” (as below), that means the system is deleting the old project in the UA controller, and will upload the new project into the UA series and run the new project. When the words “**Please wait**” disappears, the new words “**Success**” appears (as below), that means the UA controller is running new project successfully.



The new project now completes the setting, uploading and running in the UA controller and can process the new function project.

Step 6. I/O Status

The last step [**I/O Status**] can show the I/O real time status of the modules.

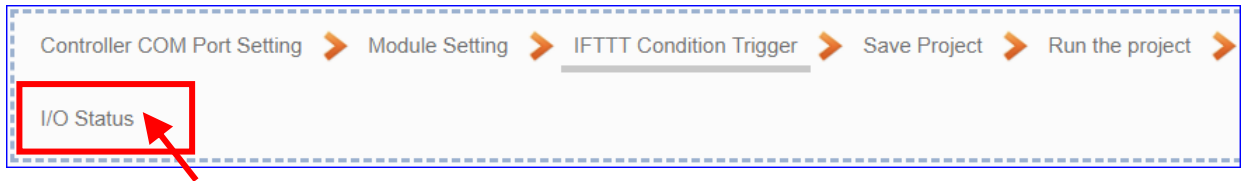

When click the last step, the Step Box will disappear automatically now, and go to the I/O Status screen view.

Click the left module name, the right screen will show the module setting and the I/O real time status of the selected module.

I/O Status

Modbus RTU Module (Master)

No.	Name	Serial Port
1	M-7	ttyO2
2	M-7055D	ttyO5

< 1 / 1 >

Modbus TCP Module (Master)

No.	Name	LAN
1	DL-302	LAN

< 1 / 1 >

Modbus ASCII Module (Master)

No.	Name	Serial Port
-----	------	-------------

< 1 / 0 >

Related Settings

Number of variables

10

(Updated 10 points per second)

Display Update Time (ms)

1000

I/O Status

Variable Name	Data Type	Value	Description	Status
CO2	Short	869		Good
Humidity	Short	5417		Good
Temperature	Short	2606		Good

< 1 / 1 >

The project for APP message notifies via the IFTTT condition trigger (Lind, Facebook, Twitter) is now done.

5. System Setting

System Setting is the first item of the Main Menu and the first screen view when login the UA Web UI. The System Setting provides the functions for system management of UA series controller and displays the version information of the system (Higher-left picture).

[System Setting] includes several sub-menu functions (Left picture) and the function descriptions are listed on the page of the Main Menu, such as the controller service, time, network, account, boot and COM port interface settings. This chapter will introduce these function items and setting parameters.

System Setting															
I/O Status File Setting															
System Setting															
Controller Service Setting	Version Information														
Time Setting	<table border="1"> <tbody> <tr> <td>Middleware Version</td> <td>Version 1.0.2.5</td> </tr> <tr> <td>Main Program</td> <td>Version 1.0.3.0</td> </tr> <tr> <td>Web Interface</td> <td>Version : 5.0.0 Date : 2018/11/30</td> </tr> <tr> <td>Install Information</td> <td>2018/12/24-12:14:03_Factory_InstallSuccess</td> </tr> </tbody> </table>	Middleware Version	Version 1.0.2.5	Main Program	Version 1.0.3.0	Web Interface	Version : 5.0.0 Date : 2018/11/30	Install Information	2018/12/24-12:14:03_Factory_InstallSuccess						
Middleware Version	Version 1.0.2.5														
Main Program	Version 1.0.3.0														
Web Interface	Version : 5.0.0 Date : 2018/11/30														
Install Information	2018/12/24-12:14:03_Factory_InstallSuccess														
Network Setting	<table border="1"> <thead> <tr> <th colspan="2">System Setting</th> </tr> </thead> <tbody> <tr> <td>Controller Service Setting</td> <td>Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.</td> </tr> <tr> <td>Time Setting</td> <td>Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)</td> </tr> <tr> <td>Network Setting</td> <td>Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)</td> </tr> <tr> <td>Account Setting</td> <td>Account Setting provides the function to set the username and password of the web UI.</td> </tr> <tr> <td>Boot</td> <td>Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.</td> </tr> <tr> <td>COM Port Interface Setting</td> <td>COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.</td> </tr> </tbody> </table>	System Setting		Controller Service Setting	Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.	Time Setting	Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)	Network Setting	Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)	Account Setting	Account Setting provides the function to set the username and password of the web UI.	Boot	Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.	COM Port Interface Setting	COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.
System Setting															
Controller Service Setting		Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.													
Time Setting		Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)													
Network Setting		Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)													
Account Setting	Account Setting provides the function to set the username and password of the web UI.														
Boot	Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.														
COM Port Interface Setting	COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.														
Account Setting															
Boot															
COM Port Interface Setting															

© ICP DAS Co., Ltd. All Rights Reserved

The setting for UA series controllers is to set up from the left to the right of the main menu functions. User can find the setting step and Web UI information in the following chapters.


[CH2 Quick Start 1: Hardware/Network Connection](#)

[CH3 Quick Start 2: Web UI / Steps / Project Example](#)

[CH4 Function Wizard: Quick Setup](#)

5.1. Controller Service Setting

Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT Broker and DDNS.

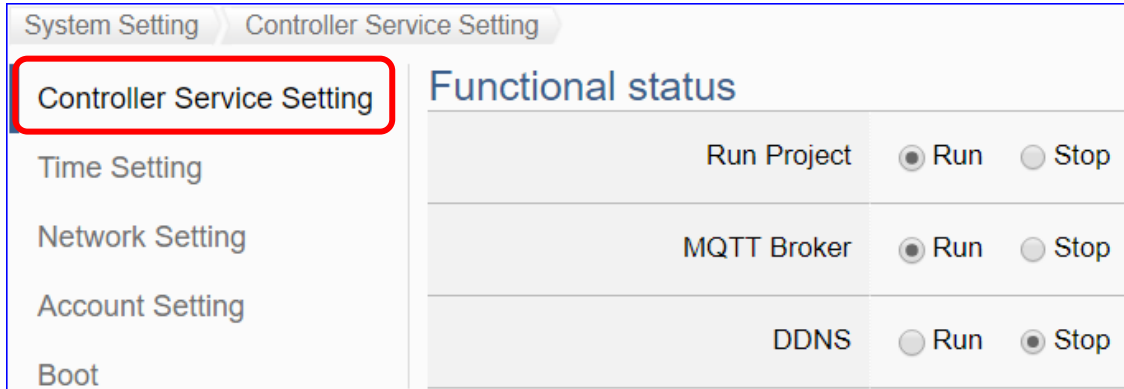

System Setting > Controller Service Setting > Functional status	
Run Project	Display the current status of project running in the UA series controller and provide “Run” and “Stop” button to switch the status. Default: Run.
MQTT Broker	Display the current status of MQTT Broker of the UA series controller and provide “Run” and “Stop” button to switch the status. Default: Run.
DDNS	Display the current status of DDNS Client of the UA series controller and provide “Run” and “Stop” button to switch the status. Default: Stop.

5.2. Time Setting

Time Setting provides the function to display and set the date, time and time zone of the controller, including manually, synchronization, etc.

Time Setting provides 3 functions: Data and Time Display, NTP Time Synchronization Setting and Set the Time Manually.

System Setting > Time Setting > Date And Time Display	
Date	Display the date of the UA series controller. The yellow block means current day. User can switch to show the date in other month.
Time	Display the current time of the UA series controller, including hour, minute and second.

System Setting > Time Setting > NTP Time Synchronization Setting	
Functional Status / NTP Time Server	Set up one NTP Time Server from the google (4), windows and nist (4) servers for synchronization. Click “Customize The Server” and enter the IP address or the domain name can set up user own time server.
Time Zone	Set up the time zone.
Save	Click to save the settings of this item.

Set The Time Manually	
Time Setting	<div>2017 / 11 / 27</div> <div>11 : 30 : 16</div>
Read The Local Computer Time	<div>Read</div>
Time Zone	<div>Taipei ▼</div>
<div>Save</div>	

System Setting > Time Setting > Set The Time Manually	
Time Setting	Set the system time of the UA controller by manually. Directly enter the new year/month/date and hour:minute:second.
Read The Local Computer Time	Click [Read] can copy the current time of the using computer to the "Time Setting" of this item.
Time Zone	Set up the time zone.
Save	Click to save the settings of this item and update the data of "Time Setting" to the "Date And Time Display" on the top of this page.

5.3. Network Setting

Network Setting provides the function to display and set the network settings, including IP address, host controller, DDNS, etc.

Network Setting(LAN1)

Connection Mode	<input checked="" type="radio"/> Specify an IP address <input type="radio"/> Obtain an IP address automatically(DHCP)
IP	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="81"/> . <input type="text" value="200"/>
Mask	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Gateway	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/>

Save

Hostname Setting

Hostname	<input type="text" value="UA-5231-68C90BE4E5A5"/>
----------	---

Save


System Setting > Network Setting > Network Setting (LAN1)	
Connection Mode	<p>Specify an IP address: It's the fixed IP mode. Users input the values in the fields of IP, Mask and Gateway according to customer's network. Detail information for the factory default value of UA controller network refers to the Section 2.2.1.</p> <p>Obtain an IP address automatically (DHCP): It's the Dynamic Host Configuration Protocol mode. The system assigns the IP, Mask and Gateway automatically.</p>
IP	The IP address of this UA. Factory Default: 192.168.255.1
Mask	The mask address of this UA. Factory Default: 255.255.0.0
Gateway	The gateway address of this UA. Factory Default: 192.168.1.1
Save	Click to save the settings of this item.
System Setting > Network Setting > Hostname Setting	
Hostname	The host name of this UA. Default: system value. User can give a new name, but cannot be null.
Save	Click to save the settings of this item.

Dynamic DNS Setting	
Service Provider	NO-IP ▼
*Username	undefined
*Password
*Domain Name	undefined
<input type="button" value="Save"/>	

System Setting > Network Setting > Dynamic DNS Setting	
Service Provider	Select the company of the DDNS service. Default: NO-IP. Supports: NO-IP, ChangeIP.com, DynDNS, FreeDNS.
*Username	Set up the login user name. The star * means the field cannot be null. Default: undefined.
*Password	Set up the login password. The star * means the field cannot be null.
*Domain Name	Define the parked domain name of the DDNS. The star * means the field cannot be null. Default: undefined.
Save	Click to save the settings of this item.


* The star “ * ” means the field cannot be null.

Network Setting(Mobile Network)
Please disable the PIN code first

Signal	 -89 dBm
Connection Status	Connected
IP	10.117.196.109
Automatic Connection When Power On	<input checked="" type="checkbox"/> Enable
Dial-up Number	<input type="text" value="*99#"/>
APN	<input type="text" value="internet"/>
Authentication	<div>Username <input type="text" value="guest"/></div> <div>Password <input type="password" value="....."/></div> <p>Please refer to this document to configure the setting.</p>
Mobile Code	<input type="checkbox"/> Enable

Disconnect
Save and Connection

1. This setting item only appears on the mobile model of UA controller.
2. In order to complete the connection to the Mobile Network, please disable the PIN code setting of the SIM card used in UA.
3. Insert the SIM card into the SIM card socket of UA, and then power on or restart the UA. When the 3G/4G signal turns green, the network connection is successful.
4. When the mobile network is enabled, the mobile network will serve as the main route to the external network.

System Setting > Network Setting > Network Setting(Mobile Network)	
Signal	Display the strength level of the Mobile Network Signal. Signal strength range: (The strongest signal) -51 ~ -113 (No signal) <div>  -77 dBm </div>
Connection Status	Display the connection status: Connected or Disconnected.
IP	Display the IP address that UA occupies through Mobile Network.

System Setting > Network Setting > Network Setting(Mobile Network)	
Automatic Connection When Power On	If check the “Enable” box, it will enable the UA controller to complete the Mobile Network connection automatically when power on UA controller.
Dial-up Number	Default: *99#. User can change it by the proprietary number provided by the Telecommunication Service Company.
APN	Please refer to “this document” provided on the UA Web HMI page to configure the setting.
Authentication	Please refer to “this document” provided on the UA Web HMI page to configure the setting.
Mobile Code	It is an optional setting. It depends on the service the Telecommunication Service Company provides
Disconnect	Click button can disconnect the Mobile Network connection.
Save and Connection	Click button to save the setting and start to connect the Mobile Network.

5.4. Account Setting

Account Setting provides the function to set the login username and password of the UA web UI.

System Setting > Account Setting > Account Settings Page	
Username	The login username for the UA Web UI. Factory default: root
Password	The login password for the UA Web UI. Factory default: root
Retype Password	Retype the password for the operation conform when setting the new account information.
Save	Click to save the settings of this page.

After first login, change your password as soon as possible for your system safety.

Steps to change the username and password:

1. Type the new username in the “Username” item.
2. Type the new password in the “Password” item.
3. Retype the new password in the “Retype Password” item.
4. Click the “Save”. Then re-login the UA Web UI with the new username and password.

Factory Default Settings of UA Series			
Network	IP	192.168.255.1	Assign UA a new IP setting according to your case.
	Netmask	255.255.0.0	
	Gateway	192.168.1.1	
OS Account	Username	root	After login, change your password as soon as possible. (Section 5.4 for Web UI) (Appendix F for OS)
	Password	icpdas	
Web UI Account	Username	root	
	Password	root	

5.5. Boot

Boot function provides the function to reboot the UA series controller, and enable the function to run the project, MQTT broker or DDNS at startup.

The screenshot shows the 'Boot' configuration interface. On the left, a sidebar lists settings: System Setting, Boot (selected), and COM Port Interface Setting. The main area is titled 'Restart' and 'Run at startup'. Under 'Restart', there is a 'Reboot' button. Under 'Run at startup', there are three rows: 'Project' with a checked checkbox, 'MQTT Broker' with a checked checkbox, and 'DDNS' with an unchecked checkbox. A 'Save' button is located at the bottom right of the main area.

System Setting > Boot > Restart	
Restart the controller	Click “Reboot” can restart the UA controller at once.
System Setting > Boot > Run at startup	
Project	Check the “Run at startup” box can set the project to run at the UA controller startup. Default: check.
MQTT Broker	Check the “Run at startup” box can set the MQTT Broker to run at the UA controller startup. Default: check.
DDNS	Check the “Run at startup” box can set the DDNS to run at the UA controller startup. Default: uncheck.
Save	Click to save the settings of this page.

5.6. COM Port Interface Setting

COM Port Interface Setting allows display and set the COM port interface of the UA series controller for the RS-232/RS-485 serial communication.

System Setting
COM Port Interface Setting

Controller Service Setting
Time Setting
Network Setting
Account Setting
Boot
COM Port Interface Setting

COM Port Interface Setting Page

Serial Port	ttyO2 ▼
Baud Rate	115200 ▼
Data Bits	8 bits ▼
Parity	None ▼
Stop Bits	1 bit ▼
Polling Rate(ms)	500

Save

System Setting > COM Port Interface Setting > COM Port Interface Setting Page	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485 ; ttyO4: RS-232 ; ttyO5: RS-485. Default: ttyO2.
Baud Rate	Choose a baud rate to communicate with the module: 1200, 2400, 4800, 9600, 19200, 38400, 57600 and 115200. The UA controller and the I/O module need have the same baud rate. Default: 115200.
Data Bits	The number of bits used to represent one byte of data: 7 bits or 8 bits. Default: 8 Bits.
Parity	Choose one way for the parity checking. Options: None, Even, and Odd. Default: None.
Stop Bits	Choose the number of stop bit: 1 bit or 2 bits. Default: 1.
Polling Rate(ms)	Set a time interval for the command. Default: 500 ms
Save	Click to save the settings of this page.

6. Module Setting

Module Setting is the second item of the Main Menu. The Module Setting provides the functions for UA series controller to connect the remote Modbus (RTU/TCP/ASCII module), remote MQTT and remote EtherNet/IP module.

[Module Setting] includes three sub-menu functions (see the picture below) and the function descriptions are listed on the page of the Main Menu, such as the Modbus RTU Module (Master), TCP Module (Master), ASCII Module (Master), MQTT and ICP DAS EIP Module. The Module Setting will support more modules in the future. This chapter will introduce the current function items and setting parameters.

System Setting <u>Module Setting</u> IoT Platform Setting Convert Setting Advanced Setting Logger Setting		
I/O Status File Setting		
Module Setting		
Modbus		
RTU Module (Master)		
TCP Module (Master)		
ASCII Module (Master)		
MQTT		
MQTT Module		
EtherNet/IP		
ICPDAS Module		

Module Setting		
Modbus		
RTU Module (Master)		This setting is for connecting the remote Modbus RTU Slave module.
TCP Module (Master)		This setting is for connecting the remote Modbus TCP Slave module.
ASCII Module (Master)		This setting is for connecting the remote Modbus ASCII Slave module.
MQTT		
MQTT Module		This setting is for connecting the remote MQTT module.
EtherNet/IP		
ICPDAS Module		This setting is for connecting the remote ICPDAS EIP module.

The setting for UA series controllers is to set up from the left to the right of the main menu functions. User can find the setting step and Web UI information in the following chapters.

[CH2 Quick Start 1: Hardware/Network Connection](#)

[CH3 Quick Start 2: Web UI / Steps / Project Example](#)

[CH4 Function Wizard: Quick Setup](#)

6.1. Modbus RTU (Master)

This setting is for UA Controller connecting the remote Modbus RTU Slave module.

This page is for setting the communication values with the connected modules. First choose the serial port that connected with the module, and each module can give a name (Default: Name). Click [+] button could add a new module. If using ICP DAS module, user just need to select the model number, system will auto add and setup the module. Click [Edit] button can configure the module content and the Modbus mapping table.

Setting Steps:

1. Select the module Serial port
2. a) Select an ICP DAS model (as the pic), system will auto load/setup the module.
b) Give the module name or nickname, e.g. M-7055D. Click [+] to add a new module
3. Click the button [Edit] to enter the Module Content Setting page
4. Set up the Modbus Mapping Table for the UA controller and module I/O channels

The function items and setting parameters of the [Modbus RTU Module List]:

Module Setting > Modbus - RTU Module (Master) > Modbus RTU Module List	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485; ttyO4: RS-232; ttyO5: RS-485. Default: ttyO2.
Load ICPDAS Module	Select the ICP DAS module number, system will auto add and setup the module. Click "Update ICPDAS Module List" can update new list.
	Click to add a list of module.
	Check the box in the left of the module is to select that module list, can delete or copy the module. Check the box "Select All" will select all modules in the list.
No.	The module number in the module list (System arrange, not editable)
*Module Name / Nickname	Module name or nickname. User can give a new name. (The star * means this field cannot be null.)
Edit	Click to set the module in the Module Content Setting page.
Copy	Select the module wants to copy by check the box and click [Copy] can copy module by assigning port and Number. Yes: copy the module and exit. No: exit without copy.
Remove	Click to delete the checked module(s)
Remove all	Click to delete all modules linked with the selected port. Remove: delete the modules and exit. No: exit without delete module.
	The page number / total pages of the module list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] button to enter the “Module Content Setting” page.

Module Content Setting

No.	1
Module Name	M-7055D
Slave ID	1
Timeout(ms)	500

Modbus Mapping Table Setting

Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	<input type="button" value="Add"/>

If select ICP DAS module, system will auto set up the Modbus Mapping Table, or user needs to check the module Modbus address or I/O number from the module user manual.

> **Modbus Mapping Table Setting:**
Set module in the order of Data Model, Start Address and Data Number, then click “Add”.

Ex: M-7055D has 8 Data Models of “01 Coil Status (0x)” (Mapping: DO), so select Model “01”, Start Add. “0”, Number “8”, and click “Add”.

Coil Status(0x)	
Address	0
Number	8
Type	Bool
<input type="button" value="Edit"/>	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models “01” ~ “04” for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

If user selects ICP DAS module, the system will auto set up the Modbus Mapping Table. If not, user needs to check the module Modbus address or I/O number from the module user manual.

176

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Description	
0	Tag0	Bool		
1	Tag1	Bool		
02 Input Status(1x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Description	
0	Tag0	Bool		
03 Holding Registers(4x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Swap	Description
0	Tag0	Short	<input type="checkbox"/>	
04 Input Registers(3x)				
Table Display		Show	Hide	
Address	Variable name	Data Type	Swap	Description
0	Tag0	Float	<input type="checkbox"/>	
		OK	Cancel	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

6.2. Modbus TCP (Master)

This setting is for UA Controller connecting the remote Modbus TCP Slave module.

This page is for setting the communication values with the connected modules. First choose the Ethernet LAN port that connected with the module, and each module can give a name (Default: Name). Click [+] button could add a new module. If using ICP DAS module, user just need to select the model number, system will auto add and setup the module. Click [Edit] button to configure the module content and the Modbus mapping table.

Setting Steps:

1. Check/Select the module LAN port
2. a) Select an ICP DAS model (as the pic), system will auto load/setup the module.
b) Give the module name or nickname, e.g. DL-302. Click [+] to add a new module
3. Click the button [Edit] to enter the Module Content Setting page
4. Set up the Modbus Mapping Table for the UA controller and module I/O channels

The function items and setting parameters of the [Modbus TCP Module List]:

Modbus TCP Module List

LAN: LAN

Load ICPDAS Module: Select The Module [v] [Update ICPDAS Module List]

Select All: ☐ No. *Module Name / Nickname Edit

No.	*Module Name / Nickname	Edit
2	DL-302	
1	DL-302	[Edit]

[Copy] [Remove] < 1 / 1 >

[Remove all] [Save]

Module Setting > Modbus - RTU Module (Master) > Modbus RTU Module List	
LAN	Choose the LAN port of UA controller that links with the TCP module. UA-52xx has one LAN port; the coming UA-2xxx has 2 LAN ports.
	Click to add a list of module.
<input type="checkbox"/>	Check the box in the left of the module is to select that module list, can delete or copy the module. Check the box "Select All" will select all modules in the list.
No.	The module number in the module list (System arrange, not editable)
*Module Name / Nickname	Module name or nick name. User can give a new name. (The star * means this field cannot be null.)
Edit	Click to set the module in the Module Content Setting page.
Copy	<p>Select the module wants to copy by check the box and click [Copy] can copy module by assigning port and quantity. Yes: copy the module and exit. No: exit without copy.</p> <div> <p>Copy module</p> <p>Copy to : LAN [v]</p> <p>Quantity : []</p> <p>[Yes] [No]</p> </div>
Remove	Click to delete the checked module(s)
Remove all	<p>Click to delete all modules linked with the selected port. Remove: delete the modules and exit. No: exit without delete module.</p> <div> <p>Remove module</p> <p>Select : LAN [v]</p> <p>[Remove] [No]</p> </div>
	The page number / total pages of the module list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] can enter the **[Module Content Setting]** page to set up the module and the Modbus address mapping table.

Module Content Setting	
No.	1
Module Name	Name
IP	0 . 0 . 0 . 0
Port	502
Slave ID	1
Timeout	500
Polling Rate	500
Modbus Mapping Table Setting	
Data Model	01 Coil Status(0x)
Start Address	0
Data Number	1
Create Tables	Add

If select ICP DAS module, system will auto set up the Modbus Mapping Table, or user needs to check the module Modbus address or I/O number from the module user manual.

> Modbus Mapping Table Setting:

Set module in the order of Data Model, Start Address and Data Number, then click "Add".

Ex: M-7055D has 8 Data Models of "01 Coil Status (0x)" (Mapping: DO), so select Model "01", Start Add. "0", Number "8", and click "Add".

Coil Status(0x)	
Address	0
Number	8
Type	Bool
Edit	

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
IP	The IP address of the connected module. Default: 0.0.0.0
Port	The port number for Modbus TCP. Default: 502
Slave ID	Set the Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Polling Rate	Set a time interval for the command. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models "01" ~ "04" for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI)
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

01 Coil Status(0x)
02 Input Status(1x)
03 Holding Registers(4x)
04 Input Registers(3x)

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table		Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)	
Address	0	Address	0	Address	0
Number	2	Number	1	Number	1
Type	Bool	Type	Bool	Type	Short
<input type="button" value="Edit"/>		<input type="button" value="Delete"/> <input type="button" value="Save"/> <input type="button" value="Cancel"/>		<input type="button" value="Edit"/>	
<input type="button" value="Edit"/> <input type="button" value="Edit"/> <input type="button" value="Edit"/>					
Press Save to finish editing.					
<input type="button" value="OK"/> <input type="button" value="Cancel"/>					

If user selects ICP DAS module, the system will auto set up the Modbus Mapping Table. If not, user needs to check the module Modbus address or I/O number from the module user manual.

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

6.3. Modbus ASCII (Master)

This setting is for UA Controller connecting the remote Modbus ASCII Slave module.

This page is for setting the communication values with the connected modules. First choose the serial port that connected with the module, and each module can give a name (Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the Modbus mapping table.

Setting Steps:

1. Select the module connecting Serial port
2. Give the module name or nickname, e.g. Example2. Default: Name
3. Click the button [+] to add a new module
4. Click the button [Edit] to enter the Module Content Setting page
5. Set up the Modbus Mapping Table for the UA controller and module I/O channels

The function items and setting parameters of the [Modbus ASCII Module List]:

Modbus ASCII Module List

Serial Port
ttyO4

Select All

No.

*Module Name / Nickname

Edit

+

2

Name

1

Name

Edit


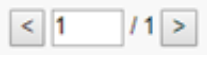
Copy

Remove

< 1 / 1 >

Remove all

Save

Module Setting > Modbus - ASCII Module (Master) > Modbus ASCII Module List	
Serial Port	Choose the serial port of UA controller that links with the I/O module. ttyO2: RS-485; ttyO4: RS-232; ttyO5: RS-485. Default: ttyO2.
	Click to add a list of module.
<input type="checkbox"/>	Check the box in the left of the module is to select that module list, can delete or copy the module. Check the box "Select All" will select all modules in the list.
No.	The module number in the module list (System arrange, not editable)
*Module Name / Nickname	Module name or nick name. User can give a new name. (The star * means this field cannot be null.)
Edit	Click to set the module in the Module Content Setting page.
Copy	Select the module wants to copy by check the box and click [Copy] can copy module by assigning port and Quantity. Yes: copy the module and exit. No: exit without copy. <div> <h4>Copy module</h4> <div>Copy to : ttyO5</div> <div>Quantity : </div> <div>Yes No</div> </div>
Remove	Click to delete the checked module(s)
Remove all	Click to delete all modules linked with the selected port. Remove: delete the modules and exit. No: exit without delete module. <div> <h4>Remove module</h4> <div>Select : ttyO2</div> <div>Remove No</div> </div>
	The page number / total pages of the module list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] button to enter the “Module Content Setting” page.

(Master)
Module Content Setting

Module Content Setting

No.	1
Module Name	Name
Slave ID	1
Timeout	500

Modbus Mapping Table Setting

Data Model	01 Coil Status(0x) ▼
Start Address	0
Data Number	1
Create Tables	Add

Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Slave ID	Set the module Slave ID of the UA. (Range: 1 ~ 247)
Timeout	Set the timeout value for the module. Default: 500 ms
Modbus Mapping Table Setting	
Data Model	System provides 4 Modbus data models “01” ~ “04” for mapping to address of DO, DI, AO and AI. (ex. 01: DO channels, 02: DI, 03: AO, 04: AI) <div> 01 Coil Status(0x) 02 Input Status(1x) 03 Holding Registers(4x) 04 Input Registers(3x) </div>
Start Address	The start address of the Modbus command. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Data Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. Default: 1.
Type	This item only when the data model is 03 or 04. Choose the suitable data type: 16-bit Short, 16-bit Unsigned Short, 32-bit Long, 32-bit Unsigned Long, 32-bit Float, 64-bit Double.
Create Tables	Click [Add] button, it will add a table in the Modbus mapping table.

The finished Modbus Mapping Table as below is in order of DO, DI, AO and AI.

Modbus Mapping Table		Address Setting		Nickname Setting	
Coil Status(0x)		Input Status(1x)		Holding Registers(4x)	
<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>2</div> </div> <div> <div>Type</div> <div>Bool</div> </div> <div>Edit</div>		<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>1</div> </div> <div> <div>Type</div> <div>Bool</div> </div> <div>Delete</div> <div>Save</div> <div>Cancel</div>		<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>1</div> </div> <div> <div>Type</div> <div>Short</div> </div> <div>Edit</div>	
Input Registers(3x)					
				<div> <div>Address</div> <div>0</div> </div> <div> <div>Number</div> <div>1</div> </div> <div> <div>Type</div> <div>Float</div> </div> <div>Edit</div>	
<p>Press Save to finish editing.</p> <div>OK</div> <div>Cancel</div>					

Modbus Mapping Table – Address Setting	
Address Setting	The “Address Setting” page of the Modbus Mapping Table
Nickname Setting	Click can switch to the The “Nickname Setting” page of the Modbus Mapping Table. (Next page)
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Address	The start address of the Modbus command. Default: 0. Note: the Start Address of UA is bass on 0, even if some modules are bass on 1, here it needs to follow UA to set bass on 0.
Number	The number of the Modbus address. Need to give enough number for the DO, DI, AO, AI channels of the module. At least 1.
Type	DO/DI type: Bool (Boolean) AO/AI type: depend on setting of [Modbus Mapping Table Setting]
Edit	Click to change the address and Number.
Delete	Click to delete this address table.
Save	Click to save and exit this table editing.
Cancel	Click to exit without saving and back to the module list page.
OK	Click to save this page settings and back to the module list page.

Modbus Mapping Table		Address Setting	Nickname Setting	
01 Coil Status(0x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
1	<input type="text" value="Tag1"/>	Bool	<input type="text"/>	
02 Input Status(1x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Description	
0	<input type="text" value="Tag0"/>	Bool	<input type="text"/>	
03 Holding Registers(4x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Short	<input type="checkbox"/>	<input type="text"/>
04 Input Registers(3x)				
Table Display		<input type="button" value="Show"/>	<input type="button" value="Hide"/>	
Address	Variable name	Data Type	Swap	Description
0	<input type="text" value="Tag0"/>	Float	<input type="checkbox"/>	<input type="text"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>	

Modbus Mapping Table – Nickname Setting	
Modbus Mapping Table	Coil Status(0x): Mapping to DO Modbus address Input Status(1x): Mapping to DI Modbus address Holding Registers(4x): Mapping to AO Modbus address Input Registers(3x): Mapping to AI Modbus address
Table Display	Click [Show] to display all fields, click [Hide] to hide some fields.
Address	Modbus address. System auto arrange.
Variable name	The variable name of the mapping address. Default: Tag0 and auto arrange the number. User can define the name.
Data Type	Display data type of the variable. (Not editable)
Swap	Check to swap the byte order (Lo-Hi/Hi-Lo) for 4-byte or 8-byte.
Description	Write a note for this variable.
OK	Click to save this page settings and back to the module list page.

6.4. MQTT Module

This setting is for UA Controller connecting the remote MQTT module.

The screenshot shows the 'MQTT Module List' configuration page. The sidebar on the left has 'Modbus' and 'MQTT' sections. The 'MQTT' section is active, showing a table with columns for 'No.', '*Module Name / Nickname', and 'Edit'. A new module is being added with 'No.' 1 and 'Name' as the default name. The 'LAN' dropdown is set to 'LAN'. Buttons for 'Copy', 'Remove', 'Remove all', and 'Save' are visible.

This page is for setting the communication values with the connected modules. First choose the Ethernet LAN port that connected with the module, and each module can give a name (Default name: Name). Click [+] button could add a new module, and then click [Edit] button to configure the module content and the MQTT variable table.

Setting Steps:

1. Select the module connecting Ethernet LAN port
2. Give the module name or nickname, e.g. MQ-7255, DL-302. Default: Name
3. Click the button [+] to add a new module
4. Click the button [Edit] to enter the Module Content Setting page
5. Set up the Modbus Mapping Table for the UA controller and module I/O channels

The screenshot shows the 'MQTT Module List' configuration page with four steps highlighted by red boxes and arrows:

1. Check the connecting LAN (LAN dropdown)
2. Give a name, Default: Name (MQ-7255 input)
3. Click to add (+ button)
4. Click to set the module content (Edit button)

The function items and setting parameters of the [MQTT Module List]:

Module Setting > MQTT - MQTT Module > MQTT Module List	
LAN	Choose the LAN port of UA controller that links with the MQTT module.
	Click to add a list of module.
<input type="checkbox"/>	Check the box in the left of the module is to select that module list, can delete or copy the module. Check the box "Select All" will select all modules in the list.
No.	The module number in the module list (System arrange, not editable)
*Module Name / Nickname	Module name or nick name. User can give a new name. (The star * means this field cannot be null.)
Edit	Click to set the module in the Module Content Setting page.
Copy	<div> Select the module wants to copy by check the box and click [Copy] can copy module by assigning port and quantity. Yes: copy the module and exit. No: exit without copy. </div> <div> Copy module Copy to : <input type="text" value="LAN"/> Quantity : <input type="text"/> <input type="button" value="Yes"/> <input type="button" value="No"/> </div>
Remove	Click to delete the checked module(s)
Remove all	<div> Click to delete all modules linked with the selected port. Remove: delete the modules and exit. No: exit without delete module. </div> <div> Remove module Select : <input type="text" value="LAN"/> <input type="button" value="Remove"/> <input type="button" value="No"/> </div>
	The page number / total pages of the module list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] can enter the [MQTT Client Setting] page to set up the module and the variable table.

[MQTT Client Setting] page:

MQTT Client Setting

No. 1

Module Name MQ-7255

MQTT Connection ☒ Broker (Local)

MQTT Variable Setting

Attribute Read

Data Type Bool

Data Number 1

Create Tables Add

Details Show Hide

MQTT Client Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
MQTT Connection	The using Local Broker.
MQTT Variable Setting	
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the MQTT variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String.
Data Number	The number for the I/O variables of the module. Default: 1.
Create Tables	Click [Add] button, it will add a variable list in the MQTT Variable Table.
Details Show / Hide	Click [Show] to display all fields, click [Hide] to hide some fields. The hide fields: Subscribe QoS, Publish QoS, Retain.

[MQTT Variable Table] :

Details

MQTT Variable Table

<input type="button" value="Remove"/>	Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Description	Retain <input type="checkbox"/>
<input type="checkbox"/>	Tag2	Read	Short	/MQTT_No.1_MQ-7255/Tag2/Subscribe	2		2		<input type="checkbox"/>
<input type="checkbox"/>	Tag1	Read	Bool	/MQTT_No.1_MQ-7255/Tag1/Subscribe	2		2		<input type="checkbox"/>

MQTT Variable Table	
Details Show / Hide	Click [Show] to display all fields, click [Hide] to hide some fields. The hide fields: Subscribe QoS, Publish QoS and Retain.
Remove Table / Remove	Check the box in the left of the variable is to select that variable list, and click the “remove” on the box can delete that variable list. Click the “Remove” of the “Remove Table” will delete all lists.
Name	The name of the MQTT variable. Default: Tag#
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe QoS	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message.
Publish QoS	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Description	For users set up the description for the variables.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.
OK / Cancer	Click [OK] to save and exit the page settings. Click [Cancer] to exit without saving.

6.5. EtherNet/IP ICP DAS Module

This setting is for UA Controller connecting the remote ICP DAS EIP module.

The screenshot shows the 'EtherNet/IP Module List' configuration page. The 'Module Setting' tab is active, and the 'ICPDAS Module' sub-tab is selected. On the left, there are sections for 'Modbus' (RTU, TCP, ASCII) and 'MQTT' (MQTT Module). The main area displays a table with columns: 'Select All', 'No.', 'ModuleName', 'NickName', and 'Edit'. A new module is being added with 'No.' 1, 'ModuleName' 'EIP-2055', and 'NickName'. Below the table are buttons for 'Copy', 'Remove', and 'Save'. A 'Remove all' button is also present.

This page is for setting the communication values with the connected EIP modules. First, choose the Ethernet LAN port that connected with the module, and select the name of EIP module. Click [+] button could add a new module, and then click [Edit] button to configure the module content and the MQTT variable table.

Setting Steps:

1. Select the module connecting Ethernet LAN port
2. Select the module name of EIP-2000
3. Click the button [+] to add a new module
4. Click the button [Edit] to enter the Module Content Setting page
5. Set up the module IP and module I/O channels

The screenshot shows the 'EtherNet/IP Module List' configuration page with four numbered annotations in red boxes:

- 1. Check the connecting LAN: Points to the 'LAN' dropdown menu.
- 2. Select the module name: Points to the 'ModuleName' dropdown menu.
- 3. Click to add: Points to the '+' button used to add a new module.
- 4. Click to set the module content: Points to the 'Edit' button for the selected module.

 The table shows a module with 'No.' 2, 'ModuleName' 'EIP-2060', and 'NickName' 'EIP-2060'. The 'Edit' button is highlighted for this module.

The function items and setting parameters of the [EtherNet/IP Module List]:

EtherNet/IP Module List

LAN

LAN

▼

Select All

No.

ModuleName

NickName

Edit

+

2

▼

EIP-2060

▼

1

EIP-2060

EIP-2060

Edit

Copy

Remove

<



1

/ 1

>

Remove all

Save

Module Setting > EtherNet/IP – ICPDAS Module > EtherNet/IP Module List	
LAN	Choose the LAN port of UA controller that links with the EIP module. UA-5200 has 1 LAN port; UA-2200 has 2 LAN ports.
	Click to add a list of module.
<input type="checkbox"/>	Check the box in the left of the module is to select that module list, can delete or copy the module. Check the box "Select All" will select all modules in the list.
No.	The module number in the module list (System arrange, not editable)
ModuleName	Select the connecting EIP-2000 module name.
NickName	User can define a nickname for the EIP-2000 module.
Edit	Click to set the module in the Module Content Setting page.
Copy	Select the module wants to copy by check the box and click [Copy] can copy module by assigning port and quantity. Yes: copy the module and exit. No: exit without copy. <div> <div>Copy module</div> <div>Copy to : LAN ▼</div> <div>Quantity : <input type="text"/></div> <div>Yes No</div> </div>
Remove	Click to delete the checked module(s)
Remove all	Click to delete all modules linked with the selected port. Remove: delete the modules and exit. No: exit without delete module. <div> <div>Remove module</div> <div>Select : LAN ▼</div> <div>Remove No</div> </div>
	The page number / total pages of the module list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click **[Edit]** can enter the **[Module Content Setting]** page to set up the module.

[**Module Content Setting**] page:

Module Content Setting	
No.	1
Module Name	EIP-2060
NickName	EIP-2060
IP	0 . 0 . 0 . 0
ChannelNumber	12-ch(6DI+6DO) ▼

Module Setting > EtherNet/IP – ICPDAS Module > Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The selected EIP module number.
NickName	User can define a nickname for the module. Default: Module name.
IP	Enter the IP address of the module. Default: 0.0.0.0
ChannelNumber	System auto setup the I/O channel numbers and the I/O table. Some module provides 2 or more channel mode needed user to select one.

DI/DO/AI/AO Channel Table: System auto setup the table according to the module name.

Digital Input				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="DI0"/>	<input type="text" value="Read"/> ▼	Bool	<input type="text"/>

Digital Output				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="DO0"/>	<input type="text" value="Read / Write"/> ▼	Bool	<input type="text"/>


Analogy Input				
Channel	Name	Attributes	Data Type	Description
0	<input type="text" value="AI0"/>	<input type="text" value="Read"/> ▼	Float	<input type="text"/>

Analogy Output				
Channel	Name	Attributes	Data Type	Description
<div style="text-align: right;"> <input type="button" value="OK"/> <input type="button" value="Cancel"/> </div>				

Module Setting > EtherNet/IP – ICPDAS Module > Di/Do/AI/AO Channel Table	
Channel	Channel number set by system. (Not editable)
Name	Channel name. User can define a new channel name.
Attribute	Display data attribute of the channel. (Not editable) Include: Read, Read / Write...
Data Type	Display data type of the channel. Include: Bool, Short, Float, ... according to the module.
Description	User can set up the description for the channel.
OK / Cancer	Click [OK] to save and exit the page settings. Click [Cancer] to exit without saving.

7. IoT Platform Setting

IoT Platform Setting is the third item of the Main Menu. It manages the interaction of the UA series connecting with the host computer in the Internet of Things. It provides OPC UA and MQTT protocols connection services via the Ethernet interface for data transmission.

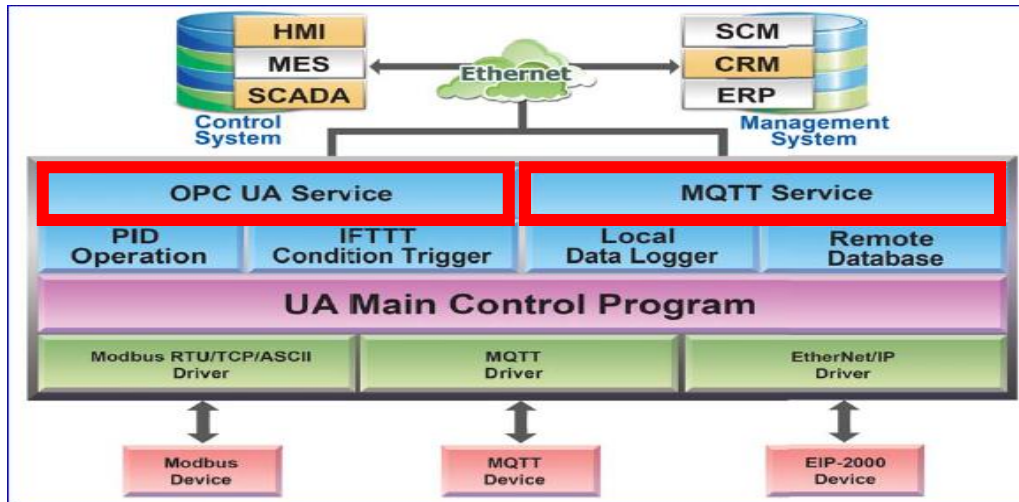

[IoT Platform Setting] includes five sub-menu functions in MQTT and OPC UA two connections and the function descriptions are listed on the page of the Main Menu, such as the Local Broker, Remote Broker, MQTT Group Connection and Microsoft Azure Platform in the MQTT Connection category, and the Local Server in the OPC UA Connection category. This chapter will introduce these function items and setting parameters.

System Setting
Module Setting
IoT Platform Setting
Convert Setting
Advanced Setting
Logger Setting

I/O Status
File Setting

IoT Platform Setting

MQTT Connection
Local Broker
Remote Broker
MQTT Group Connection
Microsoft Azure Platform

OPC UA Connection
Local Server

Cloud Connection
IoTstar

IoT Platform Setting

MQTT Connection	
Local Broker	This setting provides to build a user MQTT Broker via the built-in MQTT Broker service of the controller.
Remote Broker	This function can set up the MQTT connection with the remote Broker. User can publish and subscribe messages to the remote Broker through this connection.
MQTT Group Connection	This function can set up the MQTT connection with local and remote brokers. Setting with the MQTT JSON function in the Convert Transmission, It can make the I/O module messages in groups and then mapping to the user-defined publish and subscribe topics.
Microsoft Azure Platform	The system features the connection ability to the Microsoft Azure platform. It allows users to publish messages to Microsoft Azure and receive messages from Microsoft Azure.

OPC UA Connection	
Local Server	This function provides the settings for the OPC UA Server.

Cloud Connection	
IoTstar	Connect to IoTstar for cloud management.

7.1. MQTT Local Broker

UA series controller built-in MQTT Broker that compliance with MQTT v3.1.1 protocol and supporting MQTT message distribution management. When using MQTT communication, there is no need to build a new Broker system.

System Setting
Module Setting
IoT Platform Setting
Convert Setting

IoT Platform Setting
Local Broker

MQTT Connection

Local Broker
Remote Broker
MQTT Group Connection
Microsoft Azure Platform

Local Broker Setting

Port	1883
Anonymous Login	<input checked="" type="checkbox"/> Enabled

Save

MQTT Connection > Local Broker Setting	
Port	MQTT Local Broker's COM port. System default: 1883
Anonymous Login	Check to allow anonymous login. Default: Check Enabled.
Save	Click to save the settings of this page.

7.2. MQTT Remote Broker

UA series controller built-in MQTT Broker(See [Section 7.1](#)), but when users want to use the external MQTT Broker, UA system also provides the settings to connect and publish/subscribe messages with the MQTT Remote Broker.

This page can set up the MQTT connection with the remote Broker. User can publish and subscribe messages to the remote Broker through this connection.

The screenshot displays the 'Remote Broker List' configuration page. The sidebar on the left shows the navigation menu with 'Remote Broker' selected under the 'MQTT Connection' category. The main content area features a table with the following structure:

Broker Name	IP / Domain	Port	Edit
+ Name			

Below the table, there is a 'Remove' button and a pagination indicator '< 0 / 0 >'. A 'Save' button is located at the bottom right of the configuration area.

Setting Sequence for the MQTT Connection:

1. Add and set up a connection Broker name in the Remote Broker List.
2. Set up the contents of the Topic messages published/subscribed by other external MQTT devices for mapping to the Variables Table of the UA controller.
3. Convert the data contents of the MQTT device to communicate with other protocols.

For the certificate about the communication security, please refer to [Chapter 12](#).

This section will introduce the function items and setting parameters.

MQTT Connection > Remote Broker > Remote Broker List	
Broker Name	MQTT Remote Broker name. User can give a new name, e.g. Broker1. Default: Name.
	Click to add a list of remote Broker.
Save	Click to save the settings of this page.

After adding a list of the Remote Broker:

MQTT Connection > Remote Broker > Remote Broker List	
Broker Name	The MQTT remote Broker name.
IP / Domain	The IP address or domain name of the remote Broker.
Port	The communication port of the remote Broker.
<input type="checkbox"/>	Check the box in the left of the Broker is to select that Broker, can delete or copy the Broker. Check the box on the top of the list will select all Brokers in the list.
Edit	Click to set up the remote Broker in the Broker Content Setting page.
Remove	Click to delete the checked Broker(s)
	The page number / total pages of the Broker list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] to set up the group in the Broker Content Setting page.

Broker Content Settings	
Broker Name	<input type="text" value="Name"/>
IP / Domain	<input type="text" value="127.0.0.1"/>
Port	<input type="text" value="1883"/>
Keep Alive Time(second)	<input type="text" value="60"/>
SSL/TLS	<input checked="" type="checkbox"/> Enabled
Trusted Certificate	<input type="text"/> The content can not be blank.
Certificate	<input type="text"/>
Private Key	<input type="text"/>
Anonymous Login	<input checked="" type="checkbox"/> Enabled
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

MQTT Connection > Remote Broker List > Broker Content Settings	
Broker Name	The name of the remote MQTT Broker. User can define a new name.
IP / Domain	Set the IP address or domain name of the Remote MQTT Broker. Default: 127.0.0.1
Port	The remote Broker port. Default: 1883.
Keep Alive Time (second)	The Keep alive time. Default: 60 second.
SSL/TLS	Check to enable the supporting of SSL/TLS security communication. Default: Uncheck. Sub-item: Trusted Certificate/Certificate/Private Key
Trusted Certificate	Enter the trusted root CA file name uploaded to the controller by the file setting function to verify the broker side certificate.
Certificate	Enter the name of the certificate file uploaded to the controller by the file setting function as the client side certification. When the "Certificate" field is not empty, the "Private Key" field cannot be empty.
Private Key	Enter the name of the Private Key file uploaded to the controller by the file setting function as the client side Private Key. When the "Private Key" field is not empty, the "Certificate" field cannot be empty.
Anonymous Login	Check to allow anonymous login. Default: Check Enabled.
OK	Click to save the setting and exit this page. Click [Cancel] to exit this page without saving.

7.3. MQTT Group Connection

This function can set up the MQTT connection with local and remote brokers. Setting with the MQTT JSON function in the Convert Setting, It can make the I/O module messages in groups and then mapping to the user-defined publish and subscribe topics.

If the MQTT Group connection needs to use an external MQTT remote Broker, you need to set the remote Broker connection first and then set the connection group list. This page is for the setting of new, remove and set up the connection group list and their function parameters.

Setting Sequence for the MQTT Group Connection:

1. Set up a connection MQTT Broker of Local or Remote Broker.
2. Add and set up a MQTT connection group name in the List.
3. Set up the contents of the Topic messages published/subscribed by other external MQTT devices that supporting JSON format for mapping to the Variables Table of the UA controller.
4. Convert the data contents of the MQTT device into JSON format of groups to communicate with other protocols.

For the certificate about the communication security, please refer to [Chapter 12](#).

This section will introduce the function items and setting parameters.

MQTT Connection Group Name List

<input type="checkbox"/>	Group Name	Edit
<input style="border: 1px dashed #ccc;" type="button" value="+"/>	<input type="text" value="Name"/>	
<input type="button" value="Remove"/>		<input style="border: 1px solid #ccc;" type="button" value=" < "/> <input type="text" value="0"/> <input style="border: 1px solid #ccc;" type="button" value=" / 0 "/> <input style="border: 1px solid #ccc;" type="button" value=" > "/>
<input type="button" value="Save"/>		

IoT Platform Setting > MQTT Connection > MQTT Connection Group Name List	
Group Name	MQTT connection group name. User can give a new name, e.g. Group1. Default: Name.
<input style="border: 1px dashed #ccc;" type="button" value="+"/>	Click to add a list of MQTT connection group.
Save	Click to save the settings of this page.

After adding a list of the MQTT connection group:

MQTT Connection Group Name List

<input type="checkbox"/>	Group Name	Edit
<input style="border: 1px dashed #ccc;" type="button" value="+"/>	<input type="text" value="Name1"/>	
<input type="checkbox"/>	Name	<input type="button" value="Edit"/>
<input type="button" value="Remove"/>		<input style="border: 1px solid #ccc;" type="button" value=" < "/> <input type="text" value="1"/> <input style="border: 1px solid #ccc;" type="button" value=" / 1 "/> <input style="border: 1px solid #ccc;" type="button" value=" > "/>
<input type="button" value="Save"/>		

IoT Platform Setting > MQTT Connection > MQTT Connection Group Name List	
Group Name	The MQTT connection group name.
<input type="checkbox"/>	Check the box in the left of the Group name is to select that group, can delete or copy the group. Check the box on the top of the list will select all groups in the list.
Edit	Click to set up the group in the MQTT Client Setting page.
Remove	Click to delete the checked group(s)
<input style="border: 1px solid #ccc;" type="button" value=" < "/> <input type="text" value="1"/> <input style="border: 1px solid #ccc;" type="button" value=" / 1 "/> <input style="border: 1px solid #ccc;" type="button" value=" > "/>	The page number / total pages of the group list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] to set up the group in the MQTT Client Setting page.

MQTT Client Setting	
No.	1
Group Name	Name
Scan Rate(ms)	1000
Dead Band	0
Will Topic	
Will	
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Broker1 (Remote)

IoT Platform Setting > MQTT Connection > MQTT Client Setting	
No.	The MQTT Client Number. (Un-editable)
Group Name	The name of the Group. User can define a new name.
Scan Rate(ms)	Set an update frequency for the data. Unit: ms. Default: 1000 ms.
Dead Band	Give a dead bend value for updating a float signal. Default: 0
Will Topic	The title of a disconnect notice. Default: Null.
Will	The disconnect notice. Default: Null.
MQTT Connection	Check the Broker for this MQTT connection, Local Broker or Remote Broker. Remote Broker option will appear only when set in advance.

Publish & Subscribe	
Publish Topic	<input type="text" value="/Name/Publish"/>
Publish QoS	<input type="text" value="2"/> ▼
Subscribe Topic	<input type="text" value="/Name/Subscribe"/>
Subscribe QoS	<input type="text" value="2"/> ▼
Retain	<input type="text" value="No"/> ▼
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

IoT Platform Setting > MQTT Connection > MQTT Client Setting – Publish & Subscribe	
Publish Topic	The topic of sending/publishing data message.
Publish Qos	<p>The publish Qos (Quality of Service) levels. Default: 2.</p> <p>0: Delivering a message at most once.</p> <p>1: Delivering a message at least once.</p> <p>2: Delivering a message at exactly once.</p>
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe Qos	<p>The subscribe Qos (Quality of Service) levels. Default: 2.</p> <p>0: Delivering a message at most once.</p> <p>1: Delivering a message at least once.</p> <p>2: Delivering a message at exactly once.</p>
Retain	Whether the Broker to store the message. Default: No.
OK	<p>Click to save the setting and exit this page.</p> <p>Click [Cancel] to exit this page without saving.</p>

7.4. MQTT Connection - Microsoft Azure Platform

Microsoft Azure Platform is a common platform to integrate IoT devices into the cloud. Many of the applications use MQTT connection to the cloud for the setting is fast and easy. The UA series also provides the MQTT function for module to connect to the Azure platform and allows users to publish messages to Microsoft Azure and receive messages from Microsoft Azure.



This page will introduce the settings for UA series controller using MQTT service to connect to the Microsoft Azure Platform. It includes new, remove and set up the Azure list and the function parameters

System Setting	Module Setting	IoT Platform Setting	Convert Setting	Advanced Setting	Logger Setting
I/O Status	File Setting				
IoT Platform Setting					
Microsoft Azure Platform					
MQTT Connection					
Local Broker					
Remote Broker					
MQTT Group Connection					
Microsoft Azure Platform					
OPC UA Connection					
Local Server					
Azure List					
<div>Remove</div> <div>Azure Name</div> <div>Edit</div>					
<div>+</div> <div>Name</div>					
<div>Remove</div> <div>< 0 / 0 ></div>					
<div>Save</div>					

Azure List

☐
Azure Name
Edit

☒

Remove
< 0 / 0 >

Save

IoT Platform Setting > MQTT Connection > Microsoft Azure Platform > Azure List	
Azure Name	Azure name. User can give a new name1. Default: Name.
<input checked="" type="checkbox"/>	Click to add a list of Azure.

After adding a list of the Azure:

Azure List

☐
Azure Name
Edit

☒

☐
Name
Edit

Remove
< 1 / 1 >

Save

IoT Platform Setting > MQTT Connection > Microsoft Azure Platform > Azure List	
Azure Name	Azure name. User can define the name. Default: Name.
<input checked="" type="checkbox"/>	Click to add a new Azure list.
<input type="checkbox"/>	Check the box in the left of a Azure name is to select that Azure, can delete or copy the Azure. Check the box on the top of the list will select all Azures in the list.
Edit	Click to set up the Azure in the Azure Content Setting page.
Remove	Click to delete the checked Azure(s).
< 1 / 1 >	The page number / total pages of the Azure list. Click < or > to go to the previous or the next page.
Save	Click to save the settings of this page.

Click [Edit] to set up the Azure in the Azure Content Setting page.

Azure Content Settings	
Azure Name	<input type="text" value="Name"/>
SAS Token	<input type="text" value="HostName=;DeviceId=;SharedAccessSignature="/>
Keep Alive Time(second)	<input type="text" value="60"/>
Scan Rate(ms)	<input type="text" value="1000"/>
Dead Band	<input type="text" value="0"/>
CDS	<input type="checkbox"/> Enabled
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

IoT Platform Setting > MQTT Connection > Microsoft Azure Platform > Azure Content Settings									
Azure Name	Azure name. User can define the name. Default: Name.								
SAS Token	Input the SAS Token which you previously registered for the UA controller from Microsoft Azure. For the procedure to generate a SAS Token, please refer to the "Documentation > Azure IoT Hub > IoT Hub MQTT support" section on the Microsoft Azure Web Site for detailed information.								
Keep Alive Time(second)	Set the time in second that pass away without communication between the UA controller and Microsoft Azure. Default: 60 second.								
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)								
Dead Band	Give a dead bend value for updating a float signal. Default: 0								
CDS (Connected Device Studio)	<p>If user wants to publish the messages compliant with the Microsoft CDS platform, user must check the "CDS" and fill in the Company ID, Equipment ID and Message ID that applied from the Microsoft CDS platform. Default: Uncheck.</p> <table border="1"> <tbody> <tr> <td>CDS</td><td><input checked="" type="checkbox"/> Enabled</td></tr> <tr> <td>Company ID</td><td><input type="text" value="0"/></td></tr> <tr> <td>Equipment ID</td><td><input type="text"/> Please enter english and numbers.</td></tr> <tr> <td>Message ID</td><td><input type="text"/></td></tr> </tbody> </table>	CDS	<input checked="" type="checkbox"/> Enabled	Company ID	<input type="text" value="0"/>	Equipment ID	<input type="text"/> Please enter english and numbers.	Message ID	<input type="text"/>
CDS	<input checked="" type="checkbox"/> Enabled								
Company ID	<input type="text" value="0"/>								
Equipment ID	<input type="text"/> Please enter english and numbers.								
Message ID	<input type="text"/>								
OK	Click to save and exit this page.								

7.5. OPC UA Connection - Local Server

UA series controller built-in OPC UA Server service can integrate the I/O products and the third-party devices, import their data to the back-end SCADA management system or the big-data analysis/decision system, to satisfy the reliability, interoperability and security needs of the Industrial 4.0 automation system.

This page provides the settings for the UA series built-in OPC UA Server.

OPC UA Connection > Local Server – Server	
Server Name	Display the active OPC UA Server name. Not editable. System values: ICPDAS_OPC_UA_Server
Port	The communication port number of the OPC UA Server. System Default: 48010.
Save	Click to save the settings of this item.
OPC UA Connection > Local Server – User Identity Tokens	
Anonymous Login	Check to enable the anonymous login of clients. Default: check.
User Password Login	Check to enable the user password login of clients. Default: uncheck.
Certificate Login	Check to enable the certificate login of clients. Default: uncheck.
Save	Click to save the settings of this item.

8. Convert Setting


Convert Setting is the 4th item of the Main Menu for the communication conversion. It has 3 converting types: OPC UA, MQTT & MQTT JSON. Each type has some convert settings items for conversion with the Modbus RTU/TCP/ASCII (Master), MQTT and EtherNet/IP protocols. The function descriptions are on the home page of the Main Menu. This chapter will introduce these function items and setting parameters.

System Setting	Module Setting	IoT Platform Setting	Convert Setting	Advanced Setting
Logger Setting	I/O Status	File Setting		
Convert Setting				
OPC UA		Convert Setting		
Modbus RTU (Master)	OPC UA			
Modbus TCP (Master)	Modbus RTU (Master)	Provides OPC UA and Modbus RTU (Master) communication protocol conversion. With this function, the OPC UA Server can read and write the Modbus RTU device that connected to the controller.		
Modbus ASCII (Master)	Modbus TCP (Master)	Provides OPC UA and Modbus TCP (Master) communication protocol conversion. With this function, the OPC UA Server can read and write the Modbus TCP device that connected to the controller.		
MQTT	Modbus ASCII (Master)	Provides OPC UA and Modbus ASCII (Master) communication protocol conversion. With this function, the OPC UA Server can read and write the Modbus ASCII device that connected to the controller.		
EtherNet/IP	MQTT	Provides OPC UA and MQTT communication protocol conversion. With this function, the OPC UA Server can read and write the MQTT device that connected to the controller.		
MQTT		MQTT		
Modbus RTU (Master)	Modbus RTU (Master)	Provides MQTT and Modbus RTU (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus RTU device that connected to the controller.		
Modbus TCP (Master)	Modbus TCP (Master)	Provides MQTT and Modbus TCP (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus TCP device that connected to the controller.		
Modbus ASCII (Master)	Modbus ASCII (Master)	Provides MQTT and Modbus ASCII (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus ASCII device that connected to the controller.		
EtherNet/IP	EtherNet/IP	Provides MQTT and ICPDAS EIP communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the ICPDAS EIP device that connected to the controller.		
MQTT JSON		MQTT JSON		
Modbus RTU (Master)	Modbus RTU (Master)	Provides MQTT and Modbus RTU (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus RTU devices that connected to the controller.		
Modbus TCP (Master)	Modbus TCP (Master)	Provides MQTT and Modbus TCP (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus TCP devices that connected to the controller.		
Modbus ASCII (Master)	Modbus ASCII (Master)	Provides MQTT and Modbus ASCII (Master) communication protocol conversion. With this function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus ASCII device that connected to the controller.		


The settings of Modbus RTU/ASCII are the same. Here will introduce them together.

OPC UA	<p>Use OPC UA Service to convert with Modbus RTU/ASCII protocol. (8.1)</p> <p>Use OPC UA Service to convert with Modbus TCP protocol. (8.2)</p> <p>Use OPC UA Service to convert with MQTT protocol. (8.3)</p> <p>Use OPC UA Service to convert with EtherNet/IP protocol. (8.4)</p>
MQTT	<p>Use MQTT Service to convert with Modbus RTU/ASCII protocol. (8.5)</p> <p>Use MQTT Service to convert with Modbus TCP protocol. (8.6)</p> <p>Use MQTT Service to convert with EtherNet/IP protocol. (8.7)</p>
MQTT JSON	<p>Use MQTT Service in group of JSON format to convert with Modbus RTU/ASCII protocol. (8.8)</p> <p>Use MQTT Service in group of JSON format to convert with Modbus TCP protocol. (8.9)</p>

UA Series Function Diagram:

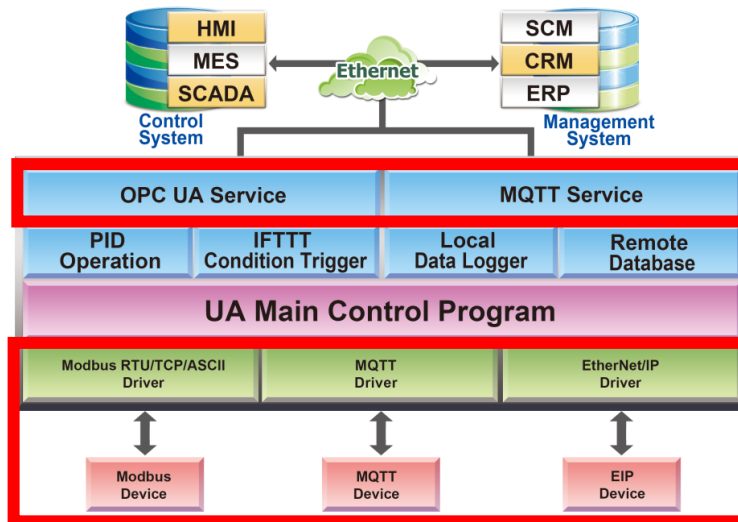

Application Solution:

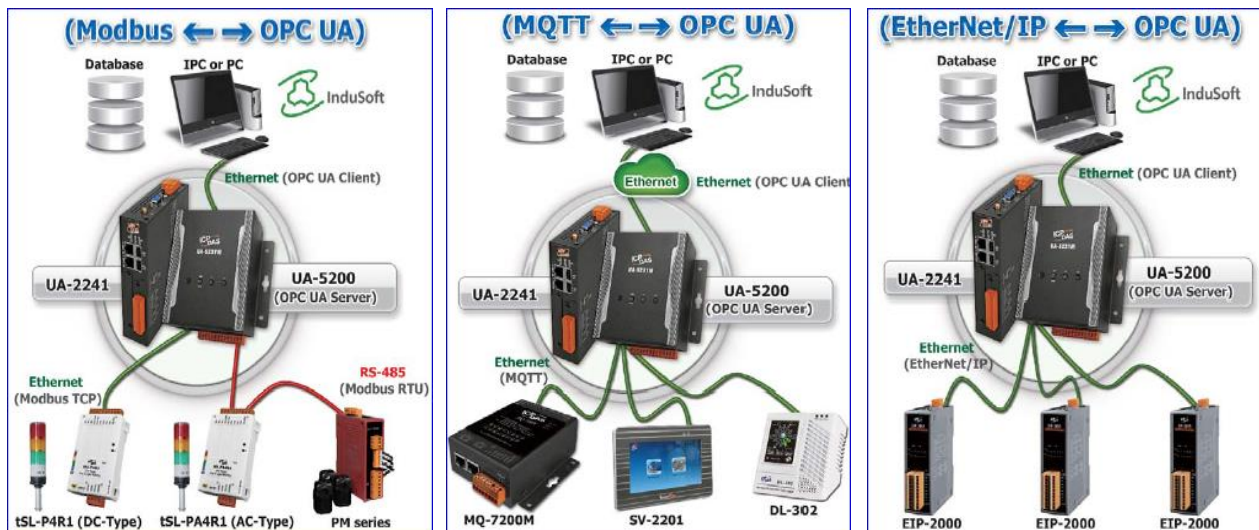


8.1. OPC UA and Modbus RTU/ASCII Conversion


This page provides OPC UA and Modbus RTU/ASCII (Master) communication protocol conversion. With this function, the OPC UA Server can read and write the Modbus RTU / ASCII device that connected to the controller.

The settings of Modbus RTU/ASCII are the same. Here will introduce them together.


Function Diagram:

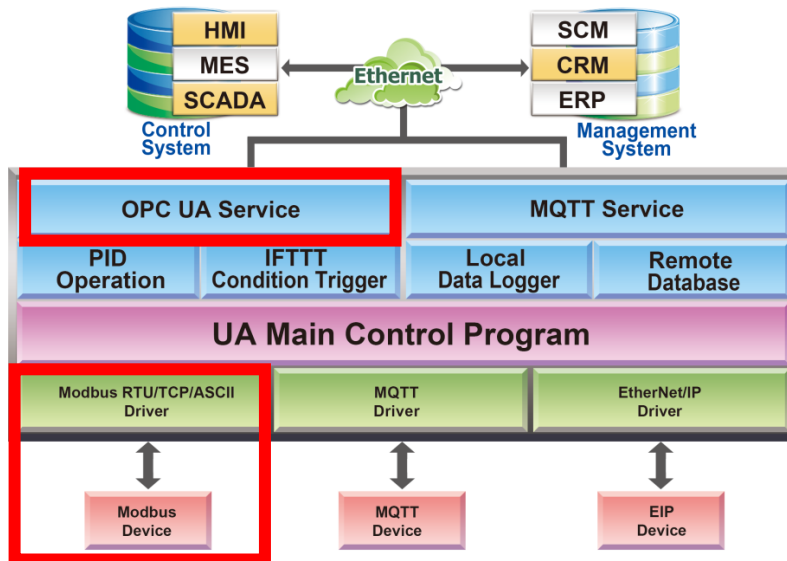

Application Solution:

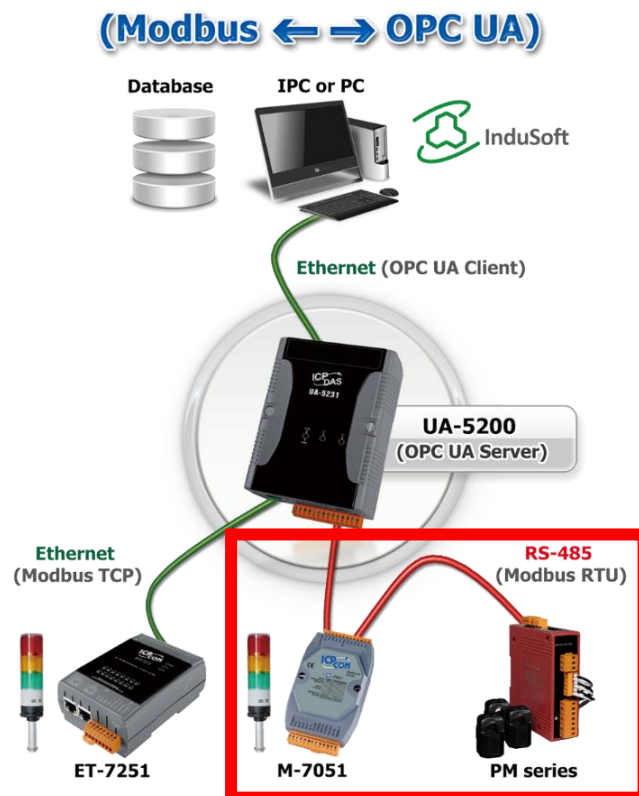

When entering the menu [Convert Setting] and the sub-menu [OPC UA] > Modbus RTU (Master) or Modbus ASCII (Master), the Modbus RTU/ASCII modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

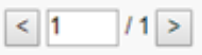Convert Setting > OPC UA > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

The “Module Content Setting” page after clicking the [Edit] button:

Module Content Setting			
No.	1		
Module Name	Example1		
Variable Table			
Name	Attribute	Data Type	Enabled
Tag0	Read	Float	<input type="checkbox"/>
Tag0	Read / Write	Short	<input checked="" type="checkbox"/>
Tag0	Read	Bool	<input checked="" type="checkbox"/>
Tag1	Read	Bool	<input type="checkbox"/>
Tag0	Read / Write	Bool	<input checked="" type="checkbox"/>
Tag1	Read / Write	Bool	<input type="checkbox"/>
OK		Cancel	


Convert Setting > OPC UA > Modbus RTU (Master) – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Convert Setting > OPC UA > Modbus RTU (Master) – Variable Table	
Name	Display the variable name that set in the Modbus Address Mapping Table page (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

When complete the setting, click [OK] to save this page settings and back to the module list page. Remember to click [Save] to save the Convert Setting.


8.2. OPC UA and Modbus TCP Conversion

This page provides OPC UA and Modbus TCP (Master) communication protocol conversion. With this function, the OPC UA Server can read and write the Modbus TCP device that connected to the controller.


Function Diagram:

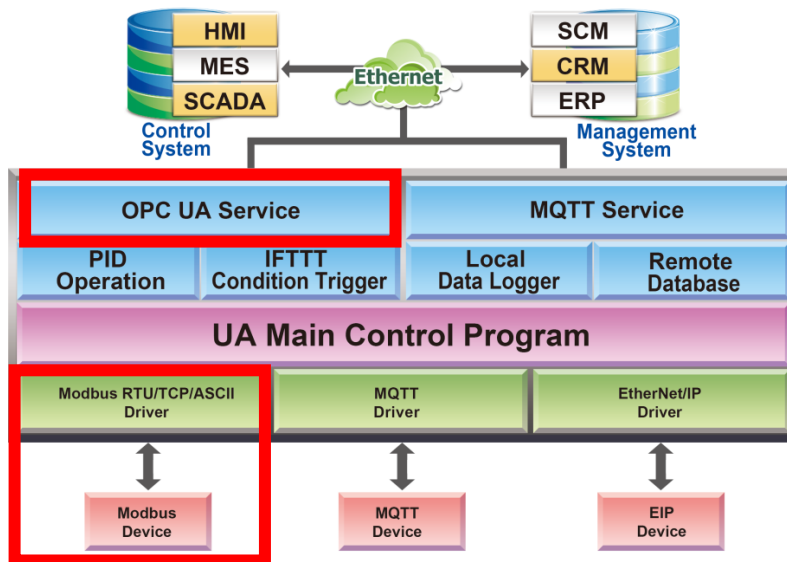

Application Solution:

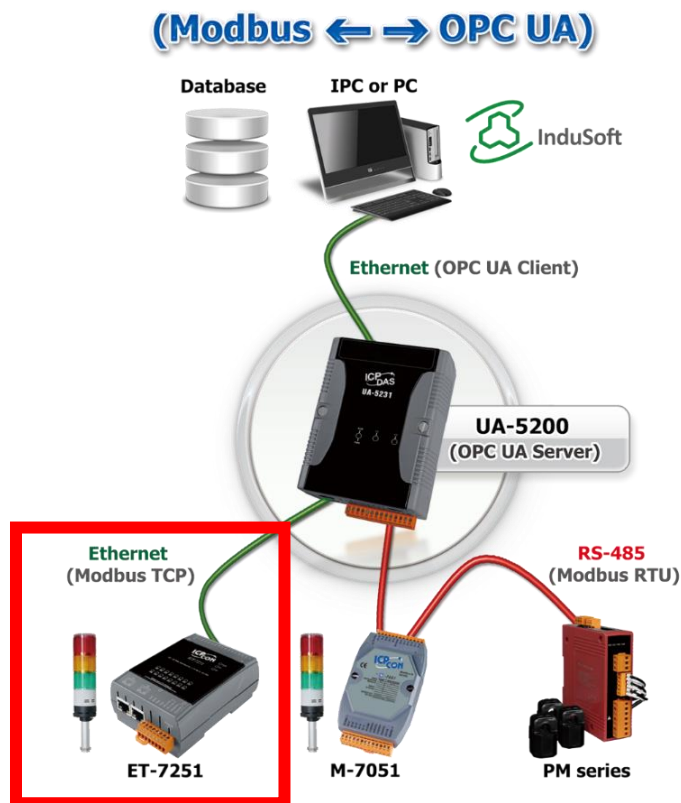

When entering the menu [Convert Setting] and the sub-menu [OPC UA] > Modbus TCP (Master), the Modbus TCP modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

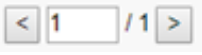Convert Setting > OPC UA > Modbus TCP (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “Module Content Setting” page to set up and enable the I/O.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

The “Module Content Setting” page after clicking the [Edit] button:

Module Content Setting			
No.	<input type="text" value="1"/>		
Module Name	<input type="text" value="Example1"/>		
Variable Table			
Name	Attribute	Data Type	Enabled <input checked="" type="checkbox"/>
Tag0	<input type="text" value="Read"/>	Short	<input checked="" type="checkbox"/>
Tag0	<input type="text" value="Read / Write"/>	Short	<input checked="" type="checkbox"/>
Tag0	<input type="text" value="Read"/>	Bool	<input checked="" type="checkbox"/>
Tag0	<input type="text" value="Read / Write"/>	Bool	<input checked="" type="checkbox"/>
Tag1	<input type="text" value="Read / Write"/>	Bool	<input checked="" type="checkbox"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>			


Convert Setting > OPC UA > Modbus TCP (Master) – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Convert Setting > OPC UA > Modbus TCP (Master) – Variable Table	
Name	Display the variable name that set in the Modbus Address Mapping Table page (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

When complete the setting, click [OK] to save this page settings and back to the module list page. And remember to click [Save] to save the Convert Setting.

8.3. OPC UA and MQTT Conversion

This page provides OPC UA and MQTT communication protocol conversion. With this function, the OPC UA Server can read and write the MQTT device that connected to the controller.


Function Diagram:

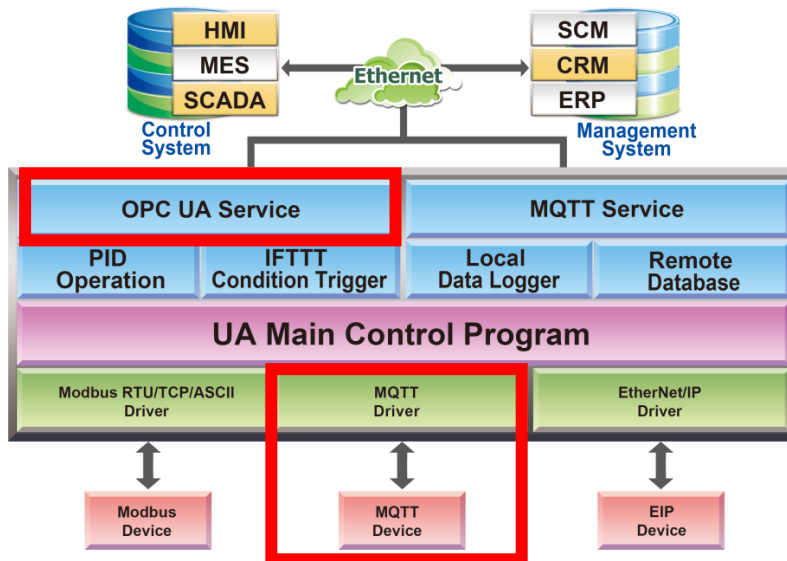

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [OPC UA] > MQTT, the MQTT modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

Convert Setting > OPC UA > MQTT - MQTT Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to enable the I/O.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

[Module Content Setting] page:


Module Content Setting			
No.	<input type="text" value="1"/>		
Module Name	<input type="text" value="DL-302"/>		
Variable Table			
Name	Attribute	Data Type	Enabled
Temperature	<input type="text" value="Read"/>	Float	<input checked="" type="checkbox"/>
Humidity	<input type="text" value="Read"/>	Float	<input checked="" type="checkbox"/>
CO2	<input type="text" value="Read"/>	Short	<input checked="" type="checkbox"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>			

Convert Setting > OPC UA > MQTT - MQTT Module List > Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	Give a name, e.g. model number or name. Default: Name.
Convert Setting > OPC UA > MQTT - MQTT Module List > Variable Table	
No.	The module name in the module list (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the MQTT variable. Include: Bool, Short, Unsigned Short, Long, Unsigned Long, Float, Double, String.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK / Cancer	Click [OK] to save and exit the page settings. Click [Cancer] to exit without saving.

8.4. OPC UA and EtherNet/IP Conversion

This page provides OPC UA and EtherNet/IP communication protocol conversion. With this function, the OPC UA Server can read and write the EtherNet/IP EIP-2000 device that connected to the controller.


Function Diagram:

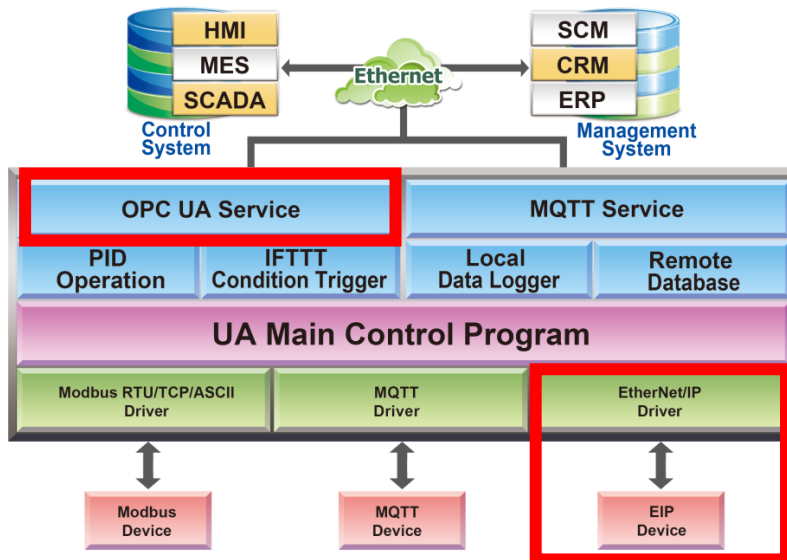

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [OPC UA] > EtherNet/IP, the EIP-2000 modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

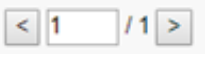Convert Setting > OPC UA > EtherNet/IP Module List	
No.	The module number in the module list (Not editable here)
Module Name	The module name selected in the module list (Not editable here)
Nickname	The user defined name for the module (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “Module Content Setting” page to set up and enable the I/O.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

The “Module Content Setting” page after clicking the [Edit] button:

Module Content Setting			
No.	<input type="text" value="1"/>		
Module Name	<input type="text" value="EIP-2055"/>		
NickName	<input type="text" value="EIP-demo"/>		
Variable Table			
Name	Attribute	Data Type	Enabled
DI0	<input type="text" value="Read"/>	Bool	<input type="checkbox"/>
DI1	<input type="text" value="Read"/>	Bool	<input type="checkbox"/>
DO6	<input type="text" value="Read / Write"/>	Bool	<input type="checkbox"/>
DO7	<input type="text" value="Read / Write"/>	Bool	<input type="checkbox"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>			

Convert Setting > OPC UA > EtherNet/IP – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Convert Setting > OPC UA > EtherNet/IP – Variable Table	
Name	Display the variable name that set in the Modbus Address Mapping Table page (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.


When complete the setting, click [OK] to save this page settings and back to the module list page. Remember to click [Save] to save the Convert Setting.

8.5. MQTT and Modbus RTU/ASCII Conversion


This page provides MQTT and Modbus RTU/ASCII (Master) communication protocol conversion. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus device that connected to the controller.

The settings of Modbus RTU/ASCII are the same. Here will introduce them together. For the certificate about the communication security, please refer to [Chapter 14](#).

Function Diagram:

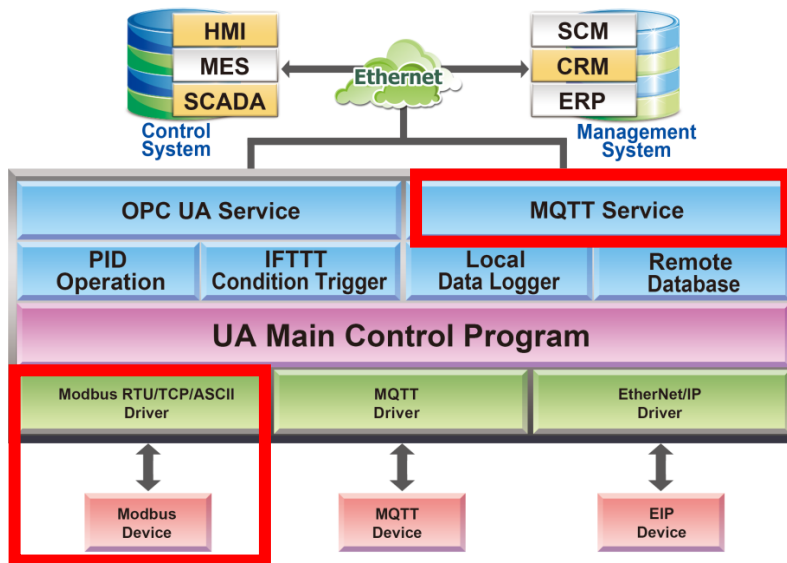

Application Solution:

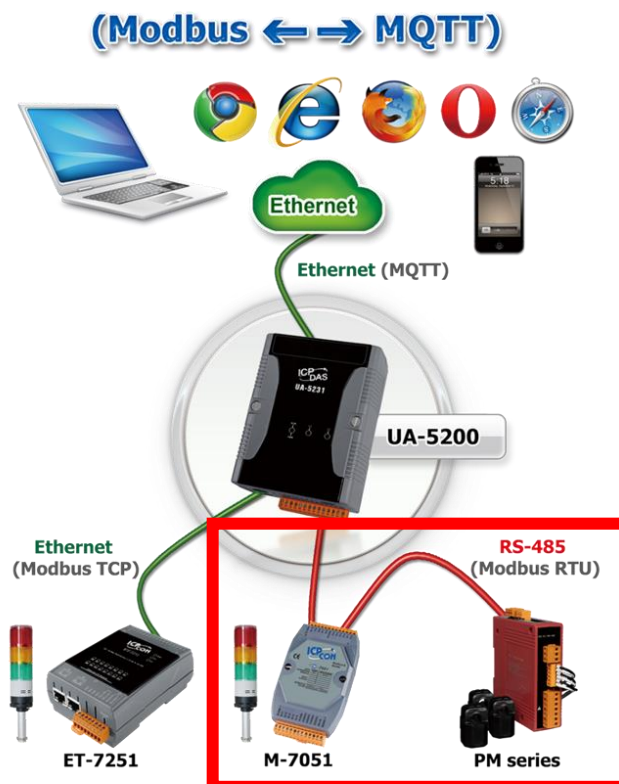


When entering the menu [Convert Setting] and the sub-menu [MQTT] > Modbus RTU (Master) or Modbus ASCII (Master), the Modbus RTU/ASCII modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

No.	*Module Name / Nickname	Edit	All Enabled
1	M-7	Edit	<input type="checkbox"/>
2	M-7055D	Edit	<input type="checkbox"/>

< 1 / 1 >

[Save](#)

Convert Setting > MQTT > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to enable I/O or set up the Topic, QoS, Publish, Subscribe ...
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “MQTT Client Setting” page.

The “MQTT Client Setting” page after clicking the [Edit] button:

MQTT Client Setting	
No.	1
Module Name	Example1
Scan Rate(ms)	1000
Dead Band	0
Will Topic	
Will	
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Broker1 (Remote)

Convert Setting > MQTT > Modbus RTU (Master) – MQTT Client Setting	
No.	The module number in the module list (Un-editable)
Module Name	The module name set in the module list (Not editable here)
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)
Dead Bend	Give a dead bend value for updating a float signal. Default: 0
Will Topic	Enter the title of a disconnect notice. Default: Null.
Will	Enter a disconnect notice. Default: Null.
MQTT Connection	Check the Broker for this MQTT connection, Local Broker or Remote Broker. Remote Broker option will appear only when set in advance.

Publish & Subscribe

Details
Show
Hide

Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Retain	Enabled
Tag0	Read	Short		2	/MRTU_No.1_M-7/Input_Registers/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read / Write	Short	/MRTU_No.1_M-7/Holding_Registers/Tag0/Subscribe	2	/MRTU_No.1_M-7/Holding_Registers/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read	Bool		2	/MRTU_No.1_M-7/Input_Status/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read / Write	Bool	/MRTU_No.1_M-7/Coil_Status/Tag0/Subscribe	2	/MRTU_No.1_M-7/Coil_Status/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag1	Read / Write	Bool	/MRTU_No.1_M-7/Coil_Status/Tag1/Subscribe	2	/MRTU_No.1_M-7/Coil_Status/Tag1/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>

OK
Cancel


Convert Setting > MQTT > Modbus RTU (Master) – Publish & Subscribe	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Name	The variable name of the mapping address. (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe Qos	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message.
Publish Qos	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

8.6. MQTT and Modbus TCP Conversion

This page provides MQTT and Modbus TCP (Master) communication protocol conversion. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the Modbus device that connected to the controller.

For the certificate about the communication security, please refer to [Chapter 14](#).


Function Diagram:

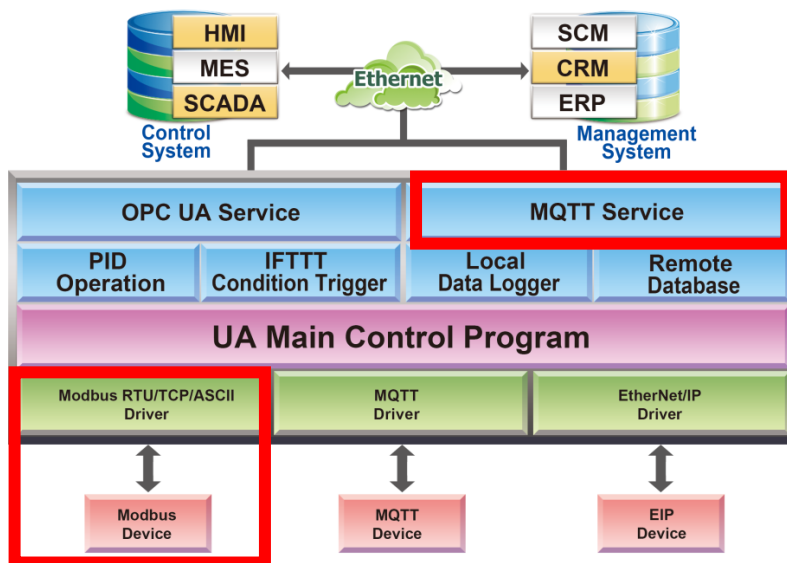

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [MQTT] > Modbus TCP (Master), the Modbus TCP modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

Convert Setting > MQTT > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to enable I/O or set up the Topic, QoS, Publish, Subscribe ...
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “MQTT Client Setting” page.

The “MQTT Client Setting” page after clicking the [Edit] button:

MQTT Client Setting	
No.	1
Module Name	Example1
Scan Rate(ms)	1000
Dead Band	0
Will Topic	
Will	
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Broker1 (Remote)

Convert Setting > MQTT > Modbus TCP (Master) – MQTT Client Setting	
No.	The module number in the module list (Un-editable)
Module Name	The module name set in the module list (Not editable here)
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)
Dead Bend	Give a dead bend value for updating a float signal. Default: 0
Will Topic	Enter the title of a disconnect notice. Default: Null.
Will	Enter a disconnect notice. Default: Null.
MQTT Connection	Check the Broker for this MQTT connection, Local Broker or Remote Broker. Remote Broker option will appear only when set in advance.

Publish & Subscribe

Details

Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Retain	Enabled
Tag0	Read	Float	/MRTU_No.1_Name1/Input_Registers/Tag0/Subscribe	2		2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read / Write	Short	/MRTU_No.1_Name1/Holding_Registers/Tag0/Subscribe	2	/MRTU_No.1_Name1/Holding_Registers/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read	Bool	/MRTU_No.1_Name1/Input_Status/Tag0/Subscribe	2		2	<input type="checkbox"/>	<input type="checkbox"/>
Tag0	Read / Write	Bool	/MRTU_No.1_Name1/Coil_Status/Tag0/Subscribe	2	/MRTU_No.1_Name1/Coil_Status/Tag0/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>
Tag1	Read / Write	Bool	/MRTU_No.1_Name1/Coil_Status/Tag1/Subscribe	2	/MRTU_No.1_Name1/Coil_Status/Tag1/Publish	2	<input type="checkbox"/>	<input type="checkbox"/>


Convert Setting > MQTT > Modbus TCP (Master) – Publish & Subscribe	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Name	The variable name of the mapping address. (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe QoS	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message.
Publish QoS	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

8.7. MQTT and EtherNet/IP Conversion

This page provides MQTT and EtherNet/IP communication protocol conversion. With this MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and so to read and write the single channel of the ICP DAS EIP-2000 device that connected to the controller.

For the certificate about the communication security, please refer to [Chapter 14](#).

Function Diagram:

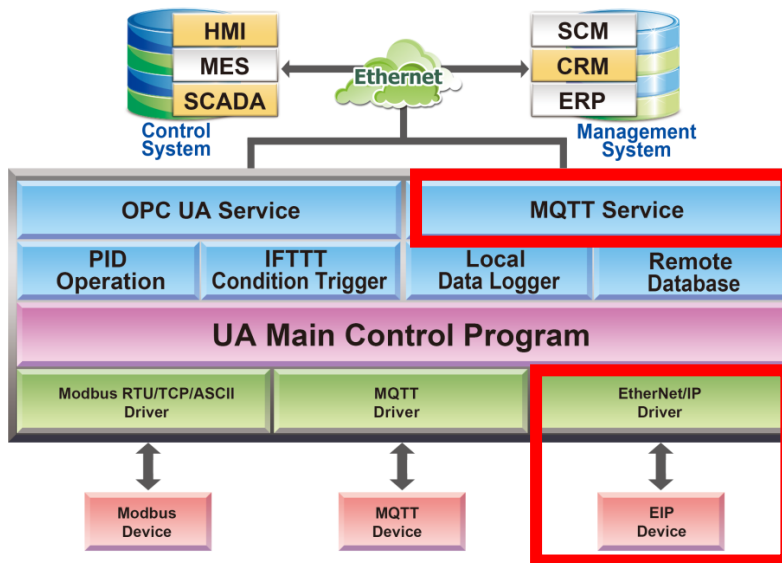

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [MQTT] > EtherNet/IP, the ICP DAS EtherNet/IP modules EIP Series preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)


The screenshot shows the 'Convert Setting' menu with the following structure:

- System Setting
- Module Setting
- IoT Platform Setting
- Convert Setting** (selected)
- Advanced Setting
- Logger Setting

Under 'Convert Setting', there are two sub-menus: 'I/O Status' and 'File Setting'. The 'EtherNet/IP' sub-menu is selected, showing the 'EtherNet/IP Module List'.

No.	Module Name	Nickname	Edit	All Enabled
1	EIP-2055	EIP-demo	Edit	<input type="checkbox"/>

At the bottom of the list, there is a pagination control: < 1 / 1 >. A 'Save' button is located below the list.

Convert Setting > MQTT > EtherNet/IP Module List	
No.	The module number in the module list (Not editable here)
Module Name	The EIP series model selected in the module list (Not editable here)
Nickname	The user defined name for the module (Not editable here)
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	Click to enter the “MQTT Client Setting” page to enable I/O or set up the Topic, QoS, Publish, Subscribe ...
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “MQTT Client Setting” page.

The “MQTT Client Setting” page after clicking the [Edit] button:

MQTT Client Setting	
No.	<input type="text" value="1"/>
Module Name	<input type="text" value="Example1"/>
Scan Rate(ms)	<input type="text" value="1000"/>
Dead Band	<input type="text" value="0"/>
Will Topic	<input type="text"/>
Will	<input type="text"/>
MQTT Connection	<input checked="" type="checkbox"/> Broker (Local) <input type="checkbox"/> Broker1 (Remote)

Convert Setting > MQTT > Modbus TCP (Master) – MQTT Client Setting	
No.	The module number in the module list (Un-editable)
Module Name	The module name set in the module list (Not editable here)
Scan Rate(ms)	Set an update frequency for the task data. Default: 1000 (Unit: ms)
Dead Bend	Give a dead bend value for updating a float signal. Default: 0
Will Topic	Enter the title of a disconnect notice. Default: Null.
Will	Enter a disconnect notice. Default: Null.
MQTT Connection	Check the Broker for this MQTT connection, Local Broker or Remote Broker. Remote Broker option will appear only when set in advance.

Publish & Subscribe

Details
Show
Hide

Name	Attribute	Data Type	Subscribe Topic	Subscribe QoS	Publish Topic	Publish QoS	Retain	Enabled
Tag0	Read	Float	/MRTU_No.1_Name1/Input_Registers/Tag0/Subscribe	2		2		
Tag0	Read / Write	Short	/MRTU_No.1_Name1/Holding_Registers/Tag0/Subscribe	2	/MRTU_No.1_Name1/Holding_Registers/Tag0/Publish	2		
Tag0	Read	Bool	/MRTU_No.1_Name1/Input_Status/Tag0/Subscribe	2		2		
Tag0	Read / Write	Bool	/MRTU_No.1_Name1/Coil_Status/Tag0/Subscribe	2	/MRTU_No.1_Name1/Coil_Status/Tag0/Publish	2		
Tag1	Read / Write	Bool	/MRTU_No.1_Name1/Coil_Status/Tag1/Subscribe	2	/MRTU_No.1_Name1/Coil_Status/Tag1/Publish	2		

OK
Cancel


Convert Setting > MQTT > Modbus TCP (Master) – Publish & Subscribe	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Name	The variable name of the mapping address. (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Subscribe Topic	The topic of receiving/subscribing data message.
Subscribe QoS	The subscribe Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Publish Topic	The topic of sending/publishing data message.
Publish QoS	The publish Qos (Quality of Service) levels. Default: 2 0: Delivering a message at most once. 1: Delivering a message at least once. 2: Delivering a message at exactly once.
Retain	Check [Retain] box of the top row can store the broker message for all variables in list. Check the box of each variable can store the broker message just that variable. Default: Uncheck.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

8.8. MQTT JSON and Modbus RTU/ASCII Conversion

This page provides MQTT JSON and Modbus RTU/ASCII (Master) communication protocol conversion. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus RTU/ASCII devices that connected to the controller.

The settings of Modbus RTU/ASCII are the same. Here will introduce them together. For the certificate about the communication security, please refer to [Chapter 14](#).


Function Diagram:

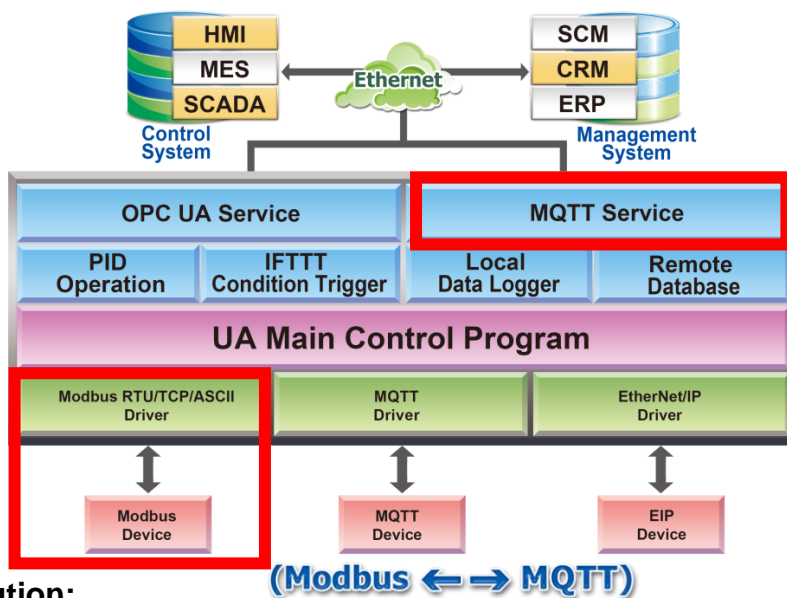

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [MQTT JSON] > Modbus RTU or Modbus ASCII (Master), the Modbus RTU/ASCII modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

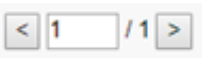Convert Setting > MQTT JSON > Modbus RTU (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Connection Name	Select a group connection name, and then click [Apply].
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enable I/O or check the “Module Content Setting” and “Variable Tale” page.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

Module Content Setting

No.

1

Module Name

Example1

Variable Table

Details

Show

Hide

Variable Name	Alias	Attribute	Data Type	Connection Name	Enabled
Tag0	Tag0	Read	Float		<input type="checkbox"/>
Tag0	Tag0	Read / Write	Short		<input type="checkbox"/>
Tag0	Tag0	Read	Bool		<input type="checkbox"/>
Tag1	Tag1	Read	Bool		<input type="checkbox"/>
Tag0	Tag0	Read / Write	Bool		<input type="checkbox"/>
Tag1	Tag1	Read / Write	Bool		<input type="checkbox"/>

OK

Cancel


Convert Setting > MQTT JSON > Modbus RTU (Master) – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Convert Setting > MQTT JSON > Modbus RTU (Master) – Variable Table	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Variable Name	The variable name of the mapping address. (Not editable here)
Alias	The alias name for the variable. (Editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Connection Name	Select the group name that set in the group list page.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

8.9. MQTT JSON and Modbus TCP Conversion

This page provides MQTT JSON and Modbus TCP (Master) communication protocol conversion. With the MQTT Service function, users can set the MQTT client to publish the message to the specified broker or subscribe the topic, and combine several messages that converted in JSON format into a group to read and write the multiple channels of the Modbus TCP devices that connected to the controller.

For the certificate about the communication security, please refer to [Chapter 14](#).


Function Diagram:

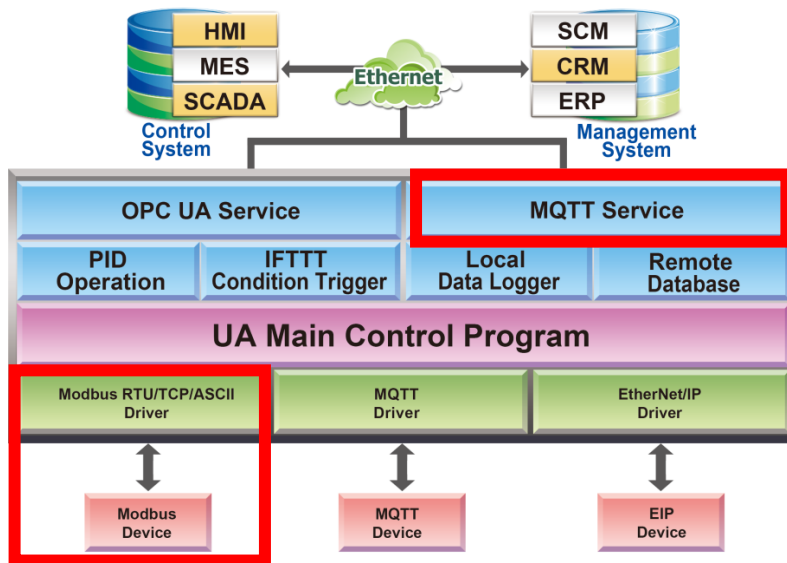

Application Solution:



When entering the menu [Convert Setting] and the sub-menu [MQTT JSON] > Modbus TCP (Master), the Modbus TCP modules preset in the [Module Setting] will show up in the Module List. (Refer to [Chapter 6](#) for the Module Setting.)

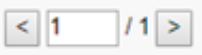Convert Setting > MQTT JSON > Modbus TCP (Master) Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Connection Name	Select a group connection name, and then click [Apply].
Edit	If user wants to enable some I/O channels for conversion, click [Edit] of that module to enter the “Module Content Setting” and “Variable Tale” page.
All Enabled	Check [All Enabled] box to enable all modules in list for conversion. Default: Uncheck. Check the box of each module can enable just that module for conversion.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the communication conversion module, please check the box of the converting module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

Module Content Setting

No.

1

Module Name

Example1

Variable Table

Details

Show

Hide

Variable Name	Alias	Attribute	Data Type	Connection Name	Enabled
Tag0	Tag0	Read	Float		<input type="checkbox"/>
Tag0	Tag0	Read / Write	Short		<input type="checkbox"/>
Tag0	Tag0	Read	Bool		<input type="checkbox"/>
Tag1	Tag1	Read	Bool		<input type="checkbox"/>
Tag0	Tag0	Read / Write	Bool		<input type="checkbox"/>
Tag1	Tag1	Read / Write	Bool		<input type="checkbox"/>

OK

Cancel

Convert Setting > MQTT JSON > Modbus TCP (Master) – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Convert Setting > MQTT JSON > Modbus TCP (Master) – Variable Table	
Details	Click [Show] to display all fields, click [Hide] to hide some fields.
Variable Name	The variable name of the mapping address. (Not editable here)
Alias	The alias name for the variable. (Editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Connection Name	Select the group name that set in the group list page.
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.

9. Advanced Setting

Advanced Setting is the fifth (5th) item of the Main Menu, mainly to provide advanced monitoring and control related settings.

Advanced Setting provides virtual device function or cloud service function. The description is on the page of the Main Menu. It will support more functions in the future.

The items in the advanced setting functions are “PID Operation” and “IFTTT Condition Trigger” and “Data Logger” that includes “Local Data Logger” and “Remote Database”. This chapter will introduce the function items and setting parameters.

System Setting	Module Setting	IoT Platform Setting	Convert Setting	Advanced Setting	Logger Setting										
I/O Status	File Setting														
<div> <div> Advanced Setting PID Operation IFTTT Condition Trigger Data Logger Local Data Logger Remote Database </div> <div> <h3>Advanced Setting</h3> <table border="1"> <tr> <td>PID Operation</td> <td>The PID controller is a common feedback loop component in industrial control applications. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.</td> </tr> <tr> <td>IFTTT Condition Trigger</td> <td>With the IFTTT cloud platform, the users can send messages to IFTTT-related cloud services such as Line, Facebook, Twitter, etc. when the special events occur.</td> </tr> <tr> <td colspan="2">Data Logger</td> </tr> <tr> <td>Local Data Logger</td> <td>Set local data log.</td> </tr> <tr> <td>Remote Database</td> <td>Set the remote database connection.</td> </tr> </table> </div> </div>						PID Operation	The PID controller is a common feedback loop component in industrial control applications. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.	IFTTT Condition Trigger	With the IFTTT cloud platform, the users can send messages to IFTTT-related cloud services such as Line, Facebook, Twitter, etc. when the special events occur.	Data Logger		Local Data Logger	Set local data log.	Remote Database	Set the remote database connection.
PID Operation	The PID controller is a common feedback loop component in industrial control applications. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.														
IFTTT Condition Trigger	With the IFTTT cloud platform, the users can send messages to IFTTT-related cloud services such as Line, Facebook, Twitter, etc. when the special events occur.														
Data Logger															
Local Data Logger	Set local data log.														
Remote Database	Set the remote database connection.														

The setting for UA series controllers is to set up from the left to the right of the main menu functions. User can find the setting step and Web UI information in the following chapters.


[CH2 Quick Start 1: Hardware/Network Connection](#)

[CH3 Quick Start 2: Web UI / Steps / Project Example](#)

[CH4 Function Wizard: Quick Setup](#)

9.1. PID Operation


This page is about the virtual device function to allow users to simulate various devices with the real I/O by using the tuning function of PID operation.

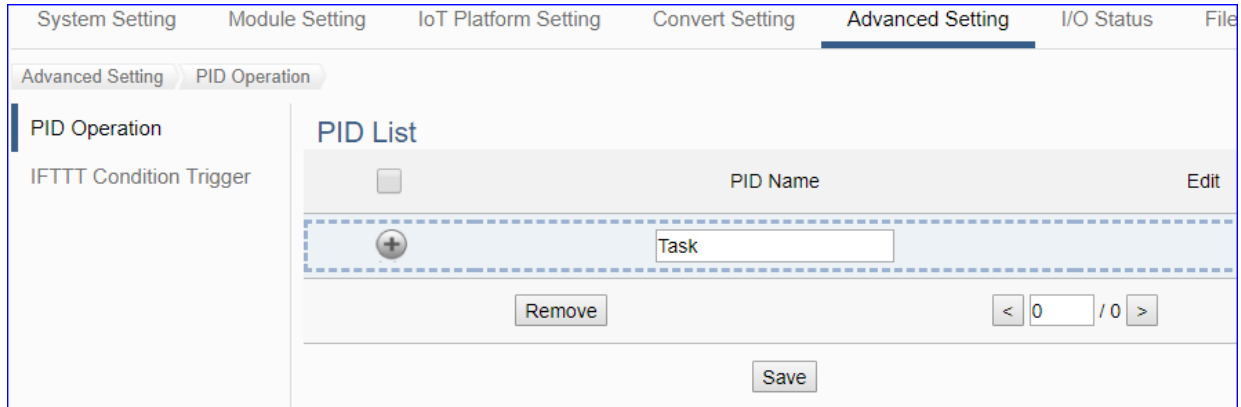


PID (Proportional-Integral-Derivative) control is the most widely used in industrial control systems. A regulator which is controlled in accordance with Proportional, Integral and Derivative is called PID control for short, also called PID regulator. When the user cannot fully grasp or measure parameters of the control system, the PID regulator is the best solution.

The PID controller is a common feedback loop component in industrial control applications. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.

Function Diagram:

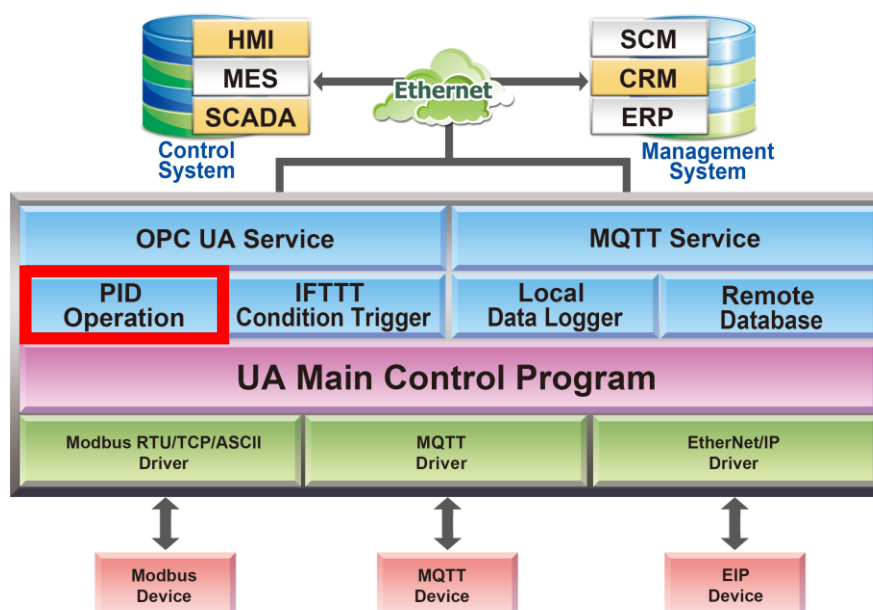


PID Operation Solution Example:

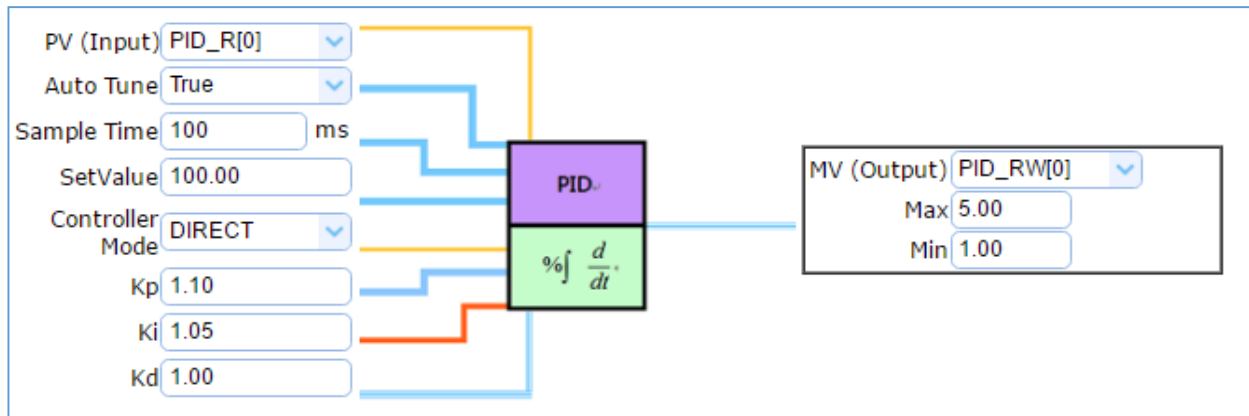


In the PID Operation function, UA controller collects the module's data to operate via the feedback loop component of PID control. The controller compares the collected data with a reference value and then uses this difference to calculate a new input value whose purpose is to allow the system data to reach or remain at the reference value.

The setting steps of the PID Operation are as below. The descriptions for the steps setting please refer to Section 4.3 "PID" items in the Function Wizard.

[Step Box] of [PID Operation] :



[Step Box] of [PID Operation + OPC UA Conversion] :

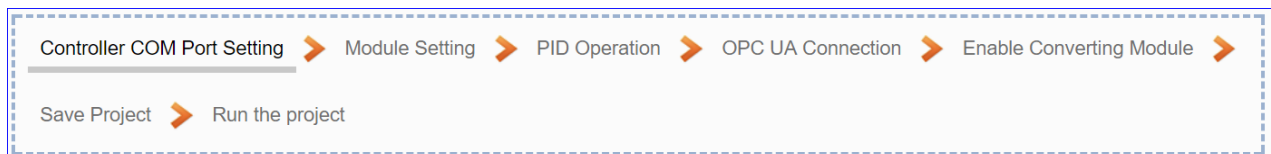

This section will introduce the function items and setting parameters of the PID Operation.

PID List

PID Name

Edit

+

Task

Task1

Edit

Remove



<

1

/ 1

>

Save

Advanced Setting > PID Operation > PID List	
PID Name	PID name, user can define, e.g. Task1. Default: Task.
	Click to add a new PID Task.
Edit / Remove	Click [Edit] can set the PID content. Click the left box and [remove] can delete the PID list.
	The page number of the PID list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the setting of this page.

Click [Edit] button to enter the [Content Settings] page:

Content Settings

PID Name

Task1

Advanced Setting > PID Operation > Content Settings	
PID Name	PID name, user can define, e.g. Task1. Default: Task.

Input Item	
Module selection	Type : <input type="text"/> Please select the module type.
	No. : <input type="text"/> Please select the number. When no option is available, add a module.
	Name : <input type="text"/>
Variable selection	Attribute <input type="text"/> Please select item.
	Type : <input type="text"/> Please select item.
	Name : <input type="text"/> Please select name. When there is no option, add the variables in the module.
Auto Tune	<input checked="" type="checkbox"/> Enabled
Sample Time(ms)	<input type="text" value="500"/>
Setpoint	<input type="text" value="0"/>
Controller Mode	<input type="text" value="DIRECT"/>
Kp	<input type="text" value="1"/>
Ki	<input type="text" value="1"/>
Kd	<input type="text" value="1"/>

Advanced Setting > PID Operation > Input Item	
Module selection	Choose a predefined module for input data of the PID. Select the type, number and name of the input module. If no option is available, add a new module.
Variable selection	Choose a predefined float variable as the input parameter for PID operation. Select the attribute, type and name of the float variable.
Auto Tune	Enable: Auto-tuning PID parameters for your system. Default: check. Un-Enable: Tuning PID parameters manually, e.g. Kp, Ki, Kd.
Sample Time (ms)	Set the sampling time. (Unit: ms) Default: 500 ms.
Setpoint	The target value for PID control. Default: 0.
Controller Mode	DIRECT: Set it as positive output value. Default: DIRECT. REVERSE: Set it as reverse output value.
Kp	Set the Proportional gain. Default: 1.
Ki	Set the Integral gain. Default: 1.
Kd	Set the Derivative gain. Default: 1.

Output Item

Module selection

Type :

Please select the module type.

No. :

Please select the number.
When no option is available, add a module.

Name :

Variable selection

Attribute

Please select item.

Type :

Please select item.

Name :

Please select name.
When there is no option, add the variables in the module.

Max

0

Min

0

OK

Cancel

Advanced Setting > PID Operation > Output Item	
Module selection	Choose a predefined module for output data of the PID. Select the type, number and name of the input module. If no option is available, add a new module.
Variable selection	Choose a predefined float variable as the output parameter for PID operation. Select the attribute, type and name of the float variable.
Max	Set the upper-limit value for the variable. Default: 0.
Min	Set the lower-limit value for the variable. Default: 0.
OK	Click to save the settings of the page and back to the PID list page.

PID Operation Solution Example:

The diagram illustrates a PID control system configuration. On the left, a list of input parameters is shown with their respective values and units: PV (Input) is PID_R[0], Auto Tune is True, Sample Time is 100 ms, Set Value is 100.00, Controller Mode is DIRECT, Kp is 1.10, Ki is 1.05, and Kd is 1.00. These parameters are connected via colored lines to a central PID block. The PID block is a purple square with a green circle containing the PID symbol $\% \int \frac{d}{dt}$. The output of the PID block is connected to a box on the right labeled MV (Output). This box contains the output variable PID_RW[0], a Max value of 5.00, and a Min value of 1.00.

246

9.2. IFTTT Condition Trigger

This page is about use the IFTTT cloud platform function. Combine with the IFTTT Condition Trigger function, when the special events occur, the users can send messages to IFTTT-related cloud services (such as Line, Facebook, Twitter, etc.).

IFTTT (if this then that) is a cloud service platform that easy to get your apps and devices working together via creating chains of simple conditional statements (applets). An applet is triggered by changes that occur within other web services such as Line, Facebook, Twitter, Gmail, Instagram, etc. For example, “if” Facebook (Service A) has a new message, “then” send an email to Gmail (Service B).

UA using the IFTTT cloud platform functions, the users can send messages to cloud services such as Line, Facebook, Twitter, etc. when the special events occur.



The settings for sending the message to the APP with the "IFTTT Condition Trigger (Line, Facebook, Twitter)" function includes two parts:

3. UA Web Interface Setting:

In the UA Web HMI, set up the UA controller, modules, IFTTT trigger conditions, the condition variable table, and the IFTTT event connection.

4. IFTTT Cloud Platform Setting:

In the IFTTT website, set up the “**if**” side service and event (**this**: use **webhooks** for the UA), the “**then**” side service and action (**that**: user can select the service, such as the Line, Facebook, twitter, etc.). And then fill the “**Event Name**” and “**Key**” getting from the IFTTT website setting into the “**Content Setting**” of the UA We HMI. (Detail in the [Appendix C.](#))



This section introduces the setting part on the UA Web Interface, including the IFTTT trigger condition, variable table and the event message. About the setting on the IFTTT Cloud Platform, user can set up on the IFTTT website and get the “**Event Name**” and “**Key**” for the configuration here. If you are not familiar about the IFTTT, please refer to the [Appendix C.](#)

For the whole steps to send the message to an APP from setting the UA controller, module, I/O variables to the IFTTT Condition Trigger, the users can refer to the [Section 4.4](#) and the step box below.

[Step Box : IFTTT Condition Trigger (Line, Facebook, Twitter)]:



This section will introduce the setting of the IFTTT condition trigger list, variable table and the event message.

IFTTT Condition Trigger List

<input type="checkbox"/>	Event Name	Key	Edit	Status
Add Message				
<input type="checkbox"/>	UA-5200 test	fkCGvasDPR-xYe2ugpgQ7	Edit	Enabled

Remove < 1 / 1 > Save

Advanced Setting > IFTTT Condition Trigger > FTTT Condition Trigger List	
Add Message	Click to add a new IFTTT message. After setting, an IFTTT condition trigger list will show on the bottom, includes left box, event name, key and status.
<input type="checkbox"/>	Check the box in the left of the list is to select and to delete the list. Check the box on the top will select all lists.
Event Name	Display the “Event Name” setting in the IFTTT website. (Append. C)
Key	Display the “Key” getting from the IFTTT website. (Append. C)
Edit	Click [Edit] can set the IFTTT condition trigger content.
Status	Display the enable status of the IFTTT condition trigger list.
Remove	Click the left box and [remove] can delete the IFTTT list.
< 1 / 1 >	The page number of the IFTTT list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the setting of this page.

Click **[Add Message]** button to enter the IFTTT [Content Settings] page:

Content Setting

Event Name	UA-5200 test
Key	fkCGvasDPR-xYe2ugpgQ7
Status	<input checked="" type="checkbox"/> Enabled

Note: The “Event Name” and “Key” are set in the IFTTT website. If you are not familiar with IFTTT, please see the [Appendix C](#) for the setting introductions.

Advanced Setting > IFTTT Condition Trigger > Content Setting	
Event Name	Input the “Event Name” setting in the IFTTT website. (Append. C)
Key	Input the “Key” getting from the IFTTT website. (Append. C)
Status	Check to enable the IFTTT condition trigger event.

Condition Setting		
Module Variables	Operator	Value
<div>↓ Module Type</div> <div>Modbus RTU (Master) ▼</div>		
<div>↓ Module Name</div> <div>No.1 M-7 ▼</div>		
<div>↓ Variable Attribute</div> <div>Read ▼</div>	= ▼	<div>Type : User-Defined ▼</div> <div>Dead Band : 1</div>
<div>↓ Variable Name</div> <div>Tag0 (Short) ▼</div>		
<div>Add</div>		

The condition setting field may different depending on the selected variable attribute.


Condition Setting	
Module Variables	Status
<div>↓ Module Type</div> <div>Modbus RTU (Master) ▼</div>	
<div>↓ Module Name</div> <div>No.2 M-7055D ▼</div>	
<div>↓ Variable Attribute</div> <div>Read ▼</div>	<div>Status Change ▼</div>
<div>↓ Variable Name</div> <div>Tag0 (Bool) ▼</div>	

Advanced Setting > IFTTT Condition Trigger > Condition Setting	
Module Variables	Select the module and variable for the condition trigger. Module Type: select the module type, Modbus RTU/TCP/ASCII... Module Name: select the module that set for condition trigger. Variable Attribute: select the variable attribute for condition trigger. Variable Name: select the variable name for condition trigger.
The following condition fields may different depending on the selected variable attribute. The condition trigger method will be described after this table.	
Operator	Select the operator for the trigger condition.
Value	Set up the value for the condition, include Type and Dead Band.
Status	Set up the status for the condition. Default: 0.
Add	Click to add a condition trigger list in the Condition Table..

Condition Trigger Descriptions:

The condition trigger method will be different depending on the attribute of the selected variable and the trigger will be different. There are two operation styles: **DIO** and **AIO**.


(A) If select **DIO variable**, then Condition is "Status Change". When detecting the status is changed, it will trigger the event and send the assigned message. (Below is a switch detecting example.)

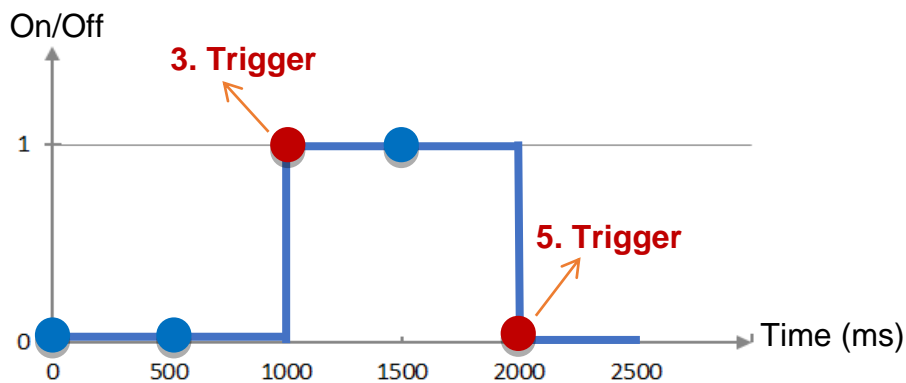

DIO Trigger: (Detect per 500 ms)

1. Detect initial switch status "Off" (status = 0)
2. Detect "Off" (status = 0, status no change), no trigger
3. Detect "On" (status = 1, status changed), trigger a message notification
4. Detect "On" (status = 1, status no change), no trigger
5. Detect "Off" (status = 0, status changed), trigger a message notification

(B) If select **AIO variable**, then Condition is “Value” and can set the “Dead Band”. The condition will be triggered and send the message when the detected value exceeds the upper or lower Dead Band. (Below is a CO2 example. Detect per 500 ms)

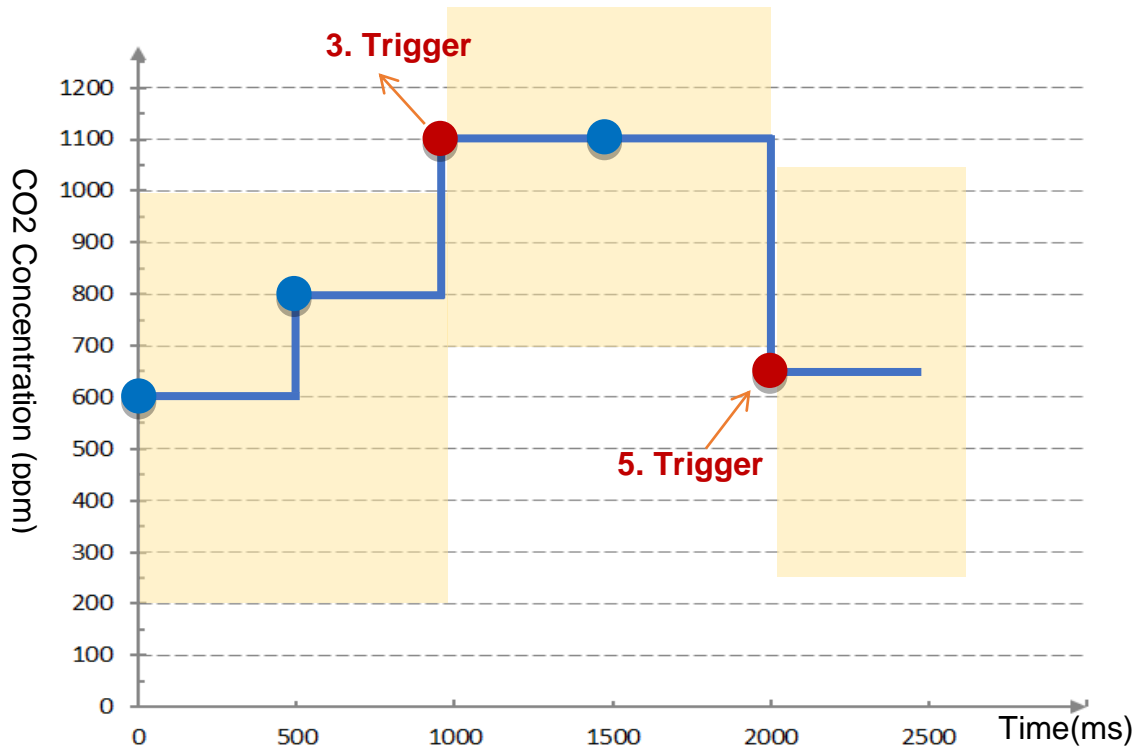

AIO Trigger: (Detect per 500 ms. The yellow block means the Dead Band.)

1. Detect initial CO2 concentration 600 (ppm).
Set Dead Band=400 (Initial Trigger Condition: ≥ 1000 or ≤ 200)
2. Detect CO2 concentration 800. It is in the range of Dead Band.
3. Detect CO2 concentration 1100. It exceeds the upper value (≥ 1000) of Dead Band, so trigger a message for danger notification.
4. Detect CO2 concentration 1100. It is in the new range of Dead Band.
Dead Band=400 (New Trigger Condition: ≥ 1500 or ≤ 700)
5. Detect CO2 concentration 650. It is below the lower value (≤ 700) of Dead Band, so trigger a message for safety notification.

Please refer to the previous Condition Trigger Descriptions to set up your Condition. When complete, click the “Add” button. The setting will show in the Condition Table. Below Table is setting 2 conditions.

Condition Table				
<input type="checkbox"/>	Module	Variable	Condition	Define Message
<input type="checkbox"/>	Modbus RTU (Master) No.2 M-7055D	Tag0 Read / Write Bool	Status Change	MRTU_No.2_M-7055D
<input type="checkbox"/>	Modbus TCP (Master) No.1 DL-302	CO2 Read / Write Short	Deadband=400	MTCP_No.1_DL-302
<input type="button" value="Remove"/>				
<input type="button" value="OK"/> <input type="button" value="Cancel"/>				

Advanced Setting > IFTTT Condition Trigger > Condition Table	
Module	Display the module type and name of the condition. (Not editable here)
Variable	Display the variable attribute and name of the condition. (Not editable here)
Condition	Display the trigger condition. (Not editable here)
Define Message	Default Message: module code_variable code. The user can define own message in the format of English character, number, general symbol...
Remove	Click the left box and [remove] can delete the IFTTT list.
OK	Click to save this page settings and back to the module list page.
Cancel	Click to exit without saving and back to the module list page.

When back to the IFTTT Condition Trigger List, the condition trigger message will show as below picture. If need more trigger conditions, click the “Add Message” again to combine the IFTTT APP message sending and the UA system. At last, click the Save button.


IFTTT Condition Trigger List				
<input type="checkbox"/>	Event Name	Key	Edit	Status
Add Message				
<input type="checkbox"/>	UA-5200 test	fkCGvasDPR-xYe2ugpgQ7	<input type="button" value="Edit"/>	Enabled
<input type="button" value="Remove"/>			<input type="button" value="1"/> / 1	
<input type="button" value="Save"/>				

9.3. Data Logger: Local Data Logger


UA supports Data Logger function to save I/O data into Local CSV log files of the microSD card in UA, or import the I/O data into remote database directly.

This function is for setting the local data logger and the microSD card. For the setting about the logger and module, please refer to [Chapter 10](#).

Function Diagram:

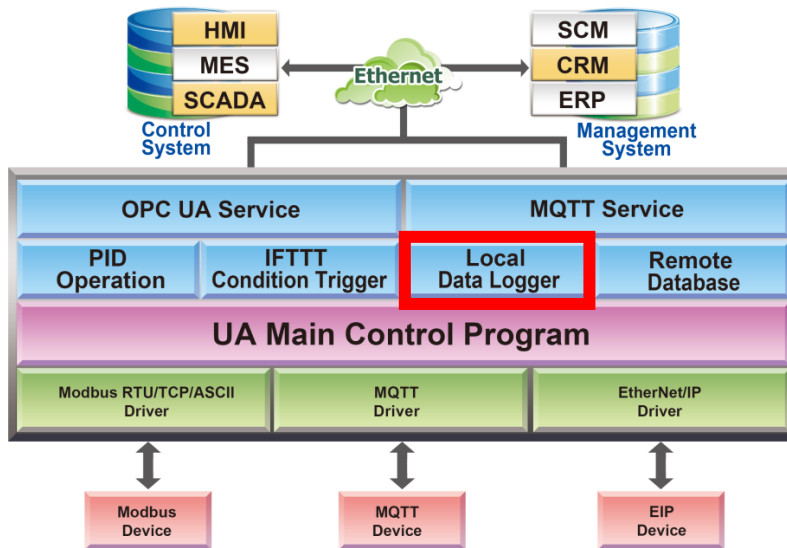

Application:

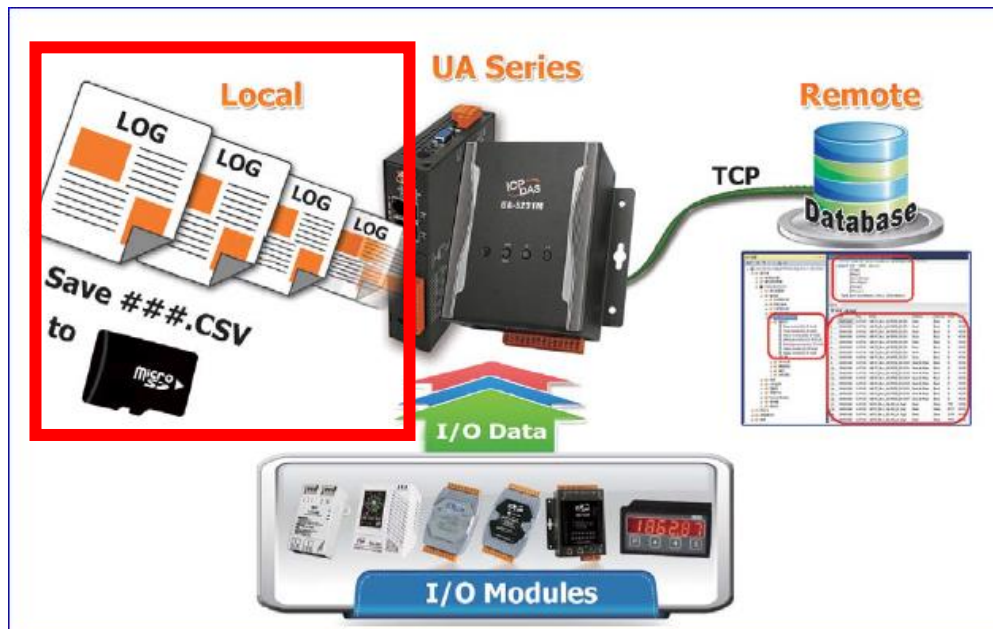

Enter the main menu [Advanced Setting] > [Data Logger] > [Local Data Logger]:

System Setting		Module Setting		IoT Platform Setting		Convert Setting		Advanced Setting	
I/O Status		File Setting							
Advanced Setting		Local Data Logger							
PID Operation									
IFTTT Condition Trigger									
Data Logger									
Local Data Logger									
Remote Database									
				Local Data Logger					
				Folder Name	<input type="text" value="Datalog"/>				
				File Length	<input type="text" value="1 hour"/>				
				Log Interval	<input type="text" value="1 minute"/>				
				Max SD Card Usage Rate(%)	<input type="text" value="90"/>				
				SD Card Currently Usage Rate	Unmounted				
				SD Card	<input type="radio"/> Mount <input checked="" type="radio"/> Unmount				
						<input type="button" value="Save"/>			


Advanced Setting > Data Logger > Local Data Logger	
Folder Name	The folder name in microSD card of UA, user definable. The I/O data will save into the file "log.csv" under this folder.
File Length	Unit: hour. User can select per 1, 2, 3, ... 8, 12, or 24 hours to divide the log.csv into the file "log-Y-M-D-H-M-S.csv" under the folder "Y-M". (e.g. 2018-12)
Log Interval	The interval to save I/O data per seconds, minutes or hours.
Max SD Card Usage Rate (%)	Set up the maximum usage rate (Unit: %) of UA microSD card. If the data current rate meet the max rate, the oldest data will be removed first.
SD Card Currently Usage Rate	Display the current usage rate of UA microSD card (show %).
SD Card	Mount: Click to mount microSD card and begin to record data. Unmount: Click to unmount microSD card and stop record data.
Save	Click to save the settings of this item.

9.4. Data Logger: Remote Database


UA supports Data Logger function to save I/O data into Local CSV log files of the microSD card in UA, or import the I/O data into remote database directly.

This function is for setting the remote database connection. For the setting about the logger and module, please refer to [Chapter 10](#).

Function Diagram:

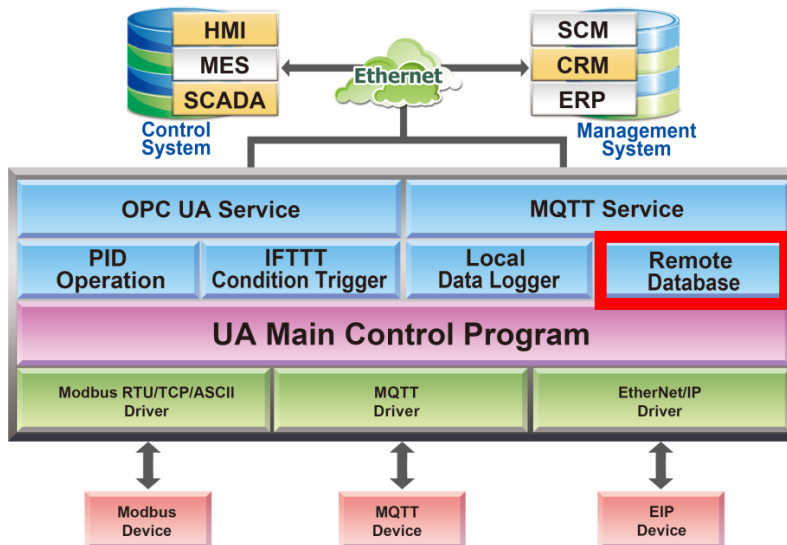

Application:

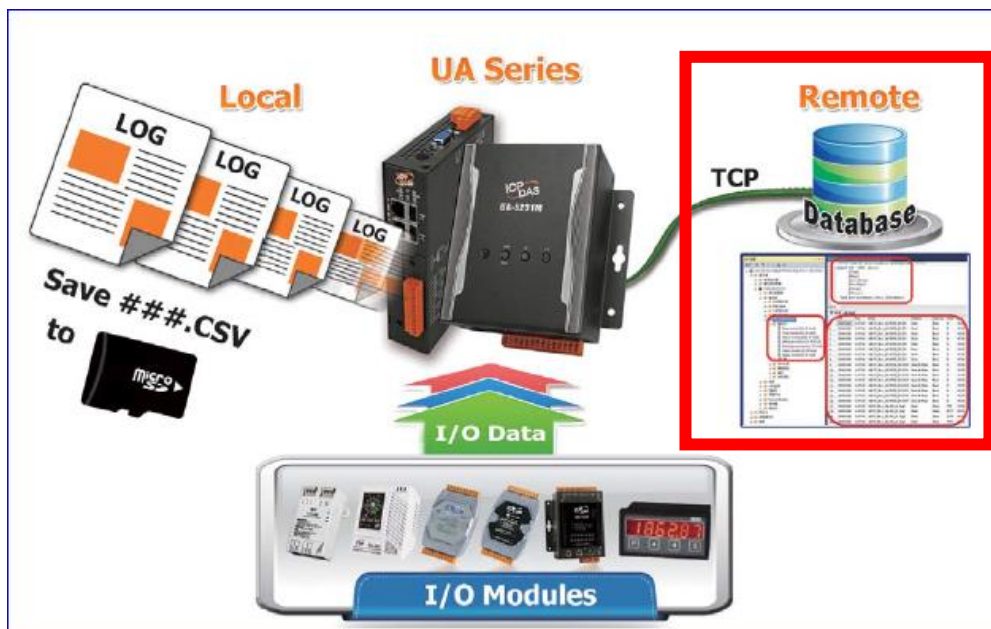

Enter the main menu [Advanced Setting] > [Data Logger] > [Remote Database] and click plus sign to add a remote database list, e.g. Identification Name “RemoteDB”, as below.

The screenshot shows the 'Advanced Setting' menu with 'Remote Database' selected. On the left, the 'Data Logger' section is active, with 'Remote Database' chosen. The main area is titled 'Remote Database List' and contains a table with columns: 'Remove', 'Identification Name', 'Status', and 'Edit'. Below the table is a dashed box containing a '+' icon and a text input field labeled 'Name'. At the bottom of the table area is a 'Remove' button and a pagination control showing '< 0 / 0 >'. A 'Save' button is at the bottom right.

The screenshot shows the same 'Remote Database List' interface, but now with one entry in the table. The entry has a 'Remove' checkbox, the identification name 'RemoteDB', and a status of 'Enable'. An 'Edit' button is next to the status. The dashed box for adding a new entry is still present. The pagination control now shows '< 1 / 1 >'. The 'Save' button remains at the bottom right.

Advanced Setting > Data Logger > Remote Database	
<input type="checkbox"/> Remote	Check Remote box to remote all database connection in list. Check the box of each database and click “Remote” can remote just that database connection.
Identification Name	User defined name to identify the remote database. Default: Name.
Status	Display the status (Enable/Disable) of the database connection. Default: Enable.
	Click to add a new remote database connection.
Edit	Click to enter the “Content Setting” page of the remote database.
	The page number of the database list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Click “Edit” to enter the “Remote database connect settings” page.


Remote database content settings	
Identification Name	<input type="text" value="RemoteDB"/>
Database Type	<input type="text" value="MSSQL"/>
Database Name	<input type="text" value="DatabaseName"/>
Table Name	<input type="text" value="TableName"/>
Server Name	<input type="text" value="127.0.0.1\SQLEXPRESS"/>
Port	<input type="text" value="1433"/>
Account	<input type="text" value="root"/>
Password	<input type="password" value="...."/>
Interval Seconds	<input type="text" value="5"/>
Enable	<input checked="" type="checkbox"/>
Test Connection	<input type="button" value="Connection"/>
<input type="button" value="OK"/> <input type="button" value="Cancel"/>	

Advanced Setting > Data Logger > Remote Database – Content Setting	
Identification Name	User defined name to identify the database.
Database Type	Select the MSSQL type for the Microsoft SQL database.
Database Name	The name of the remote database.
Table Name	The table name of the remote database.
Server Name	The Server IP and name of the remote database.
Port	The port to connect with database. Default: 1433 (for MS SQL)
Account	The login name of the remote database.
Password	The login password of the remote database.
Interval Seconds	Set up the interval time to save the I/O data to the remote database. Unit: Second.
Enable	Check to enable the data logger to the remote database. Default: check.
Test Connection	Click to test the connection to the remote database. Result: Success or Failure.
OK / Cancel	Click “OK” to save the settings of this page. Click “Cancel” to exit the setting page without saving.

10. Logger Setting

Logger Setting is the 6th item of the Main Menu, mainly to provide the data logger and the connecting modules related settings.

“Logger Setting” provides “Local Data Logger” and “Remote Database”, and both have RTU/TCP module two setting items. The Local Data Logger provides users to record data such as RTU/TCP module (Master) channel data into Local CSV log files of the microSD card in UA. “Remote Database” provides users to record data between RTU/TCP module (Master) channel data directly into remote database, such as SQL DB.

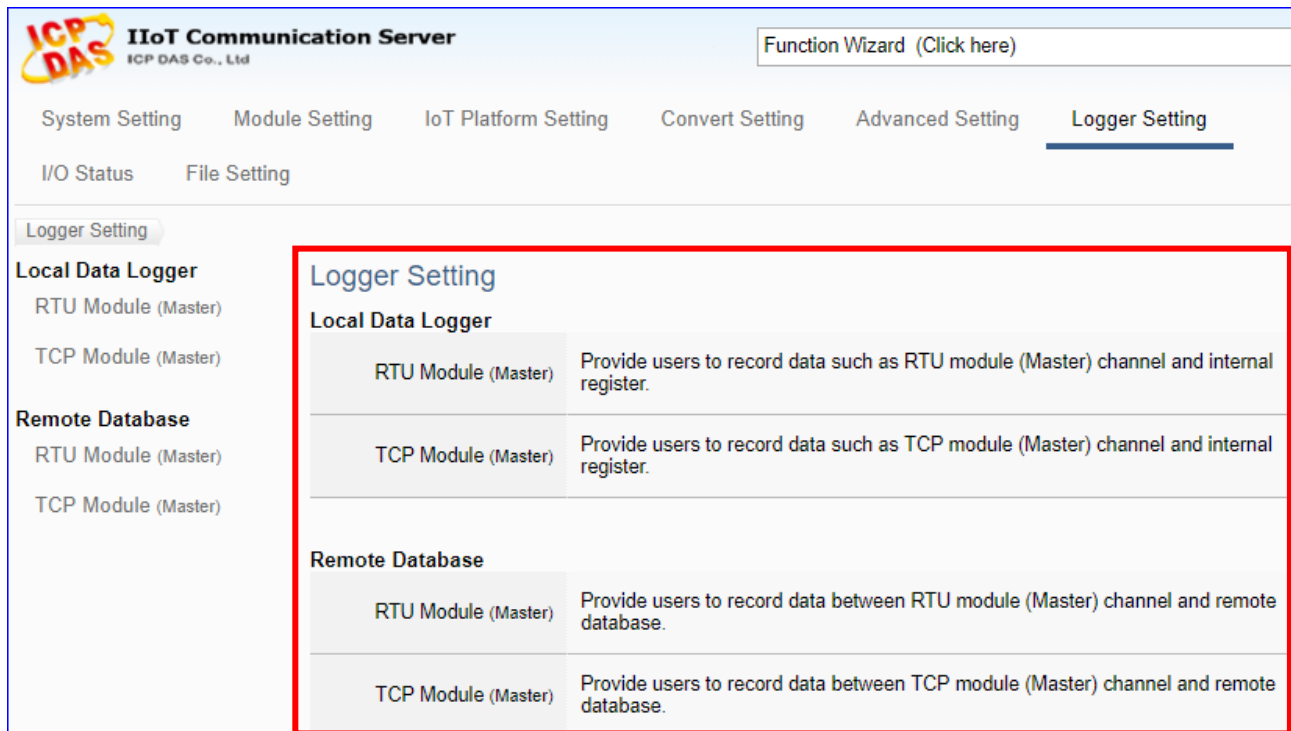

The screenshot displays the ICP DAS IIoT Communication Server web interface. The top navigation bar includes links for System Setting, Module Setting, IoT Platform Setting, Convert Setting, Advanced Setting, and Logger Setting (which is currently selected). Below the navigation bar, the main content area is titled "Logger Setting" and is divided into two sections: "Local Data Logger" and "Remote Database". Each section contains two sub-items: "RTU Module (Master)" and "TCP Module (Master)". The "Local Data Logger" section provides instructions for recording data into local CSV log files, while the "Remote Database" section provides instructions for recording data into a remote database. The entire "Logger Setting" content area is highlighted with a red border.

Logger Setting	
Local Data Logger	
RTU Module (Master)	Provide users to record data such as RTU module (Master) channel and internal register.
TCP Module (Master)	Provide users to record data such as TCP module (Master) channel and internal register.
Remote Database	
RTU Module (Master)	Provide users to record data between RTU module (Master) channel and remote database.
TCP Module (Master)	Provide users to record data between TCP module (Master) channel and remote database.

The setting for UA series controllers is to set up from the left to the right of the main menu functions. User can find the setting step and Web UI information in the following chapters.

[CH2 Quick Start 1: Hardware/Network Connection](#)

[CH3 Quick Start 2: Web UI / Steps / Project Example](#)


[CH4 Function Wizard: Quick Setup](#)

10.1. Local Data Logger: RTU / TCP Module (Master)


“Local Data Logger” of “Logger Setting” provides users to record I/O log data of the connecting RTU/TCP module (Master) into the local microSD card.

This function is for setting the local data logger and the RTU/TCP modules, using “RTU” module setting as an example. For the setting about the logger and microSD card, please refer to [Chapter 9](#).

Function Diagram:

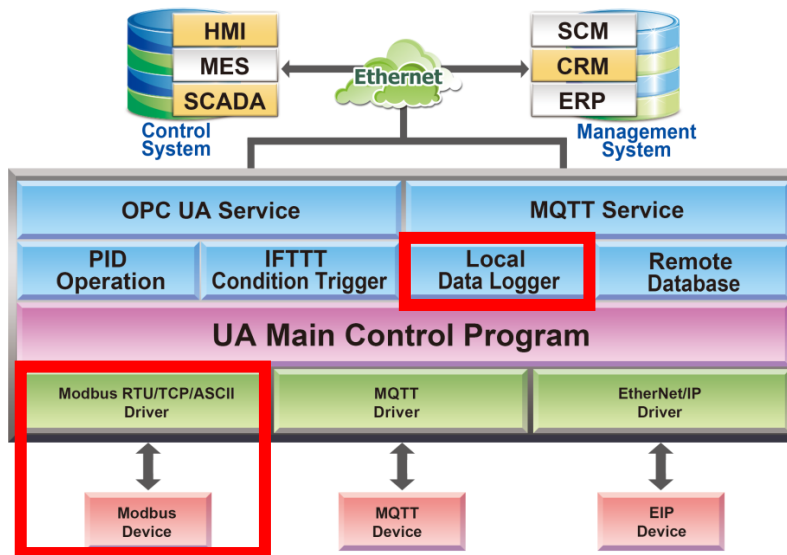


Application:

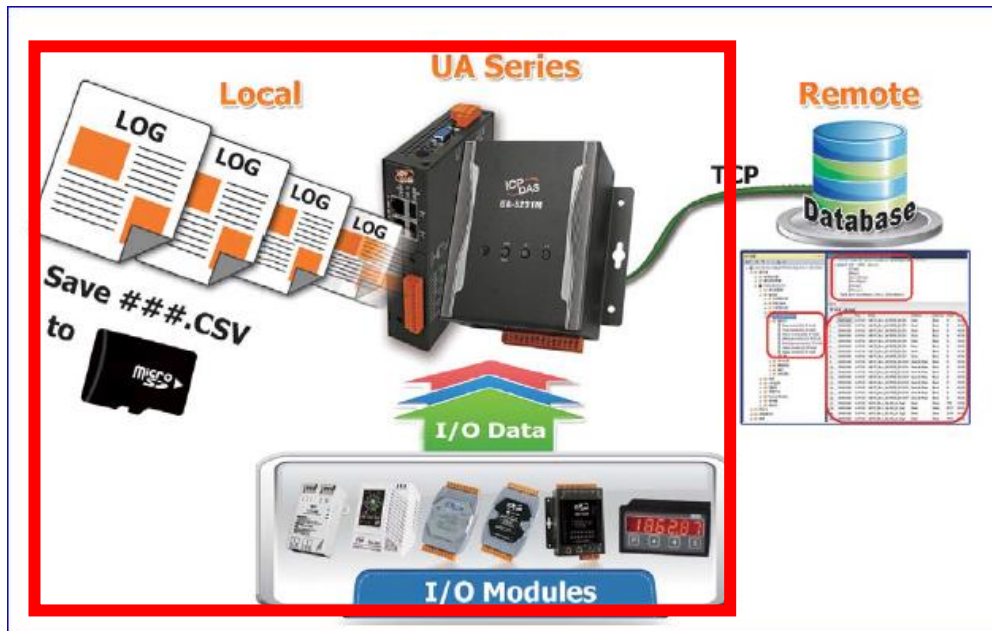

Enter the main menu [Logger Setting] > [Local Data Logger] > [RTU Module (Master)].
This setting page is to enable the module(s) or I/O channels for data logger.

The screenshot shows the 'Logger Setting' menu with sub-items 'I/O Status' and 'File Setting'. Under 'Logger Setting', there are tabs for 'RTU Module (Master)' and 'TCP Module (Master)'. The 'RTU Module (Master)' tab is active, showing a 'Modbus RTU Module List' table. The table has columns for 'No.', '*Module Name / Nickname', 'Edit', and 'All Enabled'. A single entry is shown with 'No.' 1 and '*Module Name / Nickname' 'M-7055D'. There is an 'Edit' button and an 'All Enabled' checkbox. At the bottom, there is a 'Save' button and a pagination control showing '< 1 / 1 >'.

Logger Setting > Local Data Logger - RTU Module (Master) – Modbus Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for data logger, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
All Enabled Enabled Box	Check [All Enabled] box to enable all modules in list for data logger. Default: Uncheck. Check the box of each module can enable just that module for data logger.
	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

This function is to enable the module for data logger, please check the box of the module. If user wants to enable some I/O of the module, please click [Edit] button to enter the “Module Content Setting” page.

The “Module Content Setting” page after clicking the [Edit] button:

Module Content Setting			
No.	<input type="text" value="1"/>		
Module Name	<input type="text" value="M-7055D"/>		
Variable Table			
Variable Name	Attribute	Data Type	Enabled
<input type="text" value="DI0"/>	<input type="text" value="Read"/>	Bool	<input type="checkbox"/>
<input type="text" value="DI1"/>	<input type="text" value="Read"/>	Bool	<input type="checkbox"/>
<input type="text" value="DO7"/>	<input type="text" value="Read / Write"/>	Bool	<input type="checkbox"/>
		<input type="button" value="OK"/>	<input type="button" value="Cancel"/>

Logger Setting > Local Data Logger > RTU Module (Master) – Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Logger Setting > OPC UA > Modbus RTU (Master) – Variable Table	
Variable Name	Display the variable name that set in the Modbus Address Mapping Table page (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for data logger. Default: Uncheck.
OK	Click to save this page settings and back to the module list page.


When complete the setting, click [OK] to save this page settings and back to the module list page. Remember to click [Save] to save the Convert Setting.

10.2. Remote Database: RTU / TCP Module (Master)


“Remote Database” of “Logger Setting” provides users to record I/O log data of the connecting RTU/TCP module (Master) into the remote database.

This function is for setting the remote data logger and the RTU/TCP modules, using “**TCP module**” setting as an example. For the setting about the logger and microSD card, please refer to [Chapter 9](#).

Function Diagram:

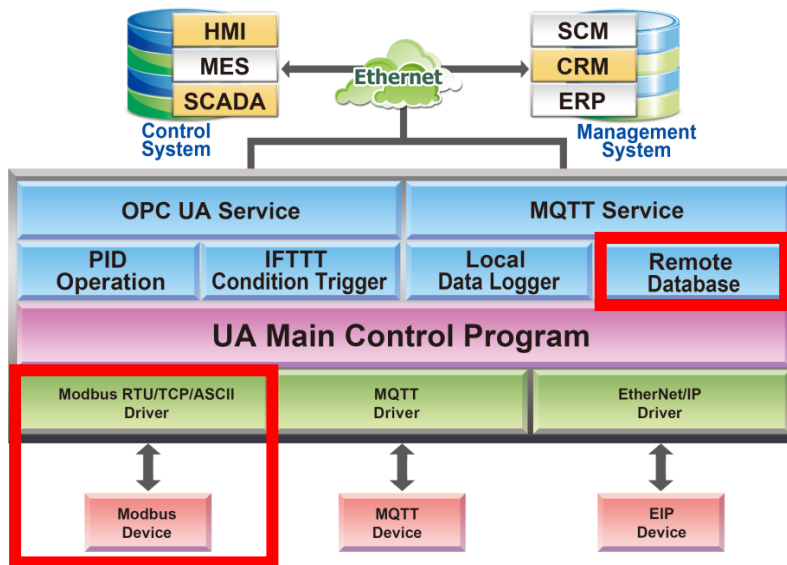

Application:

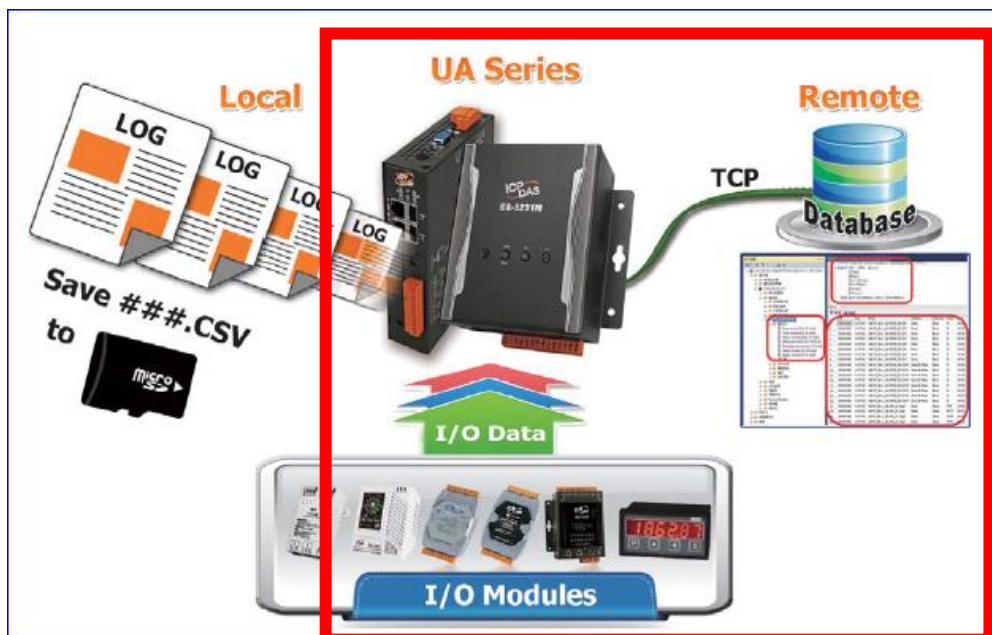

Enter the main menu [Logger Setting] > [Remote Database] > [TCP Module (Master)], e.g. the remote database Name “RemoteDB”, as below.

The screenshot shows the 'Logger Setting' interface with the following components:

- System Setting** | **Module Setting** | **IoT Platform Setting** | **Convert Setting** | **Advanced Setting** | **Logger Setting** (selected)
- I/O Status** | **File Setting**
- Logger Setting** | **TCP Module (Master)** (selected)
- Local Data Logger**
 - RTU Module (Master)
 - TCP Module (Master)
- Remote Database**
 - RTU Module (Master)
 - TCP Module (Master)
- Modbus TCP Module List**

No.	*Module Name / Nickname	Edit	Database Name	All Enabled
1	DL-302	[Edit]	RemoteDB (Remote) ▼	<input type="checkbox"/>

[Apply]

< 1 / 1 >

[Save]

Logger Setting > Remote Data Logger - TCP Module (Master) – Module List	
No.	The module number in the module list (Not editable here)
*Module Name / Nickname	The module name set in the module list (Not editable here)
Edit	If user wants to enable some I/O channels for data logger, click [Edit] of that module to enter the “Variable Tale” setting. It is normal to set all channels as enabled, and the conversion will not affect the unconnected channels.
Database Name Apply	Select the database name set in the “Remote Database” of the “Advanced Setting”. Then click “Apply”.
All Enabled Enabled Box	Check [All Enabled] box to enable all modules in list for data logger. Default: Uncheck. Check the box of each module can enable just that module for data logger.
< 1 / 1 >	The page number of the module list: Current page / Total pages. Click < or > to go to the previous or next page.
Save	Click to save the settings of this page.

Click “Edit” to enter the “Remote database connect settings” page.

Module Content Setting

No.

1

Module Name

DL-302

Variable Table

Details

Show

Hide

Variable Name	Attribute	Data Type	Database Name	Enabled
Tag0	Read	Short	RemoteDB (Remote)	<input type="checkbox"/>
Tag1	Read	Short	RemoteDB (Remote)	<input type="checkbox"/>
Tag2	Read	Short	RemoteDB (Remote)	<input type="checkbox"/>

OK

Cancel

Logger Setting > Remote Database > TCP Module – Module Content Setting	
No.	The module number in the module list (Not editable here)
Module Name	The module name set in the module list (Not editable here)
Logger Setting > Remote Database > TCP Module – Variable Table	
Variable Name	Display the variable name that set in the Modbus Address Mapping Table page (Not editable here)
Attribute	Display data attribute of the variable. (Not editable) Include: Read, Read/Write...
Data Type	Display data type of the variable that set in the Modbus Address Mapping Table page. (Not editable) Include: Bool, Short, Float...
Database Name	Display the database name select in previous setting page. (Not editable here)
Enabled	Check [Enabled] box of the top row can enable all variables in list. Check the box of each variable can enable just that variable for conversion. Default: Uncheck.
OK / Cancel	Click “OK” to save this page settings and back to the module list page. Click “Cancel” to leave this page without save.

11. I/O Status

I/O Status is the 6th item of the Main Menu, mainly to display the real time I/O status of all the modules.

I/O Status page offers an easy way to view monitoring page that allows you to view important controller information in real time. The I/O Status page includes the following information.

- System default I/O Status page: It displays the all I/O channel information based on the sorting of all I/O Modules.
- Related settings and the user-defined I/O Status page: It displays the I/O channel status based on the user-defined arrangement.

The user can click the module name on the left site, and the right will show all the real time I/O status of the selected module.

ICP DAS Data Concentrators, Multi-utility Communications
IIoT Communication Servers ICP DAS Co., Ltd

Function Wizard

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Setting **I/O Status** File Setting

I/O Status

Modbus RTU Module (Master)

No.	Name	Serial Port
1	M-7	ttyO2
2	M-7055D	ttyO5

< 1 / 1 >

Modbus TCP Module (Master)

No.	Name	LAN
1	DL-302	LAN

< 1 / 1 >

Modbus ASCII Module (Master)

No.	Name	Serial Port
-----	------	-------------

< 1 / 0 >

Related Settings

Number of variables: 10 (Updated 10 points per second)

Display Update Time (ms): 1000

I/O Status


Variable Name	Data Type	Value	Description	Status
CO2	Short	575		Good
Humidity	Short	5673		Good
Temperature	Short	2703		Good

< 1 / 1 >

12. File Setting

File Setting is the last item of the Main Menu, mainly to provide the settings about the files, such as remove, update, upload and download the files of the project and certificate.

File Setting provides 3 sub-menu functions. This chapter will introduce the function items and setting parameters.

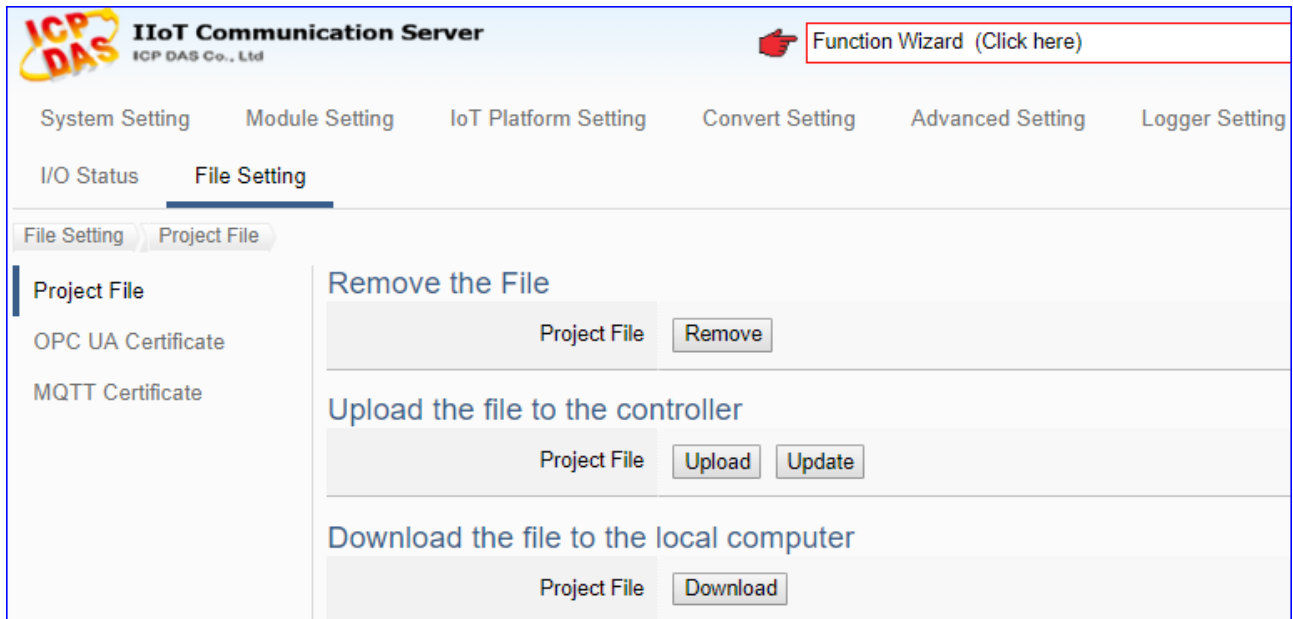

The setting for UA series controllers is to set up from the left to the right of the main menu functions. User can find the setting step and Web UI information in the following chapters.


[CH2 Quick Start 1: Hardware/Network Connection](#)

[CH3 Quick Start 2: Web UI / Steps / Project Example](#)

[CH4 Function Wizard: Quick Setup](#)

12.1. Project File


This page provides 3 setting items: Remove the file, Upload the file to the controller, and Download the file to the local computer.

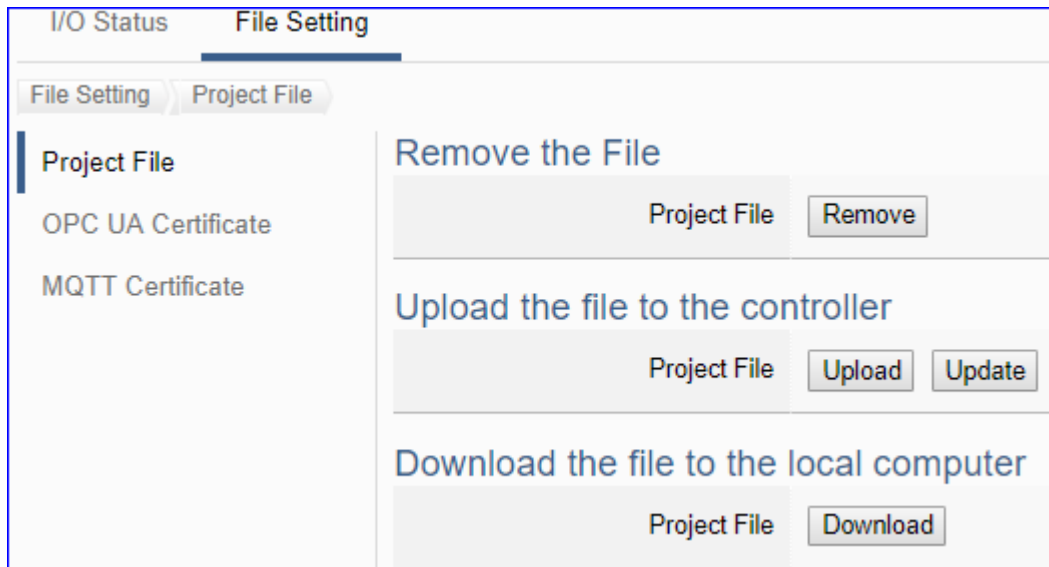

File Setting > Project File > Remove the File	
Project File	Click [Remove] to delete all project settings current in the UA series controller.
File Setting > Project File > Upload the file to the controller	
Project File	Upload: Upload the project with all Web UI settings to the UA series controller. (Extension name of the project file: ".tar") Update: Update and run the project file that uploaded into the controller.
File Setting > Project File > Download the file to the local computer	
Project File	Download: Download the project with all Web UI settings to the current computer. (Extension name of the project file: ".tar")

12.2. OPC UA Certificate

This page provides 3 setting items: Remove the file, Upload the file to the controller, and Download the file to the local computer for OPC UA Certificate.

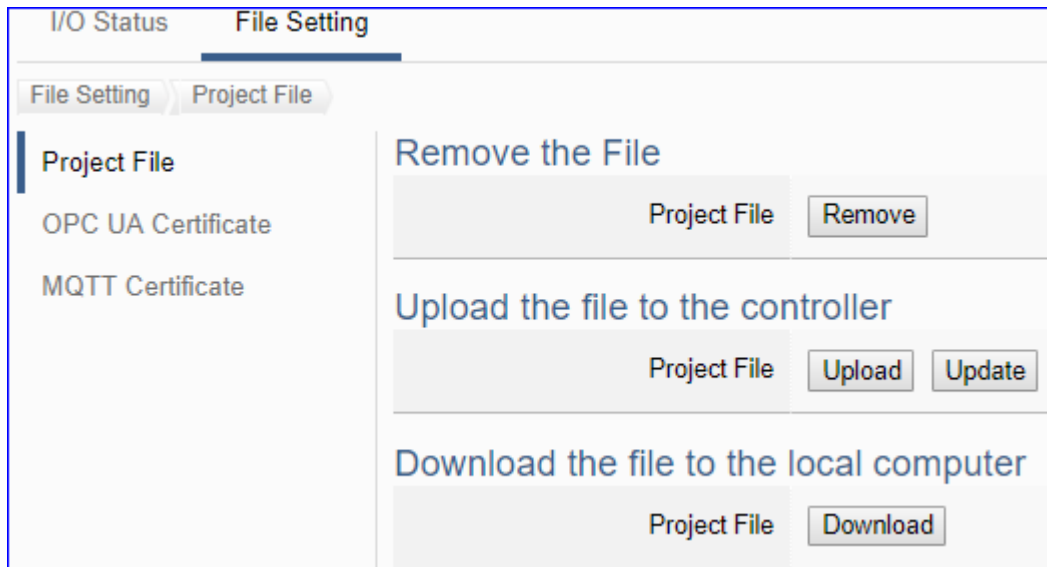

File Setting > OPC UA Certificate > Remove the File	
Trusted Certificate	Remove: Click button to delete the OPC UA client Trusted Certificate current in the UA series controller.
OPC UA Server Certificate	Remove: Click button to delete the OPC UA Server Certificate current in the UA series controller.
File Setting > OPC UA Certificate > Upload the file to the controller	
Trusted Certificate	Upload: Upload the OPC UA Client Trusted Certificate file to the UA series controller. Update: Update and run the OPC UA Client Trusted Certificate file that uploaded into the controller.
File Setting > OPC UA Certificate > Download the file to the local computer	
OPC UA Server Certificate	Download: Download the OPC UA Server Certificate file to the current using computer.

12.3. MQTT Certificate

This page provides 2 setting items: Remove the file, Upload the file to the controller, and Download the file to the local computer for the MQTT Trusted Certificate, Certificate and Private Key.

File Setting > MQTT Certificate > Remove the File	
Trusted Certificate	Remove: Click button to delete the MQTT Trusted Certificate current in the UA series controller.
Certificate	Remove: Click button to delete the MQTT Certificate current in the UA series controller.
Private Key	Remove: Click button to delete the MQTT Private Key current in the UA series controller.
File Setting > MQTT Certificate > Upload the file to the controller	
Trusted Certificate	Upload: Upload the MQTT Trusted Certificate file to the UA series controller. Update: Update and run the MQTT Trusted Certificate file that uploaded into the controller.
Certificate	Upload: Upload the MQTT Certificate file to the UA series controller. Update: Update and run the MQTT Certificate file that uploaded into the controller.
Private Key	Upload: Upload the MQTT Private Key file to the UA series controller. Update: Update and run the MQTT Private Key file that uploaded into the controller.

13. Factory Setting Recovering and Middleware Updating

This chapter will introduce the settings by hardware Rotary Switch, including “Factory Setting Recovering” and “Middleware Updating” that supported since Version 1.0.0.3.

13.1. Recovering to Factory Setting (Rotary Switch: 8)

Turn the Rotary Switch of UA series to “8” can recover to the factory setting. Before that, first to connect the UA controller via a network cable to a PC or a Switch.

The steps:

1. After network connection, power off the UA hardware, and turn the Rotary Switch to “8”.



2. Reboot the UA and wait a long buzzer sound that means of doing the recovering.
3. Wait about 3 minutes until **2** long buzzer sounds, and then turn the Rotary Switch to “0”. **Note:** If the buzzer makes **4** short beeps, it means the network is not connected properly. Please check the network cable again.
4. Reboot the UA again, and the system will recover to the factory settings.

Factory Default Settings of UA			
Network	IP	192.168.255.1	Assign UA a new IP setting according to your case.
	Netmask	255.255.0.0	
	Gateway	192.168.1.1	
OS Account	Username	root	After login, change your password ASAP. (Refer to Section 5.4)
	Password	icpdas	
Web UI Account	Username	root	
	Password	root	


13.2. Updating Middleware via USB (Rotary Switch: 9)

Turn the Rotary Switch of UA series to “9” can update the Middleware version via USB.

Note: After the system version is updated, only the last network environment settings (IP, Netmask and Gateway) of the UA series controller will be retained and the rest will be factory recovered.

The steps:

1. Power off the UA hardware, and turn the Rotary Switch to “9”.

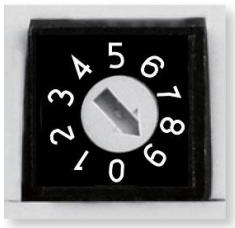

2. Download the Middleware package file of the UA hardware corresponding model. The download website: ftp.icpdas.com/pub/cd/UA-Series/middleware/UA-5231_UA-2241
3. Save the Middleware package file into an empty FAT32 format USB drive and put to the UA USB port.
4. Reboot the UA and wait a long buzzer sound that means of doing the version updating.
5. Wait about five minutes until **two** long buzzer sounds, and then turn the Rotary Switch to “0”.

Note:

* If the buzzer makes 2 short beeps, it means the USB is not connected properly. Please check and connect the USB again.

6. Reboot the UA again, and the system will update to the version of the package file.

Note:


If the updating Middleware via USB still fails, please refer to [Appendix D](#) for using the MicroSD card to manually update the Middleware version.

14. Security Certificate: Download / Upload / Update


This chapter introduces the security certificate for UA, and the process to download, upload or update the certificate.

In communication security, UA provides the username/password protection, SSL/TLS (Secure Socket Layer / Transport Layer Security Transport Layer Security) secure communication mechanism, and OPC UA trust certificate to protect data transmission security. OPC UA secured by default-enabled encryption and advanced certificate that includes authentication, authorization, confidentiality and Integrity.

14.1. Download the Certificate of UA Controller

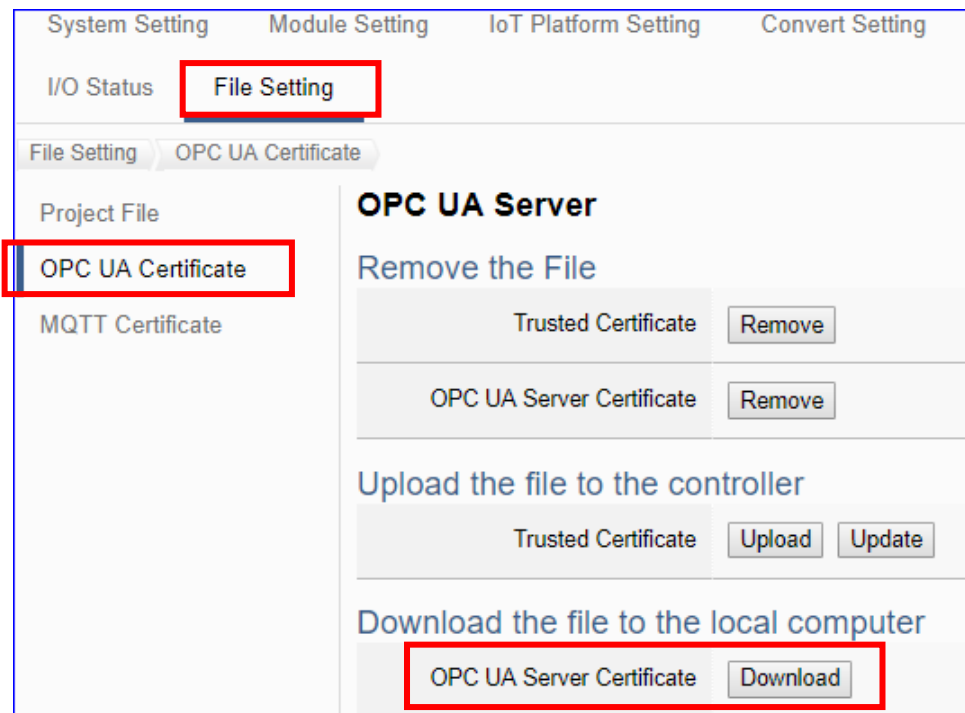


1. Click the main menu [File Setting > OPC UA Certificate > Download the file to the local computer – OPC UA Server Certificate] and then click on the button [Download].
2. Save the OPC UA Server certificate file to your designated folder. The downloaded certificate file (*.tar) of the UA series controller looks similar to the figure below.

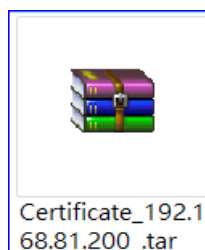

14.2. Upload/Update the Certificate to UA Controller

The user can store trusted certificates of the OPC UA client or the MQTT Broker from other device into the UA project for setting up security communications.

- **OPC UA Certificate**

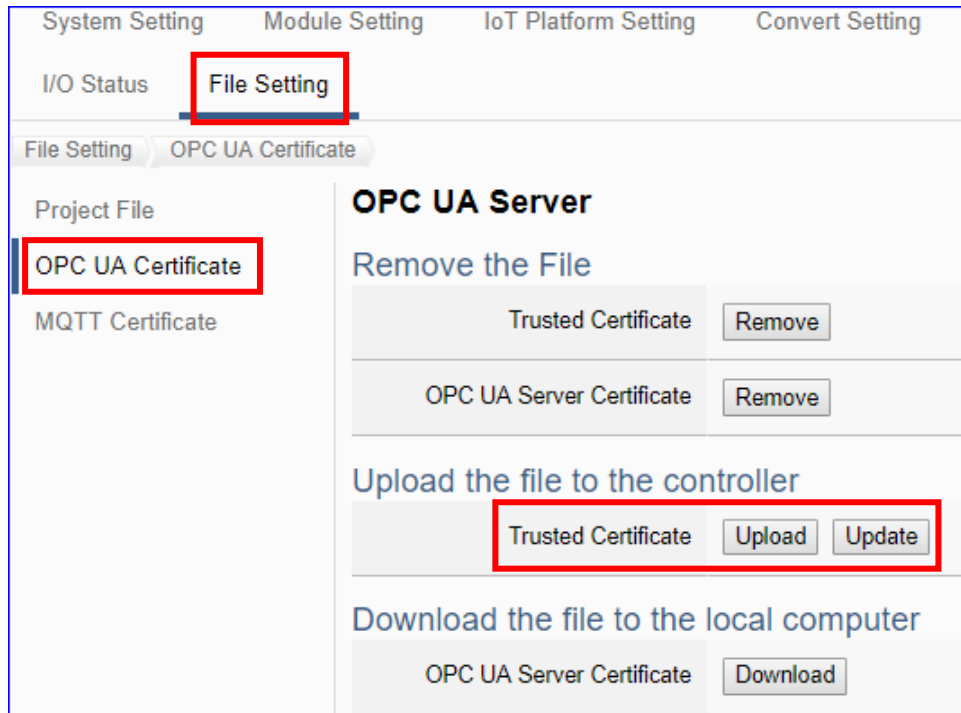


1. Get the trusted certificates from OPC UA Client and save in the PC.
2. Click the main menu [File Setting > OPC UA Certificate > Upload the file to the controller – Trusted Certificate] and click on the button [Upload]. Then select the certificate folder to open the file. The certificate will be uploaded to the UA controller.
3. Click the button [Update], then UA system can exchange the certificate authentication.

Notes for OPC UA Client Certificate:

- The supported name is “*.der”. The sub-file name must be “.der”, while the file name can follow the user need.
- The supported code format is “DER”.

● MQTT Certificate

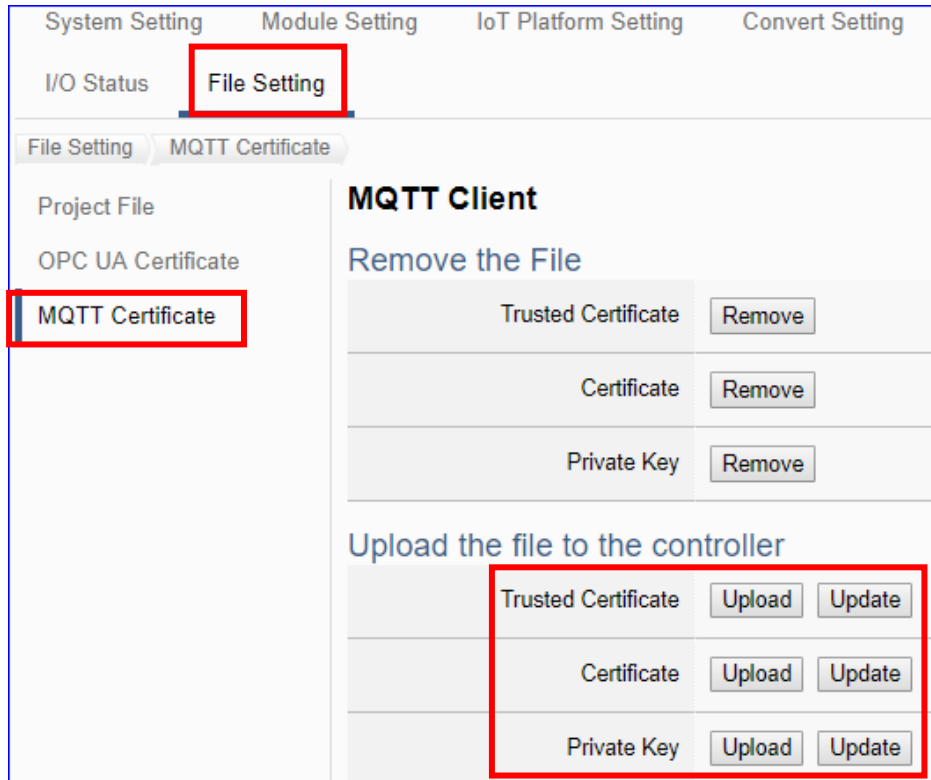

1. Get the trusted certificates from MQTT Client and save in the PC.
2. Click the main menu [File Setting > MQTT Certificate > Upload the file to the controller – Trusted Certificate / Certificate / Private Key] and click on the button [Upload]. Then select the certificate folder to open the file. The certificate will be uploaded to the UA controller.
3. Click the button [Update], then UA system can exchange the certificate authentication.

Notes for MQTT Client Certificate:

- The supported code format is “**PEM**”.

Appendix A. MQTT JSON Format of the UA Series

MQTT JSON Example & Format Descriptions:

```
{
  "Variable" : [ {
    "Name" : "Bool_R[0]",
    "Attribute" : "R",
    "Datatype" : "Bool",
    "Value" : 0,
    "Quality" : "Uncertain"
  }, {
    "Name" : "Short_R[0]",
    "Attribute" : "R",
    "Datatype" : "Int16",
    "Value" : 0,
    "Quality" : "Uncertain"
  }, {
    "Name" : "Short_R[1]",
    "Attribute" : "R",
    "Datatype" : "Int16",
    "Value" : 0,
    "Quality" : "Uncertain"
  }, {
    "Name" : "Short_R[2]",
    "Attribute" : "R",
    "Datatype" : "Int16",
    "Value" : 0,
    "Quality" : "Uncertain"
  }, {
    "Name" : "Short_RW[2]",
    "Attribute" : "RW",
    "Datatype" : "Int16",
    "Value" : 0,
    "Quality" : "Uncertain"
  } ]
}
```

Name	Descriptions
Variable	The array name of JSON. Its structure includes several member data as below.
Name	The member name of the array element
Attribute	The member attribute of the array element: "R" : can read "W" : can write "RW" : can read and write
Datatype	The member's data type of the array element: "Bool" "Int8" "UInt8" "UInt16" "Int16" "UInt32" "Int32" "UInt64" "Int64" "Float" "Double" "String"
Value	The member's current value of the array element
Quality	The member's current status of the array element: "Uncertain" "Good" "Bad"

Appendix B. Technical Reference Websites

- **OPC UA**

<https://opcfoundation.org/>

- **MQTT**

<http://mqtt.org/>

- **Modbus**

<http://modbus.org/>

Appendix C. IFTTT Website Setting

UA Function combines the IFTTT cloud platform. When the special events occur, it will trigger the IFTTT and send the message to the IFTTT-related cloud services (such as Line, Facebook, Twitter, etc.)



The settings for sending the message to the APP with the "IFTTT Condition Trigger (Line, Facebook, Twitter)" function includes two parts:

1. UA Web Interface Setting: (Refer to [Section 9.2 Advanced Setting > IFTTT ...](#))

In the UA Web HMI, set up the UA controller, modules, IFTTT trigger conditions, the condition variable table, and the IFTTT event connection.

2. IFTTT Cloud Platform Setting: (Introduced in this Appendix C)

In the IFTTT website, set up the “if” side service and event (**this**: use **webhooks** for the UA), the “then” side service and action (**that**: user can select the service, such as the Line, Facebook, twitter, etc.). And then fill the “**Event Name**” and “**Key**” getting from the IFTTT website setting into the “**Content Setting**” of the UA We HMI.




This Appendix C introduces the IFTTT website setting for the second part. After complete the setting, the user will set up an “**Event Name**” and get a “**Key**”, please input them to the IFTTT Condition Trigger setting page in the UA Web HMI setting.

This IFTTT setting example will **send a message to the APP Line service**. IFTTT provides hundreds of Web or APP services (Ex: Line, Facebook, Twitter, Gmail...). The setting is in a similar way. Users can follow the steps below for **Line** to set up own APP.

● IFTTT Website Setting Steps


1. Login in IFTTT website

Sign in IFTTT: <https://ifttt.com/>. If you never use the IFTTT, sign up a member.

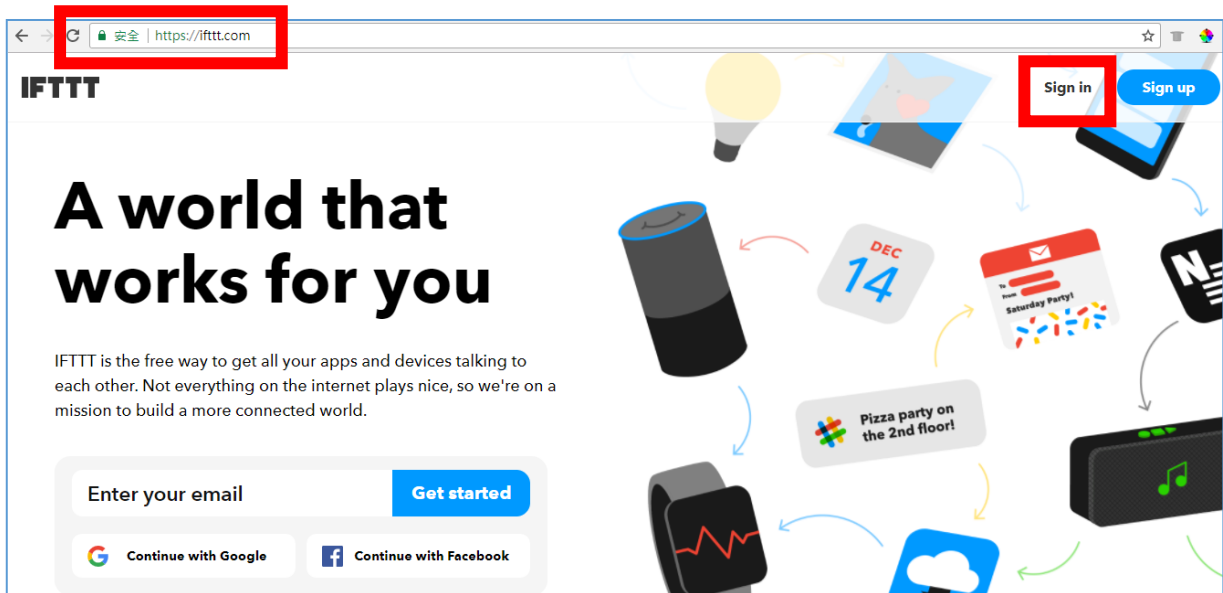


2. New an Applet

Click the “May Applets” > “New Applet”.

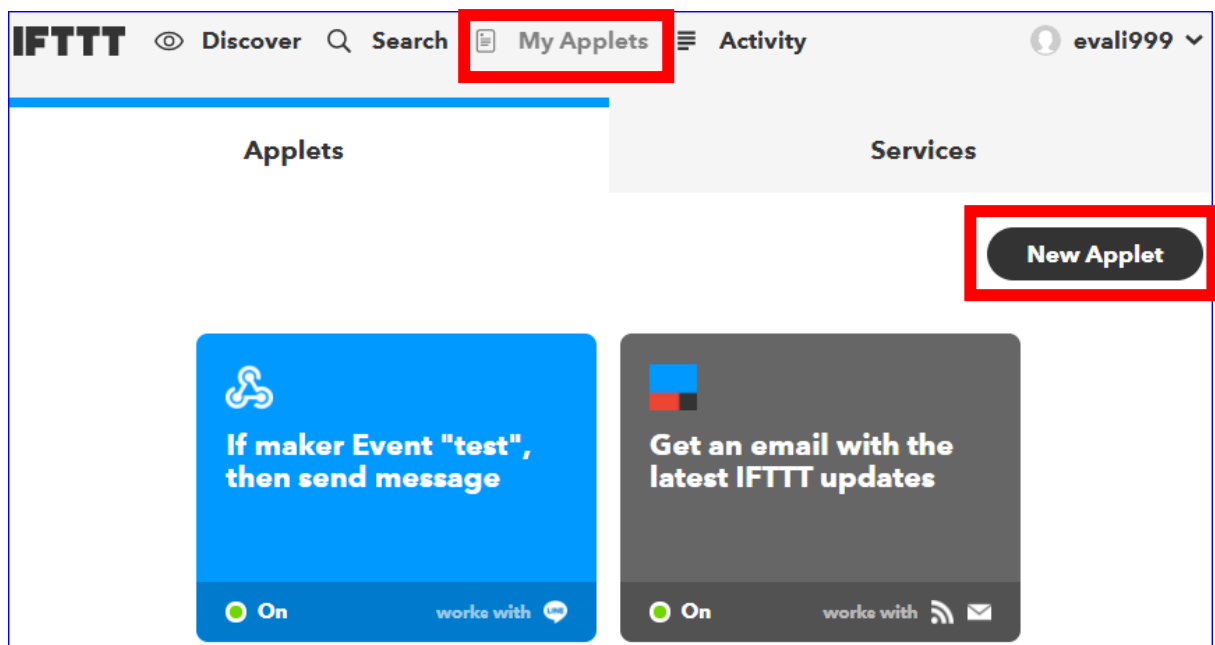


3. Set up this

Click the button “+this”, and then search and choose the service “**webhooks**”.

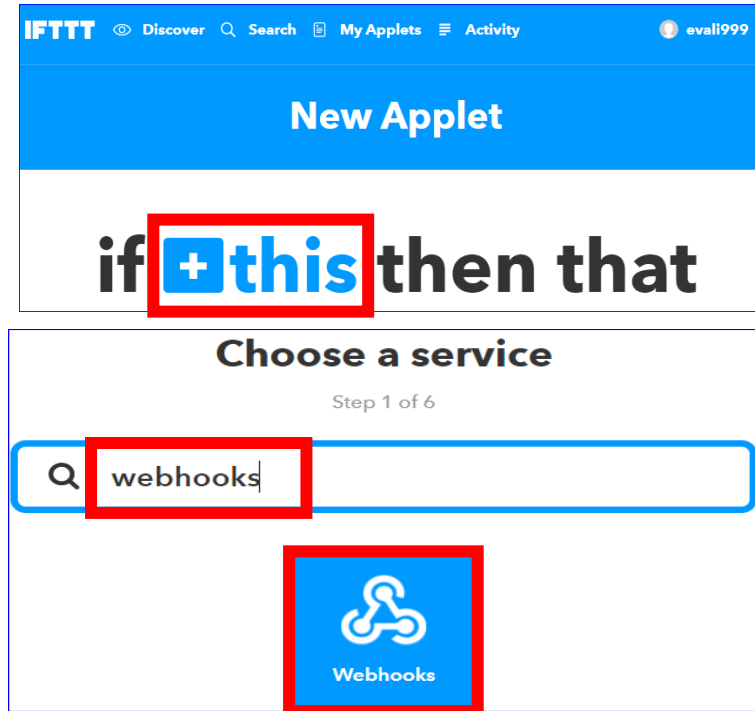


Choose the trigger of “Receive a web request”, and then enter the “**Event Name**” you want, for example “**UA test**”. The user can define a new name and copy into the “**Event Name**” setting field in the **UA Web HMI** [**Advanced Setting** > **IFTTT Condition Trigger** > **Add Message** > **Content Setting**] (See [Section 9.2](#)). At last, click the “Create trigger” to complete the setting of “this”.

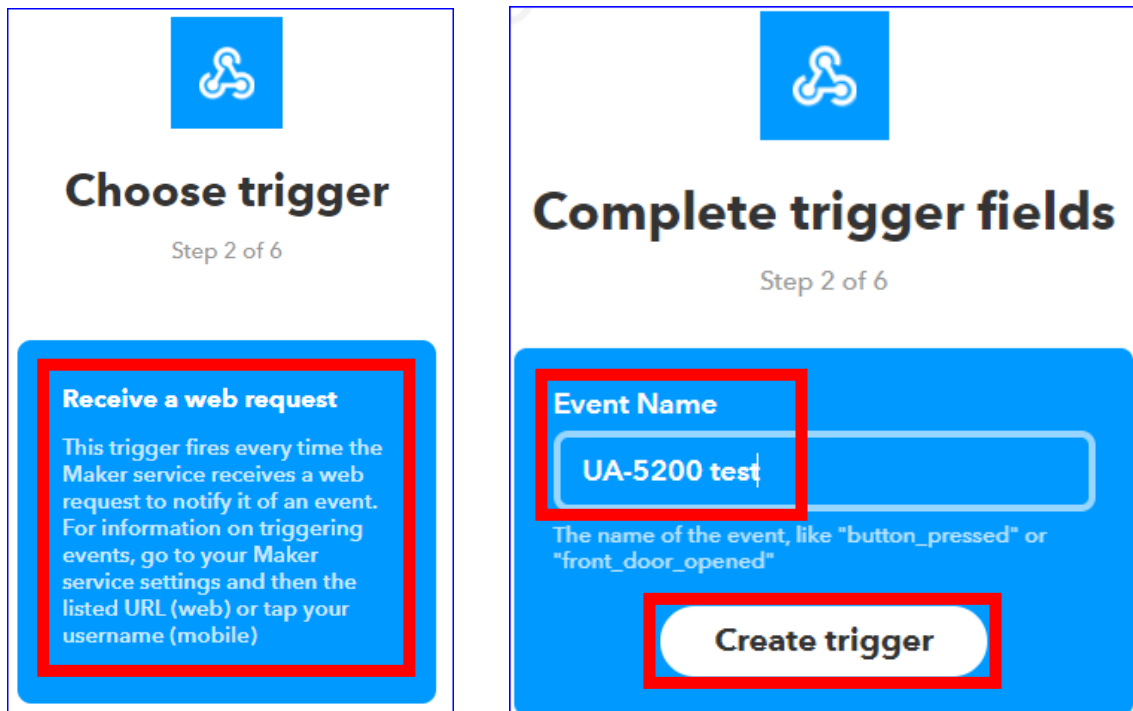

4. Set up that

The “+this” setting is completed (as the picture below).

Now click the button “+that”, and then search and choose the service for the action. In this example, we search and choose the service “**LINE**”.

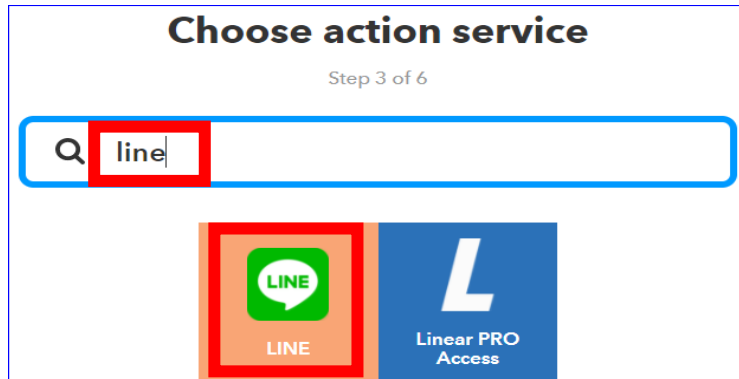

Choose the action “Send message” to send message to the service “LINE”.



Step Descriptions:

“Recipient”: Choose a name in the field to receive the LINE Notify message. It can be a LINE user or LINE group (It will auto show the names and groups of the connecting LINE account. If choose a LINE group, all the members in the LINE group will receive the message.)

“Message”: Set up the message content. It can be English or Chinese, Ex: “外門 test”.

The user also can use the default value “Value1: {{Value1}}”, it will send the message content that setting in the “Define Message” field of the UA Web HMI [IFTTT Condition Trigger > Condition Table]. (The message will list the module name code plus the I/O variable code as the picture below. Refer [Section 9.2](#)). The user can choose one depending on your need.

Complete action fields
Step 5 of 6

Define Message
自訂訊息
MRTU_No.1_M-7_DI

Recipient: Choose 1 to 1 or Group (as the right picture)

Message destination
透過1對1聊天接收LINE Notify
遊戲

Message
外門 test
泓格科技測試
Value 1: {{Value1}}

It can be English and Chinese as the left pic. Or use the default {Value1} that set in the UA Web HMI as the right pic.

The default Values can only be used the {Value1}. The others Value (2, 3...) are no used.


Create action

5. Finish IFTTT Setting

When complete the Applet setting, the picture is like the left picture. You can click “Back” button to review and change the setting.

Click “Finish” button when all set. The “Applet” will show in the “My Applets”, and link the “Webhooks” and “LINE”, and has a UA test” event to send a message.

Next, we will introduce how to get the “Key” and test the event message.

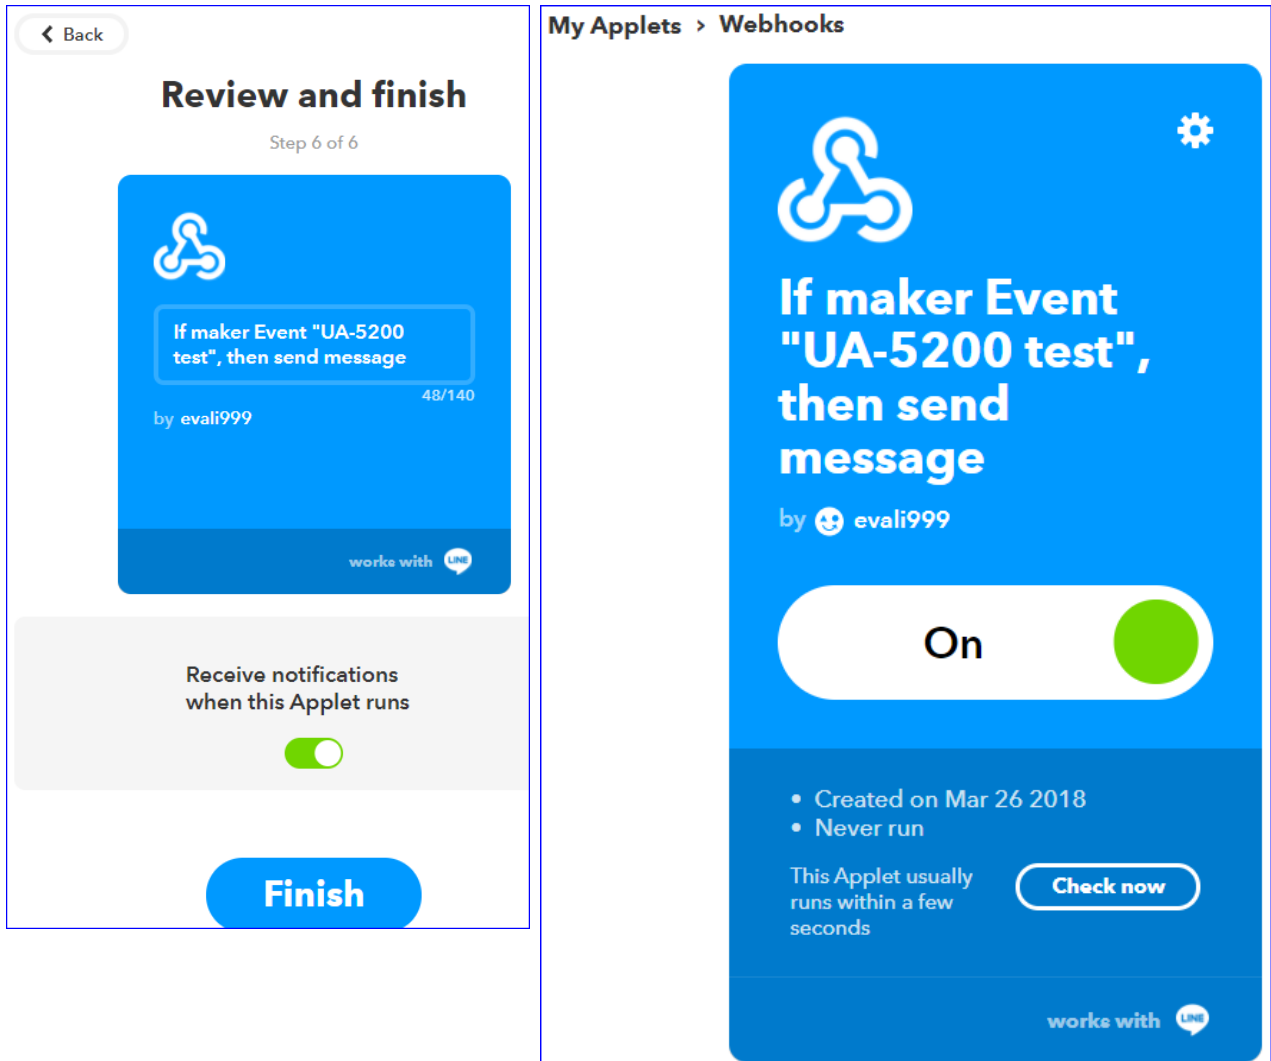


● Test IFTTT Event


The IFTTT Website setting is set up in the previous steps. Now we will check the event “Key” and test the message sending.

1. Go to “Webhooks” service

Click the account function menu of “Services” on the up-right corner. Search and choose the Services “Webhooks”.

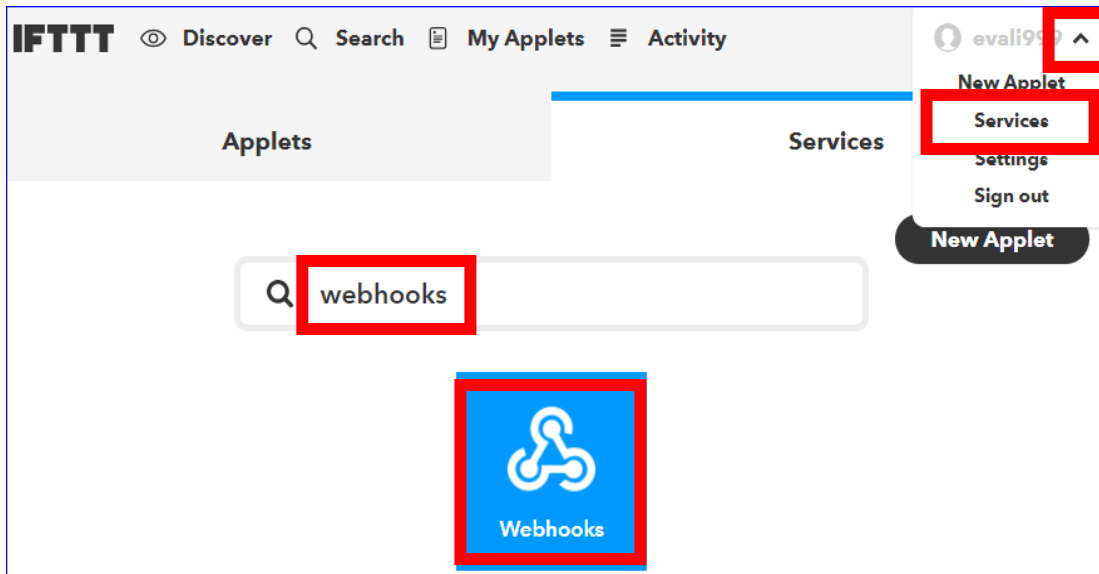

Click “Documentation” can switch to the test web page.

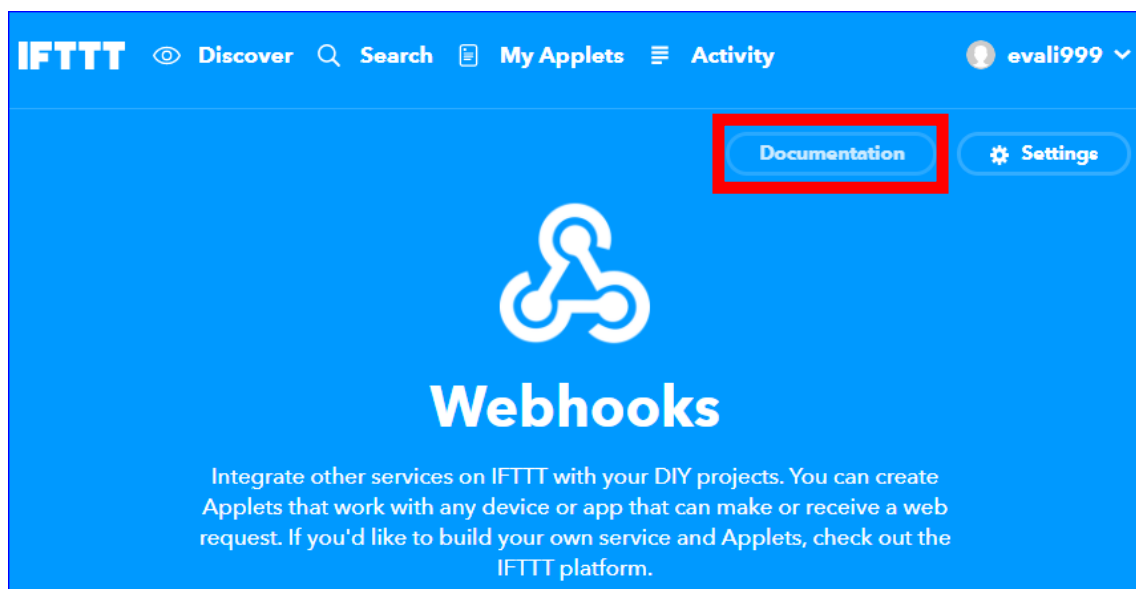

2. The Key and the Event Message

On the test web page, please copy the “Key” into the setting field “Key” in the **UA Web HMI [Advanced Setting > IFTTT Condition Trigger > Add Message > Content Setting]** (See [Section 9.2](#)).

The screenshot shows the IFTTT 'Your key is' page. A red box highlights the key **fkCGvasDPR-xYe2ugpgQ7** with the annotation: **Copy to UA Web HMI [IFTTT Condition Trigger] setting**. Below the key, a red box highlights the text **To trigger an Event** with the annotation: **Type the event name to test the event trigger. Ex: "UA test".** The URL `https://maker.ifttt.com/trigger/{event}/with/key/fkCGvasDPR-xYe2ugpgQ7` is shown, with a red box around `{event}`. Below the URL, a red box highlights the JSON body `{ "value1" : " " }` with the annotation: **Also can test message in the {Value1}.** At the bottom, there is a blue button labeled **Test It**.

3. Test the Event

After giving the event information (This example: “UA test”), click the “Test it” on the bottom to test the message sending (This example: LINE).


The result and descriptions:

After click the “Test it” button, the green trigger bar shows on the top.

And then, the LINE receives a message “[IFTTT] 外門 test” (This notify is received on the PC version LINE. See the bottom right corner.) It means the IFTTT website setting is successful. The mobile phone is also received the LINE APP message. (See the next page)

The screenshot displays the IFTTT 'To trigger an Event' page. At the top, a green banner with a red border states 'Event has been triggered.' Below this, the user's key is shown as 'fkCGvasDPR-xYe2ugpgQ7'. The 'To trigger an Event' section provides instructions to make a POST or GET web request to the URL: `https://maker.ifttt.com/trigger/UA-5200 test/with/key/fkCGvasDPR-xYe2ugpgQ7`. It also shows an optional JSON body: `{ "value1" : "", "value2" : "", "value3" : "" }`. A text box explains that the data is optional and can be passed as query parameters or form variables. Below this, a command line example is provided: `curl -X POST https://maker.ifttt.com/trigger/UA-5200 test/with/key/fkCGvasDPR-xYe2ugpgQ7`. At the bottom left, a blue 'Test It' button is highlighted with a red box. A red callout bubble points to this button, containing the text: 'Click “Test it”, a green bar of the event trigger notify will show on the top, and then LINE will receive a message.' At the bottom right, a LINE Notify notification is shown with a green bell icon and the text 'LINE Notify [IFTTT] 外門 test', also highlighted with a red box.

The LINE APP messages received on the mobile phone:

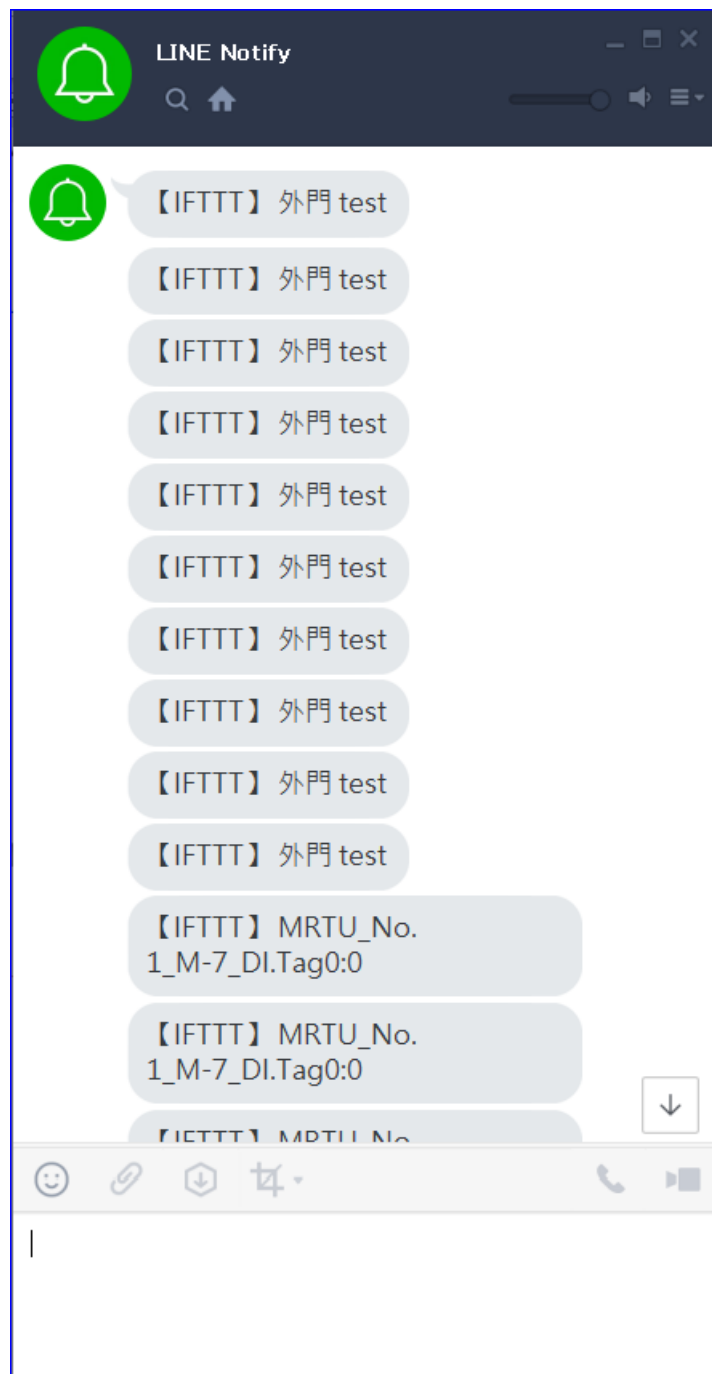

Appendix D. Updating Middleware via MicroSD Card Manually


If the updating Middleware (UA version file) via USB still fails, please refer to the following steps for using the microSD card to manually update the Middleware version.

● Preparations:

- ✓ PC * 1
- ✓ SSH / Telnet Software, Ex: PuTTY
- ✓ UA Series * 1, Ex: UA-5231 (Must wire with a networked device, ex: PC or Switch)
- ✓ MicroSD Card Reader * 1
- ✓ CA-0910 Cable * 1 (In the shopping box of the UA Series)
- ✓ Power Supply * 1 (10 ~ 30 VDC)

● The Steps to Update Middleware via MicroSD Card :


1. Take the microSD card from the socket of the UA, and connect the card with PC via the card reader.

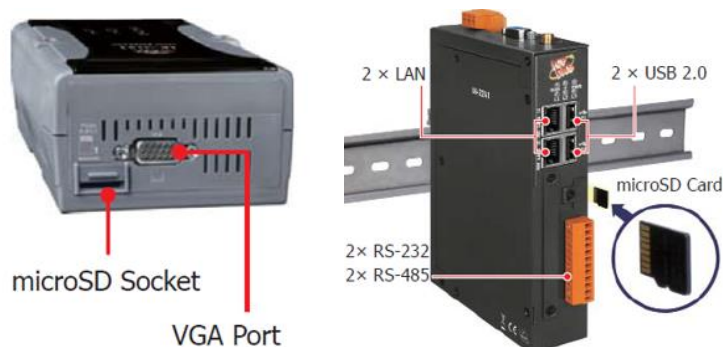

2. Download the middleware file and save to the microSD card. (Save one middleware file only)
From: http://ftp.icpdas.com/pub/cd/UA-Series/middleware/UA-5231_UA-2241/ua-am335x_x.x.x.x_app.tar

NOTE:


Save the file directly into the card,
DO NOT decompress the file.

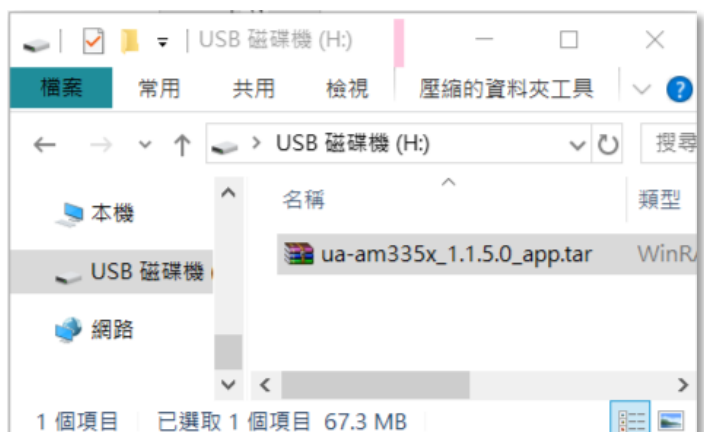


3. Insert the microSD card into the UA again.



4. Wire the female head of CA-0910 cable to the network PC, and the other head to the "Console Port" of UA.

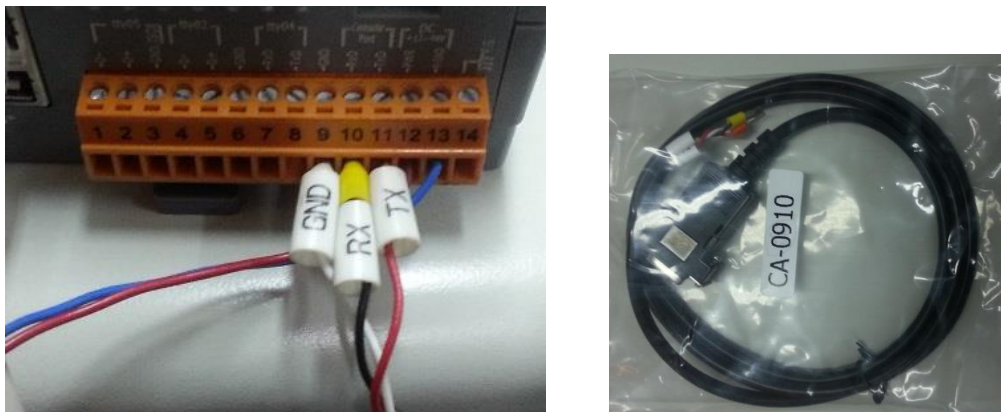


(Wire CA-0910 cable to the Console port of UA)

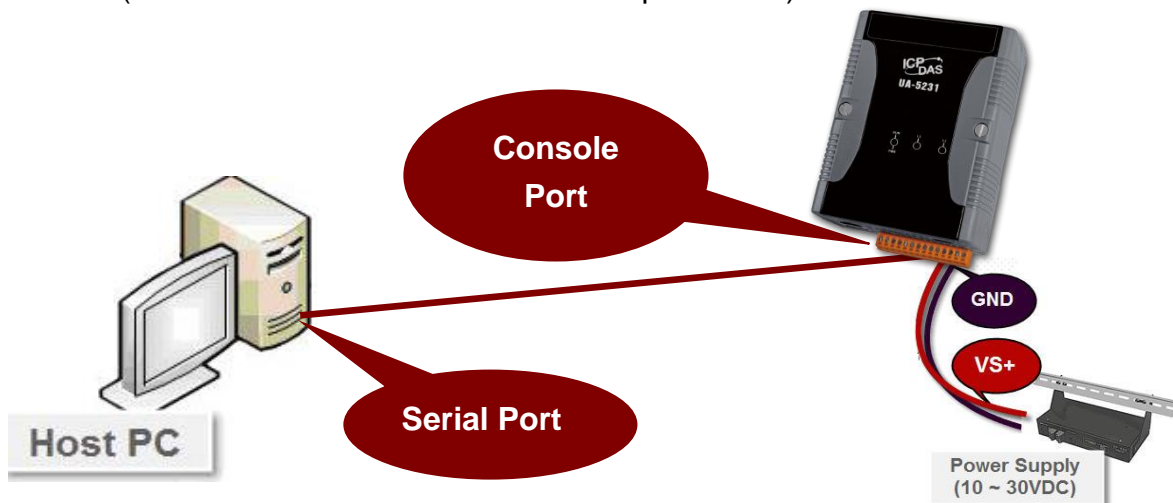


5. Turn on the power of the UA. When the lights are left with **ONE** LED, the boot is completed.




6. Use an SSH/Telnet software, e.g. PuTTY, to connect to UA via the Serial connection. Input your Serial line (default: COM1) and Speed (115200 for UA). And then click “Open” button.

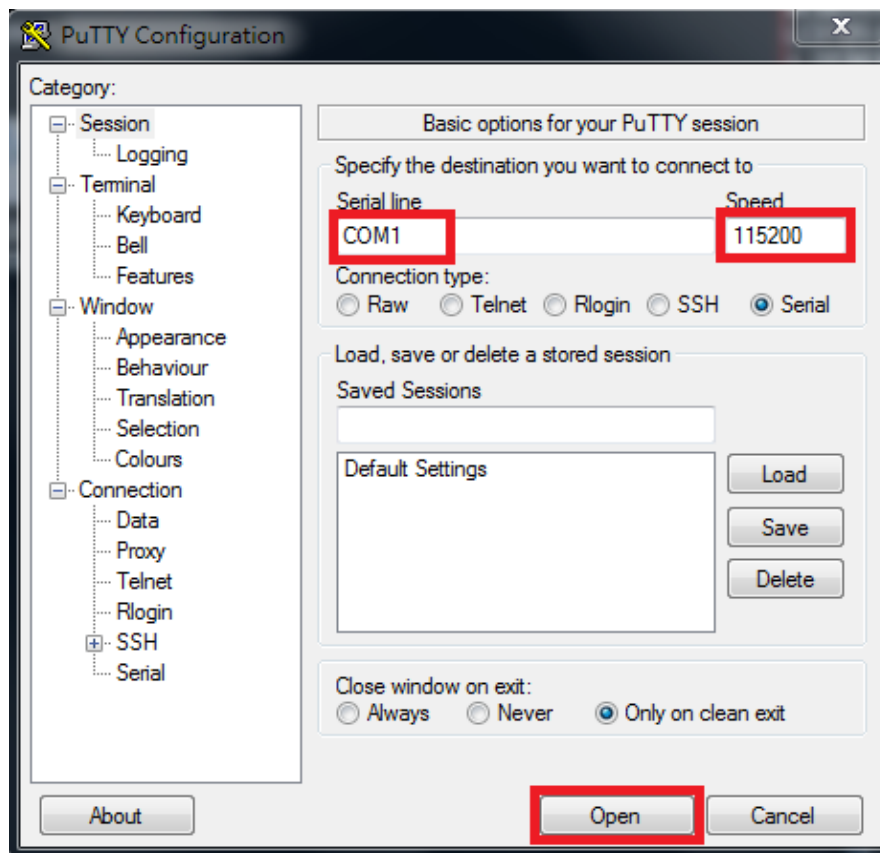

7. After the login message, enter the default **username (root)** and **password (icpdas)**.

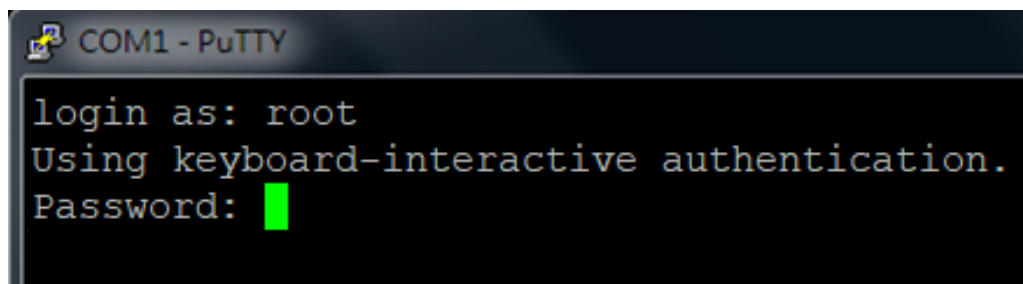

8. Configure the UA environment:
Copy the following red strings “**mount /dev/mmcblk0p1 /mnt; cd /mnt; tar xvf ua-am335x*.tar; sh command.sh**” to the PuTTY screen and press the Enter key.

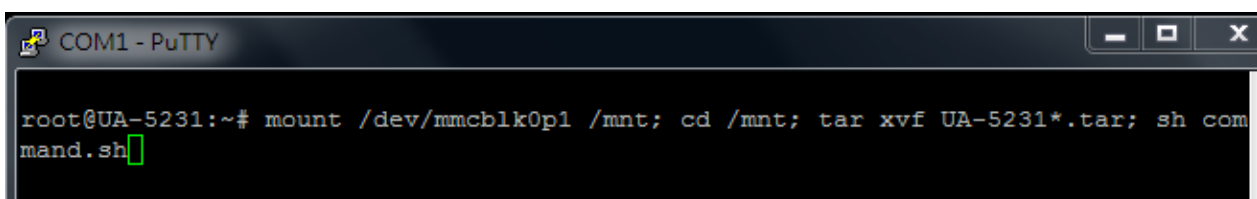

9. Please wait a while for the UA controller configuration until the login screen appears again.


```

COM1 - PuTTY
Starting Serial Getty on tty00...
[ OK ] Started Serial Getty on tty00.
[ OK ] Reached target Login Prompts.
[ 16.074585] systemd-journald[331]: Received request to flush runtime journal from PID 1
[ 16.078126] systemd-journald[331]: File /var/log/journal/96d7357b6f1741239fbe3993faf9fc79/system.journal corrupted or uncleanly shut down, renaming and replacing.
[ 16.108939] net eth0: CPSW phy found : id is : 0x4dd072
[ 16.109708] PHY 0:01 not found
[ 16.180732] ADDRCONF(NETDEV_UP): eth0: link is not ready
[ 16.180758] 8021q: adding VLAN 0 to HW filter on device eth0
Starting WPA supplicant...
[ OK ] Started Network Name Resolution.
[ OK ] Started WPA supplicant.
[ 18.100861] PHY: 0:00 - Link is Up - 100/Full
[ 18.101086] ADDRCONF(NETDEV_CHANGE): eth0: link becomes ready

LP-5000 Linux - Kernel 3.2.14-rt24

UA-5231 login: █
    
```


10. Open a web browser on the PC (ex: Google Chrome, IE...) and enter "192.168.255.1" in the address bar.

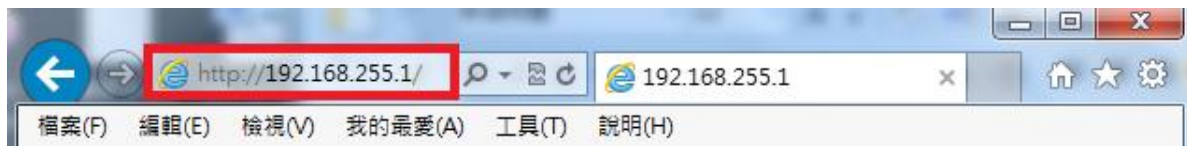


11. The web browser will run and go to the UA login web site as below. Please enter the default username/password and click the "Login" button.

Default Username: root

Default Password: root

 Data Concentrator, Multi-utility Communication IIoT Communication Server ICP DAS Co., Ltd	Username : <input type="text"/>
	Password : <input type="password"/>
	Language : English ▼
	<input type="button" value="Login"/>

12. When login to the web interface, the UA home page will be displayed as below. If the Middleware Version number is the same as your download version, the updating is successful.

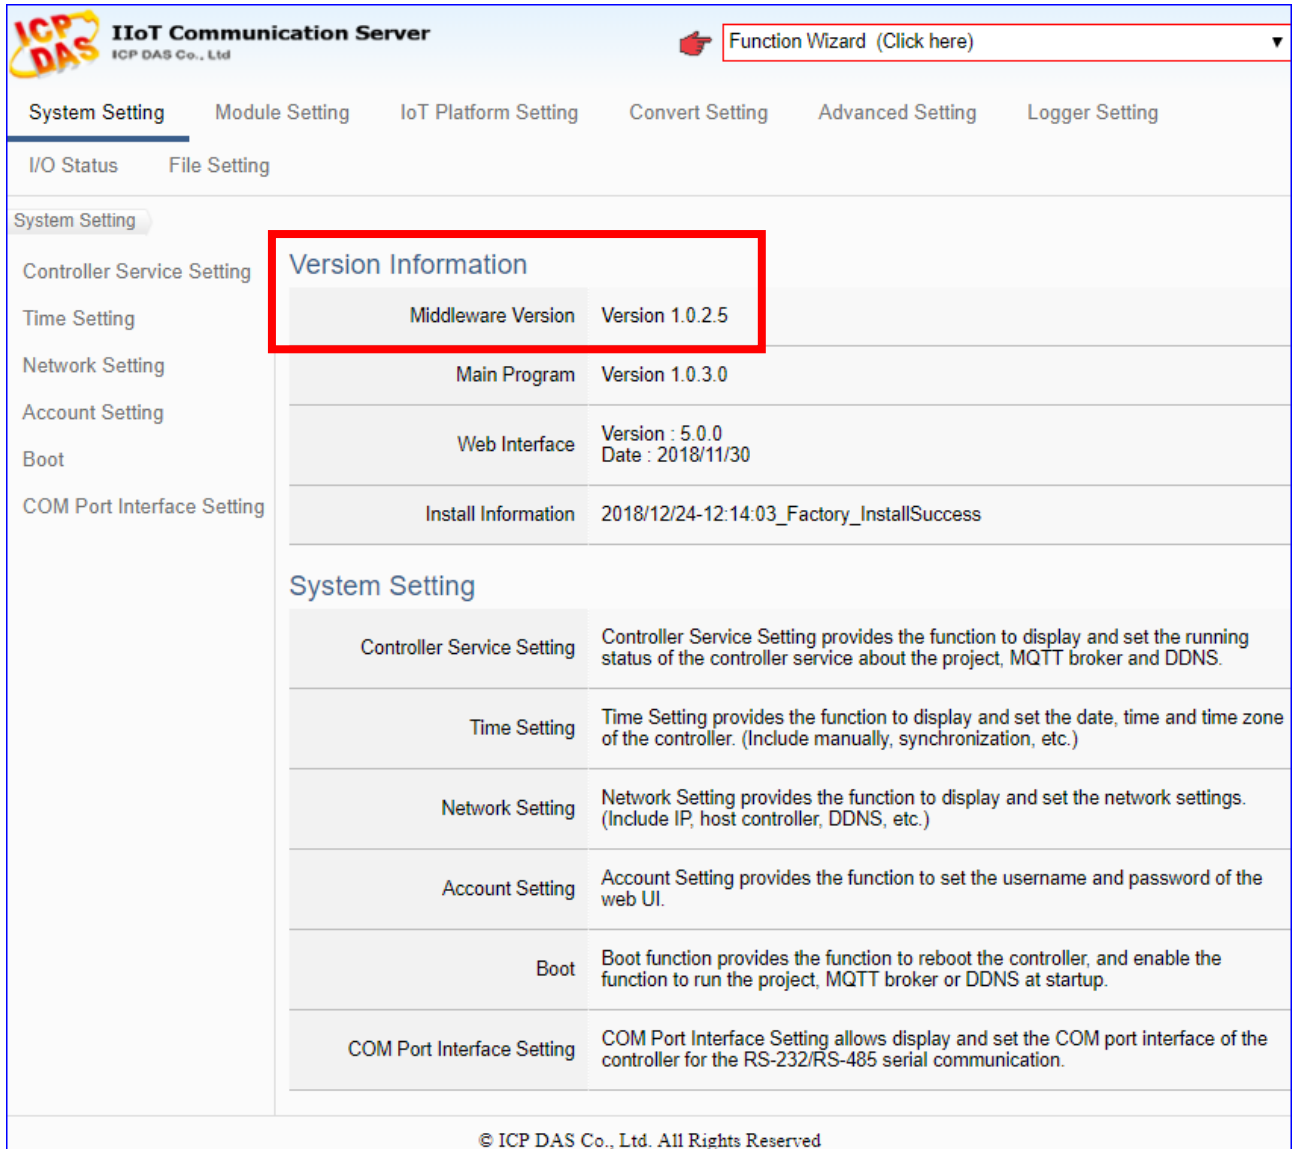

ICP DAS IIoT Communication Server
ICP DAS Co., Ltd

Function Wizard (Click here)

System Setting Module Setting IoT Platform Setting Convert Setting Advanced Setting Logger Setting

I/O Status File Setting

System Setting

Controller Service Setting

Time Setting

Network Setting

Account Setting

Boot

COM Port Interface Setting

Version Information	
Middleware Version	Version 1.0.2.5
Main Program	Version 1.0.3.0
Web Interface	Version : 5.0.0 Date : 2018/11/30
Install Information	2018/12/24-12:14:03_Factory_InstallSuccess

System Setting

Controller Service Setting	Controller Service Setting provides the function to display and set the running status of the controller service about the project, MQTT broker and DDNS.
Time Setting	Time Setting provides the function to display and set the date, time and time zone of the controller. (Include manually, synchronization, etc.)
Network Setting	Network Setting provides the function to display and set the network settings. (Include IP, host controller, DDNS, etc.)
Account Setting	Account Setting provides the function to set the username and password of the web UI.
Boot	Boot function provides the function to reboot the controller, and enable the function to run the project, MQTT broker or DDNS at startup.
COM Port Interface Setting	COM Port Interface Setting allows display and set the COM port interface of the controller for the RS-232/RS-485 serial communication.

© ICP DAS Co., Ltd. All Rights Reserved

Appendix E. UA Series LED Indicators

LED indicators of UA Series provide a very convenient way of status indications for faster, easier diagnostics.



UA-5231 / UA-5231M		
LED	LED Status	Module Status
PWR	Green: ON	The module is powered on.
RUN	Red: Blinking	The module is functioning normally. When power on UA, please wait about one minute for completing the start-up procedure until the "RUN" LED starts blinking.
L1	OFF	Function reserved
L2	Green: Blinking, then ON, and then OFF.	When install or update the Middleware, L2 will blinking. When complete the process, L2 will steady ON to notify user and then OFF.



UA-5231M-3GWA / UA-5231M-4GE / UA-5231M-4GC		
LED	LED Status	Module Status
PWR	Green: ON	The module is powered on.
RUN	Red: Blinking	The module is functioning normally. When power on UA, please wait about one minute for completing the start-up procedure until the "RUN" LED starts blinking.
3G	Green: ON	The modem is functioning normally, and SIM card inside.
	OFF	The modem is not functioning, or no SIM card inside.
4G	Green: Flash per 2 seconds and ON	The modem is functioning normally, and SIM card inside.
	Green: Flash per 2 seconds and OFF	The modem is not functioning, or no SIM card inside.
	Flashing	Data Transferring.
L1	OFF	Function reserved
L2	Green: Blinking, then ON, and then OFF.	When install or update the Middleware, L2 will blinking. When complete the process, L2 will steady ON to notify user and then OFF.



UA-2241M		
LED	LED Status	Module Status
PWR	Green: ON	The module is powered on.
RUN	Red: Blinking	The module is functioning normally. When power on UA, please wait about one minute to complete the start-up procedure until the "RUN" LED starts blinking.
L1 / L3	OFF	Function reserved
L2	Yellow: Blinking, then ON, and then OFF.	When install or update the Middleware, L2 will blinking. When complete the process, L2 will steady ON to notify user and then OFF.

Appendix F. Changing OS Password


This appendix introduces the method to change the password of OS account.

After first login, change your password as soon as possible for your system safety.

Steps to change the password of OS account:

1. Login UA via a connection software (Ex: Putty, here use Putty as a sample.)

Connect UA with the PC (Refer to Chap. 2 and 3 Quick Start 1 and 2). Open the Putty, enter the IP address of UA, and click “Open” button.

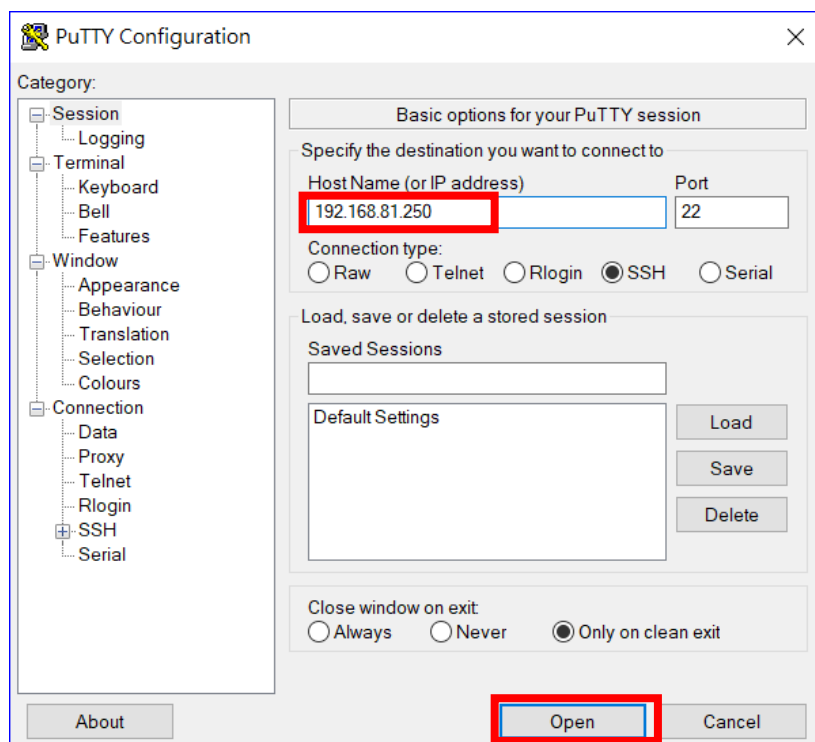


In the Login screen of Putty, enter the login-name and password of UA:

Default Login Name: **root**

Default Password: **icpdas** (The password will not show up when typing)

When it show up “root@UA-5231..... :~#”, it is login successfully.

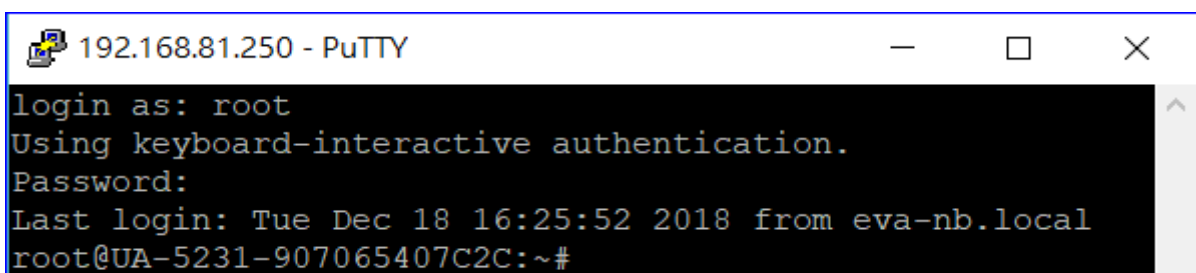

2. Use command “passwd” to change the OS password of UA

- a. Type “passwd” and press Enter.
- b. Type new password after the words “(Enter new UNIX password:)”.
- c. Type the password again.

When “passwd: password updated successfully” show up, the changing is successful.
Please login the UA with the new password next time.

```
root@UA-5231-907065407C2C:~# passwd
Enter new UNIX password:
Retype new UNIX password:
passwd: password updated successfully
root@UA-5231-907065407C2C:~#
```

Postscript: Document Version List

Version	Description
V4.5	<p>Data 2019/01</p> <ol style="list-style-type: none"> 1. Add new model: UA-2241M (Two Ethernet ports) 2. Add new function: support EtherNet/IP protocol (Max. 50 EIP-2000) 3. Add new function: Data Logger (Local Log, Remote Database) 4. Add new function: support IoTstar cloud software (coming soon) 5. Web UI supports auto-setting ICP DAS Modbus RTU/TCP and EIP modules 6. Delete CDS setting in Azure connection 7. Add Appendix F: Changing OS Password
V4.3	<p>Date: 2018/07</p> <ol style="list-style-type: none"> 1. Add 4G new products: UA-5231M-4GE / UA-5231M-4GC (CH1, CH5) 2. Modify introduction, features, function diagram and function features (CH1) 3. Update specifications, appearance and dimensions (CH1) 4. Add LED Indicators descriptions for UA Series (Appendix E.) 5. Update Document Version List (Postscript)
V4.2	<p>Date: 2018/04</p> <ol style="list-style-type: none"> 1. Add new 3G function: UA-5231M-3GWA (CH1~3) 2. Add new function in the Function Wizard: (CH4) <ol style="list-style-type: none"> a. Module Communication Conversion: Add MQTT / OPC UA b. Add "APP Message Notify" new type, and add new function "IFTTT Condition Trigger (Line, Facebook, Twitter)" 3. Add function: System Setting > Network Setting > Mobile Network (3G) (CH5) 4. Add new function: Module Setting > MQTT Module (CH6) 5. Add new function: Convert Setting > OPC UA > MQTT (CH8) 6. Add new function: Advanced Setting > IFTTT Condition Trigger (CH9) 7. Add new function menu: I/O Status (CH10) 8. Modify: Recovering to Factory Setting (Rotary Switch: 8) (CH12) 9. Add IFTTT Website Setting (Appendix C) 10. Add Updating Middleware via MicroSD Card Manually (CH12.2 & Append. D) 11. Add: Postscript: Document Version List