



AXIOMTEK

CEM510

**7th Generation Intel[®] Core[™] i7/ i5/ i3
Processors COM Express[™] Type 6
Basic Module**

User's Manual



Disclaimers

This manual has been carefully checked and believed to contain accurate information. Axiomtek Co., Ltd. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

Axiomtek does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. Axiomtek does not make any commitment to update the information in this manual.

Axiomtek reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Axiomtek Co., Ltd.

CAUTION

If you replace wrong batteries, it causes the danger of explosion. It is recommended by the manufacturer that you follow the manufacturer's instructions to only replace the same or equivalent type of battery, and dispose of used ones.

©Copyright 2017 Axiomtek Co., Ltd.

All Rights Reserved

July 2017, Version A1

Printed in Taiwan

ESD Precautions

Computer boards have integrated circuits sensitive to static electricity. To prevent chipsets from electrostatic discharge damage, please take care of the following jobs with precautions:

- Do not remove boards or integrated circuits from their anti-static packaging until you are ready to install them.
- Before holding the board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. It discharges static electricity from your body.
- Wear a wrist-grounding strap, available from most electronic component stores, when handling boards and components.

Trademarks Acknowledgments

Axiomtek is a trademark of Axiomtek Co., Ltd.

Intel[®], Celeron[®] are trademarks of Intel Corporation.

Windows[®] is a trademark of Microsoft Corporation.

AMI is a trademark of American Megatrend Inc.

IBM, PC/AT, PS/2, VGA are trademarks of International Business Machines Corporation.

Other brand names and trademarks are the properties and registered brands of their respective owners.

Table of Contents


Disclaimers.....	ii
ESD Precautions.....	iii
Chapter 1 Introduction.....	1
1.1 Features.....	1
1.2 Specifications.....	2
1.3 Utilities Supported.....	3
Chapter 2 Module and Pin Assignments.....	5
2.1 Module Dimensions and Fixing Holes.....	5
2.2 Module Layout.....	7
2.3 Installing Thermal Solution.....	9
2.4 Switch Settings.....	10
2.4.1 Auto Power On and Restore BIOS Optimal Defaults (SW1).....	10
2.4.2 PCI-Express Bifurcation Setting (SW2).....	10
2.5 Connectors.....	11
2.5.1 Fan Connector (CN1).....	11
2.5.2 COM Express™ Connectors (SSS1 and SSS2).....	11
Chapter 3 Hardware Description.....	15
3.1 Microprocessor.....	15
3.2 BIOS.....	15
3.3 System Memory.....	15
3.4 I/O Port Address Map.....	16
3.5 Interrupt Controller (IRQ) Map.....	17
3.6 Memory Map.....	22
Chapter 4 AMI BIOS Setup Utility.....	23
4.1 Starting.....	23
4.2 Navigation Keys.....	23
4.3 Main Menu.....	25
4.4 Advanced Menu.....	26
4.5 Chipset Menu.....	42
4.6 Security Menu.....	48

4.7	Boot Menu.....	49
4.8	Save & Exit Menu	51
Appendix A Watchdog Timer and GPIO		53
A.1	About Watchdog Timer	53
A.2	About GPIO.....	53
Appendix B BIOS Flash Utility		55
Appendix C iAMT Settings		59
C.1	Entering MEBx.....	59
C.2	Set and Change Password	59
C.3	iAMT Settings	62
C.4	iAMT Web Console.....	67

This page is intentionally left blank.

Chapter 1

Introduction

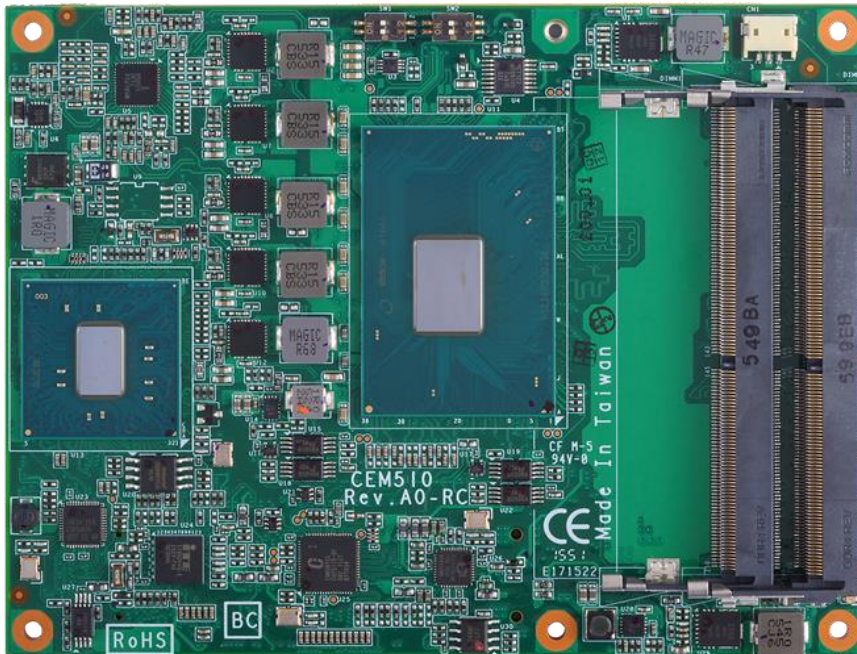

The CEM510 is a COM Express™ Type 6 Basic Module powered by BGA type quad/dual core 7th generation Intel® Core™ i7/ i5/ i3/ processors. It integrates Intel® PCH QM175/HM175/CM238 chipset which supports the most updated high speed I/Os like PCI-Express Gen 3 at 8GT/s, SuperSpeed USB 3.0 at 5Gb/s, and SATA-600 at 6Gb/s. The CEM510 fully complies with COM Express™ Type 6 specification. It provides 24 Lanes of PCI-Express, Gigabit Ethernet, HD audio interface, LVDS LCD and 3 configurable DDI for more flexible digital display options.

1.1 Features

- 7th generation Intel® Core™ i7/ i5/ i3 processors
- Intel® PCH QM175/HM175/CM238
- Two 260-pin DDR4 SO-DIMM sockets supporting up to 32GB memory capacity (CM238 supports ECC memory).
- 24 Lanes of PCI-Express support Gen 3 at 8GT/s
- 4 SATA-600
- 4 USB 3.0 ports
- 8 USB 2.0 ports
- TPM v1.2

1.2 Specifications

- **CPU**
 - 7th generation Intel® Core™ i7/ i5/ i3 BGA processors.
- **Chipset**
 - Intel® QM175/HM175/CM238 Express chipset.
- **BIOS**
 - American Megatrends Inc. BIOS.
 - 128Mbit SPI Flash, DMI, Plug and Play.
 - PXE Ethernet Boot ROM, customized default saving features, LPC-free supported, uses SPI type Flash memory.
- **System Memory**
 - Two 260-pin DDR4 2400MHz SO-DIMM sockets with maximum memory capacity up to 32GB (CM238 supports ECC memory).
- **TPM**
 - Trusted Platform Module compatible with TPM1.2 Main and PC Client specification based on Intel LPC Bus Interface.
- **Expansion Interface**
 - One PCI-Express x16 (Gen 3) for discrete graphics or general purpose PCI-Express (2 x8 or 1 x8 with 2 x4).
 - Eight PCI-Express x1.
- **USB Interface**
 - Four USB ports comply with USB Spec. Rev. 3.0.
 - Eight USB ports comply with USB Spec. Rev. 2.0.
- **SATA Interface**
 - Four SATA 6Gb/s ports supported through COM Express™ connector.
 - Support RAID 0/1/5/10.
- **Graphics**
 - Integrated in Intel® HD Graphics 530.
 - 18/24-bit dual channel LVDS interface (eDP optional). The LVDS resolution is up to 1920x1200 in 24-bit dual channel.
 - Three DDI ports support HDMI/DVI/DisplayPort (VGA is optional with DDI3).
- **Ethernet**
 - One 1000/100/10 Base-T provided by Intel® I219LM with integrated boot ROM.
- **Audio**
 - Provide HD audio interface to support HD audio codec on the carrier board.
- **General Purpose Serial Interface**
 - Support two UART TX/RX interfaces.
- **Power Management**
 - ACPI (Advanced Configuration and Power Interface).
- **Form Factor**
 - Basic module 125mm x 95mm.

1.3 Utilities Supported

- Intel® QM175/HM175/CM238 utility and driver
- Graphics driver
- Ethernet utility and driver
- ME driver



Note


All specifications and images are subject to change without notice.

This page is intentionally left blank.


Chapter 2

Module and Pin Assignments

2.1 Module Dimensions and Fixing Holes

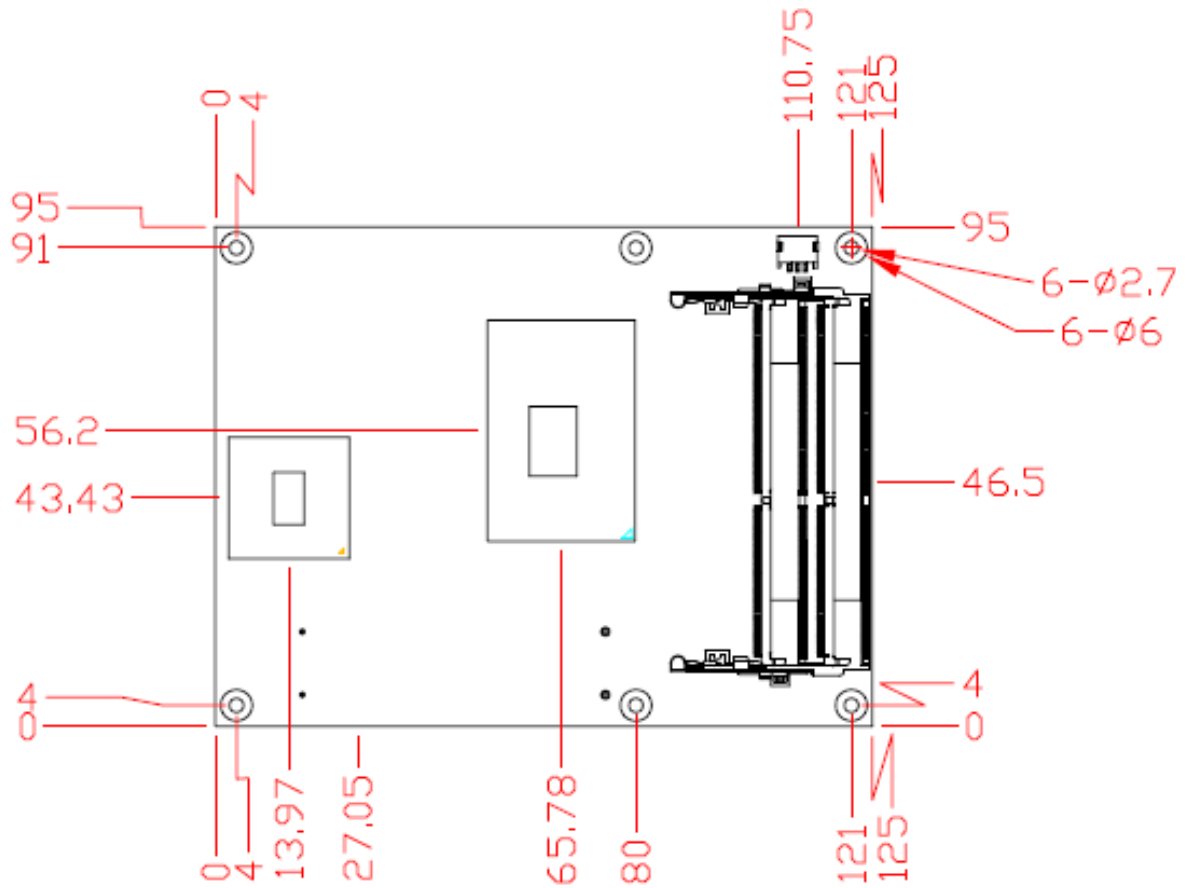


Top View

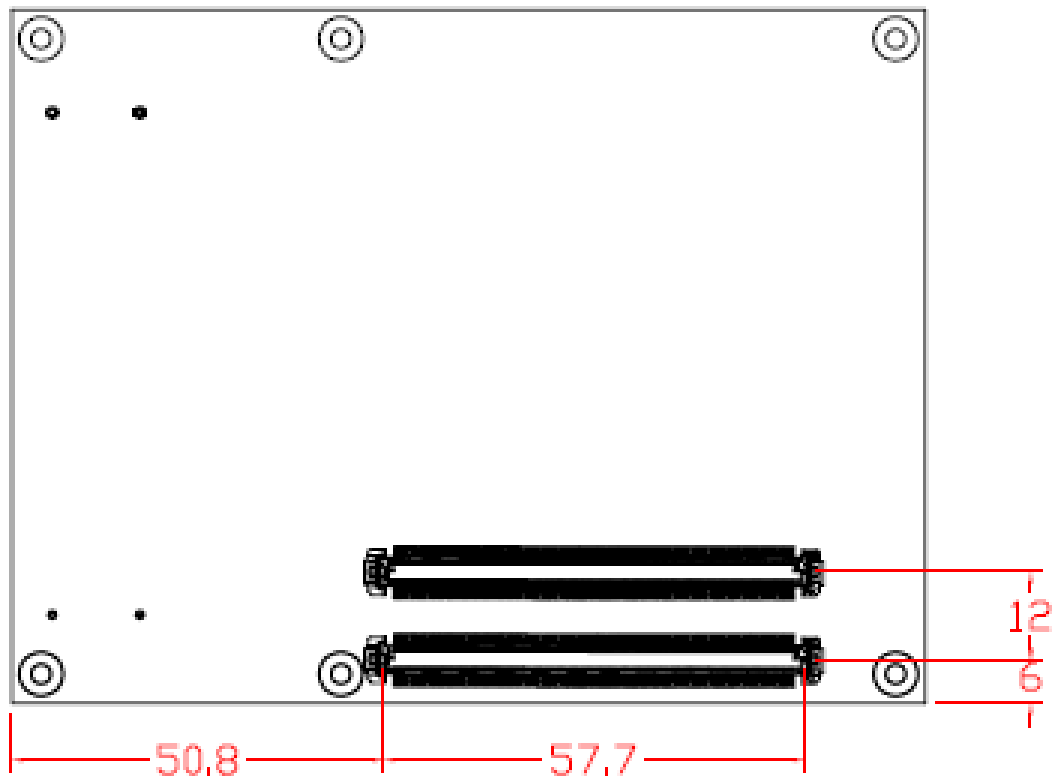


Bottom View

2.2 Module Layout

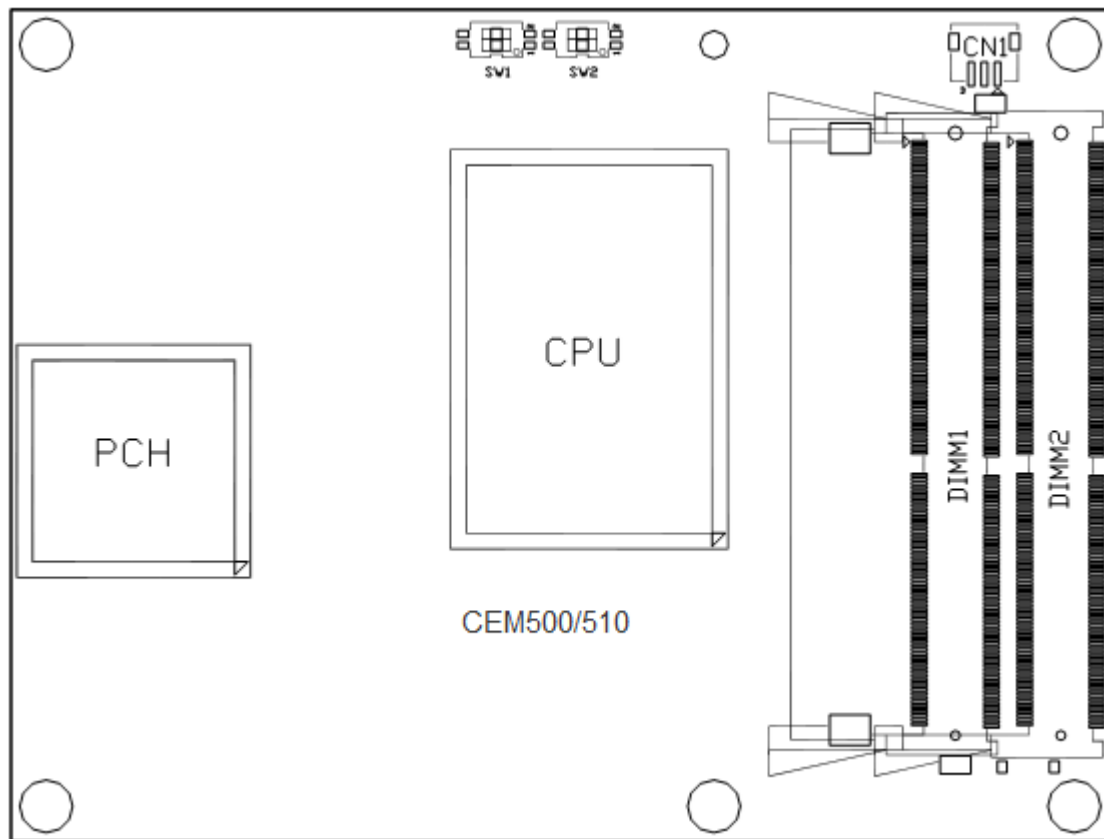

Top View

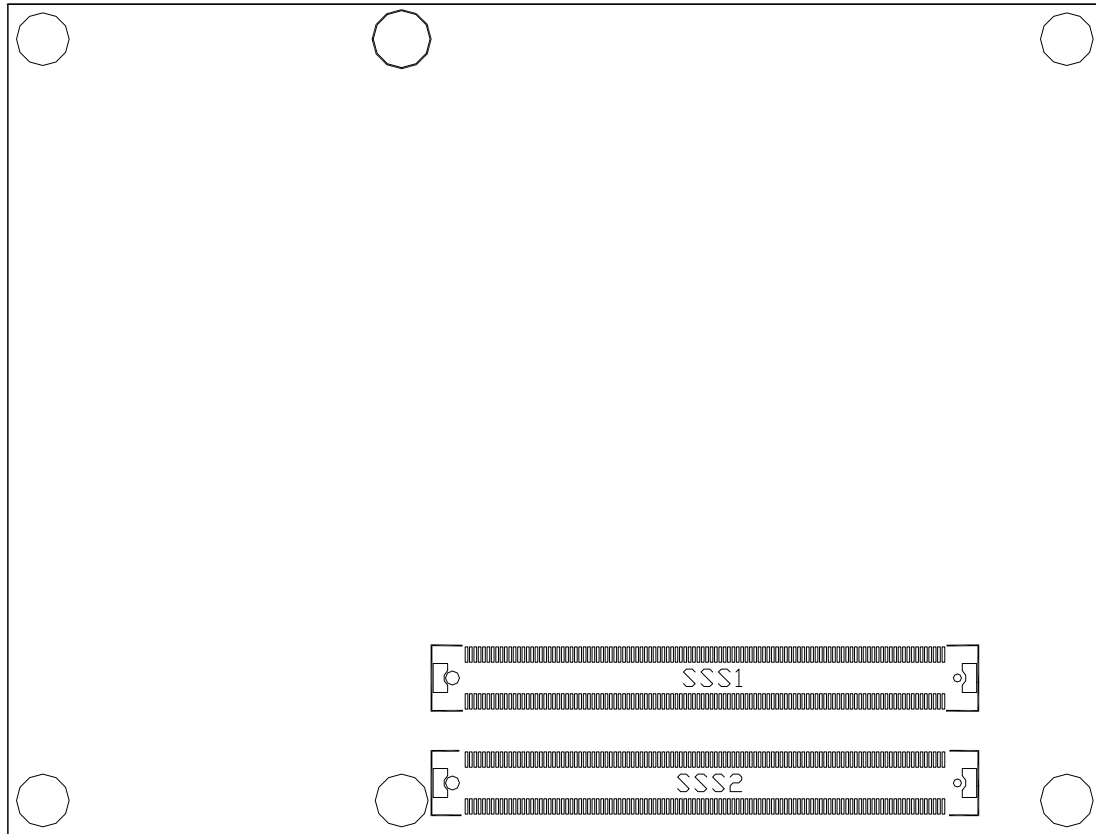


Bottom View

2.3 Installing Thermal Solution

For thermal dissipation, a heatsink enables the CEM510's components to dissipate heat efficiently. All heat generating components are thermally conducted to the heatsink in order to avoid hot spots. Below images illustrate how to install the heatsink.

1. There is a protective plastic covering on the thermal pads. This must be removed before the heatsink can be mounted.
2. Each heatsink is designed for a specific CEM module. The thermal pads on the heatsink are designed to make contact with the necessary components on the CEM module. When mounting the heatsink you must make sure that the thermal pads on the heatsink make complete contact (no space between thermal pad and component) with the corresponding components on the CEM module. This is especially critical for CEM modules that have higher CPU speeds (for example 1.0GHz or more) to ensure that the heatsink acts as a proper thermal interface for cooling solutions.
3. This CPU module has six assembly holes for installing heatsink plate. Use the six screws to secure the heatsink plate to the CEM510. Be careful not to over-tighten the screws.

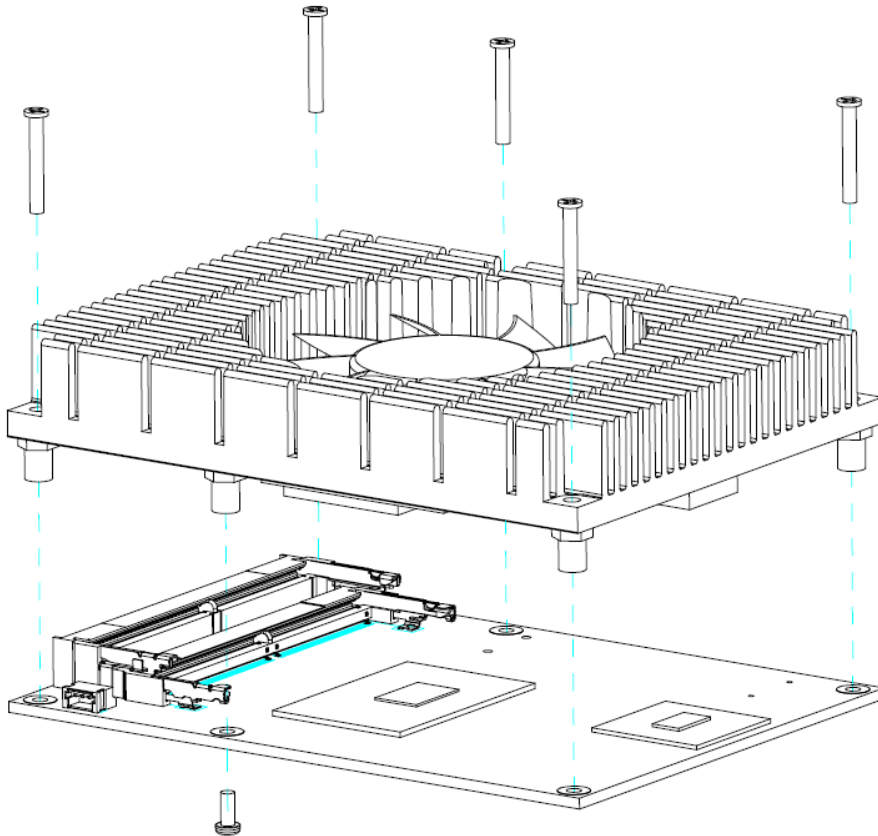

2.4 Switch Settings

Properly configure switch settings on the CEM510 to meet your application purpose. Below you can find a summary table of all switches and onboard default settings.



Note

Once the default switch setting needs to be changed, please do it under power-off condition.

Switch	Description	Setting
SW1	Auto Power On Default: Disable	SW1-1 OFF
	Restore BIOS Optimal Defaults Default: Normal Operation	SW1-2 OFF
SW2	PCI-Express Bifurcation Setting Default: One x16 PCI-Express	SW1-1 OFF, SW1-2 OFF

2.4.1 Auto Power On and Restore BIOS Optimal Defaults (SW1)

If dip1 of SW1 (SW1-1) is enabled for power input, the system will be automatically power on without pressing soft power button. If this switch is disabled for power input, it is necessary to manually press soft power button to power on the system.

The dip2 of SW1 (SW1-2) is for restoring BIOS default status. Flip SW1-2 to ON position for a few seconds then flip it back to OFF position. Doing this procedure can restore BIOS optimal defaults.

Function	Setting
Disable auto power on (Default)	SW1-1 OFF
Enable auto power on	SW1-1 ON
Normal operation (Default)	SW1-2 OFF
Restore BIOS optimal defaults	SW1-2 ON



2.4.2 PCI-Express Bifurcation Setting (SW2)

The SW2 is for PCI-Express bifurcation setting. See table below for detailed information.

Function	Setting
Select one x8 and two x4 PCI-Express	SW2-1 ON, SW2-2 ON
Select two x8 PCI-Express	SW2-1 ON, SW2-2 OFF
Reserved	SW2-1 OFF, SW2-2 ON
Select one x16 PCI-Express (Default)	SW2-1 OFF, SW2-2 OFF



2.5 Connectors

Signals go to the other parts of the system through connectors. Loose or improper connection might cause problems, please make sure all connectors are properly and firmly connected. Here is a summary table which shows connectors on the hardware.

Connector	Description
CN1	Fan Connector
SSS1	COM Express™ Connector
SSS2	COM Express™ Connector
DIMM1	Channel 0 DDR4 SO-DIMM Socket
DIMM2	Channel 1 DDR4 SO-DIMM Socket




Note

- For single memory channel configuration, install memory module in channel 0 (DIMM1) DDR4 SO-DIMM socket.
- For dual memory channel configuration, install memory modules of the same size, chip width, density and rank in both channel 0 (DIMM1) and channel 1 (DIMM2) DDR4 SO-DIMM sockets.

2.5.1 Fan Connector (CN1)


The CN1 is a 3-pin connector for fan interface.

Pin	Signal
1	GND
2	+12V level
3	Fan speed feedback

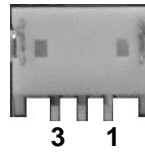

2.5.2 COM Express™ Connectors (SSS1 and SSS2)

The following table shows pin assignments of the 220-pin COM Express™ connectors.

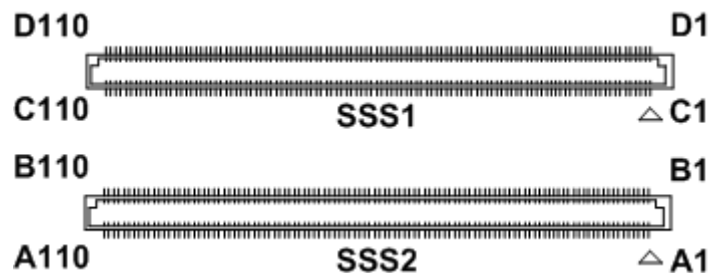

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
A1	GND (FIXED)	B1	GND (FIXED)	C1	GND (FIXED)	D1	GND (FIXED)
A2	GBE0_MDI3-	B2	GBE0_ACT#	C2	GND (FIXED)	D2	GND (FIXED)
A3	GBE0_MDI3+	B3	LPC_FRAME#	C3	USB_SSRX0-	D3	USB_SSTX0-
A4	GBE0_LINK100#	B4	LPC_AD0	C4	USB_SSRX0+	D4	USB_SSTX0+
A5	GBE0_LINK1000#	B5	LPC_AD1	C5	GND (FIXED)	D5	GND (FIXED)
A6	GBE0_MDI2-	B6	LPC_AD2	C6	USB_SSRX1-	D6	USB_SSTX1-
A7	GBE0_MDI2+	B7	LPC_AD3	C7	USB_SSRX1+	D7	USB_SSTX1+
A8	GBE0_LINK#	B8	LPC_DRQ0#	C8	GND (FIXED)	D8	GND (FIXED)
A9	GBE0_MDI1-	B9	LPC_DRQ1#	C9	USB_SSRX2-	D9	USB_SSTX2-
A10	GBE0_MDI1+	B10	LPC_CLK	C10	USB_SSRX2+	D10	USB_SSTX2+
A11	GND (FIXED)	B11	GND (FIXED)	C11	GND (FIXED)	D11	GND (FIXED)
A12	GBE0_MDI0-	B12	PWRBTN#	C12	USB_SSRX3-	D12	USB_SSTX3-
A13	GBE0_MDI0+	B13	SMB_CK	C13	USB_SSRX3+	D13	USB_SSTX3+
A14	GBE0_CTREF	B14	SMB_DAT	C14	GND (FIXED)	D14	GND (FIXED)
A15	SUS_S3#	B15	SMB_ALERT#	C15	DDI1_PAIR6+	D15	DDI1_CTRLCLK_AUX+
A16	SATA0_TX+	B16	SATA1_TX+	C16	DDI1_PAIR6-	D16	DDI1_CTRLDATA_AUX-
A17	SATA0_TX-	B17	SATA1_TX-	C17	RSVD	D17	RSVD
A18	SUS_S4#	B18	SUS_STAT#	C18	RSVD	D18	RSVD
A19	SATA0_RX+	B19	SATA1_RX+	C19	PCIE_RX6+	D19	PCIE_TX6+
A20	SATA0_RX-	B20	SATA1_RX-	C20	PCIE_RX6-	D20	PCIE_TX6-
A21	GND (FIXED)	B21	GND (FIXED)	C21	GND (FIXED)	D21	GND (FIXED)
A22	SATA2_TX+	B22	SATA3_TX+	C22	PCIE_RX7+	D22	PCIE_TX7+
A23	SATA2_TX-	B23	SATA3_TX-	C23	PCIE_RX7-	D23	PCIE_TX7-
A24	SUS_S5#	B24	PWR_OK	C24	DDI1_HPD	D24	RSVD
A25	SATA2_RX+	B25	SATA3_RX+	C25	DDI1_PAIR4+	D25	RSVD
A26	SATA2_RX-	B26	SATA3_RX-	C26	DDI1_PAIR4-	D26	DDI1_PAIR0+
A27	BATLOW#	B27	WDT	C27	RSVD	D27	DDI1_PAIR0-
A28	(S)ATA_ACT#	B28	AC/HDA_SDIN2	C28	RSVD	D28	RSVD
A29	AC/HDA_SYNC	B29	AC/HDA_SDIN1	C29	DDI1_PAIR5+	D29	DDI1_PAIR1+
A30	AC/HDA_RST#	B30	AC/HDA_SDIN0	C30	DDI1_PAIR5-	D30	DDI1_PAIR1-
A31	GND (FIXED)	B31	GND (FIXED)	C31	GND (FIXED)	D31	GND (FIXED)
A32	AC/HDA_BITCLK	B32	SPKR	C32	DDI2_CTRLCLK_AUX+	D32	DDI1_PAIR2+
A33	AC/HDA_SDOOUT	B33	I2C_CK	C33	DDI2_CTRLDATA_AUX-	D33	DDI1_PAIR2-
A34	BIOS_DISABLE#	B34	I2C_DAT	C34	DDI2_DDC_AUX_SEL	D34	DDI1_DDC_AUX_SEL
A35	THRMTRIP#	B35	THRM#	C35	RSVD	D35	RSVD
A36	USB6-	B36	USB7-	C36	DDI3_CTRLCLK_AUX+	D36	DDI1_PAIR3+
A37	USB6+	B37	USB7+	C37	DDI3_CTRLDATA_AUX-	D37	DDI1_PAIR3-
A38	USB_6_7_OC#	B38	USB_4_5_OC#	C38	DDI3_DDC_AUX_SEL	D38	RSVD
A39	USB4-	B39	USB5-	C39	DDI3_PAIR0+	D39	DDI2_PAIR0+
A40	USB4+	B40	USB5+	C40	DDI3_PAIR0-	D40	DDI2_PAIR0-
A41	GND (FIXED)	B41	GND (FIXED)	C41	GND (FIXED)	D41	GND (FIXED)
A42	USB2-	B42	USB3-	C42	DDI3_PAIR1+	D42	DDI2_PAIR1+
A43	USB2+	B43	USB3+	C43	DDI3_PAIR1-	D43	DDI2_PAIR1-
A44	USB_2_3_OC#	B44	USB_0_1_OC#	C44	DDI3_HPD	D44	DDI2_HPD
A45	USB0-	B45	USB1-	C45	RSVD	D45	RSVD
A46	USB0+	B46	USB1+	C46	DDI3_PAIR2+	D46	DDI2_PAIR2+
A47	VCC_RTC	B47	EXCD1_PERST#	C47	DDI3_PAIR2-	D47	DDI2_PAIR2-
A48	EXCD0_PERST#	B48	EXCD1_CPPE#	C48	RSVD	D48	RSVD
A49	EXCD0_CPPE#	B49	SYS_RESET#	C49	DDI3_PAIR3+	D49	DDI2_PAIR3+
A50	LPC_SERIRQ	B50	CB_RESET#	C50	DDI3_PAIR3-	D50	DDI2_PAIR3-
A51	GND (FIXED)	B51	GND (FIXED)	C51	GND (FIXED)	D51	GND (FIXED)
A52	PCIE_TX5+	B52	PCIE_RX5+	C52	PEG_RX0+	D52	PEG_TX0+
A53	PCIE_TX5-	B53	PCIE_RX5-	C53	PEG_RX0-	D53	PEG_TX0-
A54	GPIO	B54	GPO1	C54	TYPE0#	D54	PEG_LANE_RV#
A55	PCIE_TX4+	B55	PCIE_RX4+	C55	PEG_RX1+	D55	PEG_TX1+

Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
A56	PCIE_TX4-	B56	PCIE_RX4-	C56	PEG_RX1-	D56	PEG_TX1-
A57	GND	B57	GPO2	C57	TYPE1#	D57	TYPE2#
A58	PCIE_TX3+	B58	PCIE_RX3+	C58	PEG_RX2+	D58	PEG_TX2+
A59	PCIE_TX3-	B59	PCIE_RX3-	C59	PEG_RX2-	D59	PEG_TX2-
A60	GND (FIXED)	B60	GND (FIXED)	C60	GND (FIXED)	D60	GND (FIXED)
A61	PCIE_TX2+	B61	PCIE_RX2+	C61	PEG_RX3+	D61	PEG_TX3+
A62	PCIE_TX2-	B62	PCIE_RX2-	C62	PEG_RX3-	D62	PEG_TX3-
A63	GPI1	B63	GPO3	C63	RSVD	D63	RSVD
A64	PCIE_TX1+	B64	PCIE_RX1+	C64	RSVD	D64	RSVD
A65	PCIE_TX1-	B65	PCIE_RX1-	C65	PEG_RX4+	D65	PEG_TX4+
A66	GND	B66	WAKE0#	C66	PEG_RX4-	D66	PEG_TX4-
A67	GPI2	B67	WAKE1#	C67	RSVD	D67	GND
A68	PCIE_TX0+	B68	PCIE_RX0+	C68	PEG_RX5+	D68	PEG_TX5+
A69	PCIE_TX0-	B69	PCIE_RX0-	C69	PEG_RX5-	D69	PEG_TX5-
A70	GND(FIXED)	B70	GND(FIXED)	C70	GND(FIXED)	D70	GND(FIXED)
A71	LVDS_A0+	B71	LVDS_B0+	C71	PEG_RX6+	D71	PEG_TX6+
A72	LVDS_A0-	B72	LVDS_B0-	C72	PEG_RX6-	D72	PEG_TX6-
A73	LVDS_A1+	B73	LVDS_B1+	C73	GND(FIXED)	D73	SDVO_CLK
A74	LVDS_A1-	B74	LVDS_B1-	C74	PEG_RX7+	D74	PEG_TX7+
A75	LVDS_A2+	B75	LVDS_B2+	C75	PEG_RX7-	D75	PEG_TX7-
A76	LVDS_A2-	B76	LVDS_B2-	C76	GND	D76	GND
A77	LVDS_VDD_EN	B77	LVDS_B3+	C77	RSVD	D77	RSVD
A78	LVDS_A3+	B78	LVDS_B3-	C78	PEG_RX8+	D78	PEG_TX8+
A79	LVDS_A3-	B79	LVDS_BKLT_EN	C79	PEG_RX8-	D79	PEG_TX8-
A80	GND(FIXED)	B80	GND(FIXED)	C80	GND(FIXED)	D80	GND(FIXED)
A81	LVDS_A_CK+	B81	LVDS_B_CK+	C81	PEG_RX9+	D81	PEG_TX9+
A82	LVDS_A_CK-	B82	LVDS_B_CK-	C82	PEG_RX9-	D82	PEG_TX9-
A83	LVDS_I2C_CK	B83	LVDS_BKLT_CTRL	C83	RSVD	D83	RSVD
A84	LVDS_I2C_DAT	B84	VCC_5V_SBY	C84	GND	D84	GND
A85	GPI3	B85	VCC_5V_SBY	C85	PEG_RX10+	D85	PEG_TX10+
A86	RSVD	B86	VCC_5V_SBY	C86	PEG_RX10-	D86	PEG_TX10-
A87	eDP_HP	B87	VCC_5V_SBY	C87	GND	D87	GND
A88	PCIE0_CK_REF+	B88	BIOS_DIS1	C88	PEG_RX11+	D88	PEG_TX11+
A89	PCIE0_CK_REF-	B89	VGA_RED	C89	PEG_RX11-	D89	PEG_TX11-
A90	GND (FIXED)	B90	GND (FIXED)	C90	GND (FIXED)	D90	GND (FIXED)
A91	SPI_POWER	B91	VGA_GRN	C91	PEG_RX12+	D91	PEG_TX12+
A92	SPI_MISO	B92	VGA_BLU	C92	PEG_RX12-	D92	PEG_TX12-
A93	GPO0	B93	VGA_HSYNC	C93	GND	D93	GND
A94	SPI_CLK	B94	VGA_VSYNC	C94	PEG_RX13+	D94	PEG_TX13+
A95	SPI_MOSI	B95	VGA_I2C_CK	C95	PEG_RX13-	D95	PEG_TX13-
A96	TPM_PP	B96	VGA_I2C_DAT	C96	GND	D96	GND
A97	TYPE10#	B97	SPI_CS#	C97	RSVD	D97	RSVD
A98	SER0_TX	B98	RSVD	C98	PEG_RX14+	D98	PEG_TX14+
A99	SER0_RX	B99	RSVD	C99	PEG_RX14-	D99	PEG_TX14-
A100	GND (FIXED)	B100	GND (FIXED)	C100	GND (FIXED)	D100	GND (FIXED)
A101	SER1_TX	B101	FAN_PWMOUT	C101	PEG_RX15+	D101	PEG_TX15+
A102	SER1_RX	B102	FAN_TACHIN	C102	PEG_RX15-	D102	PEG_TX15-
A103	LID#	B103	SLEEP#	C103	GND	D103	GND
A104	VCC_12V	B104	VCC_12V	C104	VCC_12V	D104	VCC_12V
A105	VCC_12V	B105	VCC_12V	C105	VCC_12V	D105	VCC_12V
A106	VCC_12V	B106	VCC_12V	C106	VCC_12V	D106	VCC_12V
A107	VCC_12V	B107	VCC_12V	C107	VCC_12V	D107	VCC_12V
A108	VCC_12V	B108	VCC_12V	C108	VCC_12V	D108	VCC_12V
A109	VCC_12V	B109	VCC_12V	C109	VCC_12V	D109	VCC_12V
A110	GND (FIXED)	B110	GND (FIXED)	C110	GND (FIXED)	D110	GND (FIXED)

This page is intentionally left blank.

Chapter 3

Hardware Description

3.1 Microprocessor

The CEM510 supports Intel® Core™ i7/ i5/ i3 processors, which enables your system to operate under Windows® 10 and Linux environments. The system performance depends on the microprocessor. You must install the heatsink or cooler carefully and properly to prevent damage.

3.2 BIOS

The CEM510 uses AMI Plug and Play BIOS with a single 128Mbit SPI Flash.

3.3 System Memory

The CEM510 supports two 260-pin DDR4 2133MHz SO-DIMM sockets for maximum memory capacity up to 32GB DDR4 SDRAMs (CM238 supports ECC memory). The memory module comes in sizes of 4GB, 8GB and 16GB.




















































3.4 I/O Port Address Map






























































The I/O port addresses (with CEB940011 baseboard under Windows® 10) are as follows:

- Input/output (IO)
 - [0000000000000000 - 000000000000CF7] PCI Express Root Complex
 - [0000000000000020 - 0000000000000021] Programmable interrupt controller
 - [0000000000000024 - 0000000000000025] Programmable interrupt controller
 - [0000000000000028 - 0000000000000029] Programmable interrupt controller
 - [000000000000002C - 000000000000002D] Programmable interrupt controller
 - [000000000000002E - 000000000000002F] Motherboard resources
 - [0000000000000030 - 0000000000000031] Programmable interrupt controller
 - [0000000000000034 - 0000000000000035] Programmable interrupt controller
 - [0000000000000038 - 0000000000000039] Programmable interrupt controller
 - [000000000000003C - 000000000000003D] Programmable interrupt controller
 - [0000000000000040 - 0000000000000043] System timer
 - [000000000000004E - 000000000000004F] Motherboard resources
 - [0000000000000050 - 0000000000000053] System timer
 - [0000000000000060 - 0000000000000060] Standard PS/2 Keyboard
 - [0000000000000061 - 0000000000000061] Motherboard resources
 - [0000000000000062 - 0000000000000062] Microsoft ACPI-Compliant Embedded Controller
 - [0000000000000063 - 0000000000000063] Motherboard resources
 - [0000000000000064 - 0000000000000064] Standard PS/2 Keyboard
 - [0000000000000065 - 0000000000000065] Motherboard resources
 - [0000000000000066 - 0000000000000066] Microsoft ACPI-Compliant Embedded Controller
 - [0000000000000067 - 0000000000000067] Motherboard resources
 - [0000000000000070 - 0000000000000077] System CMOS/real time clock
 - [0000000000000070 - 0000000000000070] Motherboard resources
 - [0000000000000080 - 0000000000000080] Motherboard resources
 - [0000000000000092 - 0000000000000092] Motherboard resources
 - [00000000000000A0 - 00000000000000A1] Programmable interrupt controller
 - [00000000000000A4 - 00000000000000A5] Programmable interrupt controller
 - [00000000000000A8 - 00000000000000A9] Programmable interrupt controller
 - [00000000000000AC - 00000000000000AD] Programmable interrupt controller
 - [00000000000000B0 - 00000000000000B1] Programmable interrupt controller
 - [00000000000000B2 - 00000000000000B3] Motherboard resources
 - [00000000000000B4 - 00000000000000B5] Programmable interrupt controller
 - [00000000000000B8 - 00000000000000B9] Programmable interrupt controller
 - [00000000000000BC - 00000000000000BD] Programmable interrupt controller
 - [00000000000000F0 - 00000000000000F0] Numeric data processor
 - [0000000000000248 - 000000000000024F] Communications Port (COM1)
 - [0000000000000258 - 000000000000025F] Communications Port (COM2)
 - [00000000000003B0 - 00000000000003BB] Intel(R) HD Graphics P630
 - [00000000000003C0 - 00000000000003DF] Intel(R) HD Graphics P630
 - [00000000000004D0 - 00000000000004D1] Programmable interrupt controller
 - [0000000000000680 - 000000000000069F] Motherboard resources
 - [0000000000000800 - 000000000000087F] Motherboard resources
 - [000000000000D00 - 000000000000FFFF] PCI Express Root Complex
 - [000000000000164E - 000000000000164F] Motherboard resources
 - [0000000000001800 - 00000000000018FE] Motherboard resources
 - [0000000000001854 - 0000000000001857] Motherboard resources
 - [000000000000F000 - 000000000000F03F] Intel(R) HD Graphics P630
 - [000000000000F040 - 000000000000F05F] Intel(R) 100 Series/C230 Series Chipset Family SMBus - A123
 - [000000000000F060 - 000000000000F07F] Standard SATA AHCI Controller
 - [000000000000F080 - 000000000000F083] Standard SATA AHCI Controller
 - [000000000000F090 - 000000000000F097] Standard SATA AHCI Controller
 - [000000000000FEF8 - 000000000000FEFF] Intel(R) Active Management Technology - SOL (COM3)
 - [000000000000FF00 - 000000000000FFFE] Motherboard resources
 - [000000000000FFFF - 000000000000FFFF] Motherboard resources
 - [000000000000FFFF - 000000000000FFFF] Motherboard resources
 - [000000000000FFFF - 000000000000FFFF] Motherboard resources

3.5 Interrupt Controller (IRQ) Map

The interrupt controller (IRQ) mapping list (with CEB940011 baseboard under Windows® 10) is shown as follows:

▼	 Interrupt request (IRQ)	
	 (ISA) 0x00000000 (00)	System timer
	 (ISA) 0x00000001 (01)	Standard PS/2 Keyboard
	 (ISA) 0x00000006 (06)	Communications Port (COM2)
	 (ISA) 0x00000007 (07)	Communications Port (COM1)
	 (ISA) 0x00000008 (08)	System CMOS/real time clock
	 (ISA) 0x0000000D (13)	Numeric data processor
	 (ISA) 0x0000000E (14)	Motherboard resources
	 (ISA) 0x00000036 (54)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000037 (55)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000038 (56)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000039 (57)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003A (58)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003B (59)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003C (60)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003D (61)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003E (62)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000003F (63)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000040 (64)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000041 (65)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000042 (66)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000043 (67)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000044 (68)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000045 (69)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000046 (70)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000047 (71)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000048 (72)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000049 (73)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004A (74)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004B (75)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004C (76)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004D (77)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004E (78)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000004F (79)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000050 (80)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000051 (81)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000052 (82)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000053 (83)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000054 (84)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000055 (85)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000056 (86)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000057 (87)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000058 (88)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000059 (89)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005A (90)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005B (91)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005C (92)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005D (93)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005E (94)	Microsoft ACPI-Compliant System
	 (ISA) 0x0000005F (95)	Microsoft ACPI-Compliant System
	 (ISA) 0x00000060 (96)	Microsoft ACPI-Compliant System

	(ISA) 0x000001C6 (454)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C7 (455)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C8 (456)	Microsoft ACPI-Compliant System
	(ISA) 0x000001C9 (457)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CA (458)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CB (459)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CC (460)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CD (461)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CE (462)	Microsoft ACPI-Compliant System
	(ISA) 0x000001CF (463)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D0 (464)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D1 (465)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D2 (466)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D3 (467)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D4 (468)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D5 (469)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D6 (470)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D7 (471)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D8 (472)	Microsoft ACPI-Compliant System
	(ISA) 0x000001D9 (473)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DA (474)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DB (475)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DC (476)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DD (477)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DE (478)	Microsoft ACPI-Compliant System
	(ISA) 0x000001DF (479)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E0 (480)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E1 (481)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E2 (482)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E3 (483)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E4 (484)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E5 (485)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E6 (486)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E7 (487)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E8 (488)	Microsoft ACPI-Compliant System
	(ISA) 0x000001E9 (489)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EA (490)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EB (491)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EC (492)	Microsoft ACPI-Compliant System
	(ISA) 0x000001ED (493)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EE (494)	Microsoft ACPI-Compliant System
	(ISA) 0x000001EF (495)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F0 (496)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F1 (497)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F2 (498)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F3 (499)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F4 (500)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F5 (501)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F6 (502)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F7 (503)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F8 (504)	Microsoft ACPI-Compliant System
	(ISA) 0x000001F9 (505)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FA (506)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FB (507)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FC (508)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FD (509)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FE (510)	Microsoft ACPI-Compliant System
	(ISA) 0x000001FF (511)	Microsoft ACPI-Compliant System
	(PCI) 0x0000000B (11)	Intel(R) 100 Series/C230 Series Chipset Family Thermal subsystem - A131
	(PCI) 0x0000000B (11)	Intel(R) 100 Series/C230 Series Chipset Family SMBus - A123
	(PCI) 0x00000010 (16)	High Definition Audio Controller
	(PCI) 0x00000013 (19)	Intel(R) Active Management Technology - SOL (COM3)
	(PCI) 0xFFFFFFF6 (-6)	Intel(R) Management Engine Interface
	(PCI) 0xFFFFFFF6 (-5)	Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
	(PCI) 0xFFFFFFF6 (-4)	Intel(R) HD Graphics P630
	(PCI) 0xFFFFFFF6 (-3)	Intel(R) Ethernet Connection I219-LM
	(PCI) 0xFFFFFFF6 (-2)	Standard SATA AHCI Controller

3.6 Memory Map

The memory (with CEB940011 baseboard under Windows® 10) mapping list is shown as follows:

- Memory
 - [0000000000A0000 - 0000000000BFFFF] PCI Express Root Complex
 - [0000000000A0000 - 0000000000BFFFF] Intel(R) HD Graphics P630
 - [0000000090000000 - 00000000DFFFFFF] PCI Express Root Complex
 - [00000000C0000000 - 00000000CFFFFFF] Intel(R) HD Graphics P630
 - [00000000DE000000 - 00000000DEFFFFFF] Intel(R) HD Graphics P630
 - [00000000DF000000 - 00000000DF01FFFF] Intel(R) Ethernet Connection I219-LM
 - [00000000DF020000 - 00000000DF02FFFF] High Definition Audio Controller
 - [00000000DF030000 - 00000000DF03FFFF] Intel(R) USB 3.0 eXtensible Host Controller - 1.0 (Microsoft)
 - [00000000DF040000 - 00000000DF043FFF] High Definition Audio Controller
 - [00000000DF044000 - 00000000DF047FFF] Intel(R) 100 Series/C230 Series Chipset Family PMC - A121
 - [00000000DF048000 - 00000000DF049FFF] Standard SATA AHCI Controller
 - [00000000DF04A000 - 00000000DF04A0FF] Intel(R) 100 Series/C230 Series Chipset Family SMBus - A123
 - [00000000DF04B000 - 00000000DF04B7FF] Standard SATA AHCI Controller
 - [00000000DF04C000 - 00000000DF04C0FF] Standard SATA AHCI Controller
 - [00000000DF04F000 - 00000000DF04FFFF] Intel(R) 100 Series/C230 Series Chipset Family Thermal subsystem - A131
 - [00000000DFFE0000 - 00000000DFFFFFF] Motherboard resources
 - [00000000E0000000 - 00000000EFFFFFF] Motherboard resources
 - [00000000FD000000 - 00000000FE7FFFF] PCI Express Root Complex
 - [00000000FD000000 - 00000000FDABFFFF] Motherboard resources
 - [00000000FDAC0000 - 00000000FDACFFFF] Motherboard resources
 - [00000000FDAD0000 - 00000000FDADFFFF] Motherboard resources
 - [00000000FDAE0000 - 00000000FDAEFFFF] Motherboard resources
 - [00000000FDAF0000 - 00000000FDAFFFF] Motherboard resources
 - [00000000FDB00000 - 00000000FDBFFFF] Motherboard resources
 - [00000000FE000000 - 00000000FE01FFFF] Motherboard resources
 - [00000000FE036000 - 00000000FE03BFFF] Motherboard resources
 - [00000000FE03D000 - 00000000FE3FFFF] Motherboard resources
 - [00000000FE40E000 - 00000000FE40EFFF] Intel(R) Management Engine Interface
 - [00000000FE40F000 - 00000000FE40FFFF] Intel(R) Active Management Technology - SOL (COM3)
 - [00000000FE410000 - 00000000FE7FFFF] Motherboard resources
 - [00000000FED00000 - 00000000FED003FF] High precision event timer
 - [00000000FED10000 - 00000000FED17FFF] Motherboard resources
 - [00000000FED18000 - 00000000FED18FFF] Motherboard resources
 - [00000000FED19000 - 00000000FED19FFF] Motherboard resources
 - [00000000FED20000 - 00000000FED3FFFF] Motherboard resources
 - [00000000FED45000 - 00000000FED8FFFF] Motherboard resources
 - [00000000FED90000 - 00000000FED93FFF] Motherboard resources
 - [00000000FEE00000 - 00000000FEEFFFF] Motherboard resources
 - [00000000FF000000 - 00000000FFFFFF] Legacy device
 - [00000000FF000000 - 00000000FFFFFF] Motherboard resources

Chapter 4

AMI BIOS Setup Utility

The AMI UEFI BIOS provides users with a built-in setup program to modify basic system configuration. All configured parameters are stored in a flash chip to save the setup information whenever the power is turned off. This chapter provides users with detailed description about how to set up basic system configuration through the AMI BIOS setup utility.

4.1 Starting

To enter the setup screens, follow the steps below:

1. Turn on the computer and press the key immediately.
2. After you press the key, the main BIOS setup menu displays. You can access the other setup screens from the main BIOS setup menu, such as the Advanced and Chipset menus.



Note

If your computer cannot boot after making and saving system changes with BIOS setup, you can restore BIOS optimal defaults by setting SW1-2 (see section 2.4.1).

It is strongly recommended that you should avoid changing the chipset's defaults. Both AMI and your system manufacturer have carefully set up these defaults that provide the best performance and reliability.

4.2 Navigation Keys

The BIOS setup/utility uses a key-based navigation system called hot keys. Most of the BIOS setup utility hot keys can be used at any time during the setup navigation process. These keys include <F1>, <F2>, <Enter>, <ESC>, <Arrow> keys, and so on.




Note

Some of the navigation keys differ from one screen to another.

Hot Keys	Description
→← Left/Right	The Left and Right <Arrow> keys allow you to select a setup screen.
↑↓ Up/Down	The Up and Down <Arrow> keys allow you to select a setup screen or sub screen.
+– Plus/Minus	The Plus and Minus <Arrow> keys allow you to change the field value of a particular setup item.
Tab	The <Tab> key allows you to select setup fields.
F1	The <F1> key allows you to display the General Help screen.
F2	The <F2> key allows you to Load Previous Values.
F3	The <F3> key allows you to Load Optimized Defaults.
F4	The <F4> key allows you to save any changes you have made and exit Setup. Press the <F4> key to save your changes.
Esc	The <Esc> key allows you to discard any changes you have made and exit the Setup. Press the <Esc> key to exit the setup without saving your changes.
Enter	The <Enter> key allows you to display or change the setup option listed for a particular setup item. The <Enter> key can also allow you to display the setup sub screens.

4.3 Main Menu

When you first enter the setup utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the Main tab. System Time/Date can be set up as described below. The Main BIOS setup screen is shown below.

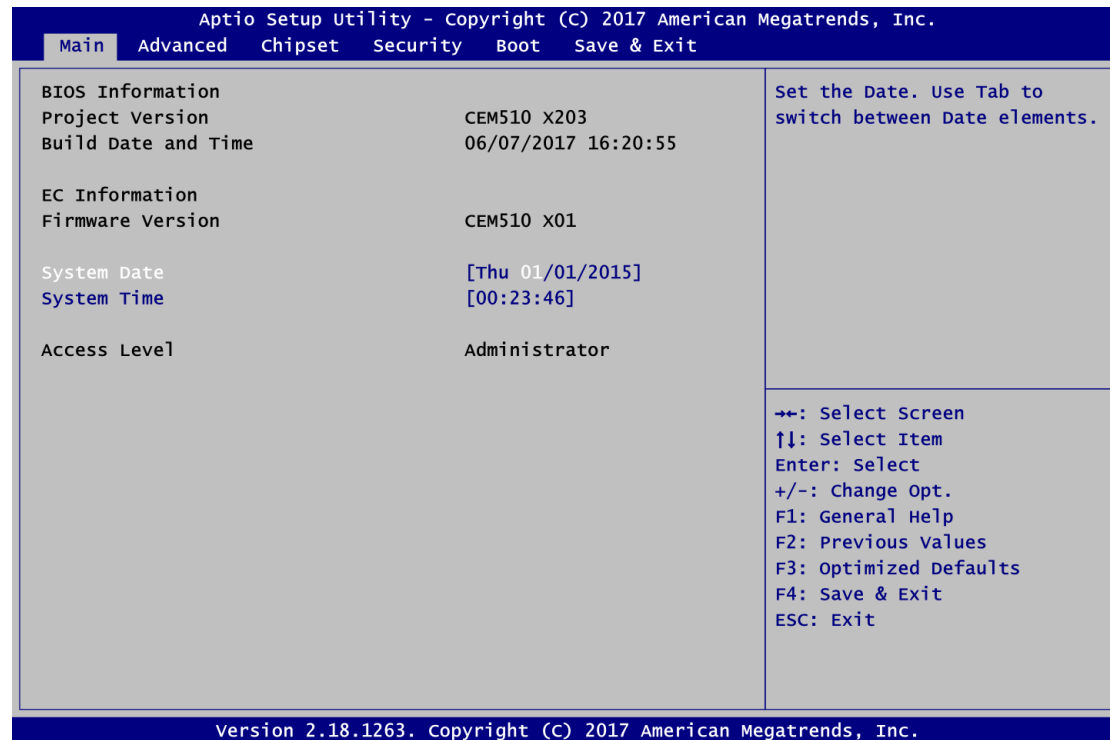

BIOS Information

Display BIOS information.

EC Information

Display firmware information.

System Date/Time

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The time is entered in HH:MM:SS format.

Access Level


Display the access level of current user.

4.4 Advanced Menu

The Advanced menu also allows users to set configuration of the CPU and other system devices. You can select any of the items in the left frame of the screen to go to the sub menus:


- ▶ Serial Port Configuration
- ▶ Hardware Monitor
- ▶ ACPI Settings
- ▶ Trusted Computing
- ▶ CPU Configuration
- ▶ SATA And RST Configuration
- ▶ PCH-FW Configuration
- ▶ AMT Configuration
- ▶ USB Configuration
- ▶ Serial Port Console Redirection
- ▶ Utility Configuration
- ▶ Device Configuration

For items marked with “▶”, please press <Enter> for more options.

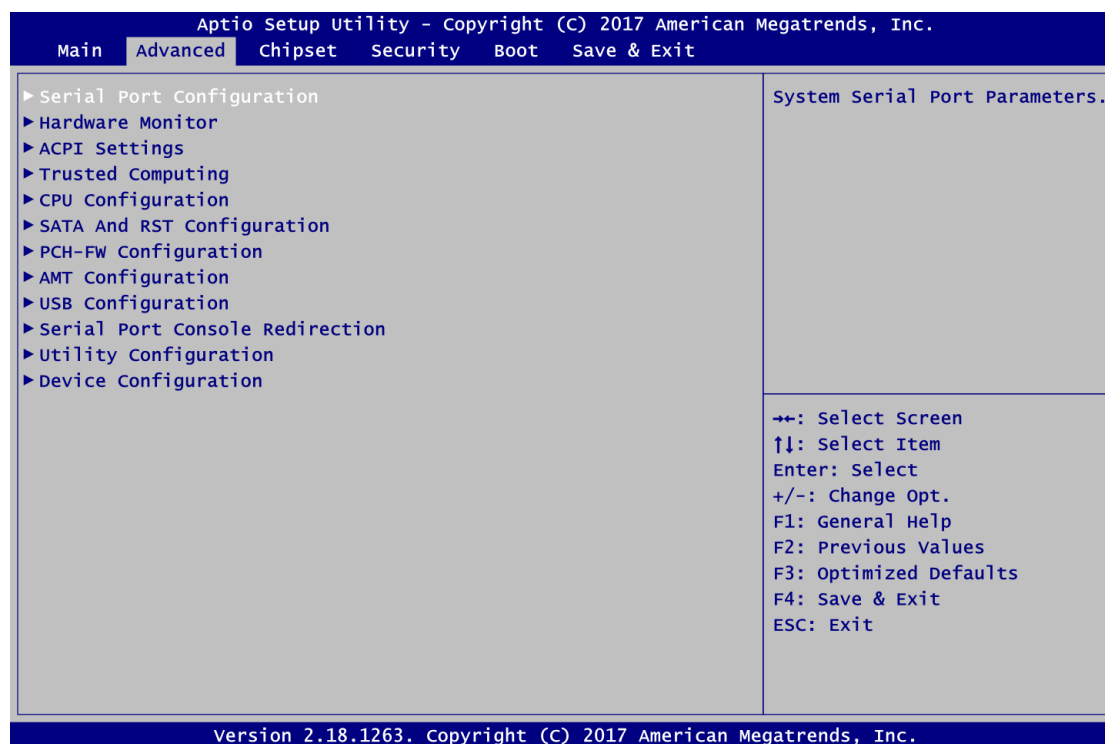


- **Serial Port Configuration**

You can use this screen to select options for Serial Port Configuration, and change the value of the selected option. A description of the selected item appears on the right side of the screen. For items marked with "▶", please press <Enter> for more options.

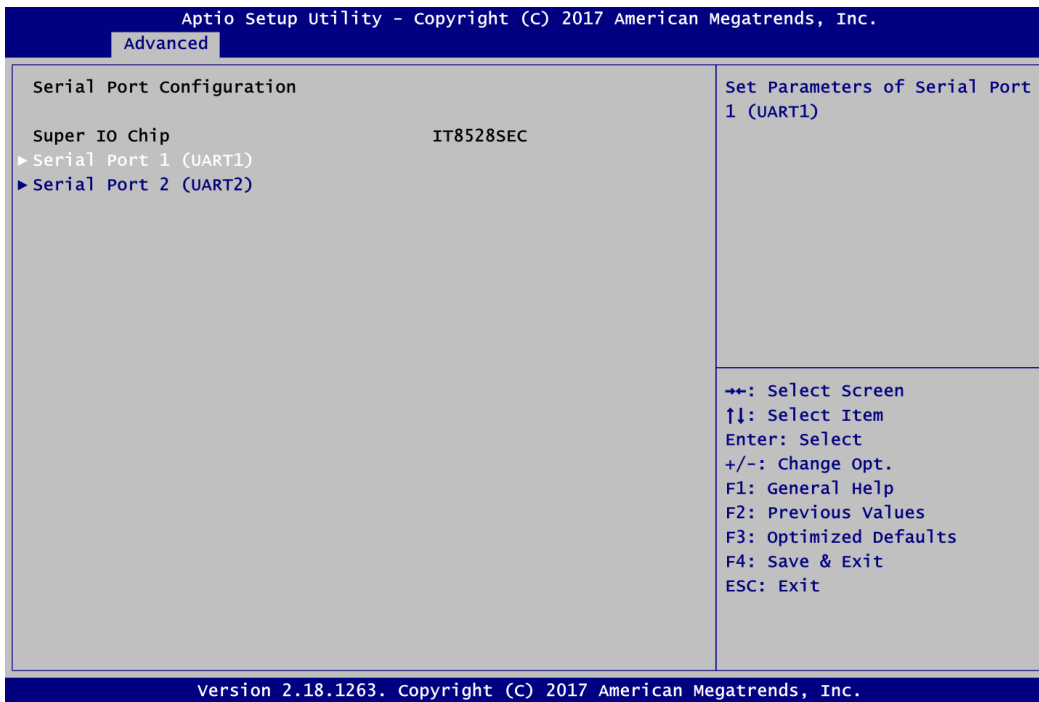**Serial Port 1/2 (UART1/2)**

Set parameters related to serial port 1/2.


- **Serial Port 1 Configuration**

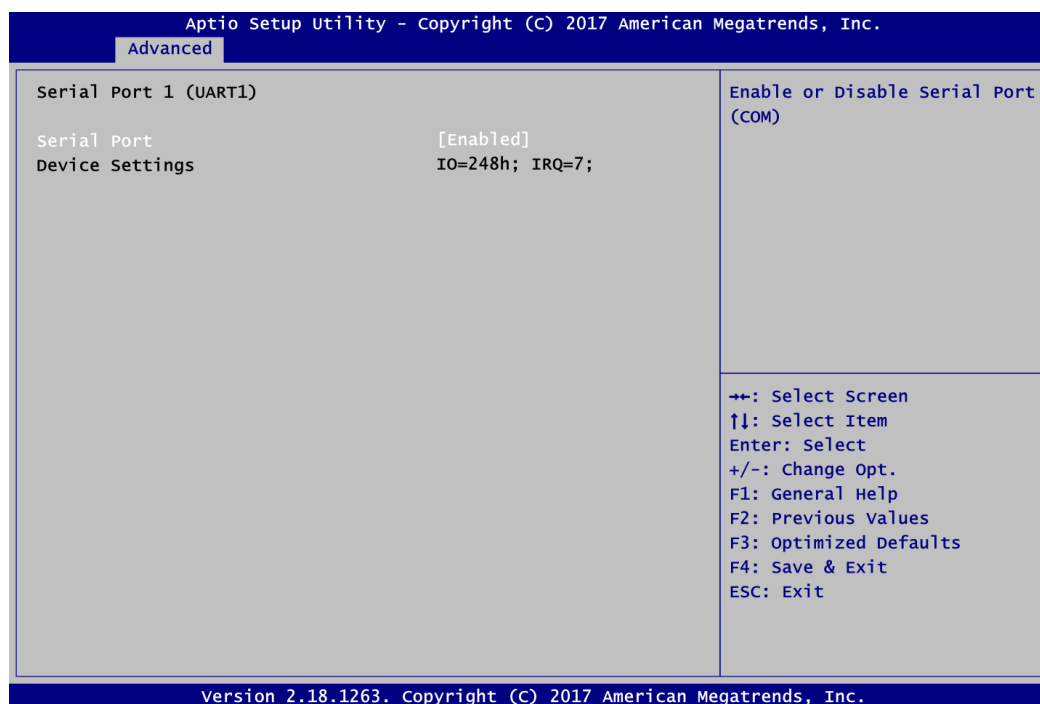

Serial Port

Enable or disable serial port 1. The optimal setting for base I/O address is 248h and for interrupt request address is IRQ7.

- **Serial Port 2 Configuration**

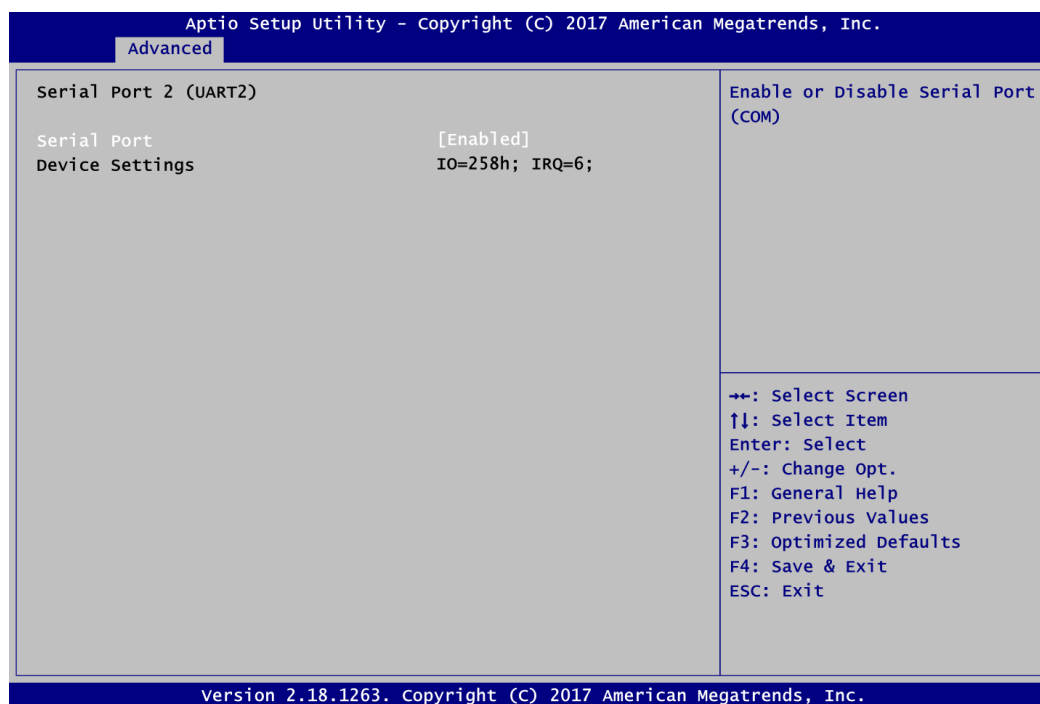


Serial Port


Enable or disable serial port 2. The optimal setting for base I/O address is 258h and for interrupt request address is IRQ6.

- **Hardware Monitor**

This screen is for fan speed control and hardware health status monitoring.

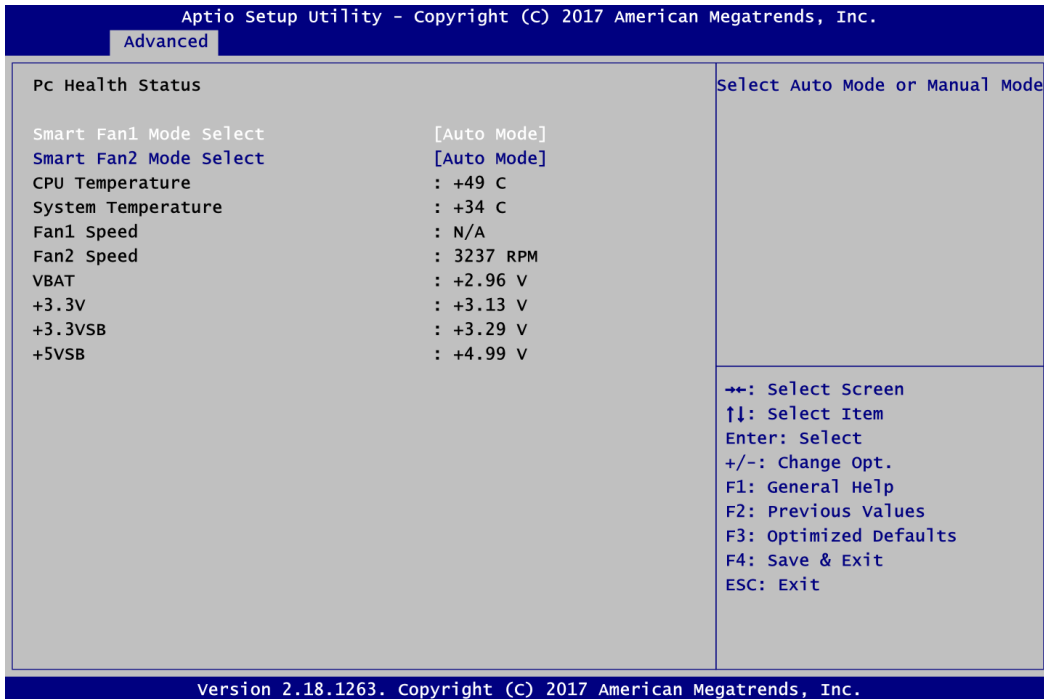


This screen displays the temperature of system and CPU, cooling fans speed in RPM and system voltages (VBAT, +3.3V, +3.3VSB and +5VSB).

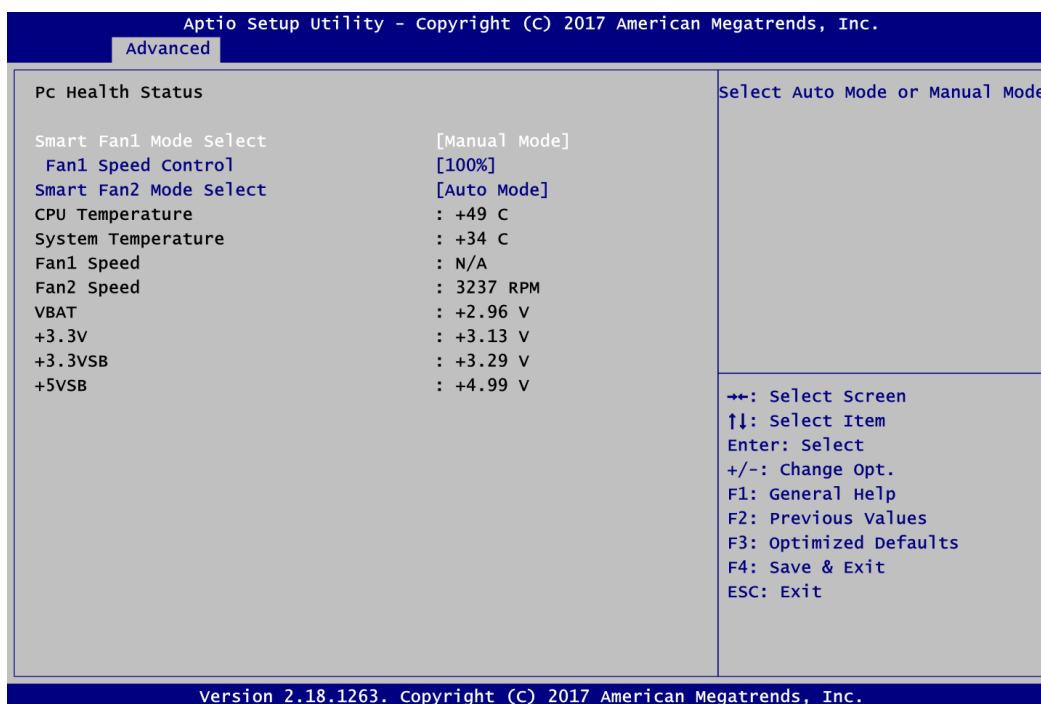


Smart Fan1/2 Mode Select

Set Smart Fan 1/2 mode. The default is Auto Mode. If Smart Fan is in Auto Mode, the system fan spins at different speed depending on system temperature; the higher the temperature, the faster the system fan spins. If Smart Fan is in Manual Mode, user can manually change system fan speed to 100%, 75%, 50%, 25% or 0% (see image below).

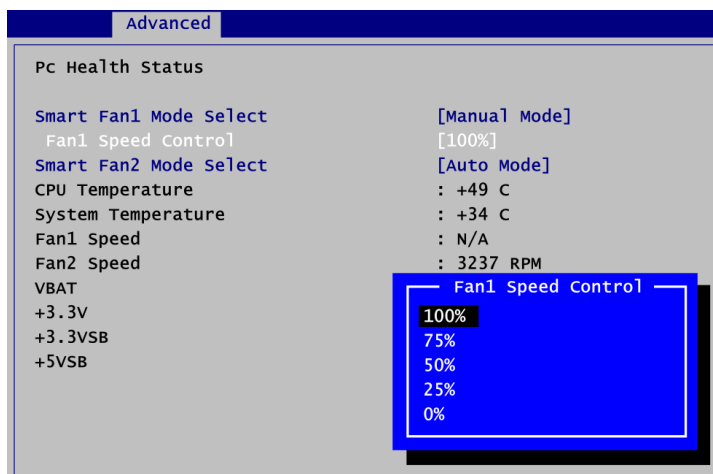

- **ACPI Settings**


You can use this screen to select options for system ACPI configuration, and change the value of the selected option. A description of the selected item appears on the right side of the screen.

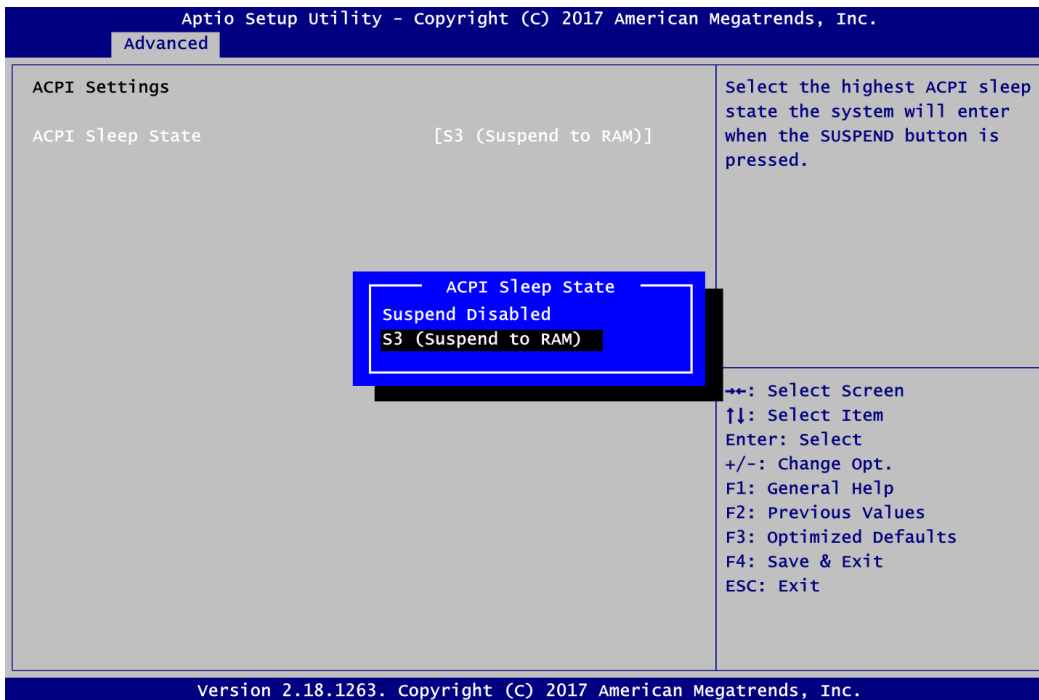**ACPI Sleep State**

Select the ACPI (Advanced Configuration and Power Interface) sleep state. Configuration options are Suspend Disabled and S3 (Suspend to RAM). The default is S3 (Suspend to RAM); this option selects ACPI sleep state the system will enter when suspend button is pressed.


- **Trusted Computing**

You can use this screen for TPM (Trusted Platform Module) configuration. It also shows current TPM status information.

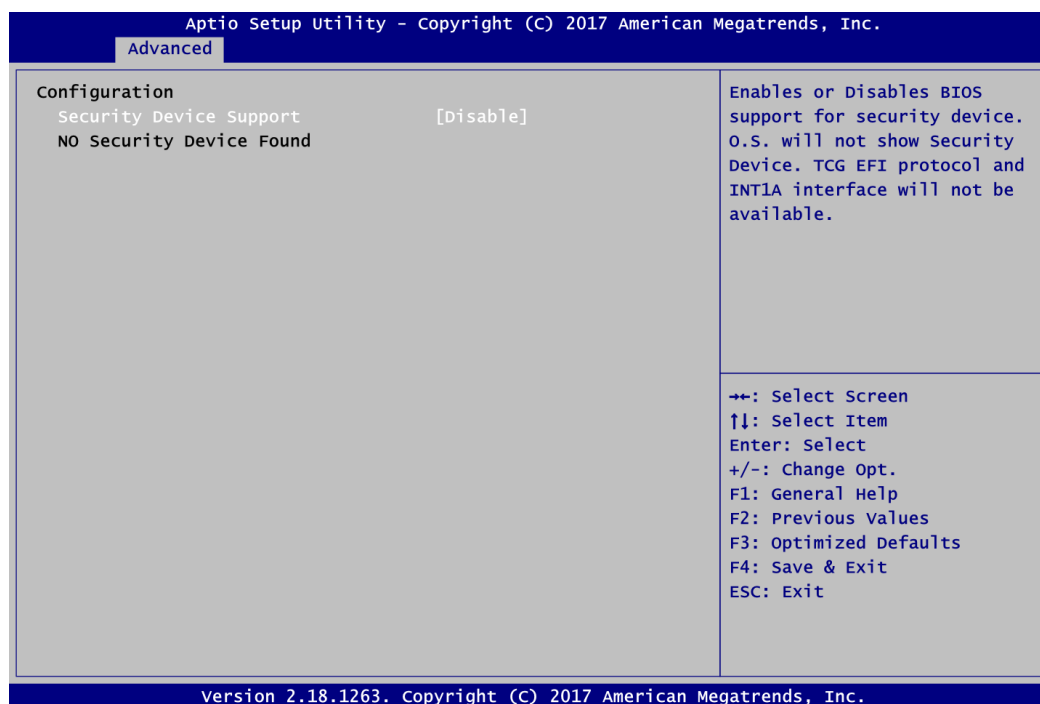

Security Device Support

Enable or disable BIOS support for security device. The default is Disabled. Once the Security Device Support is enabled, you will see the following screen.

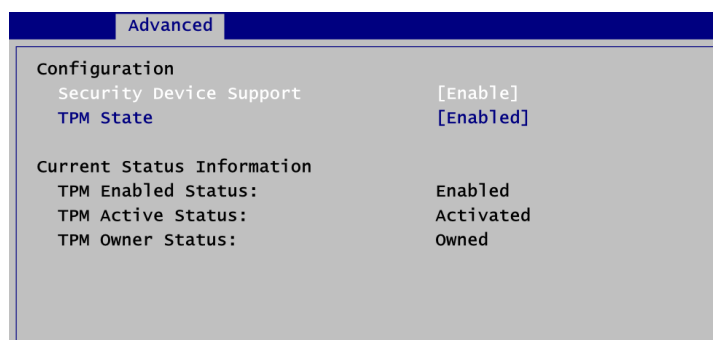

TPM State


Specify whether TPM can be used by the operating system.

Current Status Information

Display current TPM status information.

- **CPU Configuration**

This screen shows the CPU Configuration, and you can change the value of the selected option.

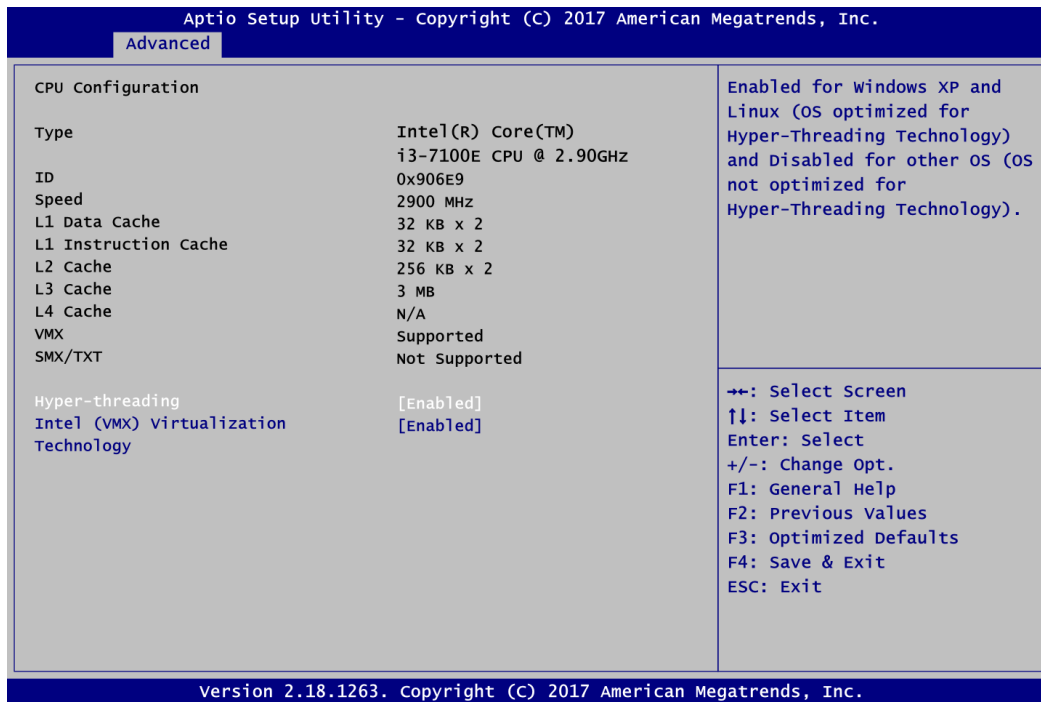

Hyper-threading


Enable or disable Hyper-threading Technology, which allows a single physical processor to multitask as multiple logical processors. When disabled, only one thread per enabled core is enabled.

Intel (VMX) Virtualization Technology

Enable or disable Intel Virtualization Technology. When enabled, a VMM (Virtual Machine Mode) can utilize the additional hardware capabilities. It allows a platform to run multiple operating systems and applications independently, hence enabling a computer system to work as several virtual systems.

- **SATA and RST Configuration**

In the SATA Configuration menu, you can see the currently installed hardware in the SATA ports. During system boot up, the BIOS automatically detects the presence of SATA devices.

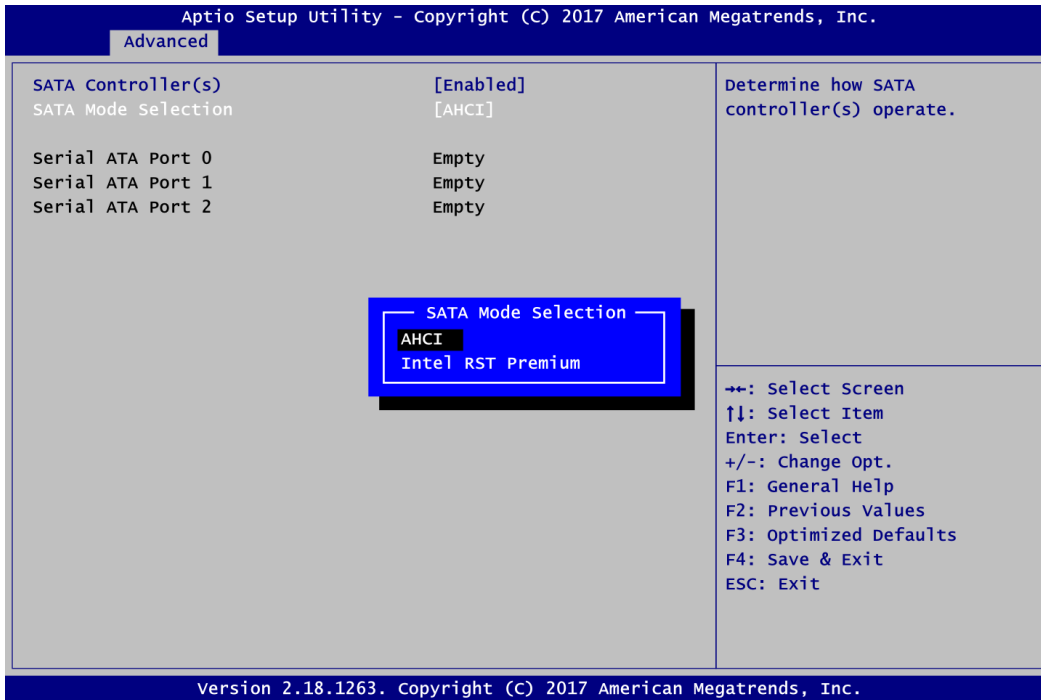

SATA Controller(s)


Enable or disable the SATA Controller feature. The default is Enabled.

SATA Mode Selection

Determine how SATA controller(s) operate. Operation mode options are AHCI (Advanced Host Controller Interface) and Intel RST Premium mode. The default is AHCI mode.


- **PCH-FW Configuration**

This screen displays ME Firmware information.

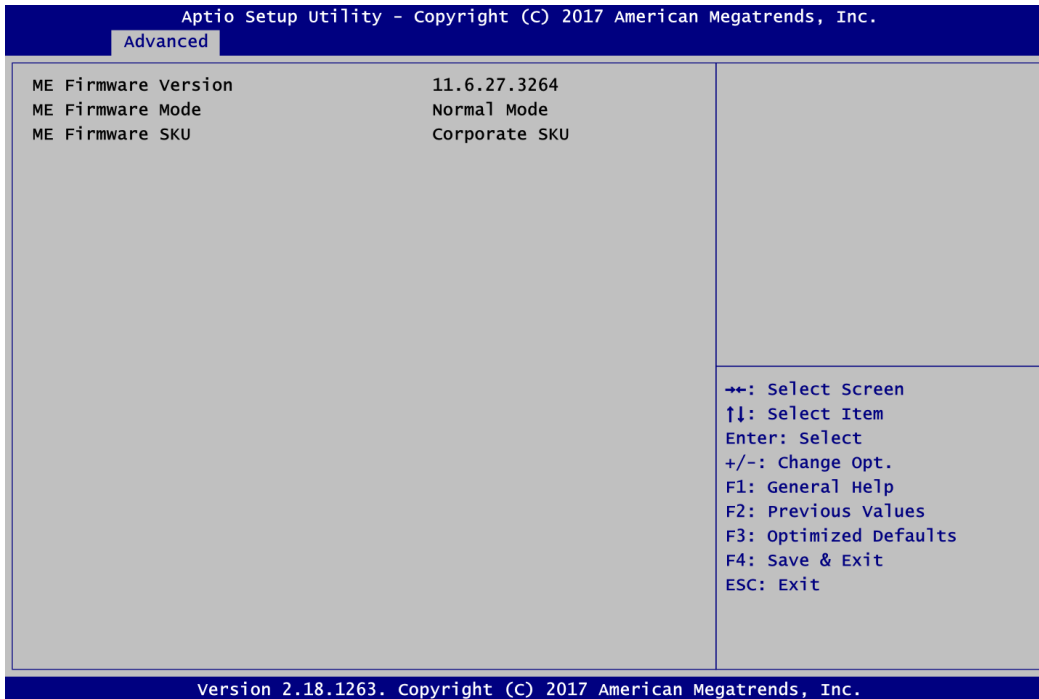

- **AMT Configuration**


Use this screen to configure AMT parameters.

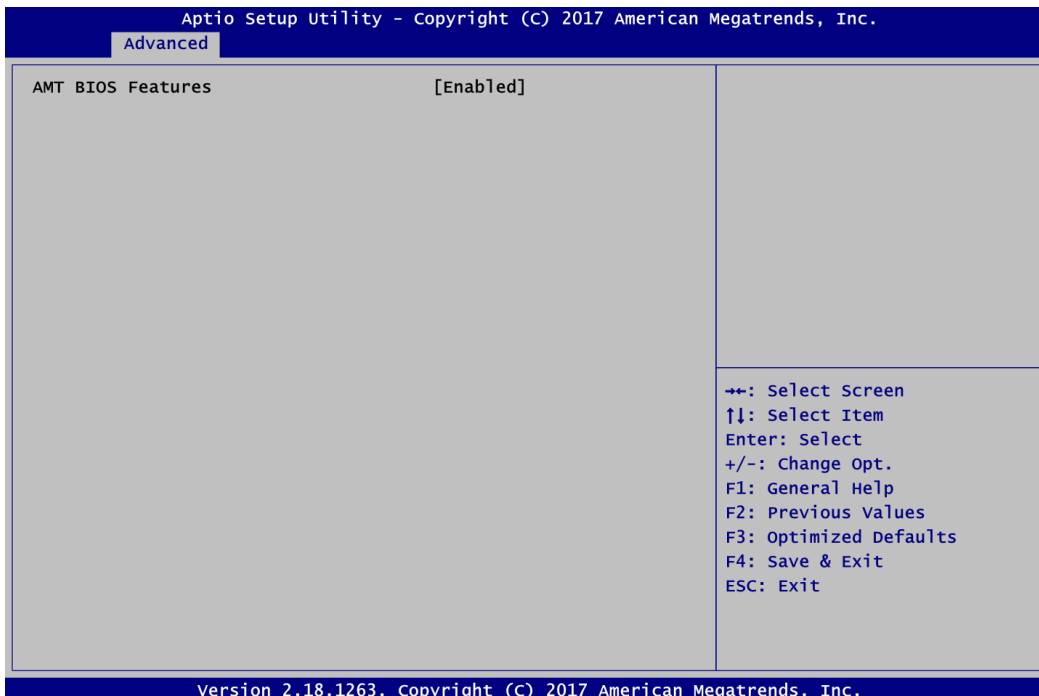

AMT BIOS Features

Active Management Technology BIOS Extension is enabled. Please refer to Appendix C for iAMT settings.

- **USB Configuration**

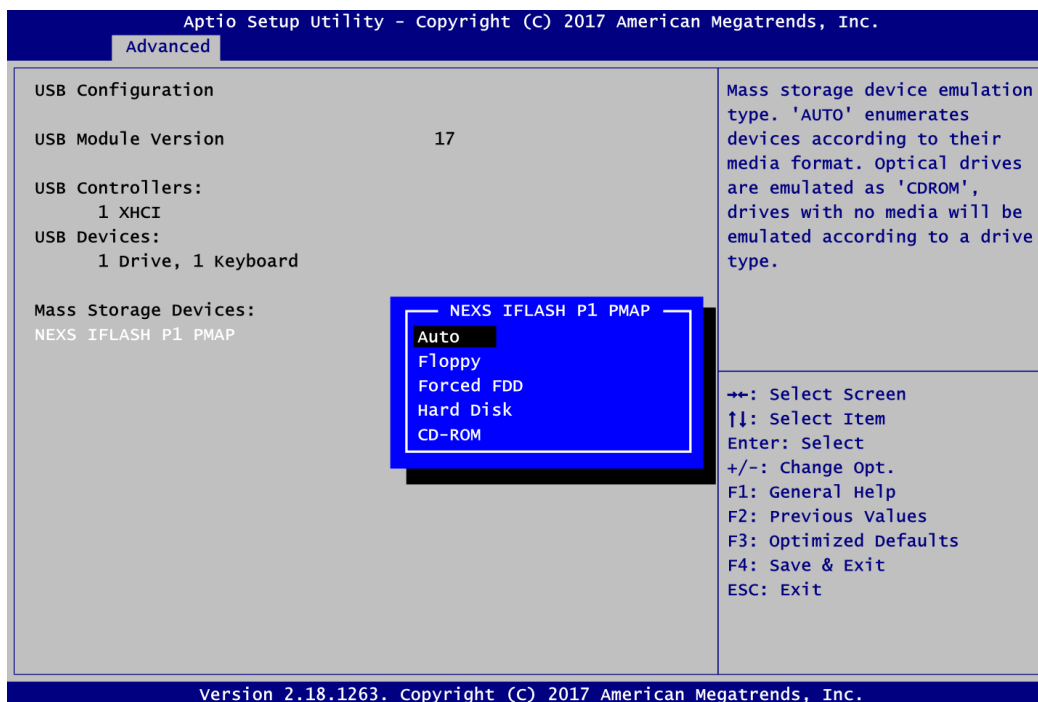

USB Devices


Display all detected USB devices.

Mass Storage Devices

Mass storage device emulation type. Auto option enumerates devices according to their media format. Optical drives are emulated as CDROM, drives with no media will be emulated according to a drive type.


- **Serial Port Console Redirection**


You can use this screen to select options for Serial Port Console Redirection, and change the value of the selected option. A description of the selected item appears on the right side of the screen. For items marked with "►", please press <Enter> for more options.

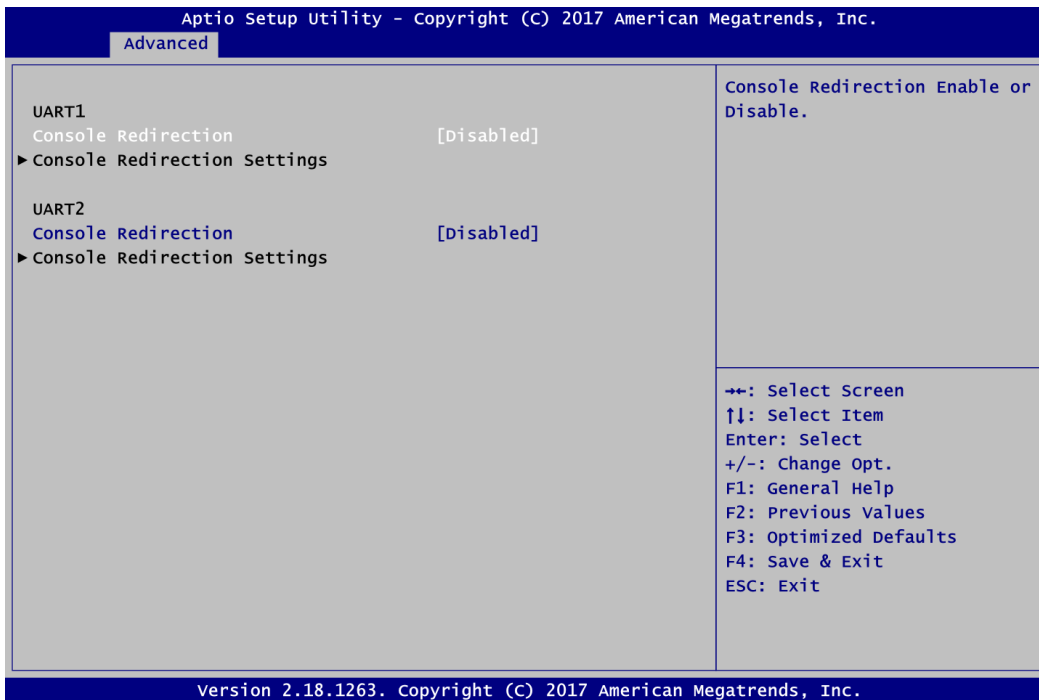

UART1\UART2 Console Redirection

Enable or disable UART1\UART2 console redirection. Once it is enabled, you will see the following screen.

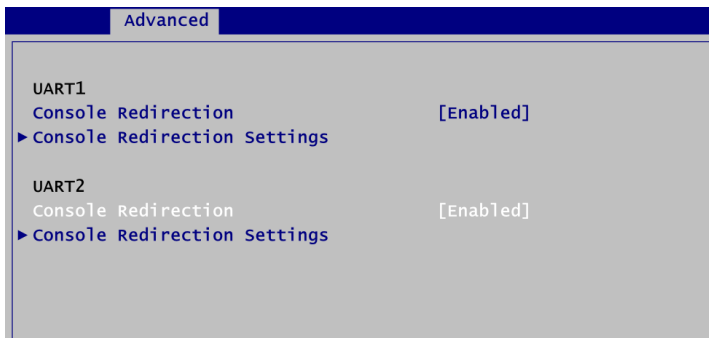


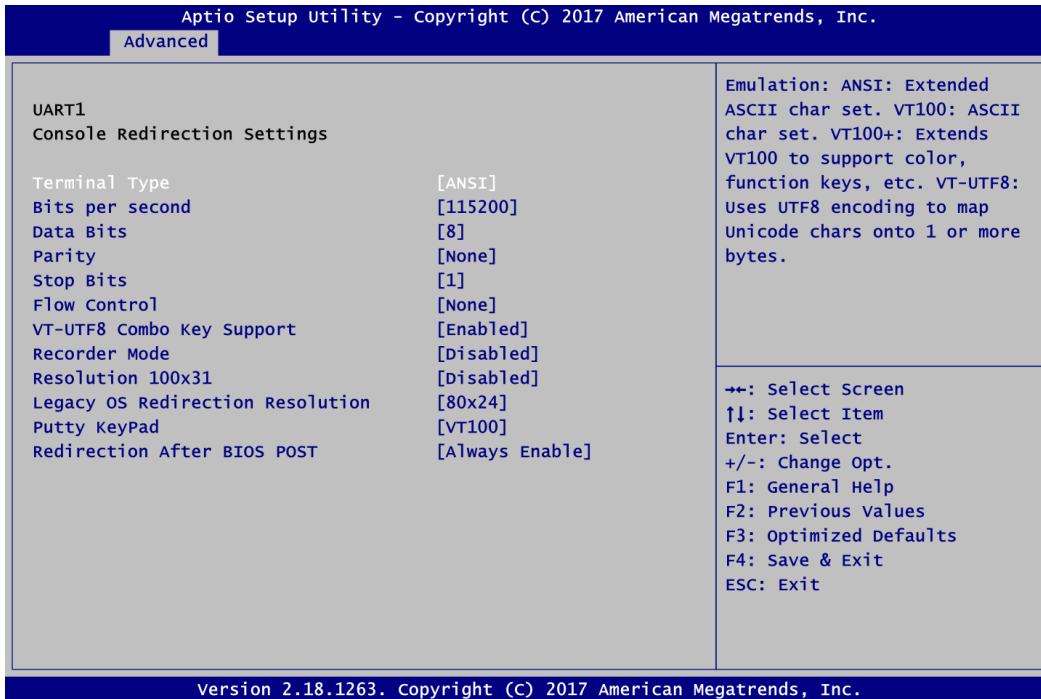

UART1/UART2 Console Redirection Settings

When enabled, the settings specify how the host computer and the remote computer (which the user is using) will exchange data. Both computers should have the same or compatible settings.

- **Utility Configuration**

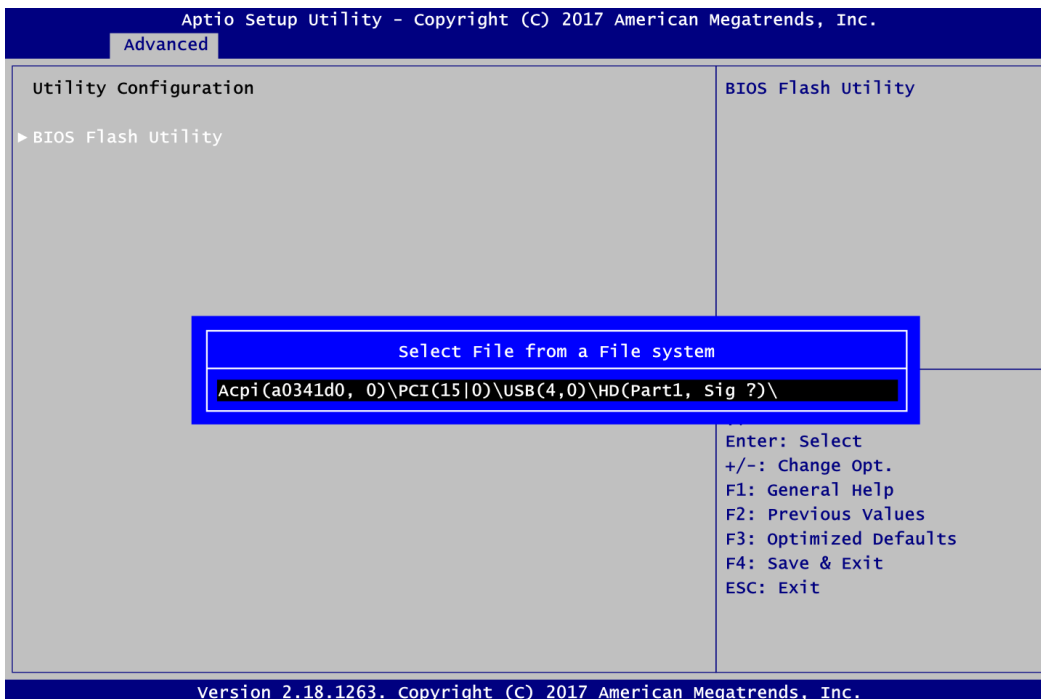


BIOS Flash Utility

BIOS flash utility configuration. For more detailed information, please refer to Appendix B.

- **Device Configuration**

A description of selected item appears on the right side of the screen. For items marked with “▶”, please press <Enter> for more options.

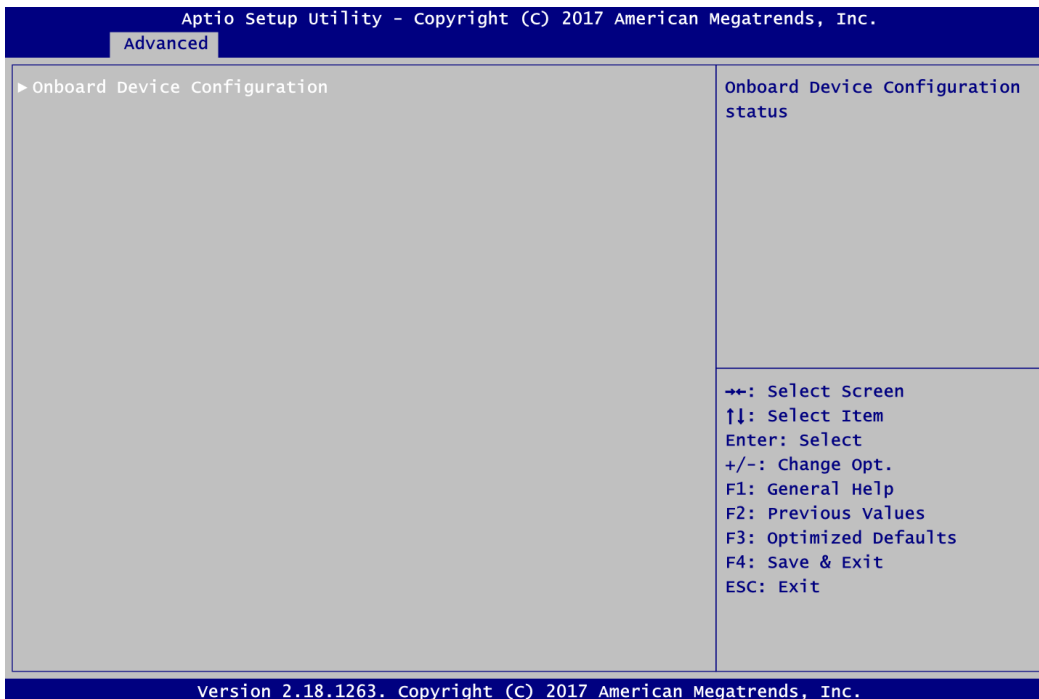



- **Onboard Device Configuration**

Use this option to configure onboard device (e.g., Digital I/O setting).

- **Onboard DIO Configuration**

You can use this screen to select options for Digital I/O (DIO) Configuration.

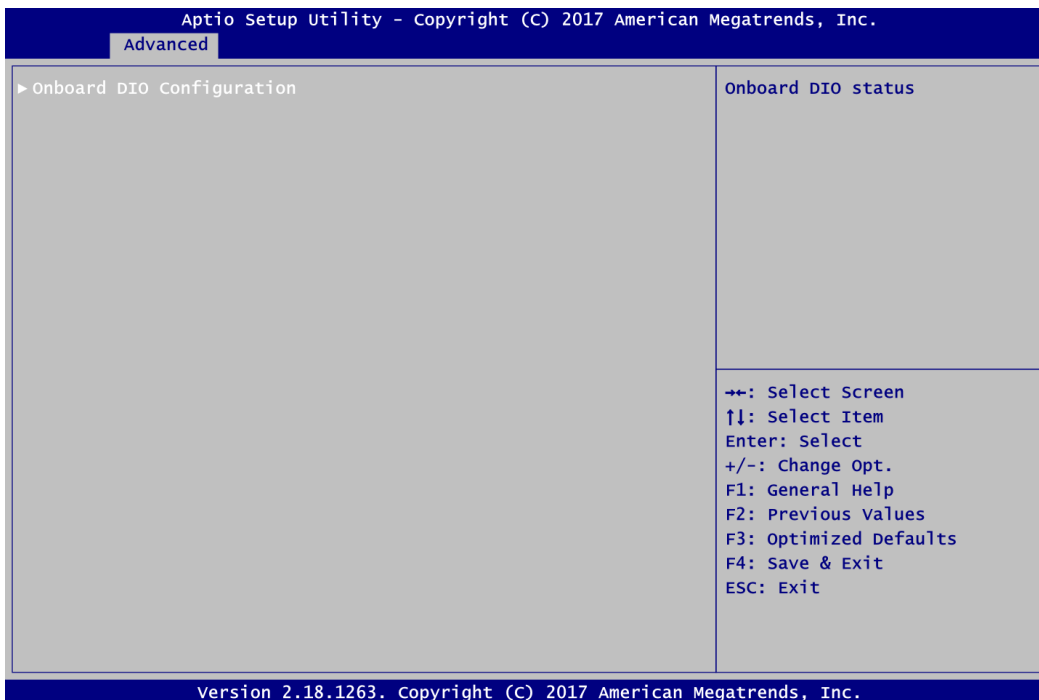

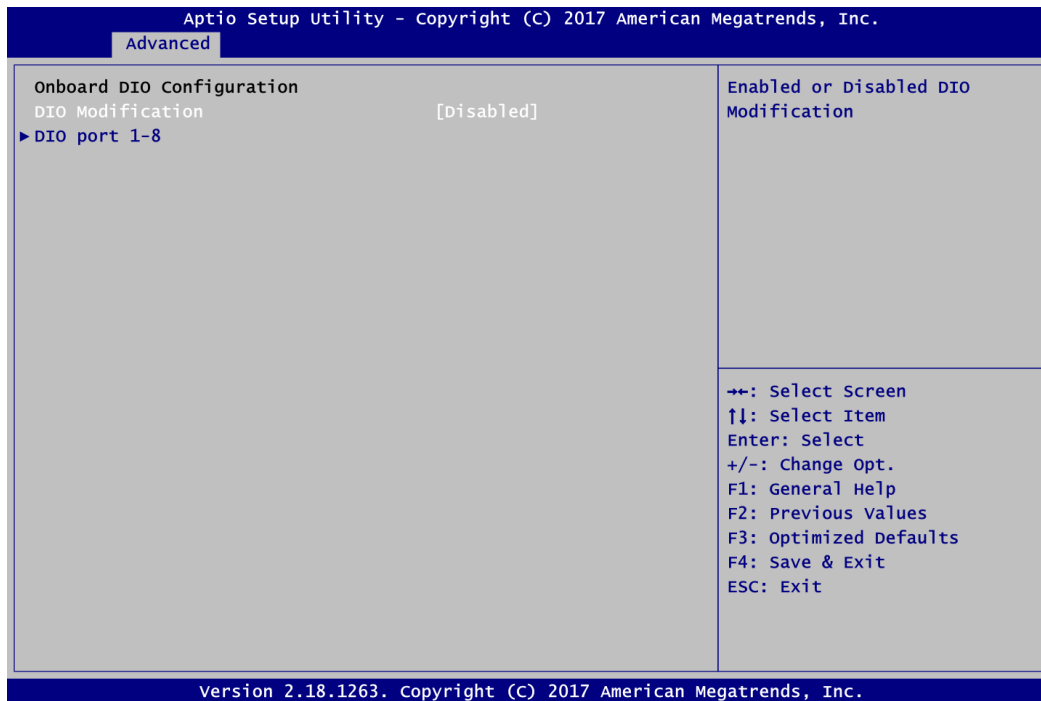

DIO Modification

Enable or disable digital I/O modification. The default is Disabled.

DIO port 1-8

Select this option to open DIO status sub screen.

If DIO Modification is disabled, you are not allowed to change inputs/outputs setting. The DIO status sub screen is as follows:

Advanced	
DIO Status	
1. Input/Output Status	In & High
2. Input/Output Status	In & High
3. Input/Output Status	In & High
4. Input/Output Status	In & High
5. Input/Output Status	Out & Low
6. Input/Output Status	Out & Low
7. Input/Output Status	Out & Low
8. Input/Output Status	Out & Low

After enabling, you can load manufacture default and access to the DIO status sub screen to change inputs/outputs setting, see images below.

Advanced	
Onboard DIO Configuration	
DIO Modification	[Enabled]
▶ Load Manufacture Default	
▶ DIO port 1-8	


Advanced	
DIO Status	
1. Input/Output Status	In & High
Input/Output Setting	[Input]
2. Input/Output Status	In & High
Input/Output Setting	[Input]
3. Input/Output Status	In & High
Input/Output Setting	[Input]
4. Input/Output Status	In & High
Input/Output Setting	[Input]
5. Input/Output Status	Out & Low
Input/Output Setting	[Output]
High/Low Setting	[Low]
6. Input/Output Status	Out & Low
Input/Output Setting	[Output]
High/Low Setting	[Low]
7. Input/Output Status	Out & Low
Input/Output Setting	[Output]
High/Low Setting	[Low]
8. Input/Output Status	Out & Low
Input/Output Setting	[Output]
High/Low Setting	[Low]

4.5 Chipset Menu

The Chipset menu allows users to change the advanced chipset settings. You can select any of the items in the left frame of the screen to go to the sub menus:


- ▶ System Agent (SA) Configuration
- ▶ PCH-IO Configuration

For items marked with “▶”, please press <Enter> for more options.

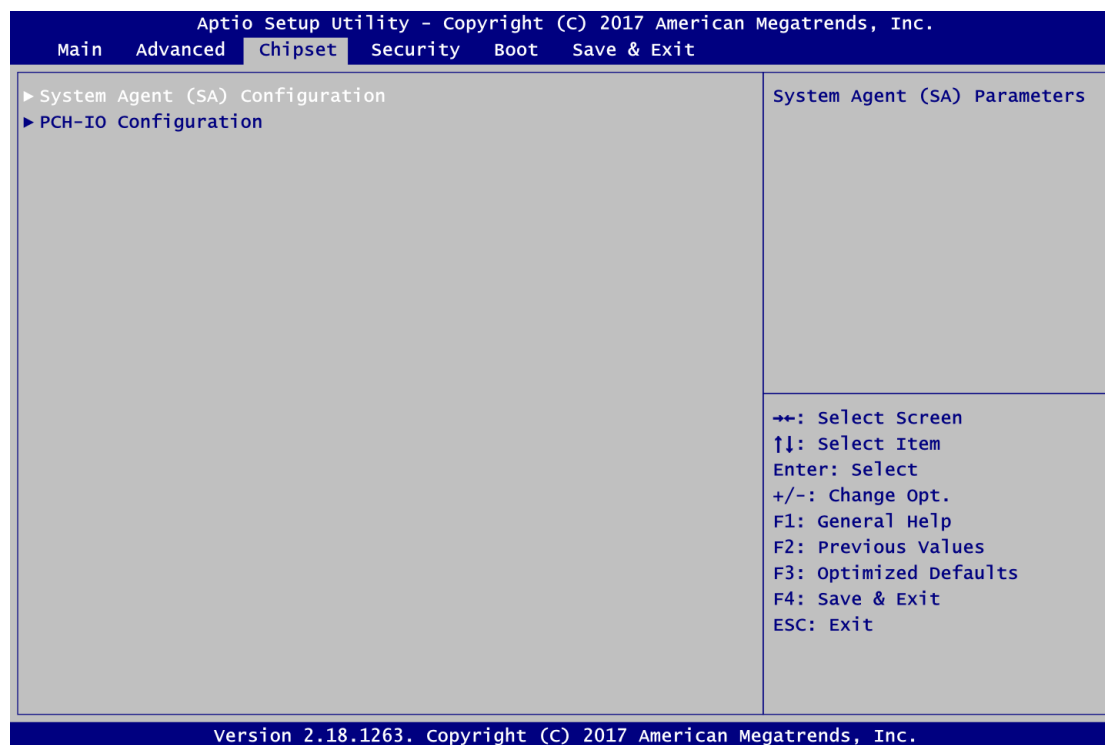

- **System Agent (SA) Configuration**

This screen allows users to configure System Agent (SA) parameters. For items marked with “▶”, please press <Enter> for more options.

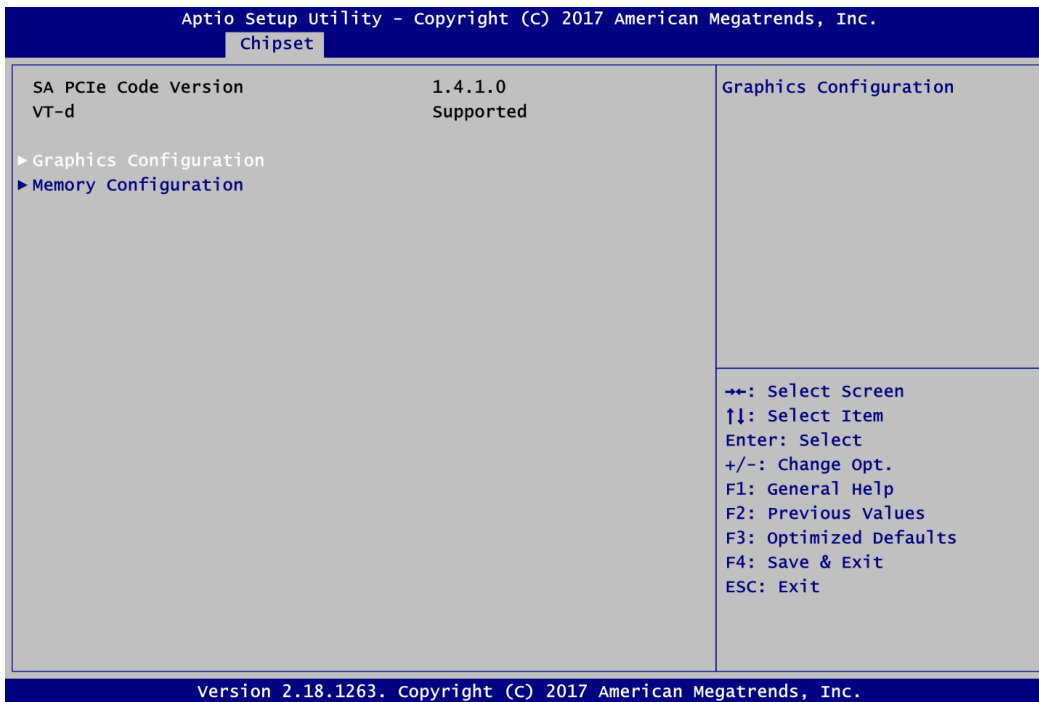
**Graphics Configuration**

Open sub menu for parameters related to graphics configuration.

Memory Configuration

Open sub menu for information related to system memory.

- **Graphics Configuration**

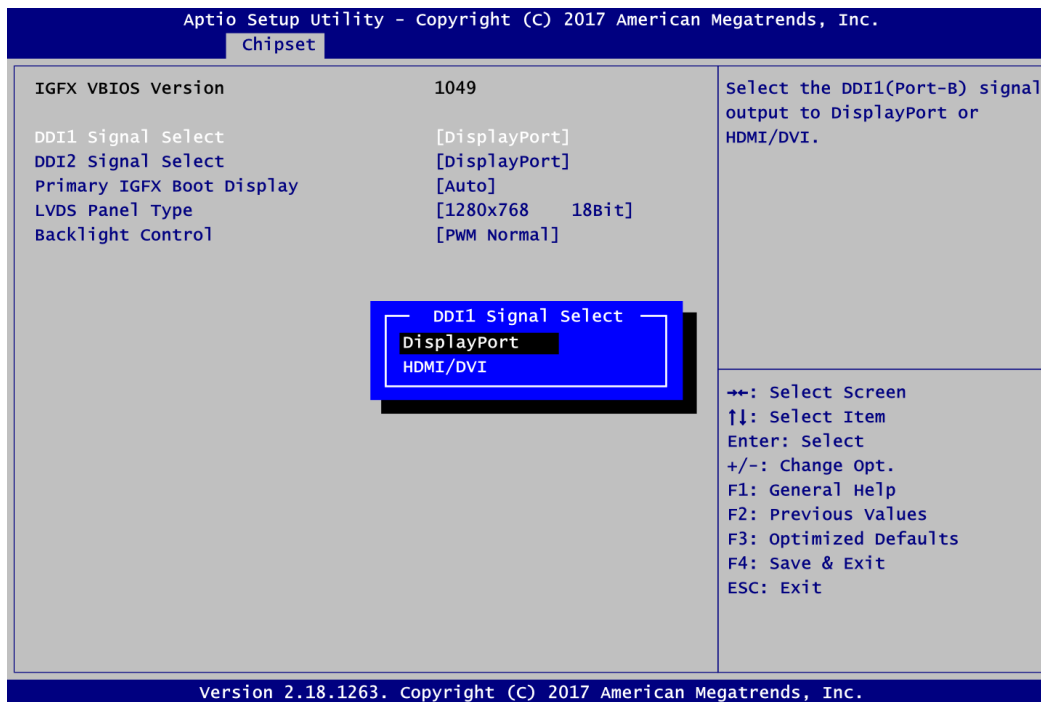


DDI1 Signal Select

Select the DDI1 signal output to DisplayPort or HDMI/DVI.


DDI2 Signal Select


Select the DDI2 signal output to DisplayPort or HDMI/DVI.

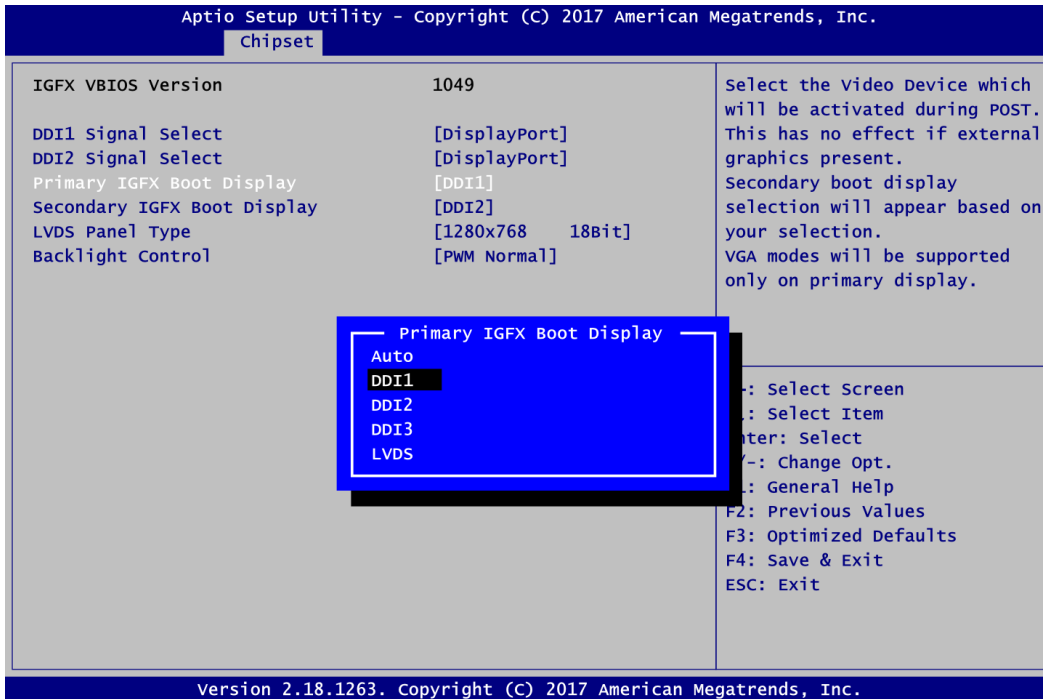


Primary IGFX Boot Display

Select the video device which will be activated during POST (Power-On Self Test). The default is Auto. The Secondary IGFX Boot Display selection appears only if you set this option to DDI1, DDI2, DDI3 or LVDS, see image below.

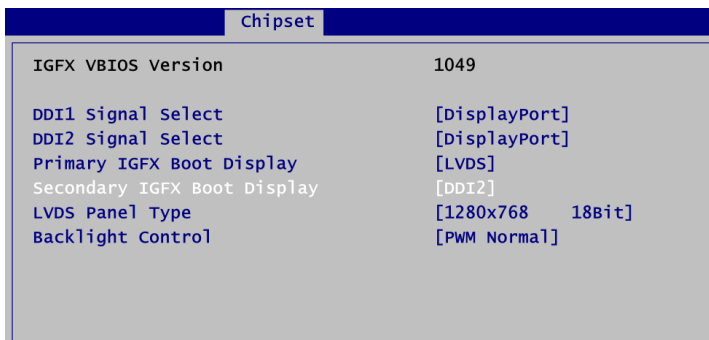


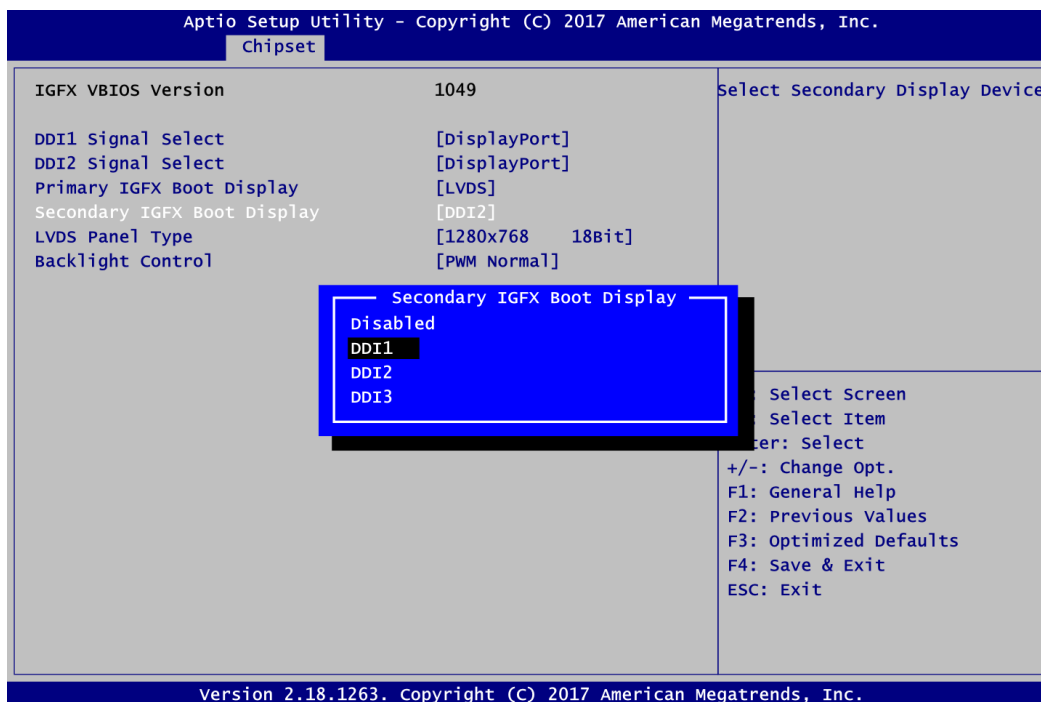

Secondary IGFX Boot Display
Select secondary IGFX boot display.

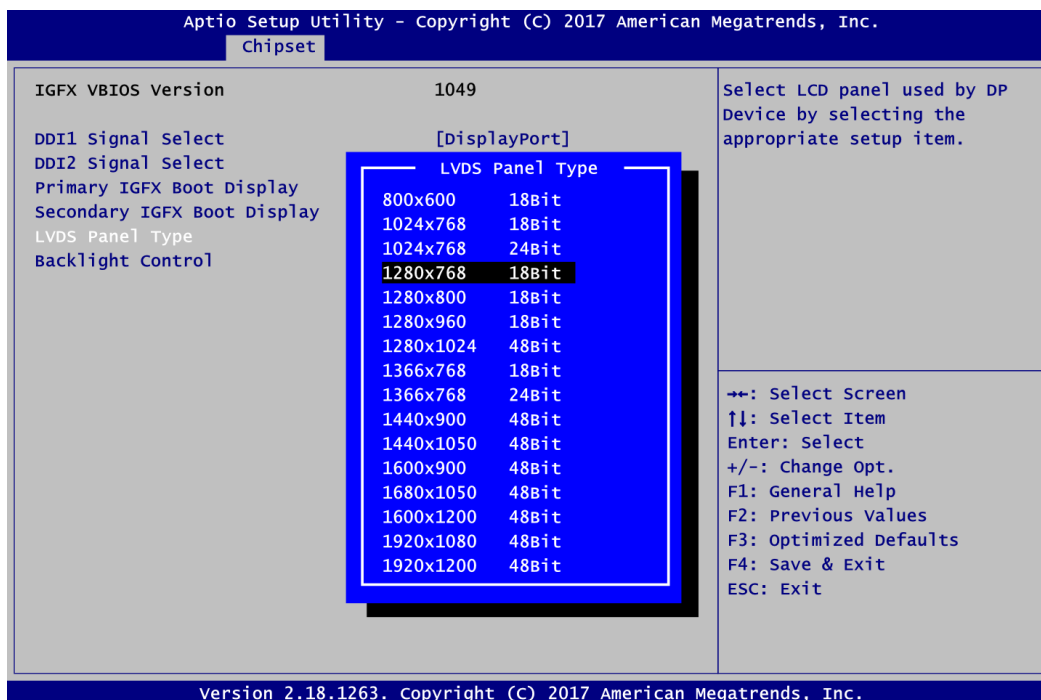

LVDS Panel Type
Select LVDS panel resolution.

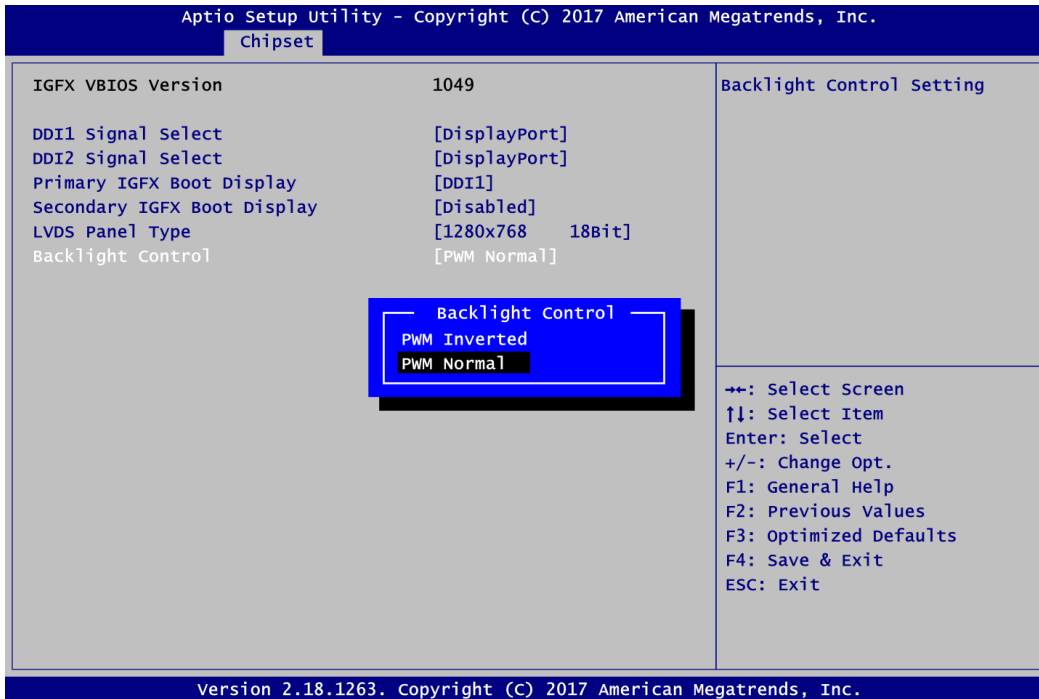


Backlight Control

This item is for backlight control setting. Selection options are PWM Inverted and PWM Normal.


- **Memory Configuration**

This screen shows the system memory information.

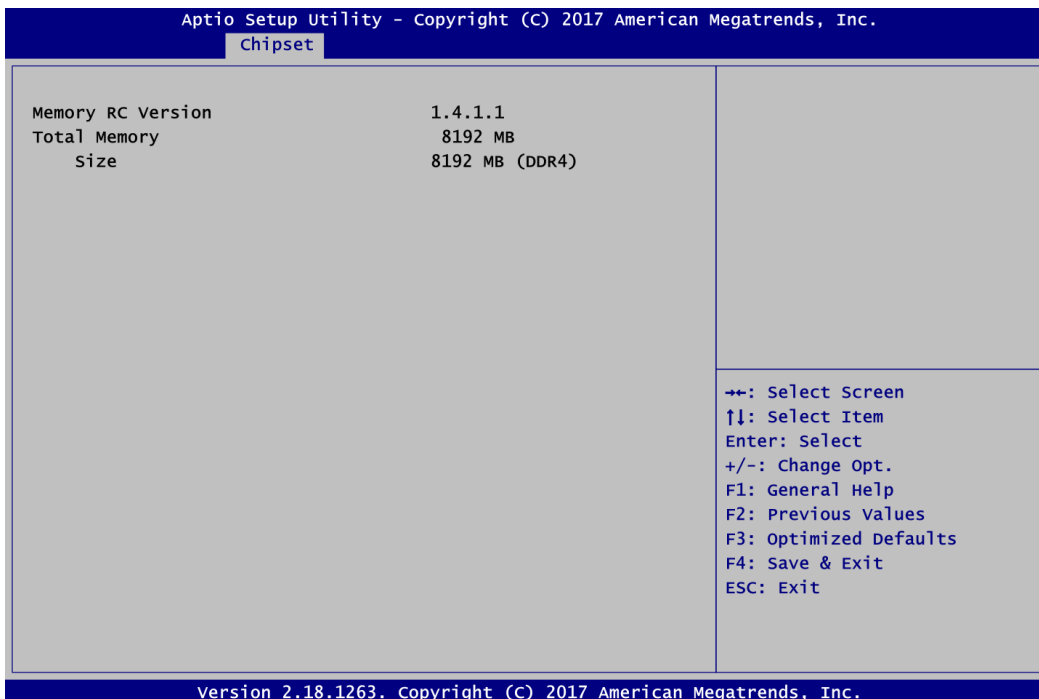

4.6 Security Menu


The Security menu allows users to change the security settings for the system.

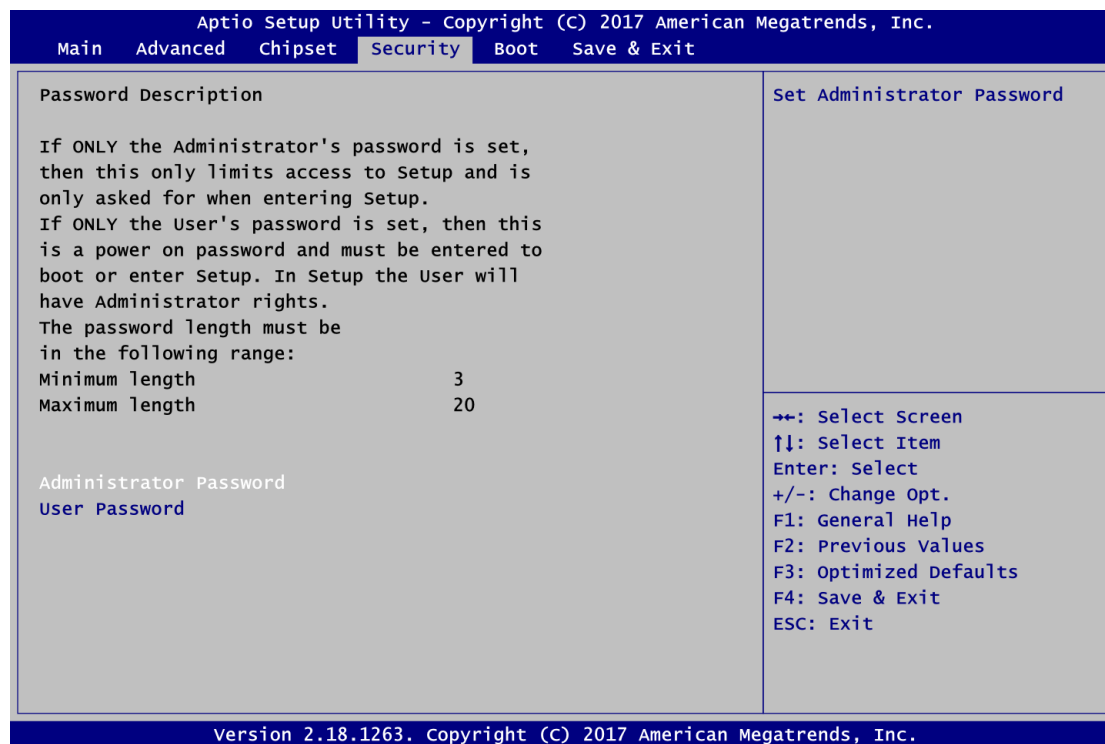


- **Administrator Password**
This item indicates whether an administrator password has been set (installed or uninstalled).
- **User Password**
This item indicates whether a user password has been set (installed or uninstalled).

4.7 Boot Menu


The Boot menu allows users to change boot options of the system.

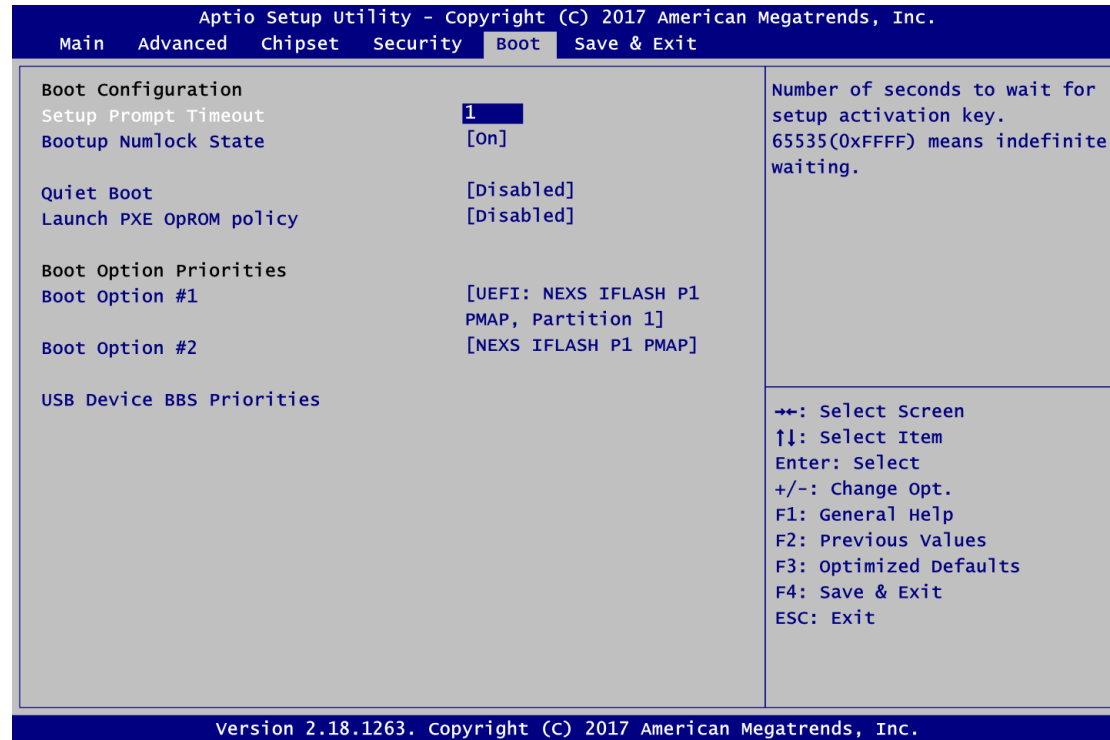

- Setup Prompt Timeout**
 Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting.
- Bootup NumLock State**
 Use this item to select the power-on state for the keyboard NumLock.

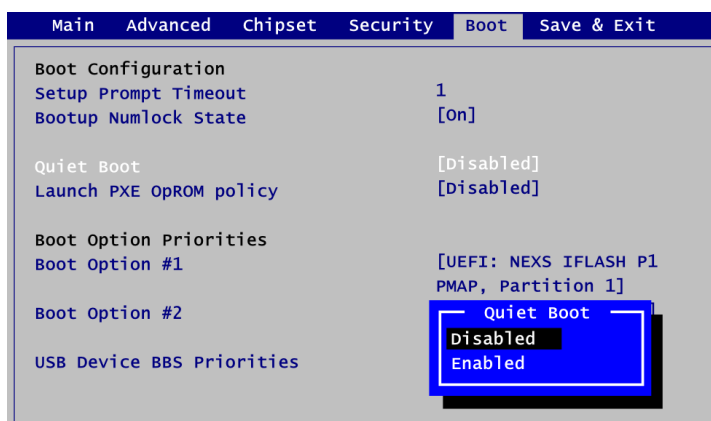


- Quiet Boot**
 Select to display either POST output messages or a splash screen during boot-up.

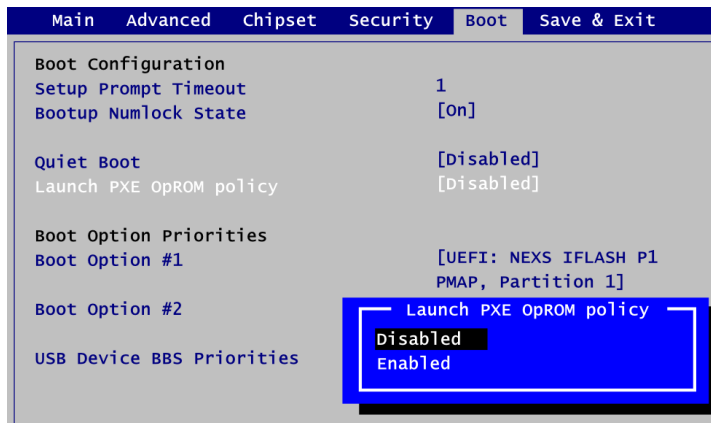

- **Launch PXE OpROM policy**
Use this item to enable or disable the boot ROM function of the onboard LAN chip when the system boots up.
- **Boot Option Priorities [Boot Option #1,]**
These are settings for boot priority. Specify the boot device priority sequence from the available devices.
- **USB Device BBS Priorities**
These are settings for configuring the order for a specific device group. These options are only visible if at least one device for this group is present.

4.8 Save & Exit Menu

The Save & Exit menu allows users to load your system configuration with optimal or fail-safe default values.

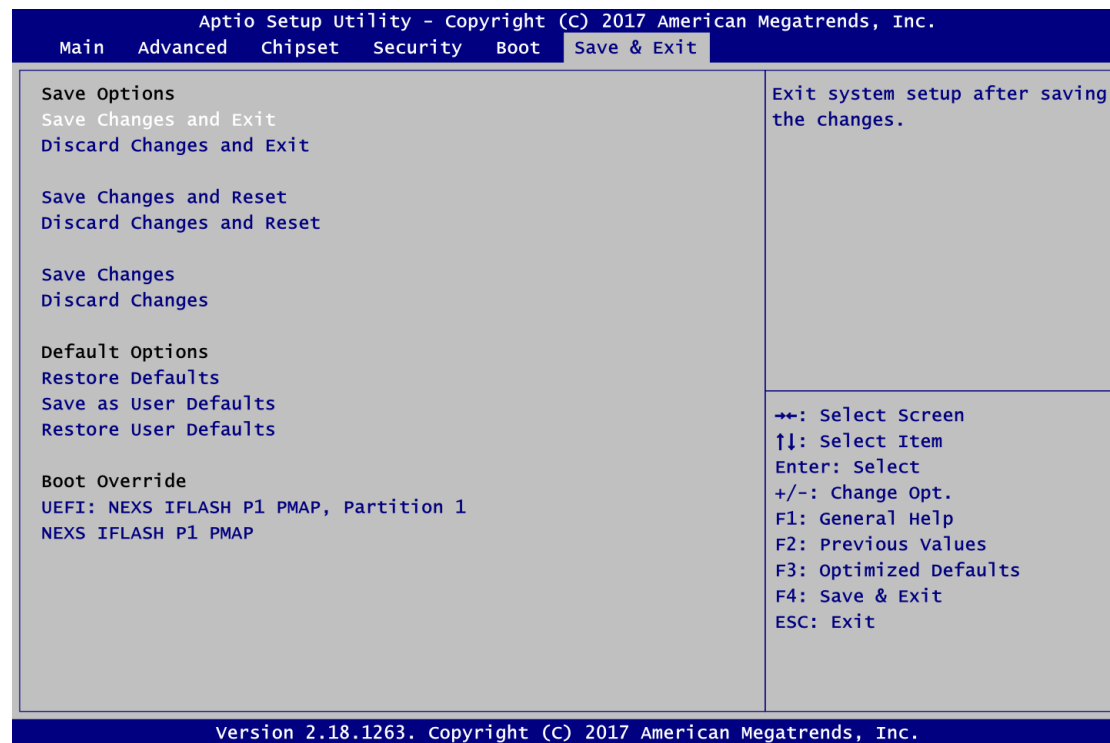

- Save Changes and Exit**
 When you have completed the system configuration changes, select this option to leave Setup and return to Main Menu. Select Save Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to save changes and exit.
- Discard Changes and Exit**
 Select this option to quit Setup without making any permanent changes to the system configuration and return to Main Menu. Select Discard Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to discard changes and exit.
- Save Changes and Reset**
 When you have completed the system configuration changes, select this option to leave Setup and reboot the computer so the new system configuration parameters can take effect. Select Save Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to save changes and reset.
- Discard Changes and Reset**
 Select this option to quit Setup without making any permanent changes to the system configuration and reboot the computer. Select Discard Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to discard changes and reset.
- Save Changes**
 When you have completed the system configuration changes, select this option to save changes. Select Save Changes from the Save & Exit menu and press <Enter>. Select Yes to save changes.

- **Discard Changes**
Select this option to quit Setup without making any permanent changes to the system configuration. Select Discard Changes from the Save & Exit menu and press <Enter>. Select Yes to discard changes.
- **Restore Defaults**
It automatically sets all Setup options to a complete set of default settings when you select this option. Select Restore Defaults from the Save & Exit menu and press <Enter>.
- **Save as User Defaults**
Select this option to save system configuration changes done so far as User Defaults. Select Save as User Defaults from the Save & Exit menu and press <Enter>.
- **Restore User Defaults**
It automatically sets all Setup options to a complete set of User Defaults when you select this option. Select Restore User Defaults from the Save & Exit menu and press <Enter>.
- **Boot Override**
Select a drive to immediately boot that device regardless of the current boot order.

Appendix A

Watchdog Timer and GPIO

A.1 About Watchdog Timer

After the system stops working for a while, it can be auto-reset by the watchdog timer. The integrated watchdog timer can be set up in the system reset mode by program.

Assembly sample code :

```

mov     dx,fa10           ; 5 seconds (Maximum is 65535 seconds; fill in
                        ; 0xFA10 and 0xFA11 register, ex: 0xFA11=0x01,
                        ; 0xFA10=0x68 means 360 seconds)

mov     al,05
out     dx,al

mov     dx,fa12           ; Enable WDT
mov     al,01
out     dx,al

```

A.2 About GPIO

The onboard GPIO or digital I/O has 8 bits (DIO0~7). Each bit can be set to function as input or output by software programming. In default, all pins are pulled high with +3.3V level (according to main power). The BIOS default settings are 4 inputs and 4 outputs where all of these pins are set to 1.

Assembly sample code :

```

mov     dx,fa18           ; Set DIO 0-7 to Output
mov     al,00
out     dx,al

mov     dx,fa19           ; Set DIO 4-7 to High
mov     al,f0
out     dx,al

mov     dx,fa18           ; Set DIO 0-7 to Input
mov     al,ff
out     dx,al

mov     dx,fa19           ; Get DIO 0-7 status
in      al,dx

mov     dx,fa18           ; Set DIO 0-4 to Input, 5-7 to Output
mov     al,1f             ; al = 1F => 00011111
out     dx,al

mov     dx,fa19           ; Set DIO 6 to High
mov     al,40             ; al = 40 => 01000000
out     dx,al

in      al,dx             ; Get DIO 0-7 status

```


This page is intentionally left blank.

Appendix B

BIOS Flash Utility

The BIOS Flash utility is a new helpful function in BIOS setup program. With this function you can easily update system BIOS without having to enter operating system. In this appendix you may learn how to do it in just a few steps. Please read and follow the instructions below carefully.

1. In your USB flash drive, create a new folder and name it “Axiomtek”, see figure below.

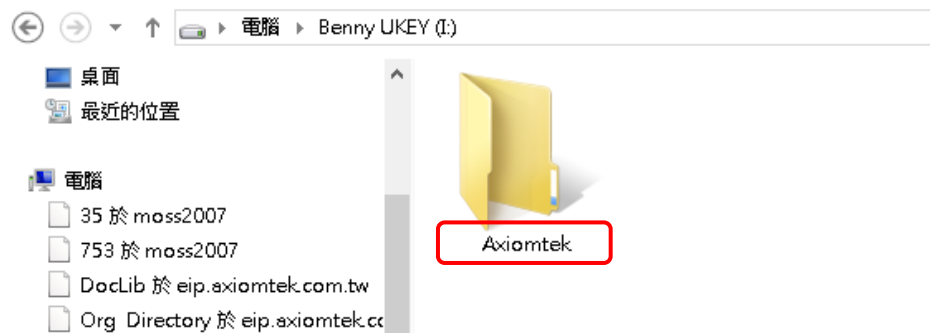


2. Copy BIOS ROM file (e.g. CEM510X.005) to “Axiomtek” folder.




3. Insert the USB flash drive to your system.
4. Enter BIOS setup menu and go to Advanced\Utility Configuration. Select BIOS Flash Utility and press <Enter>.




5. BIOS automatically detect all USB drive(s) attached to the system. In this example only one USB drive is attached to the system. That's why, you can see only one device is displayed in figure below.

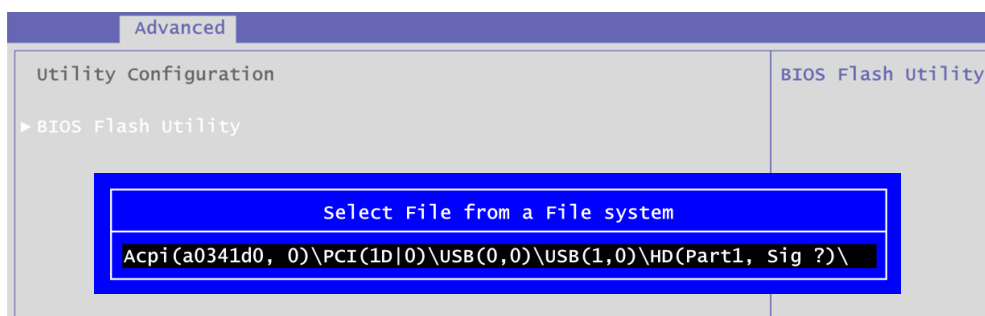


6. Select the USB drive containing BIOS ROM file you want to update using the <↑> or <↓> key. Then press <Enter> to get into "Axiomtek" folder.

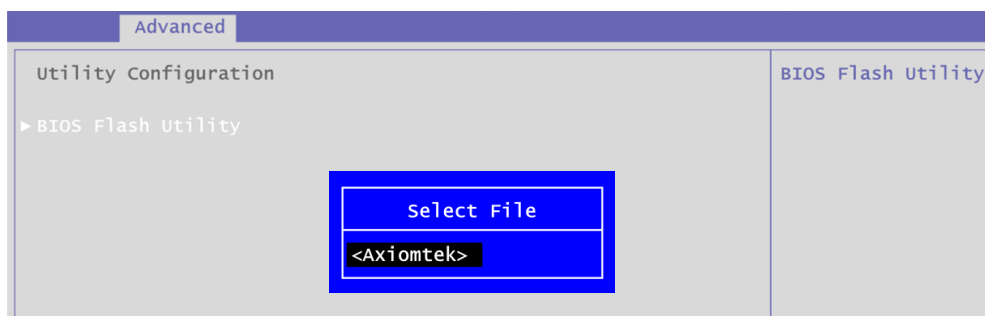




7. Now you can see the BIOS ROM file on the screen, press <Enter> to select.

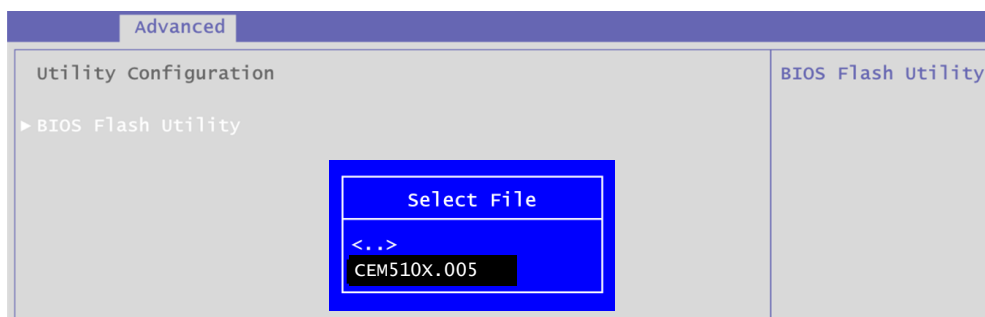


8. Select Start to flash system BIOS option to begin updating procedure.

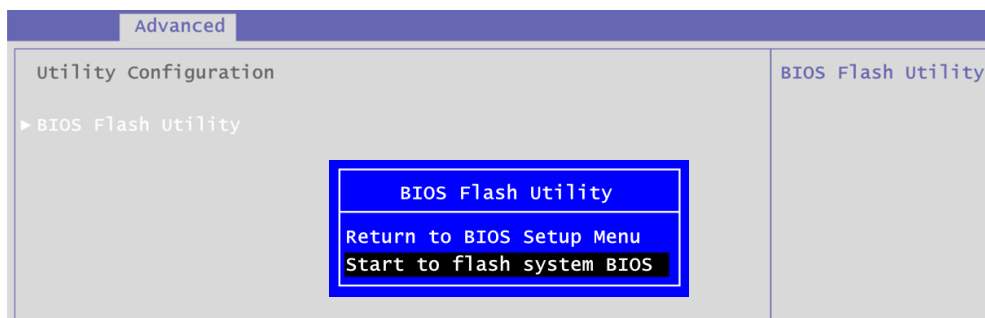

- Please wait while BIOS completes the entire flash update process: erase data, write new data and verify data.

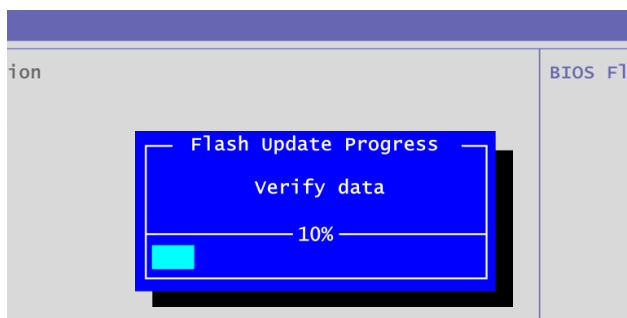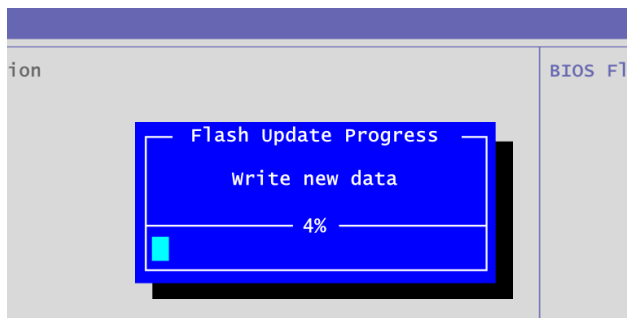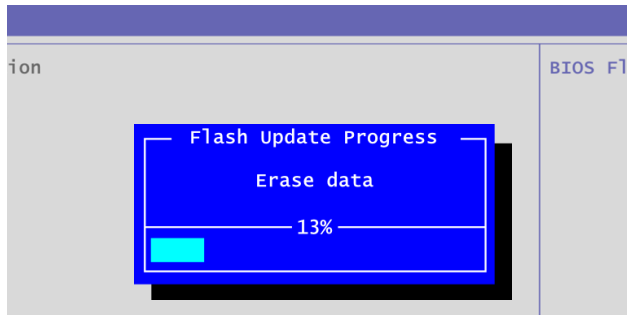

- When you see the following figure, press <Enter> to finish the update process. After that the system will shut down and restart immediately.

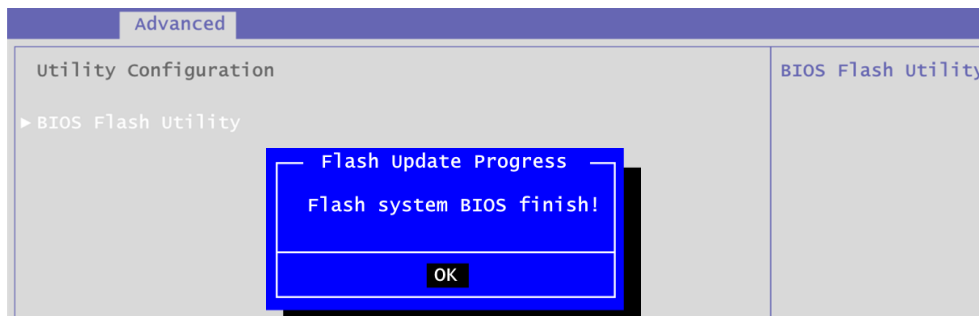

This page is intentionally left blank.

Appendix C

iAMT Settings

The Intel® Active Management Technology (Intel® iAMT) has decreased a major barrier to IT efficiency that uses built-in platform capabilities and popular third-party management and security applications to allow IT a better discovering, healing, and protection their networked computing assets.

In order to utilize Intel® iAMT you must enter the ME BIOS (<Ctrl + P> during system startup), change the ME BIOS password, and then select “Intel® iAMT” as the manageability feature.

C.1 Entering MEBx

1. Go to BIOS to enable iAMT function (see section 4.4).
2. Exit from BIOS after starting iAMT, and press <Ctrl + P> to enter MEBx Setting.




Note


It is better to press <Ctrl + P> before the screen popping out.

C.2 Set and Change Password

1. You will be asked to set a password when first log in. The default password is “admin”.

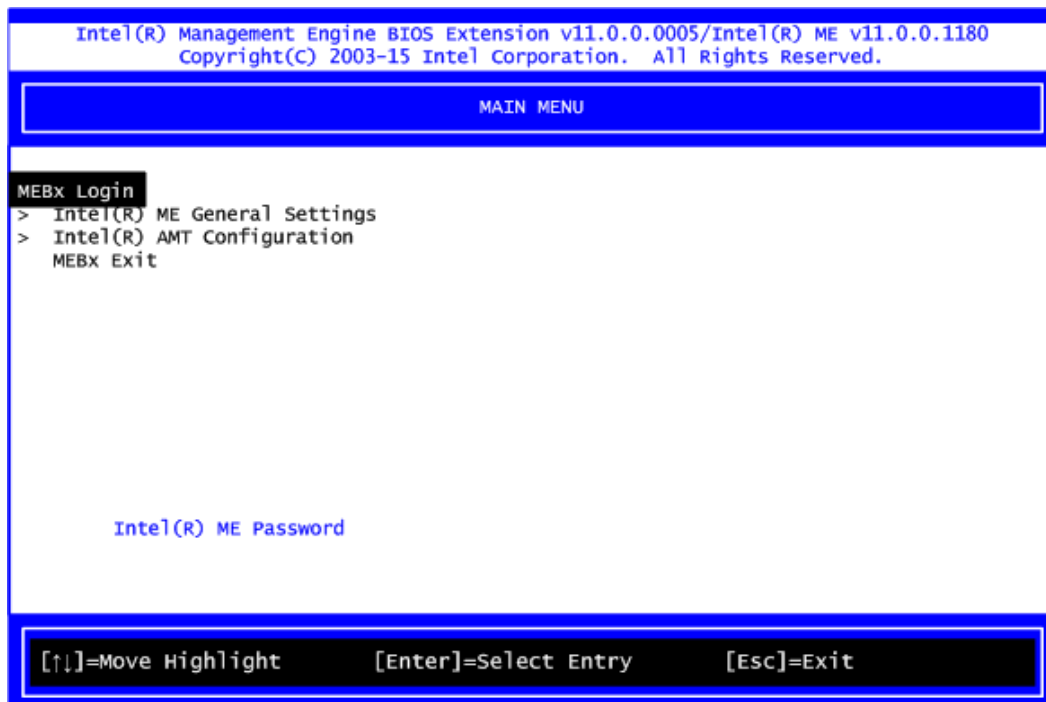

2. You will be asked to change the password before setting ME.

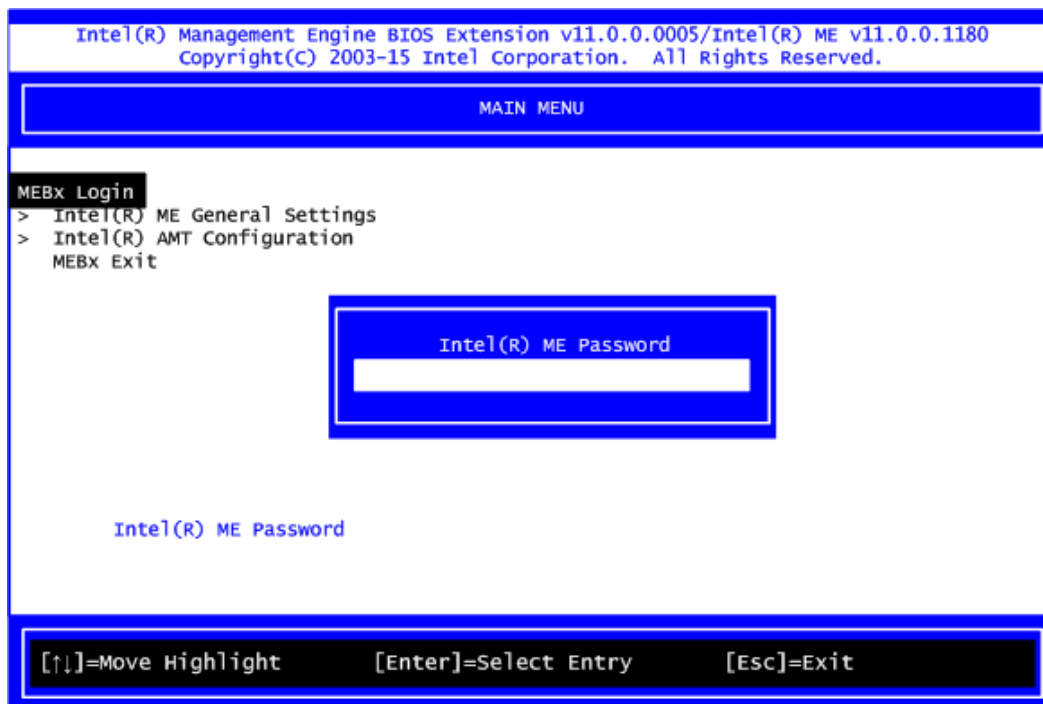


3. You must confirm your new password while revising. The new password must contain:
(example: **!!11qqQQ**) (default value).

- Eight characters
- One upper case
- One lower case
- One number
- One special symbol, such as ! , \$ or ; , (, " , , excepted)

Underline (_) and space are valid characters for password, but they won't make higher complexity.


- From Main Menu, select ME General Settings to get into ME Platform Configuration screen. In this screen you can modify Local FW Update setting.

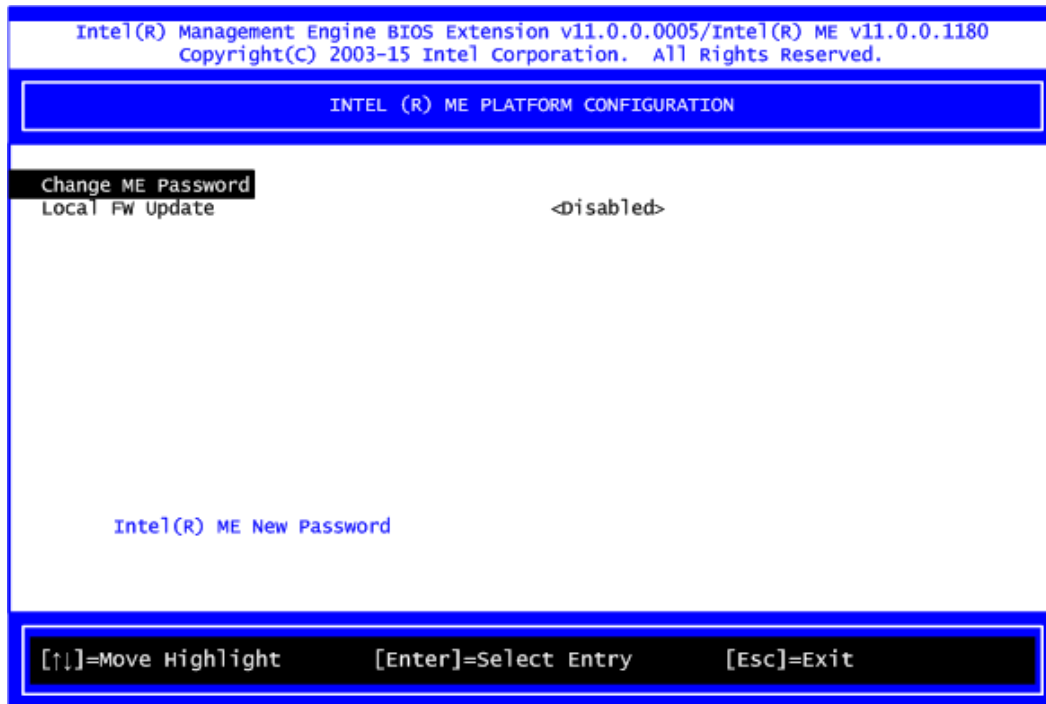


- Return to Main Menu.

C.3 iAMT Settings

Select Intel® AMT configuration and press <Enter>.

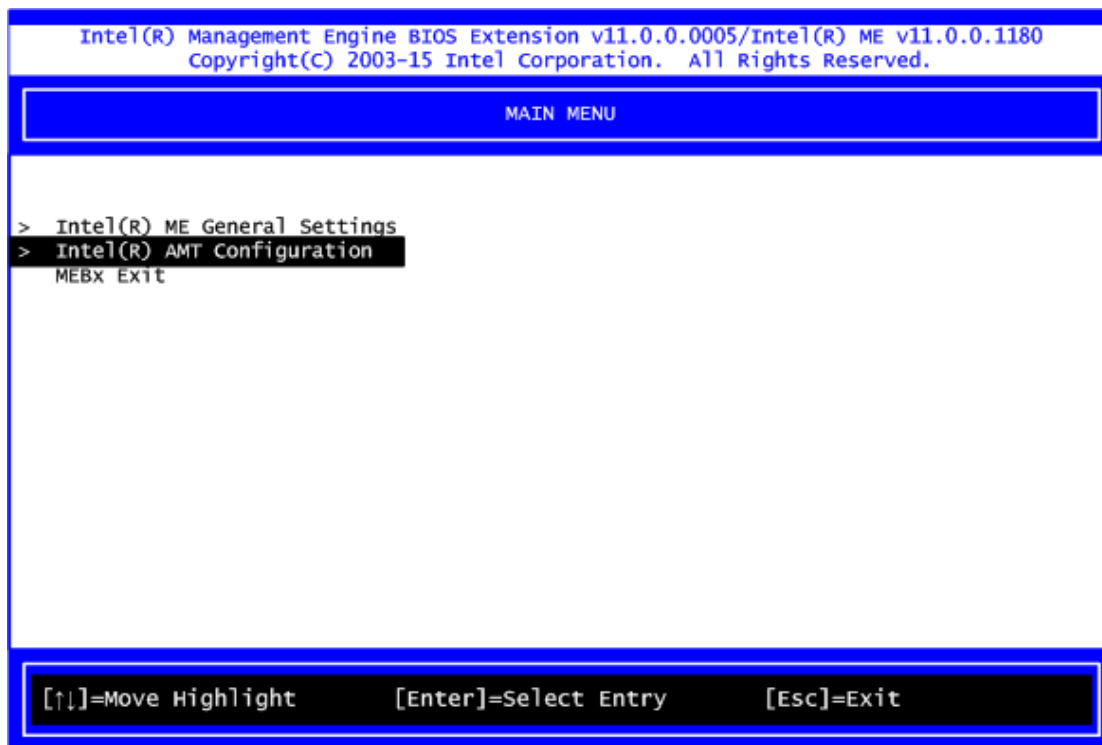


From AMT Configuration menu, select Manageability Feature Selection and set it to Enabled. This item allows you to enable or disable Intel® AMT feature.

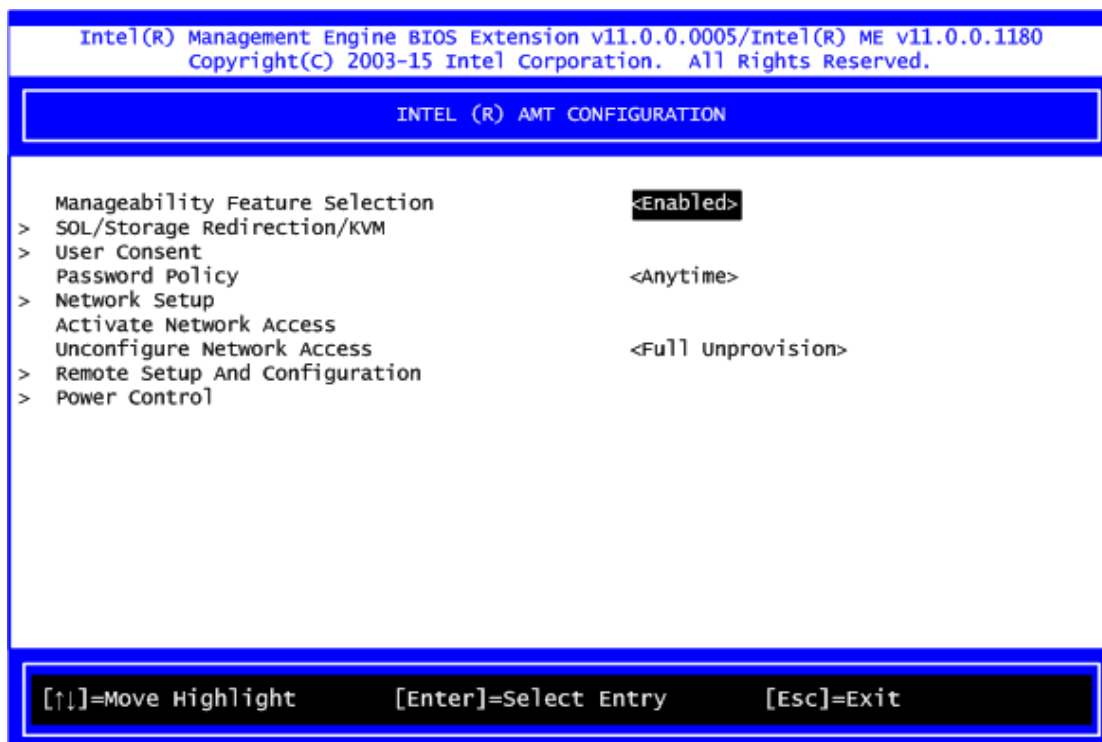



- **Network Setup**

1. Select Network Setup to configure iAMT.

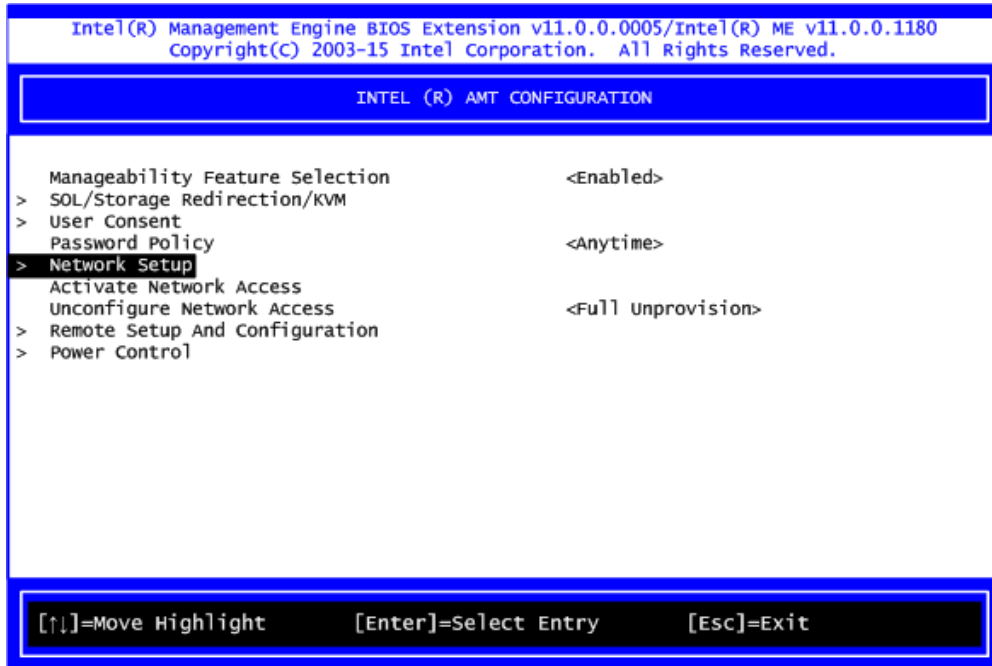




2. Select ME Network Name Settings to set computer host and domain name.

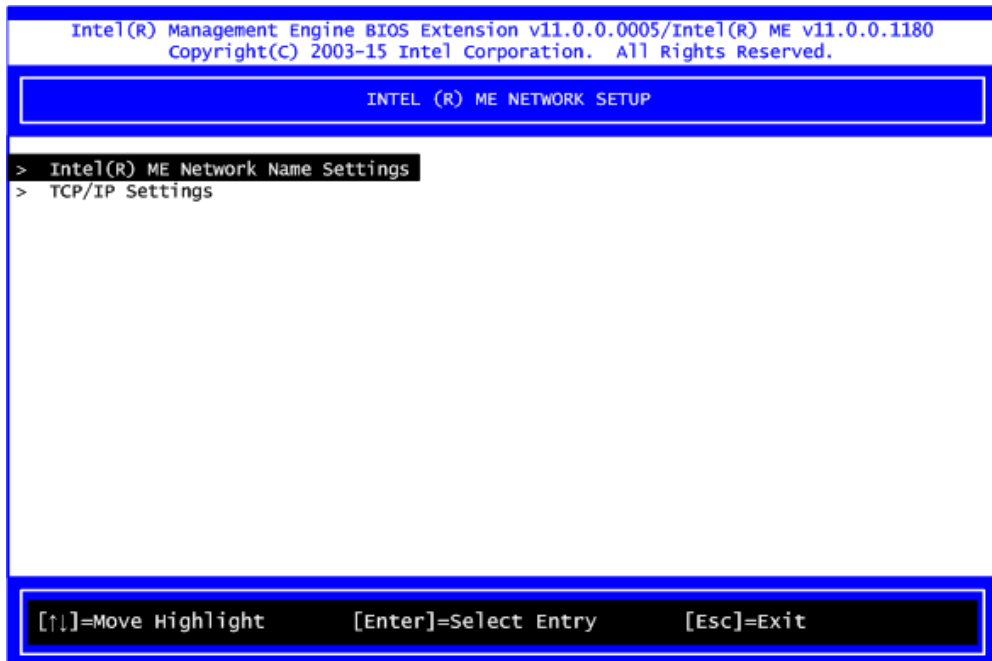

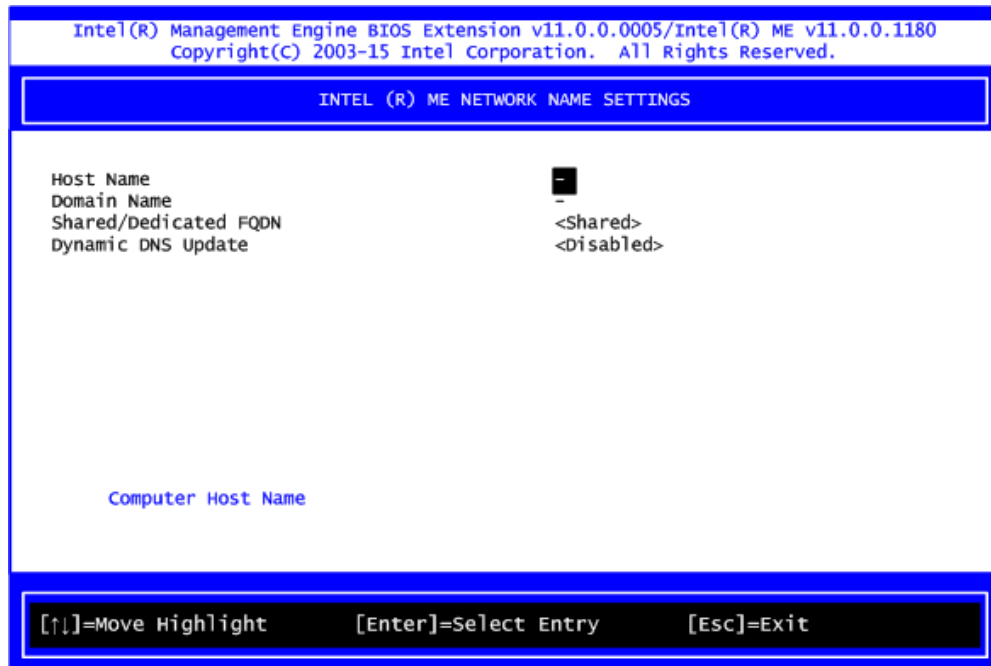


3. Select TCP/IP to get into Network interface and set it to Enabled. Get into DHCP Mode and set it to Disabled.

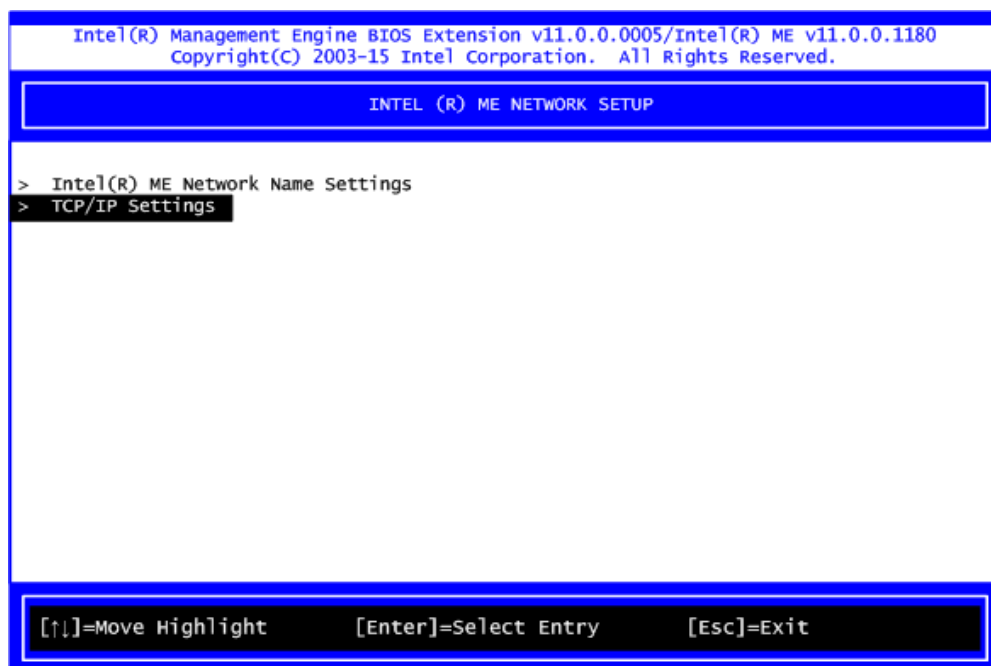

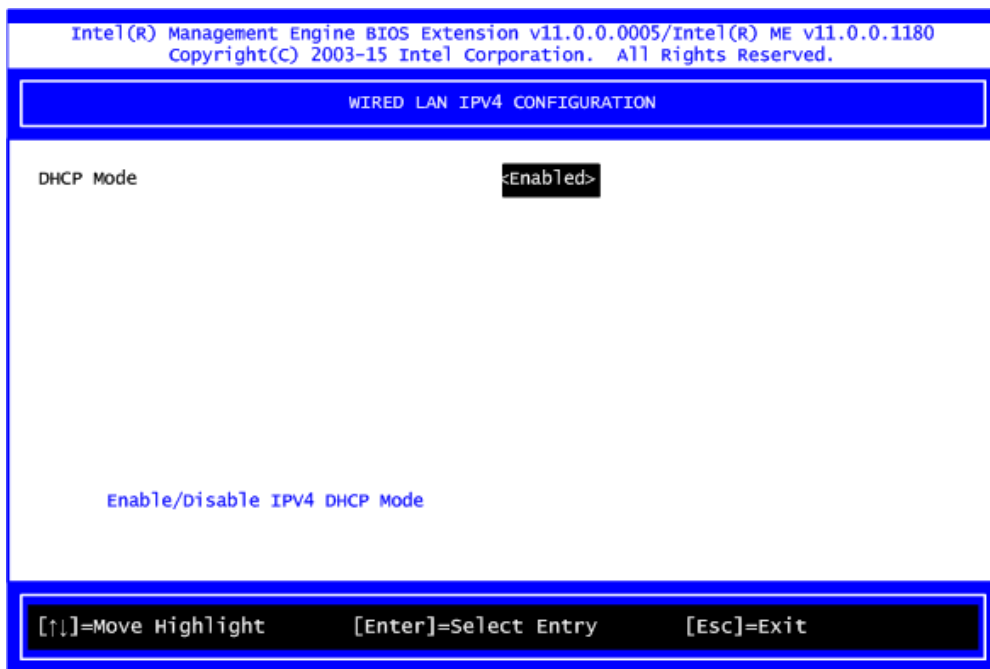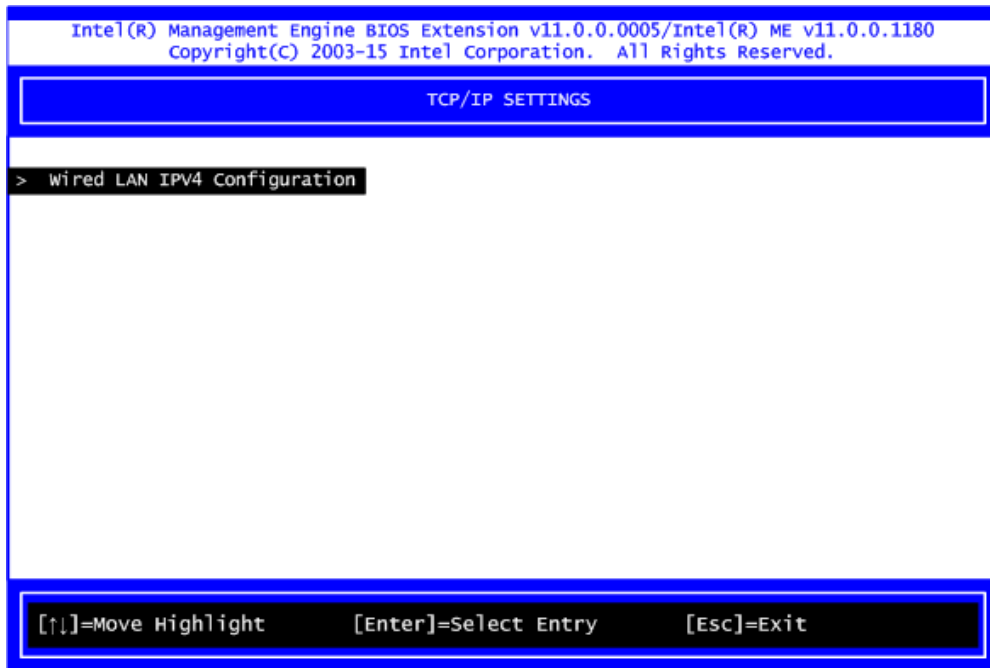


4. If DHCP Mode is disabled, set the following settings:

- IP address
- Subnet mask

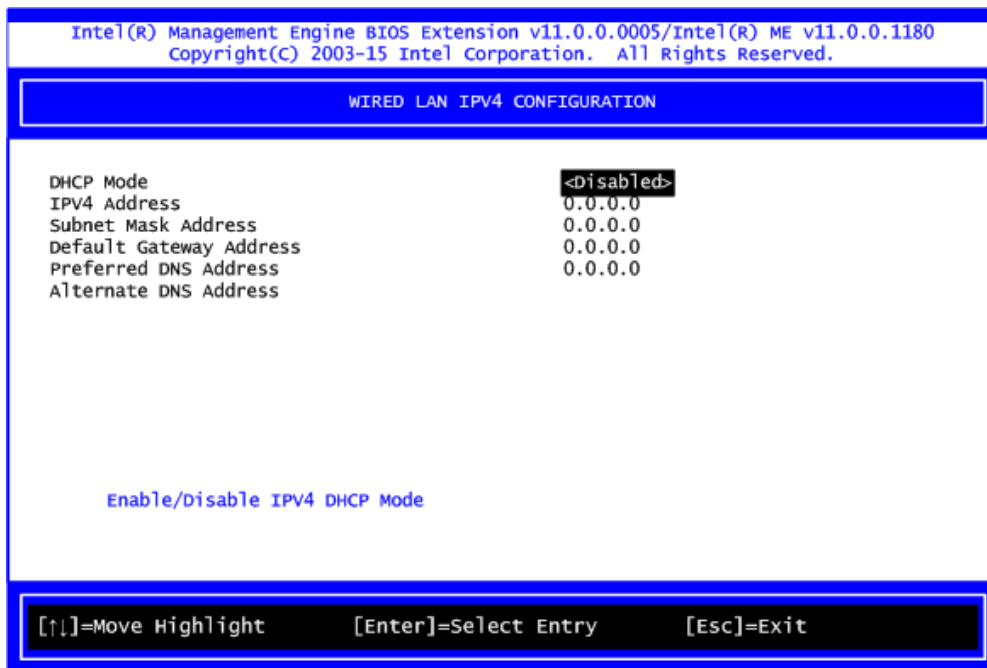

5. Go back to Intel® iAMT Configuration, then select Activate Network Access and press <Enter>.

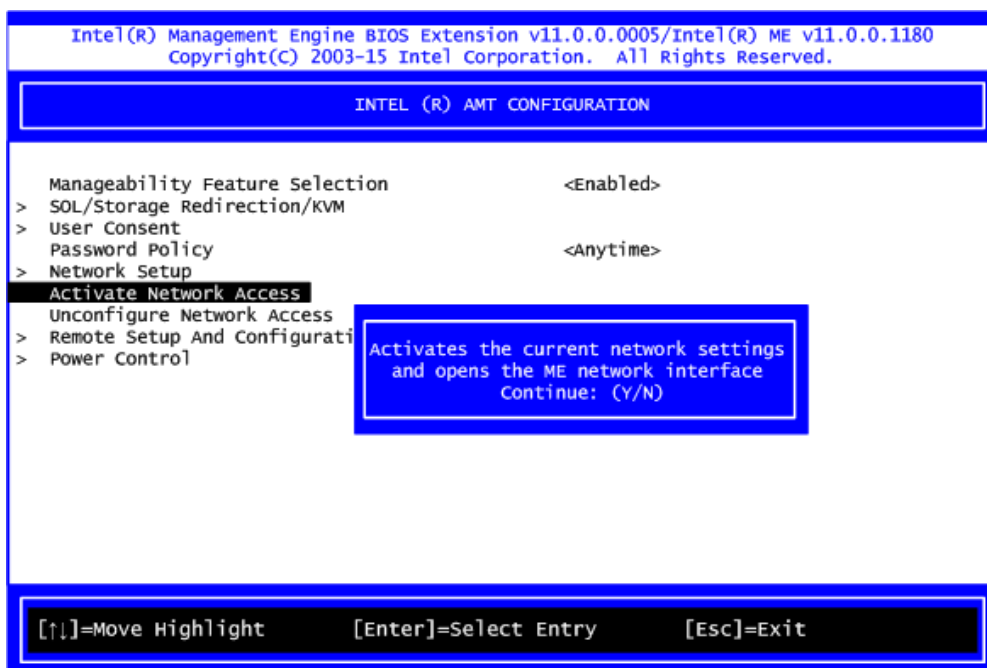


6. Exit from MEBx after completing the iAMT settings.

C.4 iAMT Web Console

1. From a web browser, please type [http://\(IP ADDRESS\):16992](http://(IP ADDRESS):16992), which connects to iAMT Web.

Example: <http://10.1.40.214:16992>

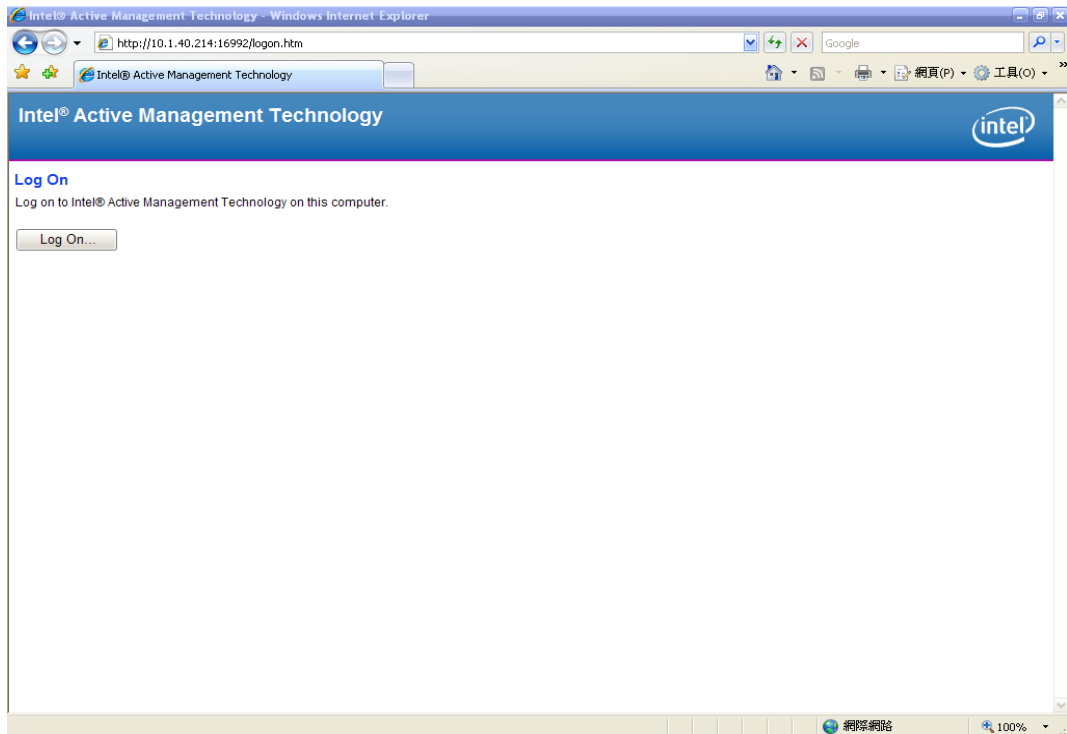


2. To log on, you will be required to type in username and password for access to the Web.


USER: admin (default value)

PASS: (MEBx password)

3. Enter the iAMT Web.

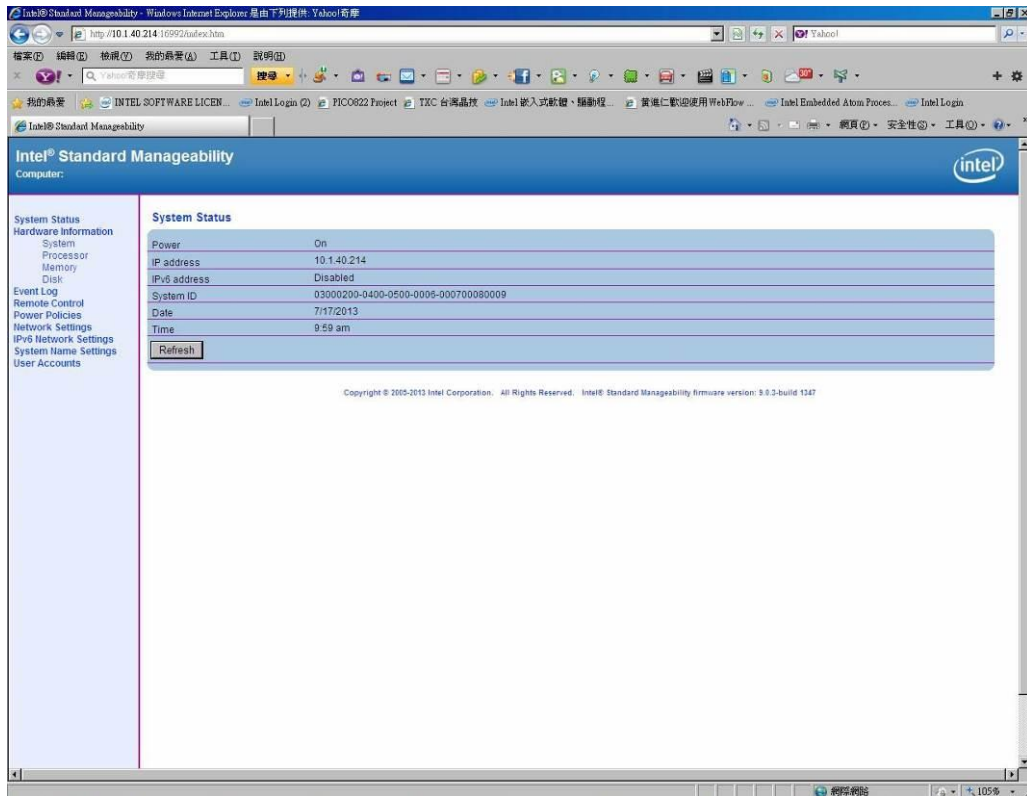

- Click Remote Control, and select commands on the right side.

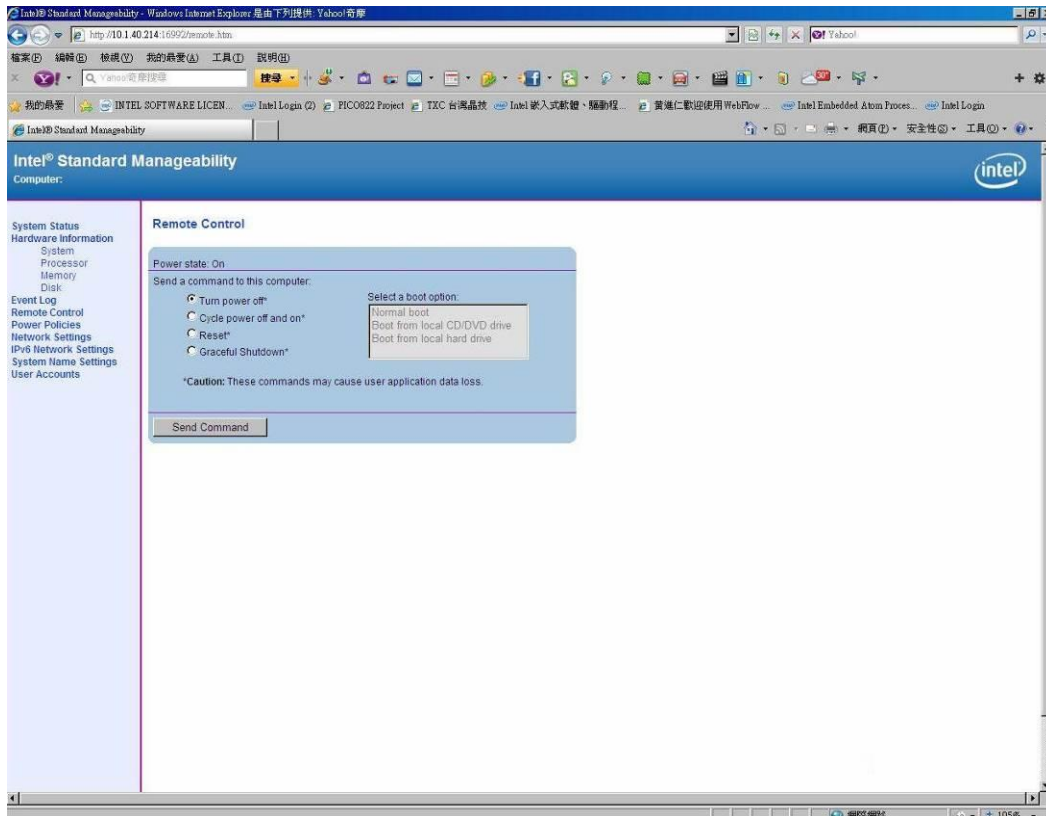

- When you have finished using the iAMT Web console, close the Web browser.