



WF-2015

Quick Start

「 WF-2015 」 Package Checklist

The package includes the following items:

- One WF-2015 module
- One Quick Start
- One software utility CD
- One screw driver
- One RS-232 cable (CA-0910)
- One Antenna 2.4GHz - 5 dBi (ANT-124-05)



Note:

1. If any of these items are missed or damaged, contact the local distributors for more information. Save the shipping materials and cartons in case you want to ship in the future.

2. This document supports the RevB version for the WF-2015 module. For the previous version, please refer the v1.x version quick start on the CD.

● Appearance and pin assignments

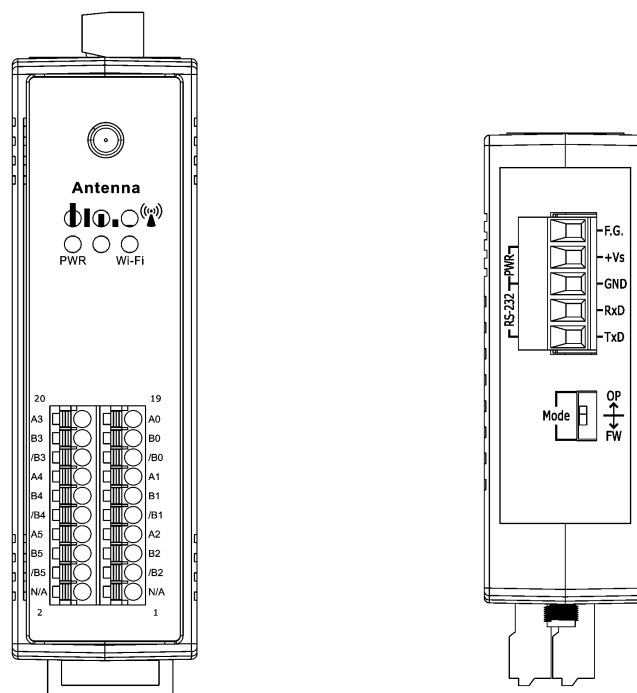


Figure 1: Appearance of the WF-2015

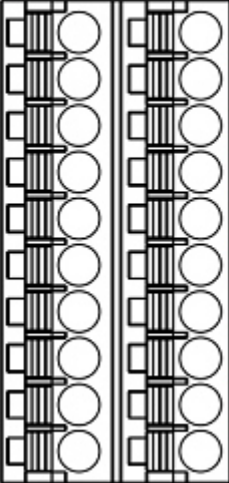


Pin Assignment Name		Terminal No.	Pin Assignment Name	
A3	20		19	A0
B3	18		17	B0
/B3	16		15	/B0
A4	14		13	A1
B4	12		11	B1
/B4	10		9	/B1
A5	8		7	A2
B5	6		5	B2
/B5	4		3	/B2
N/A	2		1	N/A

Figure 2: I/O Connector of WF-2015

Table 1: Power/Signal Connector

Power/Signal connector	
Pin Assignment	Description
F.G	Frame Ground
+Vs	+10 ~ +30 VDC
GND	Power / RS-232 GND
RxD	RS-232 RxD
TxD	RS-232 TxD

Table 2: Operating Mode Selector Switch

Operating Mode Selector Switch		
Mode	Jumper Position	Description
FW		Firmware update mode
OP		Firmware operation mode

● Hardware Connection

Power and Serial port connection

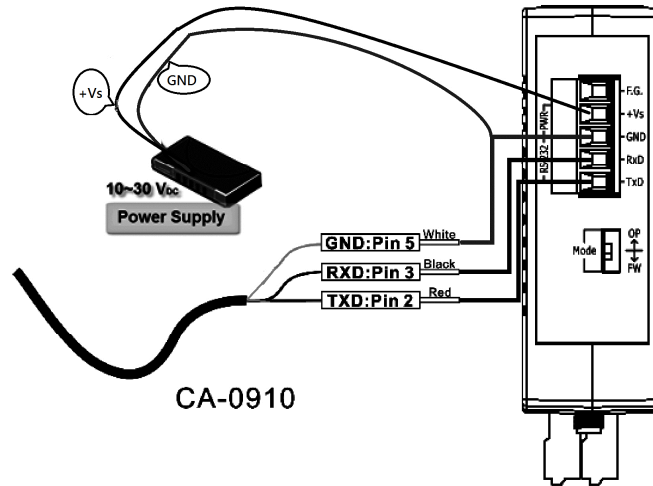


Figure 4: Power and Serial port wire connection

I/O Wire connection

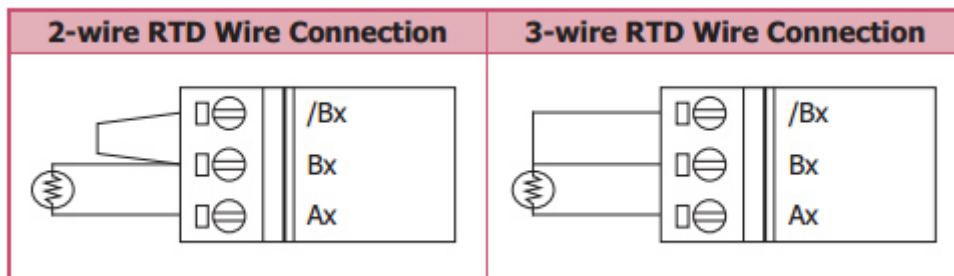


Figure 5: RTD wire connection

● Installation

Before use, associated hardware configuration, the steps described as follows :

Step 1: Checking the WF-2000 series firmware operation mode

It needs to set the DIP switch to the "OP" position (operation mode), as resetting the power, WF-2000 series will be in the operation mode.

Step 2: Serial port connection

WF-2000 series supports RS-232 serial communication. The circuit configuration is as shown in Figure 4.

If you do not need to configure parameters, this step can be omitted.

Step 3: Power connection

Connect the power supply to WF-2000 series' power terminator, as shown in Figure 4.

WF-2000 series connection setting

WF-2000 Series Wireless Network Configuration (WF IO Utility_RevB)

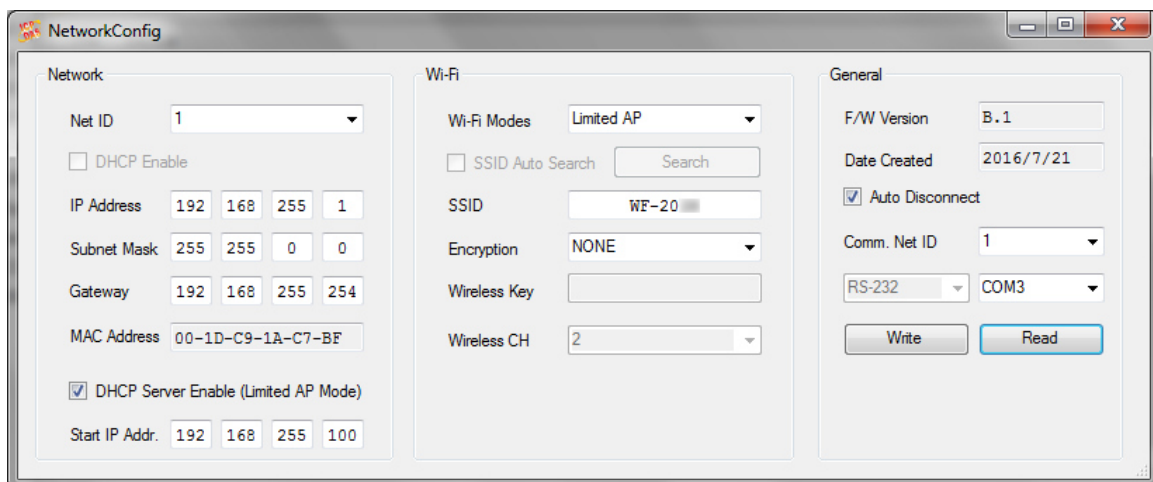


Figure 6: Wi-Fi Network Configuration

- 01 、 Net ID : The Unit Identifier in Modbus TCP/IP application data unit. This case is set as "1".
- 02 、 IP Address: WF-2000 series' IP address. Here set to "192.168.255.1".
- 03 、 Subnet Mask : Net Mask settings. Here set to "255.255.0.0".
- 04 、 Gateway : Gateway settings. Here set to "192.168.255.254".
- 05 、 Wi-Fi Mode : Wireless network connection mode settings. Here set to "Limited AP" mode. (If select the "Limited AP" mode, the "DHCP Server" function is enabled)

- 06 \ SSID : Service set identifier. Here set to "WF-2015".
- 07 \ Encryption : Encryption mode settings. Here set "NONE" (without encryption).
- 08 \ Wireless Key : Wireless encryption Key. Here does not have the setting.
- 09 \ Wireless CH : Wi-Fi connection channel settings. Here set to "2".
- 10 \ Upload parameters : After completing the settings above, select the "RS-232" interface, communication "Net ID" and "COM Num". Press "Write Parameter" button to upload the parameters.

PC Wireless Network Configuration and Connection

01 \ TCP/IP Setting :

- a. Entry the **IP address** as "192.168.255.x", where "x" is a number between 1 and 254 **except 1**, **Subnet mask** as "255.255.255. 0". Finally, press "OK" button.

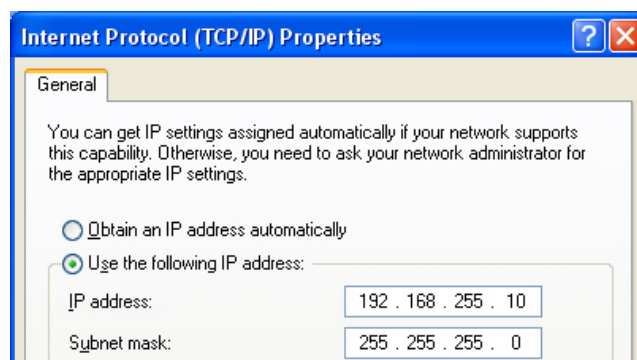


Figure 7: IP address configuration interface

02 \ Wireless network connection :

- a. View available wireless networks and you can see the "WF-2015" wireless network in the list.
- b. Select the "WF-2015" and press the "Connect" button.
- c. After waiting for a while, there will appear connection success screen.



Figure8: Connection successful interface

Access I/O data

01、Connection with Modbus TCP utility

- a. Open Modbus TCP utility and key in the IP address as "192.168.255.1", Port as "502". Finally, click the "Connect" button.
- b. If the network settings are correct, this will immediately establish a connection.
- c. Use the function code "0x04", and set the Reference Number as "0x00", Word Count as "0x06" to get the AI value.

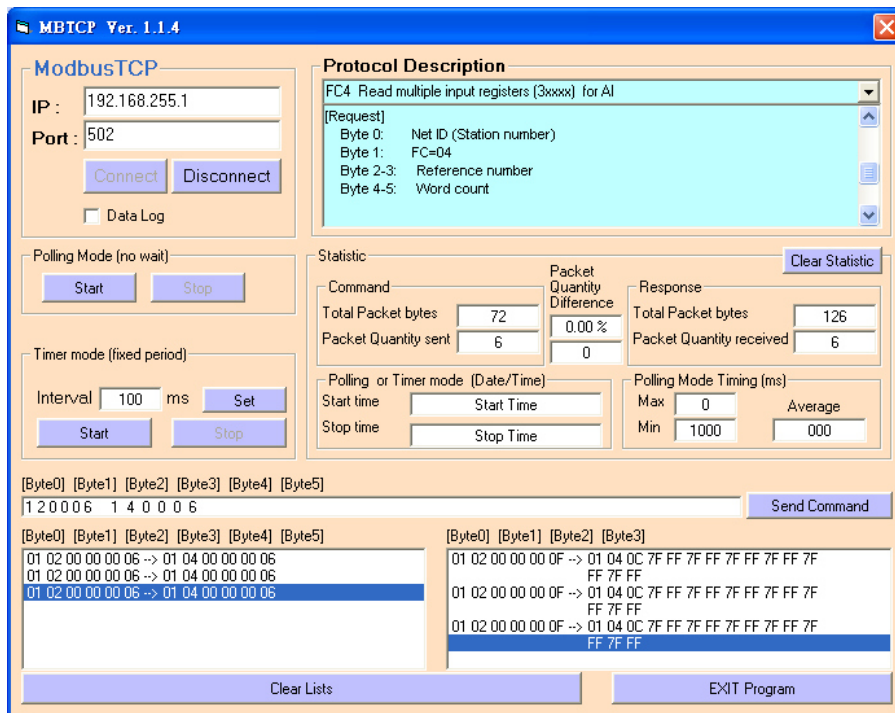


Figure 9: Read multiple input registers for AI

WF-2015 AI Address Mapping

Table 2: (3xxxx) AI address

Begin Address	Points	Descriptions	Range	Access Type
30001 (0x00)	1~6	Analog Input	-32768 ~ +32767	R


RTD Type and Data Format Table

Type Code	RTD Type	Data Format	+F.S.	-F.S.
20h	Platinum 100, $\alpha = 0.00385$ -100 ~ 100°C	Engineering unit	+100.00	-100.00
		2's comp HEX	7FFF	8000
21h	Platinum 100, $\alpha = 0.00385$ 0 ~ 100°C	Engineering unit	+100.00	+000.00
		2's comp HEX	7FFF	0000
22h	Platinum 100, $\alpha = 0.00385$ 0 ~ 200°C	Engineering unit	+200.00	+000.00
		2's comp HEX	7FFF	0000
23h	Platinum 100, $\alpha = 0.00385$ 0 ~ 600°C	Engineering unit	+600.00	+000.00
		2's comp HEX	7FFF	0000
24h	Platinum 100, $\alpha = 0.003916$ -100 ~ 100°C	Engineering unit	+100.00	-100.00
		2's comp HEX	7FFF	8000
25h	Platinum 100, $\alpha = 0.003916$ 0 ~ 100°C	Engineering unit	+100.00	+000.00
		2's comp HEX	7FFF	0000
26h	Platinum 100, $\alpha = 0.003916$ 0 ~ 200°C	Engineering unit	+200.00	+000.00
		2's comp HEX	7FFF	0000
27h	Platinum 100, $\alpha = 0.003916$ 0 ~ 600°C	Engineering unit	+600.00	+000.00
		2's comp HEX	7FFF	0000
28h	Nickel 120 -80 ~ 100°C	Engineering unit	+100.00	-080.00
		2's comp HEX	7FFF	999A
29h	Nickel 120 0 ~ 100°C	Engineering unit	+100.00	+000.00
		2's comp HEX	7FFF	0000
2Ah	Platinum 1000, $\alpha = 0.00385$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556
2Bh	Cu 100, $\alpha = 0.00421$ -20 ~ 150°C	Engineering unit	+150.00	-020.00
		2's comp HEX	7FFF	EEEE
2Ch	Cu 100, $\alpha = 0.00427$ 0 ~ 200°C	Engineering unit	+200.00	+000.00
		2's comp HEX	7FFF	0000
2Dh	Cu 1000, $\alpha = 0.00421$ -20 ~ 150°C	Engineering unit	+150.00	-020.00
		2's comp HEX	7FFF	EEEE
2Eh	Platinum 100, $\alpha = 0.00385$ -200 ~ 200°C	Engineering unit	+200.00	-200.00
		2's comp HEX	7FFF	8000
2Fh	Platinum 100, $\alpha = 0.003916$ -200 ~ 200°C	Engineering unit	+200.00	-200.00
		2's comp HEX	7FFF	8000
80h	Platinum 100, $\alpha = 0.00385$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556
81h	Platinum 100, $\alpha = 0.003916$ -200 ~ 600°C	Engineering unit	+600.00	-200.00
		2's comp HEX	7FFF	D556

Note:

Getting the 0x7FFF value in all of the RTD type codes, it means that the RTD wires are broken.

Troubleshooting

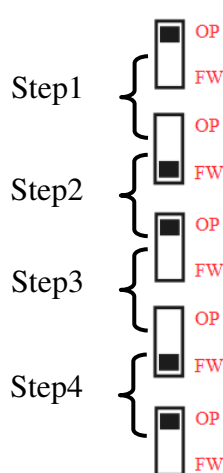Item	Problem Description	Solution
1	Power Failure (PWR LED Off)	1. Please return to the ICP DAS for inspection and repair
2	WLAN connection can not be established	<ol style="list-style-type: none"> 1. Make sure that the service set identifier device (SSID) settings are the same. 2. Make sure Wi-Fi transmission Channel settings are the same. 3. Make sure encryption is set, encryption keys are the same way 4. Make sure antenna is connected 5. Please confirm whether there are barriers on the scene. That could result in poor signal quality.
3	TCP connection can not be established	<ol style="list-style-type: none"> 1. Make sure WLAN connection is established successfully 2. Make sure the network configuration is good (TCP / IP Port, Local IP, Net Mask)
4	<p>How to restore factory default</p>  <p>The diagram illustrates a sequence of four steps for restoring factory defaults using a dip switch. Each step shows a switch being moved from one position to another. The positions are labeled 'OP' (Open) and 'FW' (Factory Default). Step 1: Switch is moved from OP to FW. Step 2: Switch is moved from FW to OP. Step 3: Switch is moved from OP to FW. Step 4: Switch is moved from FW to OP.</p>	<ol style="list-style-type: none"> 1. Power on the WF-2000 series I/O module 2. Change the Dip-Switch position of the WF-2000 series and to complete the following steps in 5 seconds. <ul style="list-style-type: none"> Step1. From “OP” to “FW” position. Step2. From “FW” to “OP” position. Step3. From “OP” to “FW” position. Step4. From “FW” to “OP” position. 3. When the correct implementation of the above steps, the Signal Strength LEDs and PWR/Wi-Fi LEDS of the WF-2000 series should be turn on, and that should be turn off after 500 ms later. 4. Reset the power the WF-2000 series would back to factory defaults.

● Technical Support

If you have problems about using the WF-2000 series I/O module, please contact ICP DAS Product Support. Email: service@icpdas.com