

ZT-2005-C8

Quick Start

1 What's in the Shipping Package?


The shipping package contains the following items:



ZT-2005-C8
module



Antenna
(ANT-124-05)

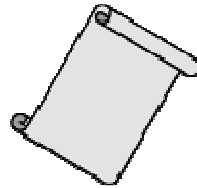

Quick Start



Thermistor
(CA-021)





CD

If any of these items are missing or damaged, please contact your local distributor for more information. Save the shipping materials and cartons in case you need to ship the module in the future.

2 Preparing the Device

1. Refer the chapter 3. to configure the DIP switch of ZT-2005-C8 device.
2. Install the ZT Configuration Utility to configure the ZT-2000 coordinator.
CD: \Napdos\ZigBee\ZT_Series\Utility
http://ftp.icpdas.com/pub/cd/usbcd/napdos/zigbee/zt_series/utility
3. Power Supply: +10 ~ +30 V_{DC}

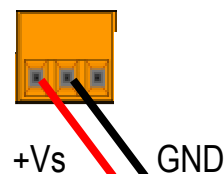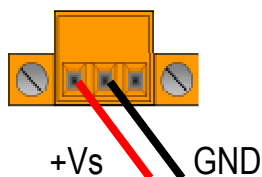

3 Setting up the ZT-2005-C8 module

1. Pan ID :

parameter is the group identity for a ZigBee network, and must be the same for all devices in the same ZigBee network.

(The range of ZT-2005-C8 are 0x00~0x0F)

2. Address/Node ID :

parameter is the individual identity of a specific ZigBee module, and must be unique for each device connected to the same ZigBee network.


(The range of ZT-2005-C8 are 0x01~0x7F)

3. RF Channel :

parameter indicates the radio frequency channel, and must be set to the same value as other modules on the same ZigBee network.

Channel	0x00	0x01	0x0F
Frequency (MHz)	2405	2410	2480

※ RF channels 0x04, 0x09, 0x0E or 0x0F are recommended because they do not overlap with the Wi-Fi frequencies based.

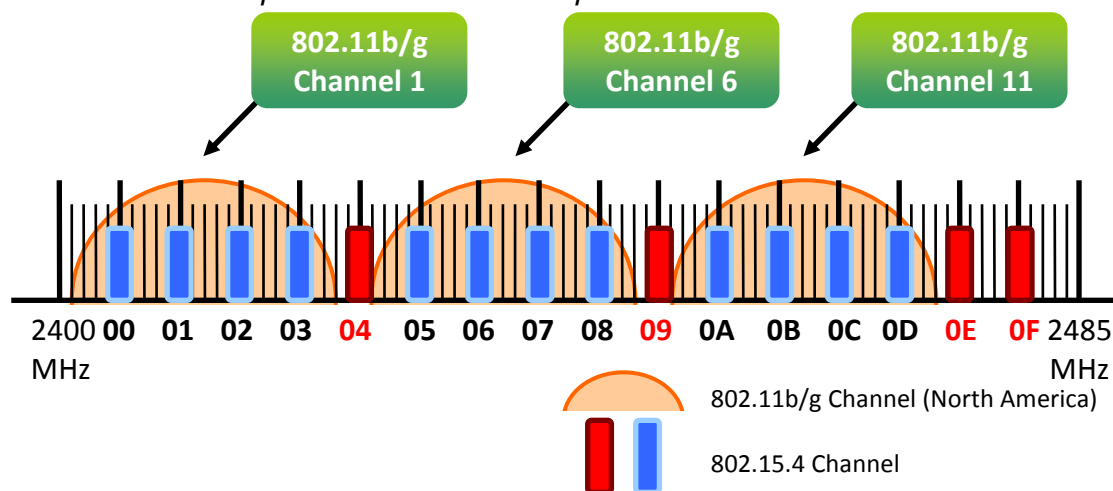

4. Protocol/Application Mode :


When implementing custom programs based on different protocols, the following application modes are recommended in order to ensure communicability.

User Program Protocol	ZT-2005-C8	ZT-2550	ZT-2570
DCON	DCON	Transparent	Transparent
Modbus RTU	Modbus RTU	Transparent Modbus Gateway	Transparent Modbus Gateway

4 Rotation Switch and DIP Switch

The configuration of ZT-2005-C8 can be adjusted by using the external rotary switch and the DIP switches. The ZT-2005-C8 device should only be rebooted once the configuration is complete.

➤ DIP Switch to the ZT-2005-C8

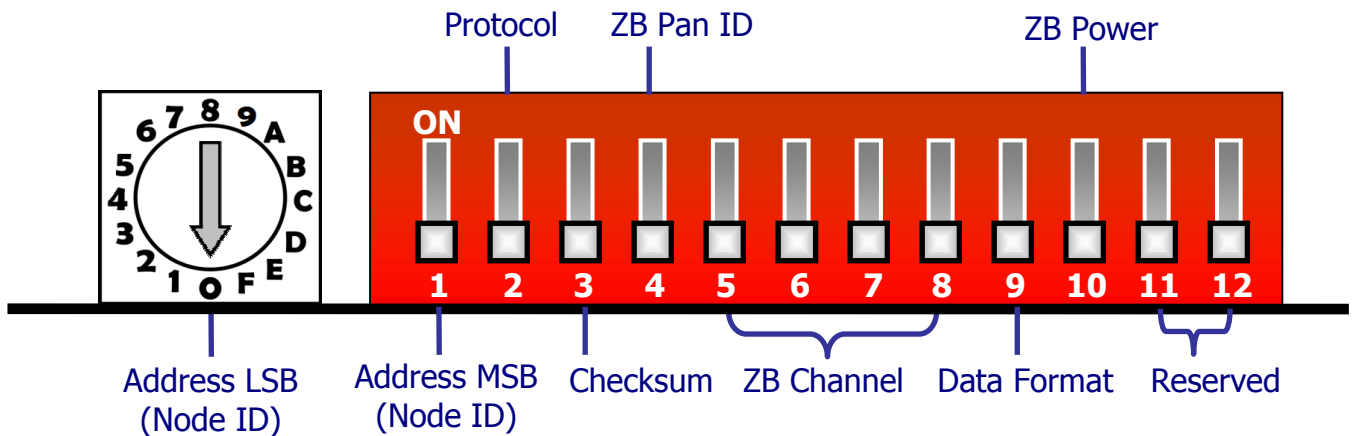

➤ Rotation Switch

	0	1	2	3	F	Note
Address	SW	01	02	03	0F	MSB=0
Node ID	SW	0x0001	0x0002	0x0003	0x000F	
	0	1	2	3	F	
Address	10	11	12	13	1F	MSB=1
Node ID	0x0010	0x0011	0x0012	0x0013	0x001F	

※ Once the address of hardware switch is set to 0x00, it means the address is using software configurations. Refer Sec. 7.2 of user manual for more detailed information.

➤ DIP Switch

DIP Switch	Item	Status	Description
1	Address MSB	OFF	Address/Node ID from 0x00 to 0x0F
		ON	Address/Node ID from 0x10 to 0x1F
2	Protocol	OFF	DCON protocol
		ON	Modbus RTU protocol
3	Checksum	OFF	Disabled (DCON protocol)
		ON	Enabled (DCON protocol)
4	ZigBee Pan ID	OFF	Pan ID = 0x0000
		ON	Pan ID = 0x0001
5	ZigBee	OFF	-----

	RF Channel	ON	0x08
6		OFF	-----
		ON	0x04
7		OFF	-----
		ON	0x02
8		OFF	-----
	ON	0x01	
9	Data Format	OFF	Engineering units
		ON	2's complement hexadecimal
10	ZigBee RF Power	OFF	Default, about 11±1 dBm
		ON	Maximal, about 19 dBm
11	Reserved	-----	-----
12			

5 *Start-up ZT-2005-C8 Device*

First, the ZigBee network is controlled by the ZigBee coordinator, so the user must configured ZT-2550/ZT-2570 (Zigbee coordinator) before use ZT-2005-C8. Please refert to documents shown below for full details of how to configure these devices.

Once configuration of the ZigBee coordinator has been completed. Set the "Pan ID" and the "RF Channel" values for the ZT-2005-C8 device to the same values as the network, and then reboot the device. The module will automatically start to function on the ZigBee network using the default protocol.

※ **Documents:**

http://ftp.icpdas.com.tw/pub/cd/usbcd/napdos/zigbee/zt_series/document/zt-255x/


http://ftp.icpdas.com.tw/pub/cd/usbcd/napdos/zigbee/zt_series/document/zt-257x/

※ **Configuration Utility** (Used to configure Coordinator):


http://ftp.icpdas.com.tw/pub/cd/usbcd/napdos/zigbee/zt_series/utility/

6 Examples

➤ Configurations of ZT-2550/ZT-2570

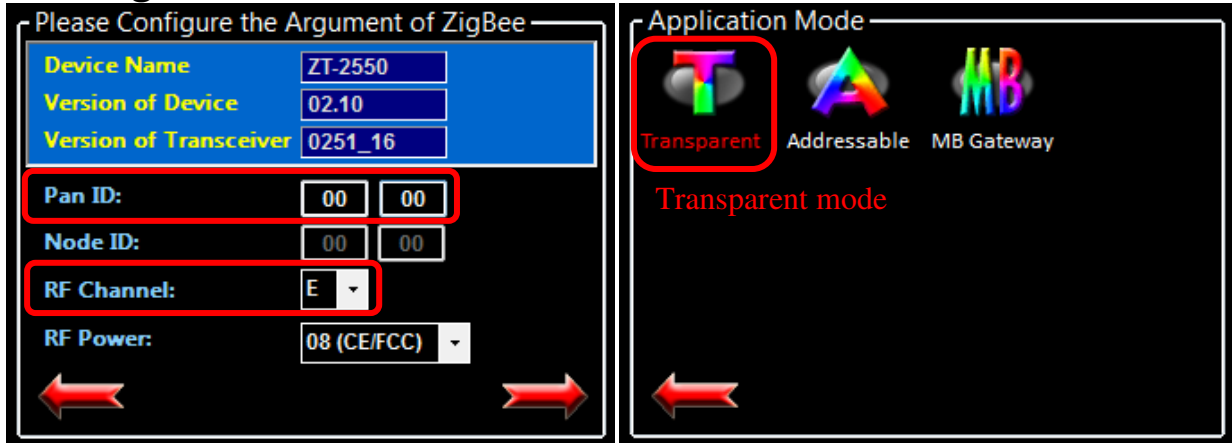

➤ Configurations of ZT-2005-C8

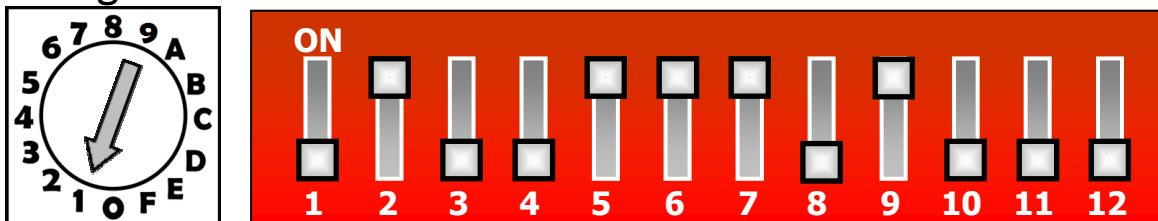


DIP Switch	Item	Status	Description	
1	Address MSB	OFF	Address/Node ID is 01 (Rotation Switch = 1)	
2	Protocol	ON	Modbus RTU protocol	
3	Checksum	OFF	Disabled	
4	ZigBee Pan ID	OFF	Pan ID=0x0000	
5	ZigBee RF Channel	ON	ZigBee RF Channel=0x0E	
6		ON		0x04
7		ON		0x02
8		OFF		0x00
9	Data Format	ON	2's complement hexadecimal	
10	ZigBee RF Power	ON	Default, about 11±1 dBm	
11	Reserved	-----	-----	
12				

7 Communication Test

Once the ZT-2005-C8 device has joined the ZigBee network, the signal quality can be confirmed by monitoring the status of the ZigBee Net LED indicators. If the LED indicator shows a steady light, communication with the ZT-2005-C8 device has been successfully established for data acquisition and control.

ICP DAS also provides the “DCON Utility”, which can be used to simulate DCON/Modbus communication. This software can also be used to verify the device settings and ZigBee I/O functions.

- The DCON Utility Pro can be download from:
http://ftp.icpdas.com/pub/cd/8000cd/napdos/driver/dcon_utility/
- Simulate I/O channel operating via using DCON Utility
 1. Launch DCON Utility and select the correct COM Port settings to connect the ZigBee Coordinator (ZT-2550/ZT-2570).
 2. Clicking “Search” button will start searching which ZT-2000 I/O device is in the same ZigBee network.
 3. If there is any ZT-2000 I/O devices displayed, double clicking the “module name” will start the I/O channels operated platform.

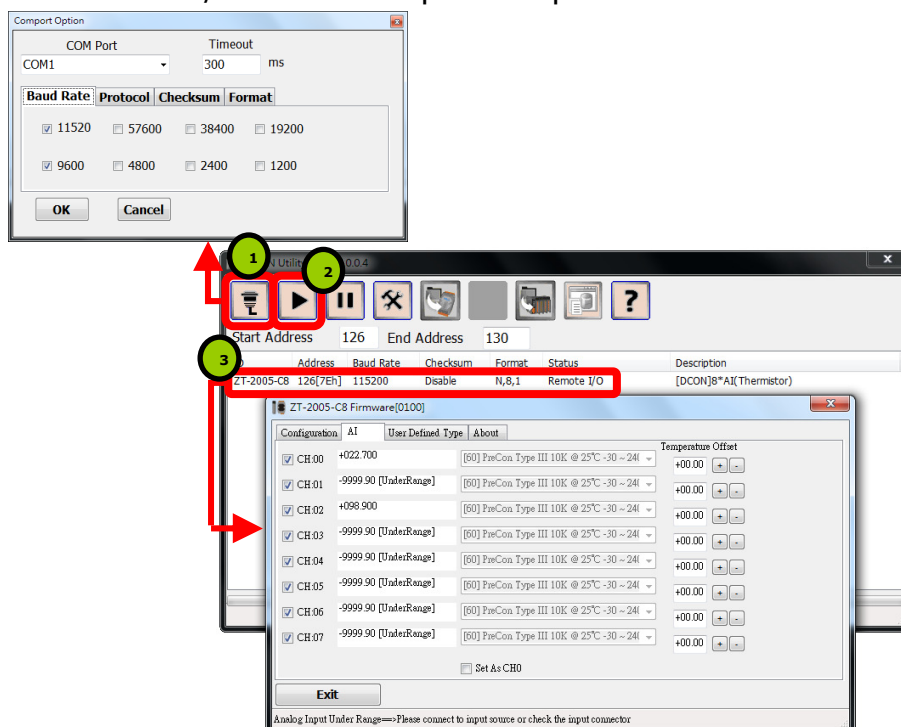

8 Troubleshooting

(1) Technical Support

If you have any difficulties using your ZT-2005-C8 device, please send a description of the problem to service@icpdas.com


Include the following items in your email:

- A description or diagram of the current DIP switch positions.
- A copy of the configuration file for the ZT-2000 coordinator. This file can be obtained using the procedure outlined below and should be attached to your email.

- A. Set the DIP switch of the ZT-255x device to the [ZBSET] position then reboot the device. Launch the ZT Configuration Utility and select [Save Log] icon to save the configuration of the ZT-255x as a file.



- B. After clicking the [Save Log] icon, enter the "File Name" and the "File Path" in the Windows "Save" dialog box. Once the configuration has been successfully saved, the following message will be displayed.

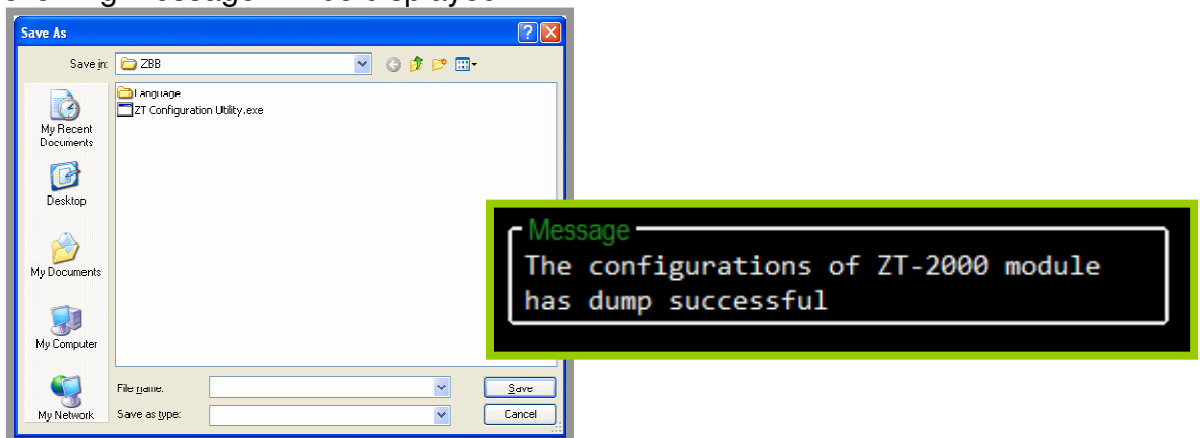

(2) LED Indicator Status

LED	Status	Introduction
ZigBee Net (Green LED)	ZigBee Router (Slave)	
	Steady Lit	The Signal is Strong
	Blinking (500 ms)	The Signal is Available
	Blinking (1s)	The Signal is Weak
	Blinking (2s)	The Signal is Unstable or There is no Available
	Blinking irregularly	Module Node ID conflict, there are same Node IDs in the same network
ZigBee RxD (Yellow LED)	The status of ZigBee communication	
	Blinking	Receiving ZigBee Data
	Steady Unlit	No ZigBee Data Received
ZigBee PWR (Red LED)	The status of module power	
	Steady Lit	Power ON
	Steady Unlit	Power OFF